

## Operating Instructions Plasma Television



# VIERA

## Contents

### Be Sure to Read

Important Notice .....	2
Safety Precautions .....	3

### Quick Start Guide

Accessories .....	6
Connections .....	8
Identifying Controls .....	13
First time Auto Setup .....	16


### Using your VIERA

Operations .....	17
How to Use eHELP .....	18
Viewing 3D images .....	19

### Others

FAQs .....	20
Maintenance .....	21
Specifications .....	21

For more detailed instructions, refer to [eHELP]  
(Built-in Operating Instructions).

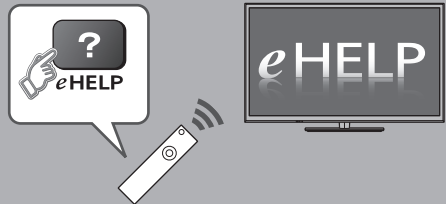

How to use [eHELP] → (p. 18)





• For the information of the trademarks, refer to [eHELP] (Support > Licence).

## Important Notice

### Do not display any still part of the image for a long period

In such cases the still part of the image remains dimly on the plasma screen ("image retention"). This is not considered a malfunction and is not covered by the warranty.

Typical still image parts:

- Channel number, channel logo and other logos
- Still or moving pictures viewed in 4:3 or 14:9 aspect ratio
- Video games



To avoid image retention, the screen saver may be activated (VIERA logo moves) or the on-screen message may move after a few minutes if no signals are sent or no operations are performed.

### Notice for DVB / Data broadcasting / IPTV functions

This TV is designed to meet the standards (as of August, 2012) of digital services.

- Not all the features are available depending on the country, area, broadcaster, service provider and network environment.
- The compatibility with future services is not guaranteed.
- Check the latest information on the available services at the following website.

<http://panasonic.net/viera/support>

Panasonic does not guarantee operation and performance of peripheral devices made by other manufacturers; and we disclaim any liability or damage arising from operation and/or performance from usage of such other maker's peripheral devices.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use.

Additional information may be obtained from MPEG LA, LLC.

See <http://www.mpegla.com>.

Rovi Corporation and/or its subsidiaries and related affiliates are not in any way liable for the accuracy or availability of the program schedule information or other data in the Rovi Guide system and cannot guarantee service availability in your area. In no event shall Rovi Corporation and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the program schedule information or other data in the Rovi Guide system.

"Full HD 3D Glasses™" Logo indicates compatibility between TV products and 3D Eyewear which are compliant with the "Full HD 3D Glasses™" format, and does not indicate picture quality of TV products.

# Safety Precautions

To help avoid risk of electrical shock, fire, damage or injury, please follow the warnings and cautions below:

## ■ Mains plug and lead

### Warning

If you detect anything unusual, immediately switch off the mains supply switch and remove the mains plug.



- This TV is designed to operate on AC 220-240 V, 50 / 60 Hz.
- Insert the mains plug fully into the socket outlet.
- Ensure that the mains plug is easily accessible.
- Disconnect the mains plug when cleaning the TV.
- Do not touch the mains plug with wet hands.



- Do not damage the mains lead.
  - Do not place a heavy object on the lead.



- Do not place the lead near a high temperature object.



- Do not pull on the lead. Hold onto the mains plug body when disconnecting the plug.



- Do not move the TV with the lead plugged into a socket outlet.
- Do not twist the lead, bend it excessively or stretch it.
- Do not use a damaged mains plug or socket outlet.
- Ensure the TV does not crush the mains lead.
- Do not use any mains lead other than that provided with this TV.
- Ensure the earth pin on the mains plug is securely connected to prevent electrical shock.
  - An apparatus with CLASS I construction shall be connected to a mains socket outlet with a protective earth connection.

## IMPORTANT:

### THE MOULDED MAINS PLUG

#### FOR YOUR SAFETY, PLEASE READ THE FOLLOWING TEXT CAREFULLY.

This TV is supplied with a moulded 3-pin mains plug for your safety and convenience.

A 10 amp fuse is fitted in this mains plug. Shall the fuse need to be replaced, please ensure that the replacement fuse has a 10 amp rating and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the fuse body.

If the mains plug contains a removable fuse cover, you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover, the mains plug must not be used until a replacement cover is obtained.

A replacement fuse cover may be purchased from your local dealer.

Do not cut off the mains plug.

Do not use any other type of mains lead except the one supplied with this TV. The supplied mains lead and moulded plug are designed to be used with this TV to avoid interference and for your safety.

 
If the socket outlet in your home is not suitable, get it changed by a qualified electrician.

If the plug or mains lead becomes damaged, purchase a replacement from an authorised dealer.

#### WARNING: THIS TV MUST BE EARTHED.

How to replace the fuse:

Pull out the fuse cover with a screwdriver and replace the fuse.



## ■ Take care

### Warning

- Do not remove covers and never modify the TV yourself as live parts are accessible when they are removed. There are no user serviceable parts inside. 
- Do not expose the TV to rain or excessive moisture. This TV must not be exposed to dripping or splashing water and objects filled with liquid, such as vases, must not be placed on top of or above the TV. 
- Do not insert foreign objects into the TV through the air vents.
- Do not use an unapproved pedestal / mounting equipment. Be sure to ask your local Panasonic dealer to perform the setup or installation of approved wall-hanging brackets.
- Do not apply strong force or impact to the display panel.
- Do not place the TV on sloped or unstable surfaces, and ensure that the TV does not hang over the edge of the base. 
- Do not expose the TV to direct sunlight and other sources of heat. 

**To prevent the spread of fire, keep candles or other open flames away from this product at all times**



### ■ Dangerous part / Small object

#### Warning

- This product contains possibly dangerous parts such as plastic bags, that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.
- Do not allow children to handle any small objects such as SD Card. The small object could be swallowed by young children. Remove SD Card immediately after use and store out of reach of young children.
- 3D Eyewear and Electronic Touch Pen contain small parts that can be swallowed by young children accidentally. Keep these parts out of reach of young children.



### ■ Pedestal

#### Warning

- Do not disassemble or modify the pedestal.

#### Caution

- Do not use any pedestal other than the one provided with this TV.
- Do not use the pedestal if it becomes warped or physically damaged. If this occurs, contact your nearest Panasonic dealer immediately.
- During setup, make sure that all screws are securely tightened.
- Ensure that the TV does not suffer any impact during installation of the pedestal.
- Ensure that children do not climb onto the pedestal.
- Install or remove the TV from the pedestal with at least two people.
- Install or remove the TV by the specified procedure.

### ■ Radio wave

#### Warning

- Do not use the TV, 3D Eyewear and Electronic Touch Pen in any medical institutions or locations with medical equipment. Radio waves may interfere with the medical equipment and cause accidents due to the malfunction.
- Do not use the TV, 3D Eyewear and Electronic Touch Pen near any automatic control equipment such as automatic doors or fire alarms. Radio waves may interfere with the automatic control equipment and cause accidents due to the malfunction.
- Keep the distance at least 22 cm from the TV, 3D Eyewear and Electronic Touch Pen when you have a cardiac pacemaker. Radio waves may interfere with the operation of the pacemaker.
- Do not disassemble or alter the TV, 3D Eyewear and Electronic Touch Pen in any way.

### ■ Built-in wireless LAN

#### Caution

- Do not use the built-in wireless LAN to connect to any wireless network (SSID\*) for which you do not have usage rights. Such networks may be listed as a result of searches. However, using them may be regarded as illegal access.  
\*SSID is a name for identifying a particular wireless network for transmission.
- Do not subject the built-in wireless LAN to high temperatures, direct sunlight or moisture.
- Data transmitted and received over radio waves may be intercepted and monitored.
- The built-in wireless LAN uses 2.4 GHz and 5 GHz frequency bands. To avoid malfunctions or slow response caused by radio wave interference, keep the TV away from the devices such as other wireless LAN devices, microwaves, mobile phones and the devices that use 2.4 GHz and 5 GHz signals when using the built-in wireless LAN.
- When noises occur due to the static electricity, etc., the TV might stop operating for the protection of the devices. In this case, turn the TV off with Mains power On / Off switch, then turn it on again.
- Additional information for the wireless LAN and access point may be on the following website.  
<http://panasonic.net/viera/support>

### ■ Bluetooth® wireless technology

#### Caution

 
- The TV, 3D Eyewear and Electronic Touch Pen use the 2.4 GHz radio frequency ISM band (Bluetooth®). To avoid malfunctions or slow response caused by radio wave interference, keep the TV, 3D Eyewear and Electronic Touch Pen away from the devices such as other wireless LAN devices, other Bluetooth devices, microwaves, mobile phones and the devices that use 2.4 GHz signal.

### ■ Ventilation

#### Caution

Allow sufficient space around the TV in order to help prevent excessive heat, which could lead to early failure of some electronic components.

Minimum distance:



- Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, tablecloths and curtains.



- Whether you are using a pedestal or not, always ensure the vents at the bottom of the TV are not blocked and there is sufficient space to enable adequate ventilation.

## ■ Moving the TV

### Caution

Before moving the TV, disconnect all cables.

- The TV is heavy. Move the TV with at least two people. Support as shown to avoid injury by the TV tipping or falling.



- Transport only in upright position. Transporting the TV with its display panel facing upwards or downwards may cause damage to the internal circuitry.

## ■ When not in use for a long time

### Caution

This TV will still consume some power even in the Off mode, as long as the mains plug is still connected to a live socket outlet.

- Remove the mains plug from the wall socket when the TV is not in use for a prolonged period of time.

## ■ Excessive volume

### Caution

- Do not expose your ears to excessive volume from the headphones. Irreversible damage can be caused.



- If you hear a drumming noise in your ears, turn down the volume or temporarily stop using the headphones.

## ■ Battery for the Remote Control / 3D Eyewear / Electronic Touch Pen

### Caution

- Incorrect installation may cause battery leakage, corrosion and explosion.
- Replace only with the same or equivalent type.
- Do not mix old and new batteries.
- Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable batteries (Ni-Cd, etc.).
- Do not burn or break up batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like.
- Make sure you dispose of batteries correctly.
- Remove the battery from the unit when not using for a prolonged period of time to prevent battery leakage, corrosion and explosion.

## ■ Electronic Touch Pen Use

### Warning

- The TV may be hot. Do not touch it continuously to prevent low temperature burn.

### Caution

- Do not forcibly hit or pick the TV screen with the Electronic Touch Pen to prevent the TV from falling over.
- Touch the TV screen only with the tip of the Electronic Touch Pen, do not move the tip with exerting pressure on, or do not move the tip fast to prevent the scratch of the screen.
- Stop using the Electronic Touch Pen immediately if you experience any redness, pain or skin irritation. In rare cases, the materials used in the Electronic Touch Pen may cause an allergic reaction.
- Use the Electronic Touch Pen taking a break sometimes. Guideline for continuous use is around 1 hour to protect against eyestrain or physical deconditioning.

- Do not use the Electronic Touch Pen at high temperatures. Always keep the Electronic Touch Pen in a cool and dry place.

## ■ 3D Eyewear Use

### Caution

- Use the 3D Eyewear only for the intended purpose and nothing else.
- Do not move around while wearing the 3D Eyewear to avoid falling or accidental injury.
- Do not drop, bend, exert pressure on, or step on the 3D Eyewear.
- Be careful of the tips of the frame when putting on the 3D Eyewear.
- Be careful not to trap your fingers in the hinge section of the 3D Eyewear.
- Do not use the 3D Eyewear if it is physically damaged.
- If you suffer from any eyesight problems (short / far-sighted, astigmatism, eyesight differences in left and right), ensure that you correct your vision before using the 3D Eyewear. The supplied 3D Eyewear can be worn over vision correction glasses.
- Stop using the 3D Eyewear immediately if you experience any redness, pain or skin irritation around the nose or temples. In rare cases, the materials used in the 3D Eyewear may cause an allergic reaction.
- Do not use the 3D Eyewear at high temperatures. Always keep the 3D Eyewear in a cool and dry place.
- Stop using the 3D Eyewear immediately if a malfunction or fault occurs.

## ■ Viewing 3D Images

### Caution

- Pay special attention when children are viewing 3D images. 3D images should not be viewed by children younger than about 6 years old, as a guideline. All children must be fully supervised by parents or guardians who must ensure their safety and health while they are viewing 3D images.
- Stop viewing 3D images immediately if you feel tired, feel unwell, experience any other uncomfortable sensation or clearly see double images. Take an appropriate break before continuing to view. When you set the 3D effect by using [3D Adjustment], take into account that the vision of 3D images varies among different individuals.
- Do not view 3D images if you have a history of oversensitivity to light, heart problems or any other medical conditions.
- When viewing 3D images, your sense of distance may be tricked or go wrong. Be careful not to hit the TV screen or other people unintentionally. Ensure there are no breakable objects around you to avoid any accidental damage or injury.
- Do not view 3D images from a distance shorter than recommended. The recommended viewing distance is at least 3 times of the image height.

42-inch model	: 1.6 m or more
50-inch model	: 1.9 m or more
55-inch model	: 2.1 m or more

When black bands at the top and bottom of the screen are displayed, such as movies, view the screen from a distance at least 3 times the height of the actual image. (That makes the distance shorter than the recommended values above.)

# Accessories

## Remote Control

➔ (p. 13)



• N2QAYB000829

## Batteries (2)

• R6

➔ (p. 13)




## Pedestal


➔ (see below)

42-inch model

50-inch model

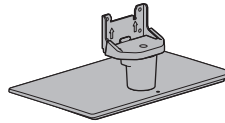


55-inch model

 

## Mains lead

 ➔ (p. 8)



## 3D Eyewear

 
➔ (p. 19)



## Electronic Touch Pen


(with R03 battery)

➔ (p. 14)



## Cable tie

 ➔ (p. 12)



## AV1 (SCART) adaptor

➔ (p. 9)



## Ferrite core for LAN cable (2)

(Large size)

➔ (p. 10)



## Ferrite core for headphones

(Small size)

➔ (p. 11)



Use the Ferrite cores to comply with the EMC standard.

## Operating Instructions

## Production Registration Leaflet

- Accessories may not be placed all together. Take care not to throw them away unintentionally.
- For the information of optional accessories, refer to [eHELP] (Support > Optional accessories).

## Assembling / Removing the pedestal

### A Assembly screw (black)

(7)

42-inch model

50-inch model

(12)

55-inch model



M5 × 16

### C Bracket

42-inch model

50-inch model

55-inch model



### E Base



### B Assembly screw (black)

(5)

42-inch model

50-inch model



M4 × 10

### D Neck

42-inch model

50-inch model

55-inch model



### F Cover

42-inch model

50-inch model






# Connections

- External equipment and cables shown are not supplied with this TV.
- Ensure that the unit is disconnected from the mains socket before attaching or disconnecting any leads.
- Check the type of terminals and cable plugs are correct when connecting.
- Always use a fully wired SCART or HDMI cable.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor. Otherwise, distortion of image / sound may occur or operation of other equipment may be interfered.
- Also read the manual of the equipment being connected.


## Terminals

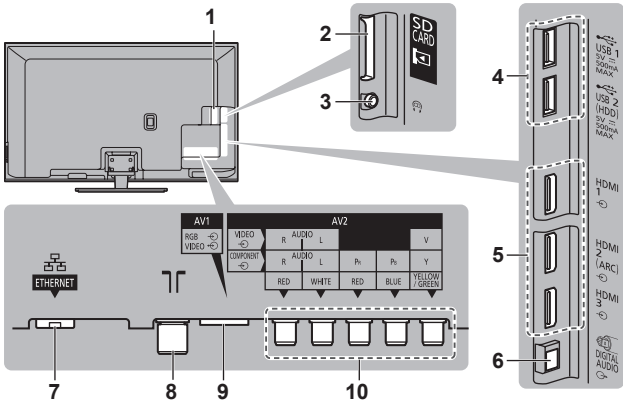

- 1 CI slot ➔ (p. 11)
- 2 SD Card slot
- 3 Headphone jack ➔ (p. 11)
- 4 USB 1 - 2 port
- 5 HDMI1 - 3 ➔ (p. 9, 11)
- 6 DIGITAL AUDIO
- 7 ETHERNET ➔ (p. 10)
- 8 Terrestrial terminal ➔ (see below)
- 9 AV1 (SCART) ➔ (p. 9)
- 10 AV2 (COMPONENT / VIDEO) ➔ (p. 10, 11)

## Basic connections

### Mains lead and aerial

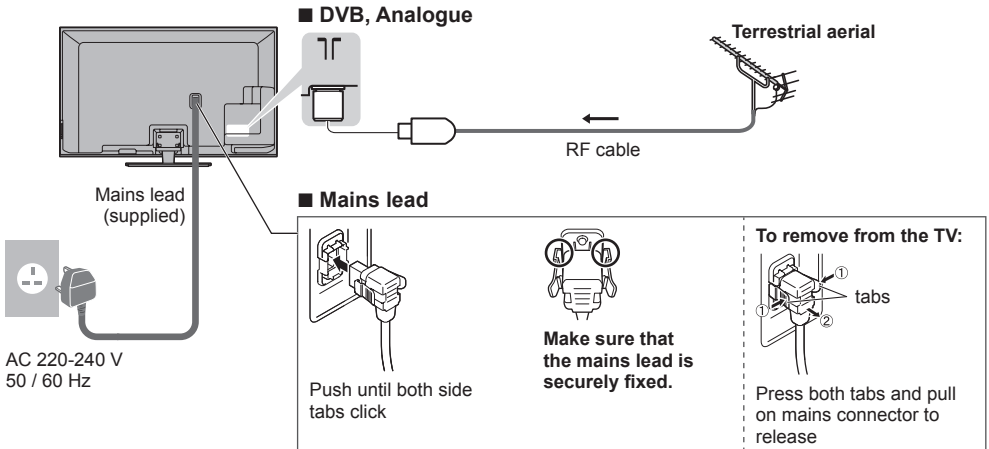




## AV devices


### ■ DVD Recorder / VCR

TV

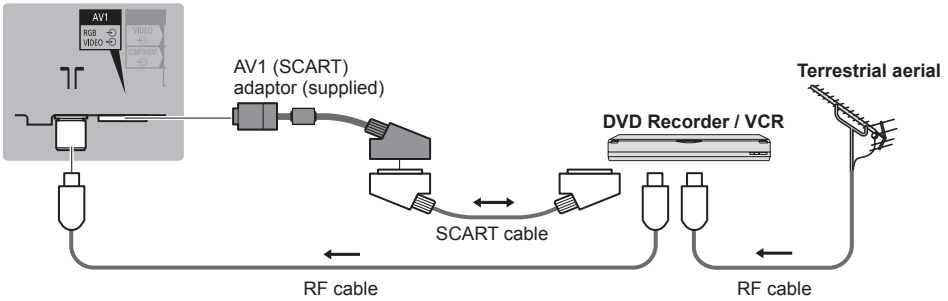

### ■ DVD Recorder / VCR and Set top box


TV

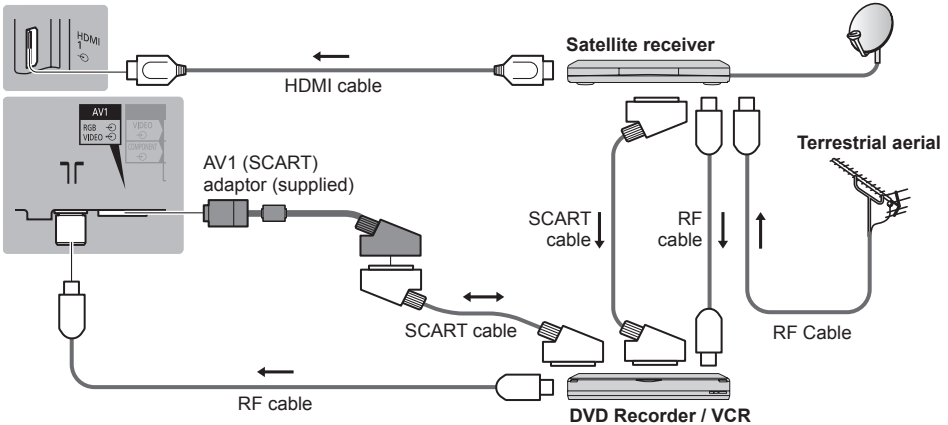


## Network

- To enable the network service functions (VIERA Connect, etc.), you need to connect the TV to a broadband network environment. If you do not have any broadband network services, please consult your retailer for assistance.
- Prepare the internet environment for wired connection or wireless connection.
- Setup of the network connection will start when first using the TV. ➔(p. 16)


### ■ Wired connection

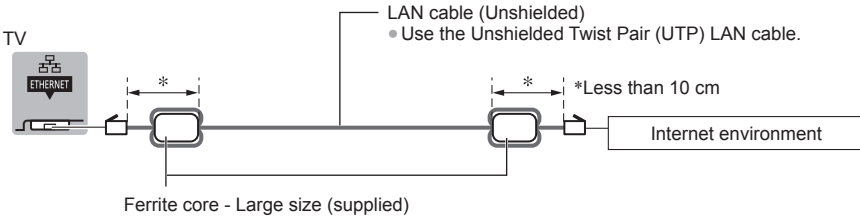

#### Installing the Ferrite core

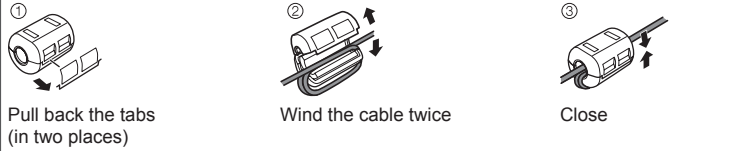


### ■ Wireless connection

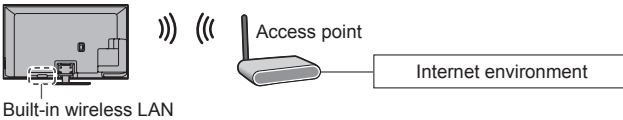


## Other connections


### ■ DVD player (COMPONENT equipment)

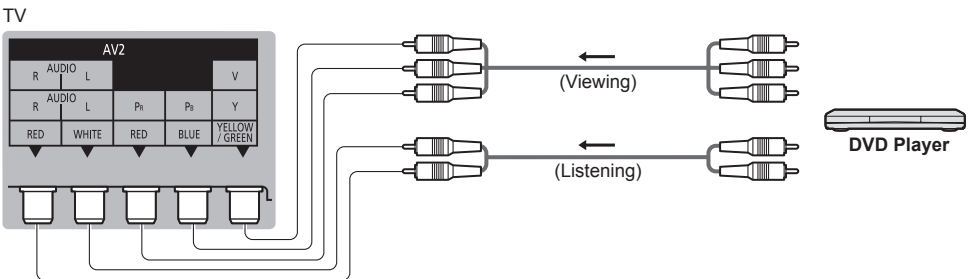

■ **Camcorder / Game equipment**  
(VIDEO equipment)

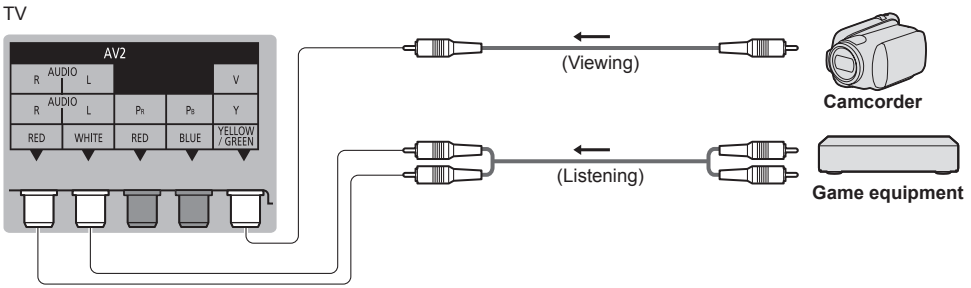


■ **Amplifier (to listen with speakers)**

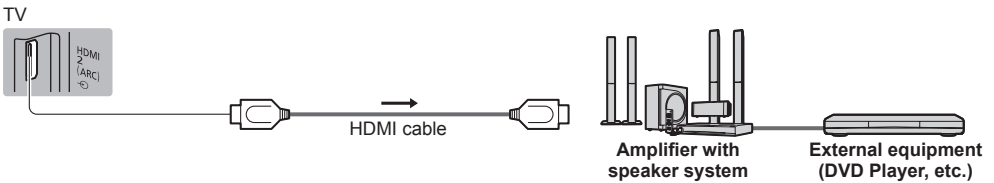


- Use HDMI2 for connecting an amplifier. This connection is applicable when using an amplifier that has ARC (Audio Return Channel) function. As for an amplifier without ARC function, use DIGITAL AUDIO.
- To enjoy the sound from the external equipment in multi-channel sound (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier. For the connections, read the manuals of the equipment and amplifier.


■ **Headphones**

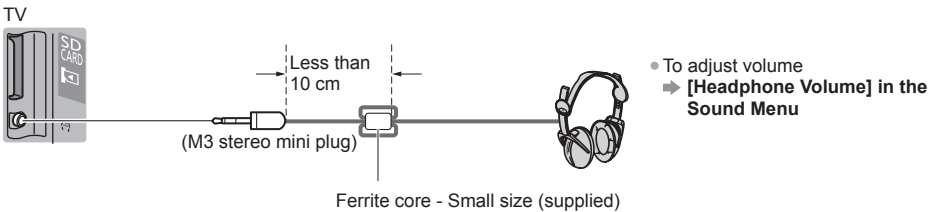

**Installing the Ferrite core**

 

■ **Common Interface**

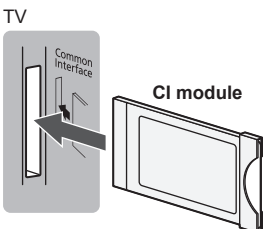

- If a view card and a card reader come as a set, first insert the card reader, then insert the view card into the card reader.
- Insert the module in the correct direction.

## Types of connectable equipment to each terminal

Features	Terminal						
	AV1*1	AV2		DIGITAL AUDIO	ETHERNET	HDMI 1 - 3	USB 1 - 2
		COMPONENT	VIDEO				
To record / play back videocassettes / DVDs (VCR / DVD Recorder)	<input type="radio"/>						
To watch 3D contents (Blu-ray Disc Player)						<input type="radio"/>	
To watch satellite broadcasts (Set top box)	<input type="radio"/>		<input type="radio"/>			<input type="radio"/>	
To watch DVDs (DVD Player)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			<input type="radio"/>	
To watch camcorder images (Video camera)	<input type="radio"/>		<input type="radio"/>			<input type="radio"/>	
To play games (Game equipment)	<input type="radio"/>		<input type="radio"/>			<input type="radio"/>	
To use amplifier with speaker system				<input type="radio"/>		<input type="radio"/> *2	
To use network services					<input type="radio"/>		<input type="radio"/> *3
VIERA Link						<input type="radio"/>	


○ : Recommended Connection

\*1: To connect the equipment, the SCART adaptor (supplied) is necessary.

\*2: Use HDMI2 for connecting an amplifier. This connection is applicable when using an amplifier that has ARC (Audio Return Channel) function.

\*3: Use USB 1 port for connecting the Communication Camera.

## Using the cable tie (supplied)

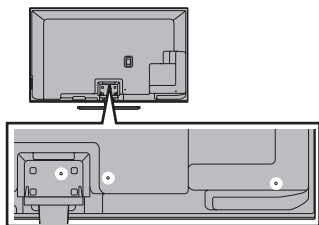


- Do not bundle the RF cable and mains lead together (could cause distorted image).
- Fix cables with the cable tie as necessary.
- When using the optional accessory, follow the option's assembly manual to fix cables.

<p><b>Attach the cable tie</b></p> <p>Insert the cable tie in a hole</p>	<p><b>Bundle the cables</b></p> <p>①</p> <p>② Set the tip in the hooks</p> <p>hooks</p>
<p><b>To remove from the TV:</b></p> <p>① snaps</p> <p>②</p> <p>① Keep pushing both side snaps</p>	<p><b>To loosen:</b></p> <p>②</p> <p>① Keep pushing the knob</p> <p>knob</p>

# Identifying Controls

## Remote Control

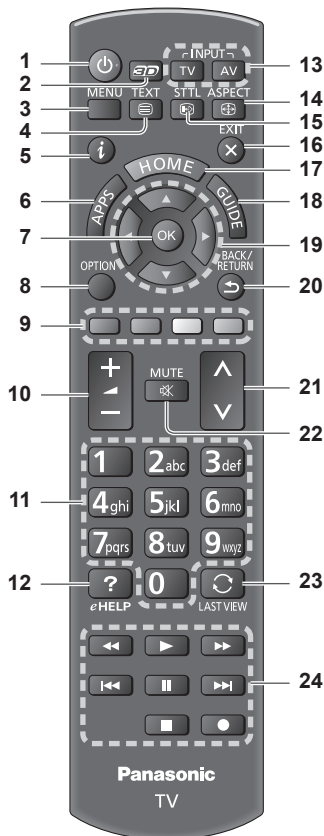

### 1 Standby On / Off switch

### 2 3D button

- Switches the view between 2D and 3D.

### 3 [Main Menu]

- Press to access Picture, Sound, Network, Timer, Setup and Help Menus.

### 4 Text service button

### 5 Information

- Displays channel and programme information.

### 6 APPS

- Displays [APPS List] (applications list).

### 7 OK

- Confirms selections and choices.
- Press after selecting channel positions to quickly change channel.

### 8 [Option Menu]

- Easy optional setting for viewing, sound, etc.

### 9 Coloured buttons (red-green-yellow-blue)

- Used for the selection, navigation and operation of various functions.

### 10 Volume Up / Down

### 11 Numeric buttons

- Changes channel and teletext pages.
- Sets characters.
- When in Standby mode, switches TV on.

### 12 [eHELP]

- Displays [eHELP] (Built-in Operating Instructions).

### 13 Input mode selection

- TV - switches to DVB / Analogue mode.
- AV - switches to AV input mode from Input Selection list.

### 14 Aspect

- Changes aspect ratio.

### 15 Subtitles

- Displays subtitles.

### 16 Exit

- Returns to [Home Screen].

### 17 HOME

- Displays [Home Screen].

### 18 TV Guide

- Displays Electronic Programme Guide.

### 19 Cursor buttons

- Makes selections and adjustments.

### 20 Return

- Returns to the previous menu / page.

### 21 Channel Up / Down


 
### 22 Sound Mute On / Off

### 23 Last view

- Switches to previously viewed channel or input mode.

### 24 Operations for contents, connected equipment, etc.

## ■ Installing / Removing batteries

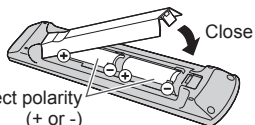


Note the correct polarity (+ or -)

## Electronic Touch Pen

You can paint or play games on the TV screen with the Electronic Touch Pen.

- The Electronic Touch Pen can be used by pairing to the TV in [Auto Setup] (p. 16) or [Touch Pen Setup]. For more information, refer to [eHELP] (Functions > Electronic Touch Pen > Touch Pen Setup).

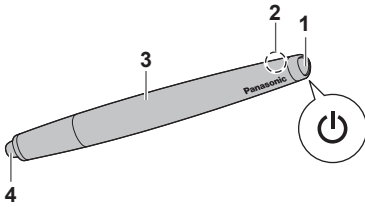

### 1 Power button

To turn on: Press once

To turn off: Press and hold 2 seconds or longer

- Automatically turned off if unused for 5 minutes.

### 2 Indicator lamp

- Lights for approx. 2 seconds when turned on, and then blinks at approx. 2-second intervals.

- Up to 2 pieces of the Electronic Touch Pen (Pen1 / Pen2) can be used simultaneously.

Indicator blinks:

Pen1: Red

Pen2: Green

- Also lights or blinks when pairing the Electronic Touch Pen to the TV.

- Blinks 5 times consecutively at power-on when the battery level is low.

 
### 3 Unit cover

### 4 Pen tip


Press the pen tip on this side of the Electronic Touch Pen against the TV screen for use.

## ■ Inserting the battery


- 1 Turn and slide the unit cover until the entire shape of the battery is visible.



 - 2 Insert the R03 battery, and then slide and turn the unit cover to close until it clicks.



## ■ How to hold the Electronic Touch Pen

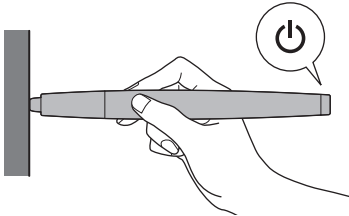


- Touch the tip of the Electronic Touch Pen vertically onto the TV screen and press it lightly.

### Note

- Do not use devices such as mobile phones or personal transceivers that emit strong electromagnetic waves near the Electronic Touch Pen as this may cause the Electronic Touch Pen to malfunction.
- Use the Electronic Touch Pen where there is no interference from other Bluetooth devices.
- For more information, refer to [eHELP] (Functions > Electronic Touch Pen).

## Indicator / Control panel

- When pressing 1, 2, 3 buttons, the control panel guide appears on the right side of the screen for 3 seconds to highlight the pressed button.

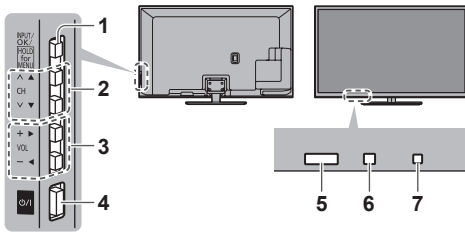

Rear side of the TV

### 1 Input mode selection

- Press repeatedly until you reach the desired mode.

#### [Main Menu]

- Press and hold for about 3 seconds to display main menu.

**OK** (when in the menu system)

- 2 Channel Up / Down**  
Cursor Up / Down (when in the menu system)
- 3 Volume Up / Down**  
Cursor Left / Right (when in the menu system)

### 4 Mains power On / Off switch

- Use to switch the mains power.

### 5 Remote control signal receiver

- Do not place any objects between the TV remote control signal receiver and remote control.

### 6 Ambient sensor

- Senses brightness to adjust picture quality when [Ambient Sensor] in the Picture Menu is set to [On].

### 7 Power LED

**Red:** Standby

**Green:** On

- The LED blinks when the TV receives a command from the remote control.


## Using the On Screen Displays - Operation guide

Many features available on this TV can be accessed via the On Screen Display menu.

### ■ Operation guide

Operation guide will help your operation by using the remote control.

Example: [Sound Menu]

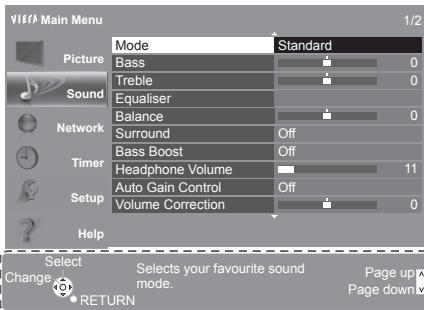

Operation guide

### ■ How to use remote control

**MENU**



Open the main menu



Move the cursor / select from a range of options / select the menu item (up and down only) / adjust levels (left and right only)



Access the menu / store settings after adjustments have been made or options have been set

**BACK / RETURN**



Return to the previous menu

**EXIT**



Exit the menu system and return to [Home Screen]

# First time Auto Setup

Automatically sets up the TV and searches for available TV channels when the TV is turned on for the first time.

- These steps are not necessary if the setup has been completed by your local dealer.
- Please complete connections (p. 8 - 12) and settings (if necessary) of the connected equipment before starting Auto Setup. For details of settings for the connected equipment, read the manual of the equipment.

## 1 Plug the TV into mains socket and turn power on



- Takes a few seconds to be displayed.



## 2 Select the following items

Set up each item by following the on-screen instructions.

### Select [Home]

Select [Home] viewing environment to use in your home environment.

- [Shop] is for shop display.

• To change viewing environment later on, you will need to initialise all settings by accessing Shipping Condition.

### Set up the network connection

#### Select your country

Select your region

### Pair the Electronic Touch Pen

## 3 Select the type of [Home Screen]

The demonstration to explain how to use [my Home Screen] is displayed. Confirm the demonstration by following the on-screen instructions, and then select the desired [Home Screen].

Example: [Home Screen Selection]



Example: [TV Home Screen]



- [my Home Screen] is the start-up screen when the TV is turned on or the HOME button is pressed.

## Auto Setup is now complete and your TV is ready for viewing.

If tuning has failed, check the connection of the network, RF cable, and then follow the on-screen instructions.


### Note

- The TV will automatically go into Standby mode when no operation is performed for 4 hours if [Auto Standby] in the Timer Menu is set to [On].
- The TV will automatically go into Standby mode when no signal is received and no operation is performed for 10 minutes if [No signal Power off] in the Timer Menu is set to [On].
- To retune all channels ➔ **[Auto Setup] in [Tuning Menu] (Setup Menu)**
- To initialise all settings ➔ **[Shipping Condition] in [System Menu] (Setup Menu)**



# Operations

## Turn power on

- ⏻/I (TV) or  • Mains power On / Off switch should be on. (p. 15) (Remote Control)

The last viewed [Home Screen] is displayed.

Example: [TV Home Screen]



Example: Selected content screen



- To return to [Home Screen] at any time



- You can set up or make [Home Screen] to display desired information, to access specific features easily, to select the default [Home Screen], etc. For details, follow the on-screen instructions or refer to [eHELP] (Watching > my Home Screen).

## Watching TV

### 1 Select the TV viewer from [Home Screen]



### 2 Select DVB or Analogue



### 3 Select a channel



or



- To select 2 or more-digit channel position number, e.g. 399

## To access each feature

### Access [APPS List] and select a feature

Example: [APPS List]





- APPS is the applications (features) of the TV.
- For operations of each feature and the setup of [APPS List], follow the on-screen instructions or refer to [eHELP] (Functions > APPS List).

# How to Use eHELP




[eHELP] is the detailed operating instructions built into the TV, and helps you to get more understanding of the operations for each feature.

## 1 Display [eHELP]

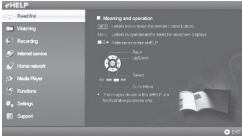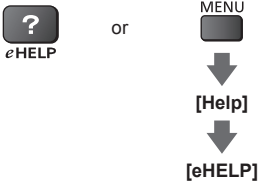

- [Read first] will be displayed on the top page. Please read these instructions fully to get more understanding of the operation in [eHELP].
- If this is not the first time to view [eHELP] from when the TV is turned on, the confirmation screen is displayed to select whether [First Page] or [Last Page].

## 2 Select the category and item

  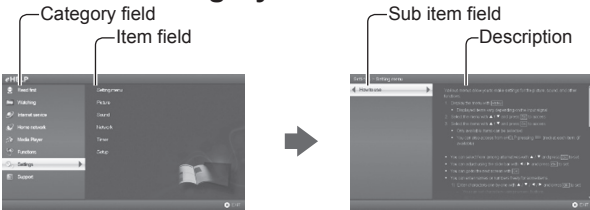

- To return to the previous field



- To scroll the description (if more than 1 page)  
While the description is highlighted



- To display the menu related to the description (only for some descriptions)



# Viewing 3D images

You can enjoy viewing 3D images with contents or programmes corresponding to the 3D effect by wearing the 3D Eyewear. ► **“Accessories” (p. 6)**

- The 3D Eyewear must be worn to view 3D images.
- This TV supports [Frame Sequential]\*, [Side by Side] and [Top and Bottom] 3D formats.

\*: The 3D format that the images for the left and right eyes are recorded with the high definition quality and alternately played back.

## 3D Eyewear

Use the supplied 3D Eyewear or Panasonic 3D Eyewear that has this logo and supports Bluetooth® wireless technology.



- “Full HD 3D Glasses™” logo indicates products that are compatible with the active shutter 3D glasses technology standards licensed by the Full HD 3D Glasses Initiative. The RF mark on the logo means the wireless system (Bluetooth® wireless technology), and you can use the 3D Eyewear and the TV that have the same mark together.

### Note

- Do not exert pressure on or scratch the lens of the 3D Eyewear.
- Do not use devices such as mobile phones or personal transceivers that emit strong electromagnetic waves near the 3D Eyewear as this may cause the 3D Eyewear to malfunction.
- Do not wear the 3D Eyewear when watching anything other than 3D images. Liquid crystal displays (such as computer screens, digital clocks or calculators, etc.) may be difficult to see while wearing the 3D Eyewear.

### First registration

Perform the first registration when first using the 3D Eyewear with this TV.

#### 1 Turn the TV on

#### 2 Press the button for about 1 second to turn the 3D Eyewear on

- The lamp lights for about 2 seconds and then flashes.
- The 3D Eyewear will be turned on and start registration.
- Place the 3D Eyewear within 50 cm from the TV while registration in progress.

#### 3 After the registration is successfully completed, the 3D Eyewear will reconnect with TV automatically when the 3D Eyewear is turned on near the TV in 3D mode

### Registration again

When connection with the registered TV fails, or when using with another TV, re-register the 3D Eyewear.

#### 1 Turn the TV on

#### 2 Within 50 cm from the TV, press Power button until lamp lights, then release it to start registration

#### 3 After the registration is successfully completed, the 3D Eyewear will reconnect with TV automatically when the 3D Eyewear is turned on near the TV in 3D mode

## To view the 3D images

### ■ Playing back 3D-compatible Blu-ray disc (Frame Sequential format)

- Connect the 3D-compatible player via a fully wired HDMI compliant cable. (If you use the non 3D-compatible player, the images will be displayed in 2D mode.)
- If the input mode is not switched automatically, select the input mode connected to the player using the AV button.

### ■ 3D-supported broadcast

- Please consult the suppliers of contents or programmes for availability of this service.

### ■ 3D photos and 3D videos taken by 3D-compatible Panasonic products

- Available in Media Player and Network services.

### ■ 2D images converted to 3D

- Press the 3D button and set to [2D→3D] mode in [3D Mode Selection].

### Preparations

Ensure that the registration of the 3D Eyewear has been completed.

1

## Turn the 3D Eyewear on and put it on

Connection status and battery status are displayed on the bottom right of the screen.

2

## View the 3D images

Safety precautions will be displayed when you first watch the 3D image. Select [Yes] or [No] to continue to view 3D images.

### Note

- Turn off the 3D Eyewear after using it.
- Use the 3D Eyewear within approximately 3.2 m from the TV. You cannot view the 3D images with the 3D Eyewear too far from the TV, because of the difficulty of receiving radio waves from the TV.
- The range may be shortened depending on the obstacles between the TV and the 3D Eyewear, or the surrounding environment.
- Use the 3D Eyewear where there is no interference from other Bluetooth devices.
- 3D content will not be correctly visible if the 3D Eyewear is worn upside down or back-to-front.
- When viewing 3D images, make sure your eyes are at an approximately horizontal level and keep a position where you do not see double images.
- If light appears to flicker under fluorescents or dimmers when using the 3D Eyewear, change the setting of [3D Refresh Rate] in [3D Settings] (Picture Menu).
- There are differences in the viewing range of the 3D Eyewear among individuals.

## FAQs

Before requesting service or assistance, please follow these simple guides to solve the problem.

- For more information, refer to [eHELP] (Support > FAQs).

### The TV does not switch on

- Check the mains lead is plugged into the TV and the socket outlet.
- The fuse in the mains plug may have blown. Replace it with one of an identical rating. ➔ (p. 3)

### The TV goes into Standby mode

- Auto power standby function is activated.

### The remote control does not work or is intermittent

- Are the batteries installed correctly? ➔ (p. 13)
- Has the TV been switched on?
- The batteries may be running low. Replace them with new ones.
- Point the remote control directly at the TV's remote control signal receiver (within about 7 m and a 30 degree angle of the signal receiver).
- Situate the TV away from sunshine or other sources of bright light not to shine on the TV's remote control signal receiver.

### Electronic Touch Pen does not work

- Check that the batteries are fresh, are of the same type and are installed with the correct polarity (+ & -).
- Check if the pairing range is within 50 cm.
- The Electronic Touch Pen automatically turns off if pairing cannot be performed within 2 minutes. In this case, pair again.
- The Electronic Touch Pen automatically turns off if unused for 5 minutes. (When the Electronic Touch Pen is turned on, the indicator lamp blinks but turns off in several minutes.) Turn the power on again.

### No image can be displayed

- Check the TV is turned on.
- Check the mains lead is plugged into the TV and the socket outlet.
- Check the correct input mode is selected.
- Check the setting of [AV2] ([COMPONENT] / [VIDEO]) in [Input Selection] to match the output of the external equipment.
- Is [Contrast], [Brightness] or [Colour] in the Picture Menu set to the minimum?
- Check all required cables and connections are firmly in place.

### Unusual image is displayed

- Turn the TV off with Mains power On / Off switch, then turn it on again.
- If the problem persists, initialise all settings. ➔ [Shipping Condition] in [System Menu] (Setup Menu)

### Unusual sound from the TV

- When the power is on, whirring sound of cooling fan or drive noise may be heard from inside the TV (not a sign of faulty operation).

### Parts of the TV become hot

- Even if the temperature of parts of the front, top and rear panels has risen, these temperature rises do not cause any problems in terms of performance or quality.

Check you can get Freeview HD in your area. Text your postcode, followed by your house number or name to **80560\***. Or visit **freeview.co.uk**

\*e.g. NW96NY1 (Costs no more than a normal text.)

To get the most up to date service from Freeview it is important for Freeview customers to retune from time to time.

#### How do I re-tune my Freeview TV ?

This is a quick reference. If you have any problems, check the Operating Instructions or ask a friend or family member to show you how. Alternatively, go to your local electrical retailer, contact your local Panasonic dealer or visit **freeview.co.uk/retune**

Re-tuning only takes a few minutes, just follow the steps below:

1. Press the TV button to select DVB mode.
2. Press the MENU button to open the main menu.
3. [Setup] ➔ [DVB Tuning Menu] ➔ [Auto Setup]

Please note: most digital TV recorders will keep your original recordings after running a re-tune but you will need to reset any future recordings.

## Maintenance

**First, remove the mains plug from the socket outlet.**

### Display panel, Cabinet, Pedestal

#### Regular care:

Gently wipe the surface of the display panel, cabinet, or pedestal by using a soft cloth to clean the dirt or fingerprints.

#### For stubborn dirt:

First clean the dust on the surface. Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Wring the cloth and wipe the surface. Finally, wipe away all the moisture.

#### Caution

- Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.
- Take care not to subject the TV's surfaces to water or detergent. Liquid inside the TV could lead to product failure.
- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

### Mains plug

Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may cause fire or electrical shock.

## Specifications

■ TV	42-inch model	50-inch model	55-inch model
Model No.	TX-P42ST60B	TX-P50ST60B	TX-P55ST60B
Dimensions (W × H × D)	994 mm × 650 mm × 256 mm (With Pedestal) 994 mm × 596 mm × 49 mm (TV only)	1,170 mm × 751 mm × 295 mm (With Pedestal) 1,170 mm × 697 mm × 49 mm (TV only)	1,286 mm × 816 mm × 333 mm (With Pedestal) 1,286 mm × 762 mm × 49 mm (TV only)
Mass	20.0 kg Net (With Pedestal) 17.0 kg Net (TV only)	25.5 kg Net (With Pedestal) 22.5 kg Net (TV only)	31.0 kg Net (With Pedestal) 27.0 kg Net (TV only)

<b>Power source</b>		AC 220-240 V, 50 / 60 Hz	
<b>Panel</b>		Plasma panel	
<b>Connection terminals</b>	<b>AV1 input / output</b>	<b>SCART</b> (Audio/Video in, Audio/Video out, RGB in)	
	<b>AV2 input (COMPONENT / VIDEO)</b>	<b>VIDEO</b>	RCA PIN Type × 1 1.0 V[p-p] (75 Ω)
		<b>AUDIO L - R</b>	RCA PIN Type × 2 0.5 V[rms]
		<b>Y</b> <b>P<sub>B</sub>, P<sub>R</sub></b>	1.0 V[p-p] (including synchronisation) ±0.35 V[p-p]
	<b>HDMI 1 / 2 / 3 input</b>	TYPE A Connectors HDMI1 / 3: 3D, Content Type, Deep Colour, x.v.Colour™ HDMI2: 3D, Content Type, Audio Return Channel, Deep Colour, x.v.Colour™ • This TV supports "HDAVI Control 5" function.	
	<b>Card slot</b>	SD Card slot × 1 Common Interface slot (complies with CI Plus) × 1	
	<b>ETHERNET</b>	RJ45, IEEE802.3 10BASE-T / 100BASE-TX	
	<b>USB 1 / 2</b>	USB2.0 DC 5 V, Max. 500 mA	
<b>DIGITAL AUDIO output</b>	PCM / Dolby Digital / DTS, Fibre optic		
<b>Sound</b>	<b>Speaker</b>	Speaker × 2, Woofer (Φ 75 mm) × 1	
	<b>Audio output</b>	20 W (5 W + 5 W + 10 W)	
	<b>Headphones</b>	M3 (3.5 mm) stereo mini Jack × 1	
<b>Receiving systems / Band name</b>  Check the latest information on the available services at the following website. <a href="http://panasonic.net/viera/support">http://panasonic.net/viera/support</a>	<b>UK</b>	<b>DVB-T / T2</b>	Digital terrestrial services
		<b>PAL I</b>	UHF E21 - 68
		<b>PAL 525/60</b>	Playback of NTSC tape from some PAL Video recorders (VCR) or NTSC disc playback from DVD player and recorder
		<b>M.NTSC</b>	Playback from M.NTSC Video recorders (VCR)
		<b>NTSC (AV input only)</b>	Playback from NTSC Video recorders (VCR)
	<b>Ireland</b>	<b>DVB-T</b>	Digital terrestrial services
		<b>PAL I</b>	VHF A - J CATV S1 - S20 UHF E21 - E69 CATV S21 - S41 (Hyperband)
		<b>PAL 525/60</b>	Playback of NTSC tape from some PAL Video recorders (VCR) or NTSC disc playback from DVD player and recorder
		<b>M.NTSC</b>	Playback from M.NTSC Video recorders (VCR)
		<b>NTSC (AV input only)</b>	Playback from NTSC Video recorders (VCR)
<b>Aerial input</b>	<b>UK</b> UHF	<b>Ireland</b> VHF / UHF	
<b>Operating conditions</b>	<b>Temperature:</b> 0 °C - 35 °C <b>Humidity:</b> 20 % - 80 % RH (non-condensing)		
<b>Built-in wireless LAN</b>	<b>Standard compliance and Frequency range*1:</b> IEEE802.11a/n 5.180 GHz - 5.320 GHz, 5.500 GHz - 5.580 GHz, 5.660 GHz - 5.700 GHz IEEE802.11b/g/n 2.412 GHz - 2.472 GHz		
	<b>Security:</b> WPA2-PSK (TKIP/AES) WPA-PSK (TKIP/AES) WEP (64 bit/128 bit)		
<b>Bluetooth wireless technology*2</b>	<b>Standard Compliance:</b> Bluetooth 3.0		
	<b>Frequency Range:</b> 2.402 GHz - 2.480 GHz		

\*1 The frequency and channel differ depending on the country.

\*2 Not all the Bluetooth compatible devices are available with this TV. Up to 5 devices can be used simultaneously (except the 3D Eyewear).

### ■ 3D Eyewear

<b>Dimensions (W × H × D)</b>	164.7 mm × 41.0 mm × 170.7 mm
<b>Mass</b>	Approx. 34 g
<b>Lens type</b>	Liquid Crystal Shutter
<b>Usage temperature range</b>	0 °C - 40 °C
<b>Battery</b>	Coin-shaped lithium battery CR2025 Operation time: Approx. 75 hours in continuous use of the battery made by Panasonic
<b>Materials</b>	Main body: Resin Lens section: Liquid crystal glass

### ■ Electronic Touch Pen

<b>Dimensions</b>	Length: 186.7 mm Diameter: 18.2 mm
<b>Mass</b>	Approx. 30 g (excluding battery)
<b>Usage temperature range</b>	0 °C - 40 °C
<b>Battery</b>	Panasonic R03 battery Operation time : approx. 8 hours Panasonic LR03 battery Operation time: approx. 30 hours
<b>Materials</b>	Main body: Resin

- 3D Eyewear and Electronic Touch Pen use Bluetooth wireless technology.

#### Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.
- For the information of power consumption, display resolution, etc., please refer to Product fiche.
- For the information of the open source software, refer to [eHELP] (Support > Licence).
- This equipment complies with the EMC standards listed below.  
EN55013, EN61000-3-2, EN61000-3-3, EN55020, EN55022, EN55024

### ■ When using the wall-hanging bracket

- For the recommended wall-hanging bracket, refer to [eHELP].

42-inch model  
50-inch model

**a: 400 mm**  
**b: 300 mm**

55-inch model

**a: 500 mm**  
**b: 300 mm**

• Holes for wall-hanging bracket installation

**Depth of screw**

42-inch model  
50-inch model  
**minimum: 10 mm**  
**maximum: 16 mm**

55-inch model  
**minimum: 17 mm**  
**maximum: 23 mm**

**Diameter: M8**

Screw for fixing the TV onto the wall-hanging bracket (not supplied with the TV)

(View from the side)

Rear of the TV

### Plasma Television



#### Declaration of Conformity (DoC)

"Hereby, Panasonic Corporation declares that this TV is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC."

If you want to get a copy of the original DoC of this TV, please visit the following website:  
<http://www.doc.panasonic.de>

Authorized Representative:  
Panasonic Testing Centre  
Panasonic Marketing Europe GmbH  
Winsbergring 15, 22525 Hamburg, Germany

This TV is intended to be used in the following countries.  
Ireland, United Kingdom

The wireless LAN feature of this TV shall exclusively be used inside buildings.

## Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



### [Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Cd

## Sales and Support Information

### Customer Communications Centre

- For customers within the UK: **0844 844 3899**
- For customers within Ireland: **01289 8333**
- Monday – Friday 9:00am – 5:00pm, (Excluding public holidays).
- For further support on your product, please visit our website: [www.panasonic.co.uk](http://www.panasonic.co.uk)

### Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre Monday – Friday 9:00am – 5:00pm, (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at [www.pas-europe.com](http://www.pas-europe.com).
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.

### Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

**Model Number**

**Serial Number**

Panasonic UK, a branch of Panasonic Marketing Europe GmbH

Willoughby Road, Bracknell, Berkshire, RG12 8FP

Web Site: <http://panasonic.net>

© Panasonic Corporation 2013

Printed in Czech Republic

M0213-0