 



# Portable DVD Player with ATSC TV

## Quick Start Guide

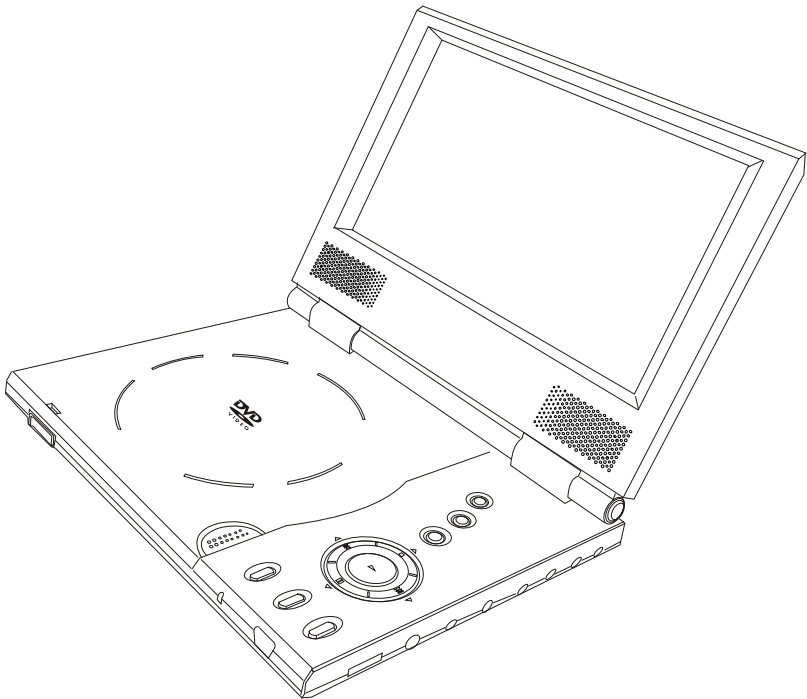


# Device Overview
 
## ► Front Panel

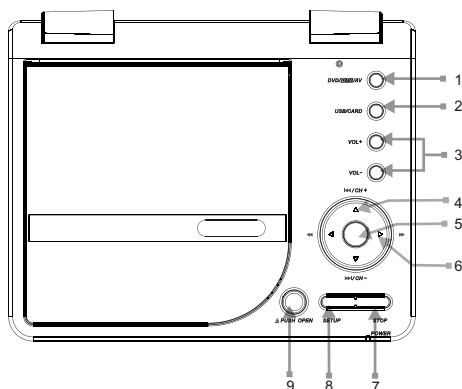


1. **DVD/DTV/AV**: Switch DVD/DTV /AV mode.
2. **USB/CARD**: Switch USB or card reader playback.
3. **VOL**: Volume up/down.
4. **▲ ▼ PREV/NEXT**: Go to the next or previous chapter/Choose channels that you want on the ATSC mode.
5. **OK**: Confirm your selections.
6. **◀ ▶ REW/FF**: Fast forward or rewind.
7. **STOP** : Stop current playing.
8. **SETUP**: Enter the device configuration. (DVD/ATSC)
9. **OPEN**: Open the DVD cover.

## ► Side panel

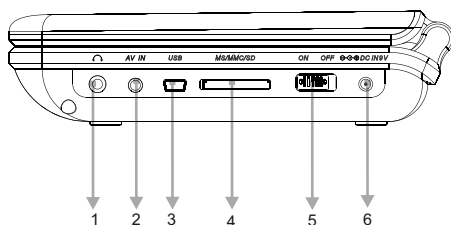

- |                       |             |
|-----------------------|-------------|
| 1. Earphone           | 5. Power    |
| 2. AV in              | 6. DC IN 9V |
| 3. USB                |             |
| 4. 3 in 1 card reader |             |

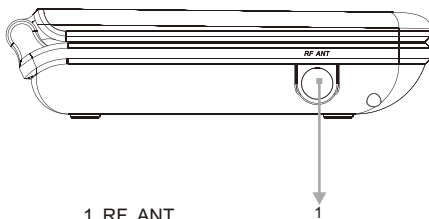

1. RF ANT


# Remote Control

## ► Remote control functions




- : Switch the USB or CARD mode
- : Switch the DVD/ DTV or AV mode
- : Return to ATSC menu playback (ATSC)
- : Closed caption (ATSC)
- : Direction key (ATSC)
- : Electronic Program Guide (ATSC)
- : Setup your favorite programs (ATSC)
- : TV Information (ATSC)
- : Select different viewing angle
- : Search progress that you want on the DVD mode
- : Slow speed for playing
- : Repeat play the current chapter
- : Rewind
- : Fast forward
- : Switch the OSD languages on the DVD mode
- : Switch the languages that the disc supports
- : Setup the brightness/contrast
- : Turn off the volume
- : Increase volume
- : Decrease volume
- : Change next channel
- : Exit the current display
- : Confirm
- : Direction Key
- : Change last channel
- : Menu setup
- : Enter the Menu playback
- : Enter the Title playback
- : Play/Pause
- : Stop
- : Skipbackward
- : Skipforward
- : Zoom in/out the current picture
- : Time/Title/Chapter indication
- : Numeral Key

## ► Remote control use

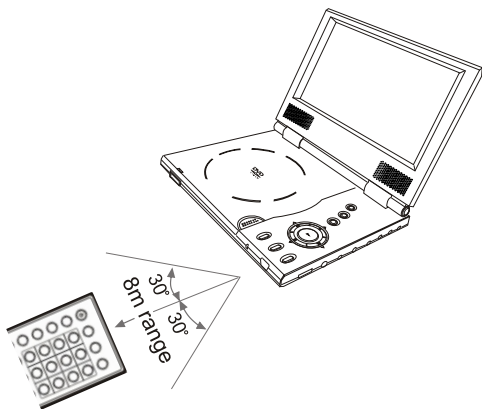


# SETUP Menu

The setup menu consists of four sub-menus for the General Setup, the audio and Video setup, the preference Setup. This menu is accessible with the SETUP button on the remote control or on the device. To navigate through the different sub-menus, use the ◀ and ▶ arrows; to navigate through the different options of the sub-menus, use the ▲ and ▼ arrows on the remote control.

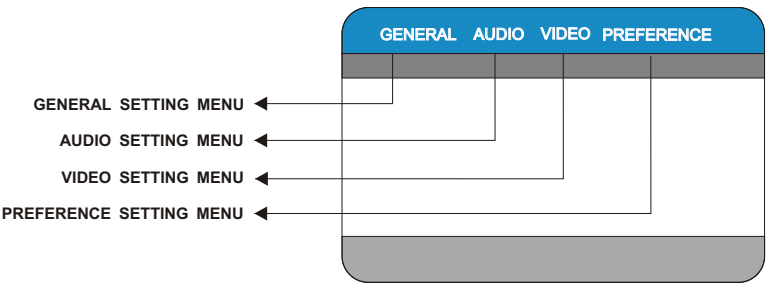

Press the "MENU" key to activate the main menu. Select the "Setup" option and press the "OK" key to enter the System Setup.

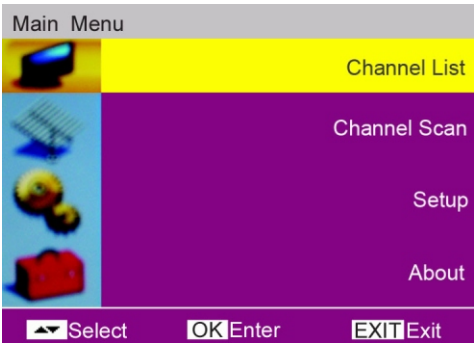

Change the OSD Language  
 Change the screen ratio  
 Setting the region and time  
 Timer Setting: for more information, refer to the next section.  
 Channels or Menu operations can be locked using password. The original password is "0000".


Note: It is only for Digital TV Setup.

# Power Supply Connection

You have 3 options to supply power for the device.

## ► Power supply connection through the AC Adapter.

Connect the power supply cord to the 9-12 volt input of the product then plug the power supply cord to a main power outlet. While this device is charging through the AC adapter, the internal battery will be charged at the same time. This unit is a mobile device that needs a battery to operate outside. Built-in rechargeable battery allows for portable use while traveling or outdoors for up to 2.5 hours.

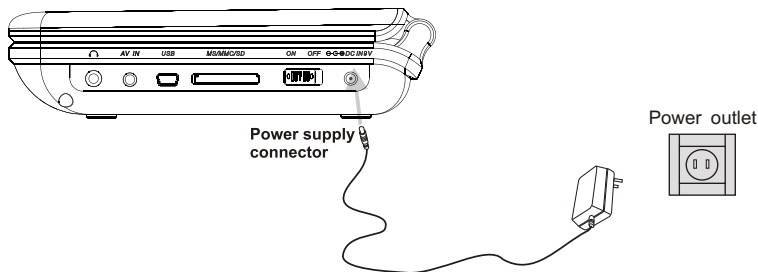


## ► Power supply connection through the car adapter.

Connect the Car adapter (supplied with your device ) as indicated below.

Caution! Do not use any other cords but the one supplied with your product.

The power supply voltage is 9-12 Volt, you must check if your vehicle voltage complies with that Voltage before connecting. Unplug adapter when you leave the vehicle.

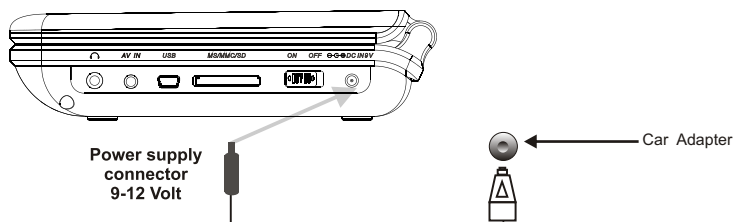

## ► Rechargeable Internal Battery.

Operating instructions: Internal battery automatically charges when device is connected to the AC adapter through a main power outlet. Internal rechargeable battery has 2.5 hours of life.


Warning: To prevent fire or shock hazard, do not expose the device to water, rain, or moisture.

Never expose battery pack to temperatures above 140 degrees F.


Do not disassemble

Do not incinerate


# DVD Player

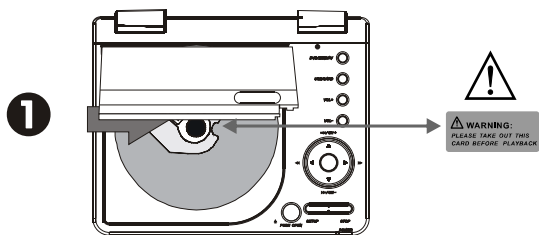

Remove the protection and put in the disc

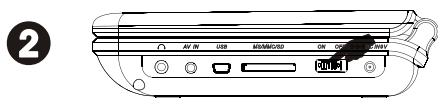

Put on the power

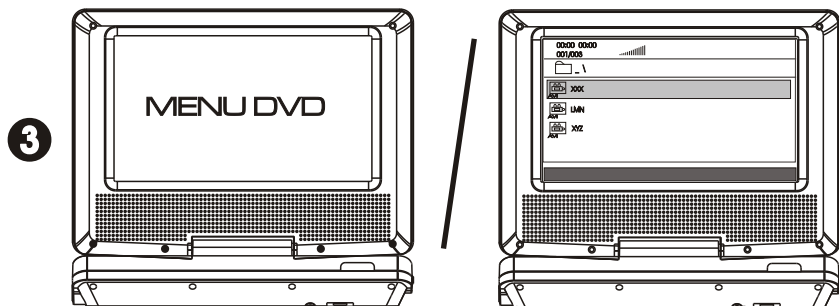


When you are playing a commercial DVD, the menu is displayed automatically.

When you are playing a DVD-R, CD..., a menu like the one above is displayed on the screen.

Select the file that you want to play with the ▲ or ▼ arrows on the remote control with the ◀ or ▶ arrows on the appliance then press ENTER.


## AV In

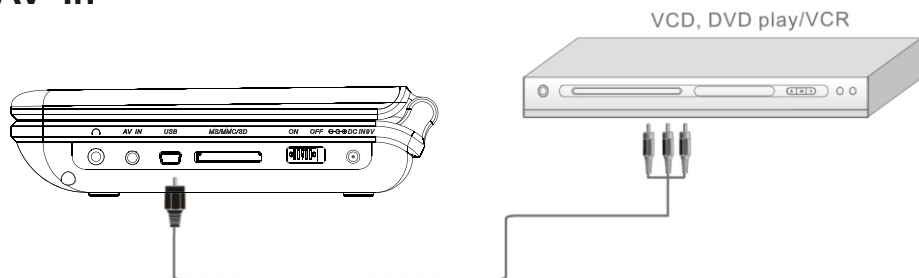


As the picture above, use the AV cable to connect the portable DVD player or other devices to this unit.

Turn on the portable DVD Player and the other unit to which connection has been made. Press the DVD/TV/AV button on the portable DVD player or on the remote control to enter the AV mode.


## USB/CARD

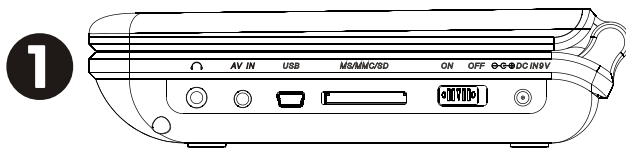

Switch on the player

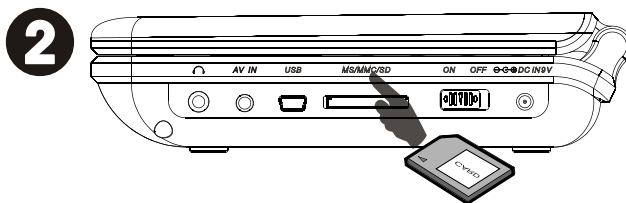


Insert the SD/MMC/MS card in the slot located at the side of the player

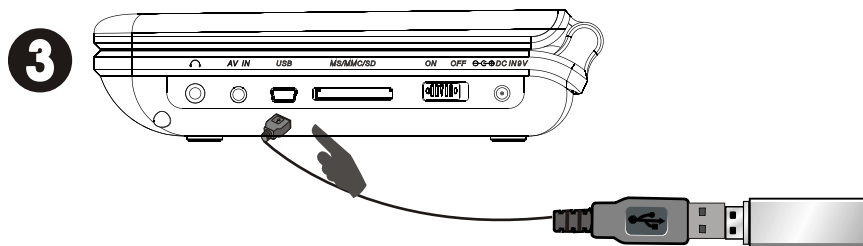

Insert the USB in the slot located on the side of the player

## Digital TV

There are two different ways to scan channels. Press SETUP on the remote/device, then in the Main menu -> channel scan -> auto scan, move the highlight bar to "search" button."

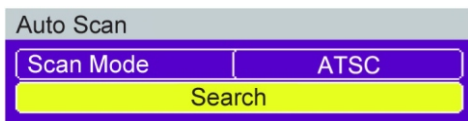

In Main Menu→Channel Scan→Manual Scan,set the appropriate parameter. Move the highlight bar to "search" button. Press [OK] key to scan Channels.

| Manual Scan                                                                              |                                     |
|------------------------------------------------------------------------------------------|-------------------------------------|
| Scan Mode                                                                                | By Channel                          |
| Scan Band                                                                                | ATSC                                |
| Ch No.                                                                                   | 52(722.000MHz)                      |
| Frequency                                                                                | 722.000                             |
| <div style="background-color: yellow; padding: 5px; display: inline-block;">Search</div> |                                     |
| Signal Intensity                                                                         | <div style="width: 51%;"></div> 51% |
| Signal Quality                                                                           | <div style="width: 97%;"></div> 97% |
| Select                                                                                   | Enter                               |
| EXIT Exit                                                                                |                                     |

## Car Seat Attachment

You can enjoy movies in the car by attaching the unit to the back of the headrest of the front seat.

**Note:** Please insert the disc before attaching the unit to the headrest mounting bracket.

- ▶ Attach the headrest mounting bracket to the back of the headrest of the front seat.

Adjust the headrest so there is an open space of about 3 cm.

Close the buckle and adjust the belt until it fits tightly around the headrest.



- ▶ Please be sure that the bracket is securely fastened to the unit and cannot be lifted upwards.
- ▶ Unzip and open the unit, and sit back and enjoy.



- ▶ **Release buckle**

Press the release buckle in the back of the bracket.

Lift the unit up to release it.

*Note: Do not press the release button other than when detaching the unit from the bracket.*