

Quick Reference Guide



Samsung Care

Samsung Premium Care

Get more than just protection for your device. Pick the time and place, and a team member will meet you to set up, troubleshoot, repair or replace your product.

Enroll at samsung.com/us/support/premium-care

Get to know your product:

- Access user manuals, troubleshooting, and more at samsung.com/us/support

Ask the community:

- Ask questions and share solutions with other Samsung customers at us.community.samsung.com

Contact us for support:


- Get hardware or software support, at samsung.com/us/support/contact or call us at 1.800.SAMSUNG
- Find a service location near you at samsung.com/us/support/service/locations

1 About your phone



Images shown are of the Galaxy A20 and are for reference only. The Galaxy A10e does not support Live focus, Dual camera or a Fingerprint scanner.

 2 Set up your phone

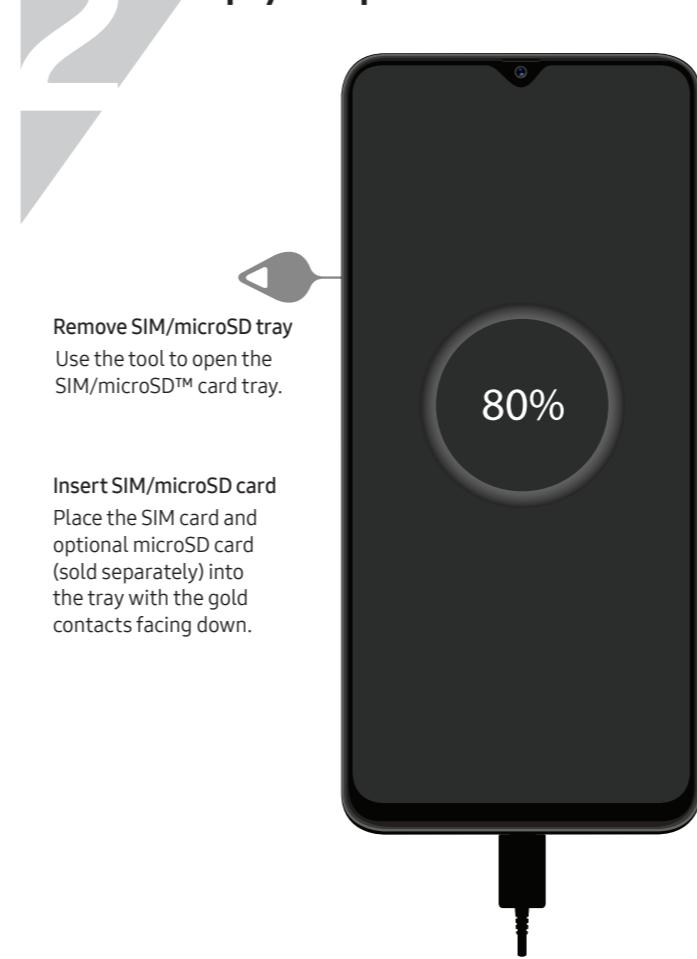

Remove SIM/microSD tray
Use the tool to open the SIM/microSD™ card tray.

Insert SIM/microSD card
Place the SIM card and optional microSD card (sold separately) into the tray with the gold contacts facing down.

 
Charge your device
Before turning on your phone, charge it fully.

Note: Use only Samsung-approved charging devices and accessories. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.


Backup and restore
Get help transferring contacts, photos and other content from your old phone at samsung.com/smarts witch





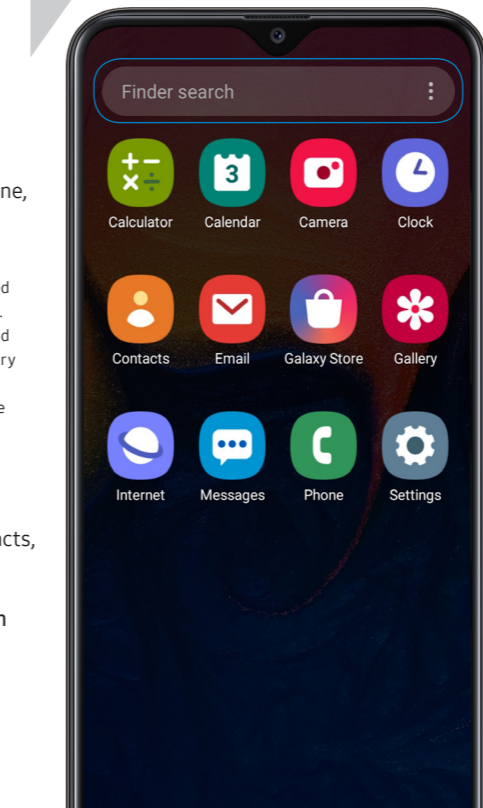


3 Search

From the Home screen, swipe up and search for apps, settings, contacts, and more.



Customize your phone

 
From the Home screen, swipe up, and then tap **Settings**  to customize, connect and personalize your phone:

-  **Connections**
Connect to a Wi-Fi™ network, Bluetooth device or other connection options.
-  **Sounds and vibration**
Set device volume and sounds.
-  **Display**
Customize the Home screen, navigation gestures, and adjust display brightness.
-  **Wallpapers and themes**
Make the device your own with fun and unique wallpapers and themes.
-  **Digital wellbeing**
Configure usage limits on your device.
-  **Lock screen**
Select a screen lock type and set security options.
-  **Biometrics and security**
Set facial or fingerprint security options.

Night mode

Use a darker theme to keep your eyes comfortable at night.

From **Settings** , tap **Display**  > **Night mode**.

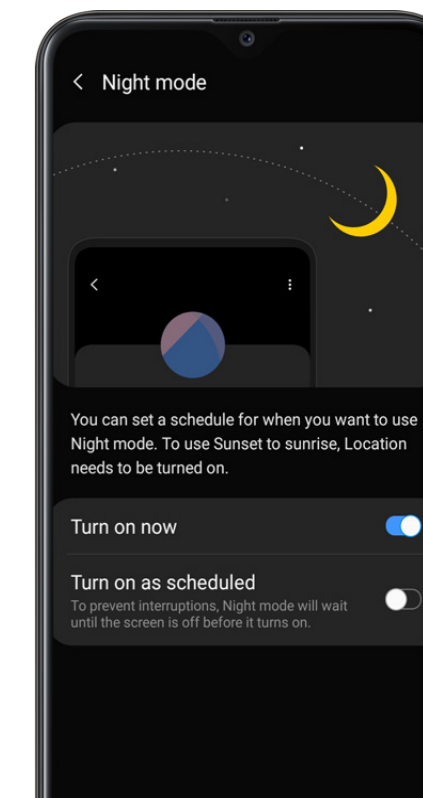

Camera



STICKER

Tap to add fun overlays to faces.

TOOLS PANEL

Swipe left or right to select effects.

CAMERA MODES

Swipe left or right to select a mode.

GALLERY

View photos.

CAPTURE

Take photos.

TOGGLE CAMERAS

Switch between the back and front cameras.

 


Recent apps

Enjoy the new full-screen view of recent apps.

Tap Recents to view a list of recently opened apps.


- Tap an app icon to view options.
- Swipe up to close.
- Swipe down to open.

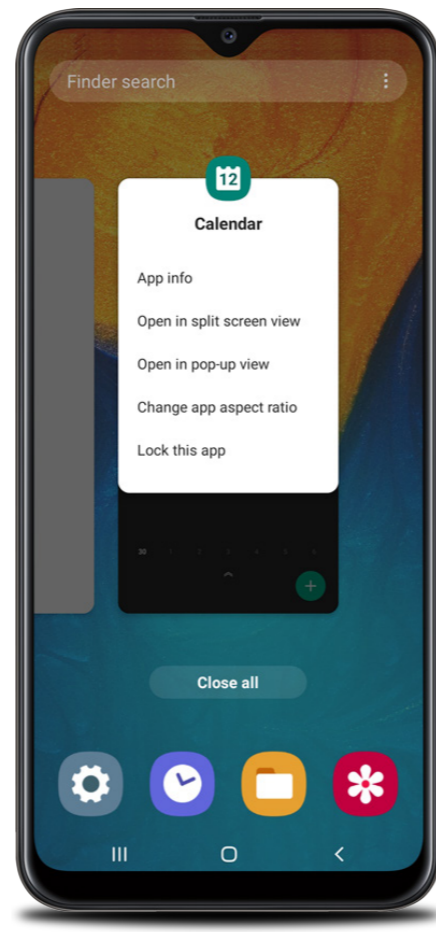

Gestures

Customize the Home, Back, and Recents keys or remove them and use gestures instead to increase screen space.

 1. From Settings , tap Display > Navigation bar.
2. Tap one of the following Navigation types:
 - Navigation buttons (default)
 - Full screen gestures
 - Button order
 - Gesture hints (Displays only when full screen gestures is selected)

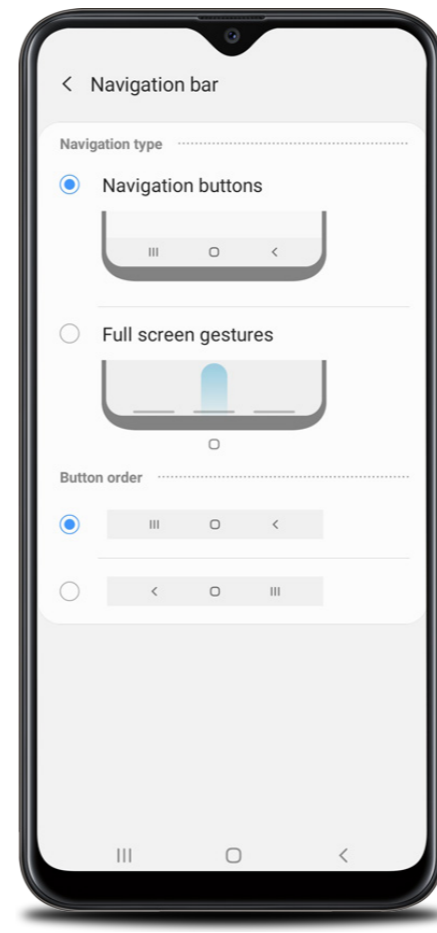

Learn more

Use the Help feature to access the user manual and other information on how to use your device, including:

- Making a call
- Sending and receiving texts
- Managing contacts
- Configuring accessibility settings

To open, from Settings tap Help .

