 


PowerLite® Pro Z8000WUNL/Z8050WNL

Quick Reference

This *Quick Reference* card gives brief instructions on connecting your PowerLite projector and using common features. For details, install and view the *User's Guide* from the projector's CD-ROM.



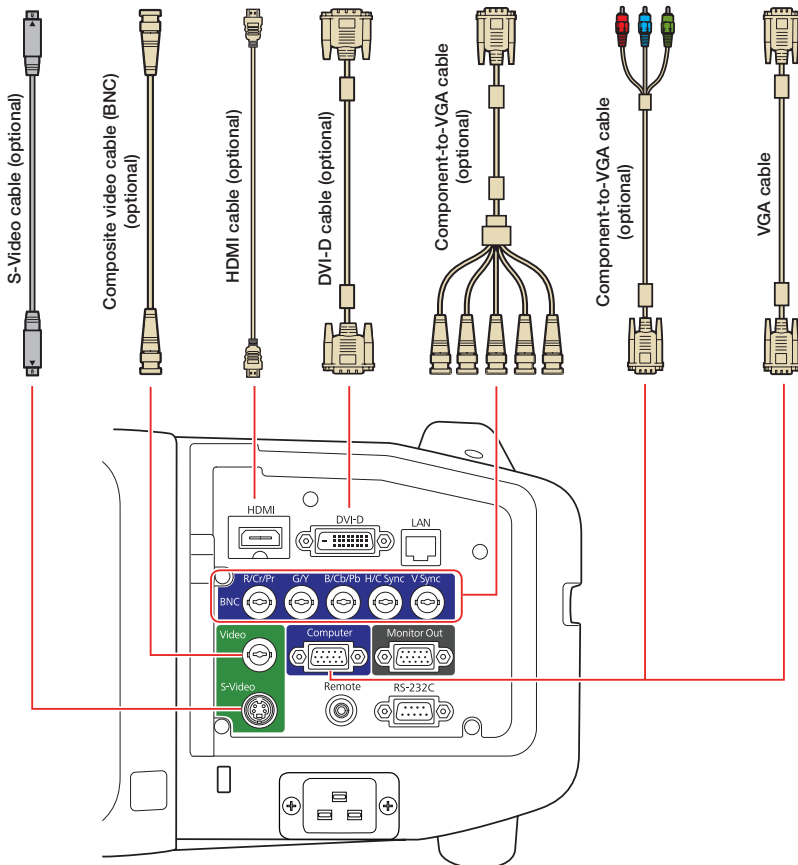

Note: The illustration above shows the PowerLite Pro Z8000WUNL. If you are using the PowerLite Pro Z8050WNL, the projector and interfaces are slightly different.

Installing the Manuals

1. Insert the projector CD in your computer's CD or DVD drive. (Double-click the **Epson** installer icon, if necessary.)
2. Select your language, select your projector model, and follow the instructions on the screen to register. Then click **Projector User's Guides** to install the manual(s). (If you are using Windows® and you don't have Adobe® Reader®, click **Adobe Reader** to install it also.) Then click **Exit**.
3. To view the manuals, double-click the **PL Pro Z8000WUNL_Z8050WNL Guide, Network Operation Guide** (for PowerLite Pro Z8050WNL users only), or **EasyMP Monitor Operation Guide** (for Windows users only) icon on your computer's desktop.

Turning the Projector On

 
1. Turn on your computer or image source.
2. Make sure you've installed the lens (not included), then remove the lens cover. (See the instructions that came with the lens for more information.)
3. Press the  power button. After the power light stays green, the projector is ready.

Note: If the **Direct Power On** function is enabled, you can turn the projector on without pressing the  power button; just plug it in or flip the switch controlling the outlet to which the projector is connected. To turn on this feature, see the on-screen *User's Guide*.

4. If your image does not appear, see "Switching Between Image Sources" or "Troubleshooting."


Switching Between Image Sources


Press the **Search** button (remote control), one of the **Source** buttons (remote control), or the **Source Search** button (projector).

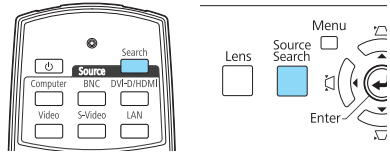


Adjusting Image Position

Press the **Lens Shift** button (remote control) or **Lens** button (projector) until **Adjust Lens Shift** is displayed on the screen.

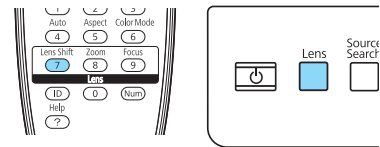

 To adjust the position, use the  button (remote control) or arrow buttons (projector).

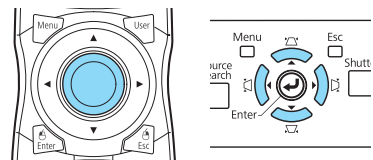



Press the button repeatedly to make fine adjustments. Press and hold the button to make larger adjustments.


If the projector is on a table, you can level the image by turning any of the projector's adjustable feet.

Focusing the Image

 Press the **Focus** button (remote control) or **Lens** button (projector) until **Adjust Focus** is displayed on the screen.

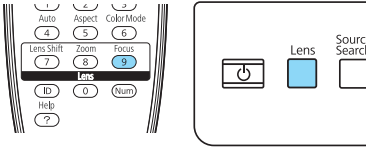


 
To adjust the focus, use the  button (remote control) or the arrow buttons (projector).

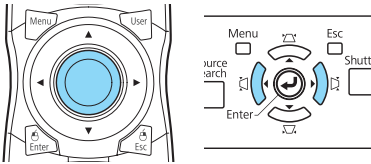


Zooming the image

  
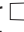 
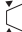 


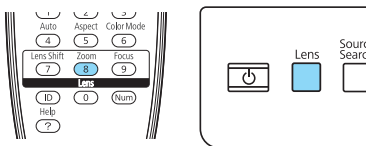


Press the **Zoom** button (remote control) or **Lens** button (projector) until **Adjust Zoom** is displayed on the screen.

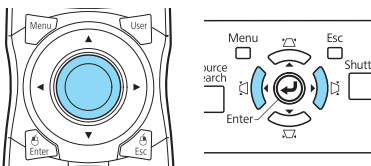

To reduce/enlarge the image, use the  button (remote control) or the arrow buttons (projector).



Correcting Image Shape



- If your image looks like  or , press the  or  button on the projector to correct it.
- If your image looks like  or , press the  or  button to correct it.
- If your image is uneven on all sides, you can use Quick Corner® to adjust the shape. See the on-screen *User's Guide*.

Changing the Aspect Ratio

Press the **Aspect** button on the remote control to change the aspect ratio.

For images input through the Computer port, select **Normal** to automatically resize the image.

Turning the Projector Off


Press the  power button to turn the projector off. At the confirmation message, press the  power button again.

Note: If the **Direct Power On** function is enabled, you can unplug the projector or flip the switch controlling the outlet to which the projector is connected instead. To turn on this feature, see the on-screen *User's Guide*.

With Epson's Instant Off® technology, you don't have to wait for the projector to cool down; just turn it off or unplug it when you're done.


Troubleshooting

If you see a blank screen or the message *No signal*

- Make sure the  power light on the projector is green and not flashing, and the lens cover is removed.
- Make sure the cables are connected correctly. See the on-screen *User's Guide*.
- You may need to change the image source. See "Switching Between Image Sources." (Also make sure the source device is turned on.)

If the projector and the notebook don't display the same image

Windows

Press the function key on your keyboard that lets you display on an external monitor (allow a few seconds for the projector to sync up after you press the key). It may be labeled **CRT/LCD** or have a  icon, and you may have to hold down the **Fn** key while pressing it.

If that doesn't work, open the **Display** utility in the Windows **Control Panel** (in Windows Vista®, right-click on the desktop and select **Personalize**, then select **Display Settings**). Next, click **Settings** and **Advanced** or **Advanced Settings**. Make sure the external monitor port is set as your primary display and/or enabled. See your computer's documentation or online help for details.

Mac OS® X

From the Apple® menu, select **System Preferences, Display** or **Displays, Detect Displays, VGA Display** or **Color LCD**, and **Arrangement** or **Arrange**. Then select **Mirror Displays**.

Where to Get Help

Internet support

Visit epson.com/support where you can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson.

Speak to a support representative

To use the Epson PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the included Epson PrivateLine Support card. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of the following numbers.

U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday-Friday

 
Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday-Friday

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Purchase supplies and accessories

You can purchase screens and other accessories from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766). Or you can purchase online at www.epsonstore.com (U.S. sales) or www.epson.ca (Canadian sales).

Remote Control Map

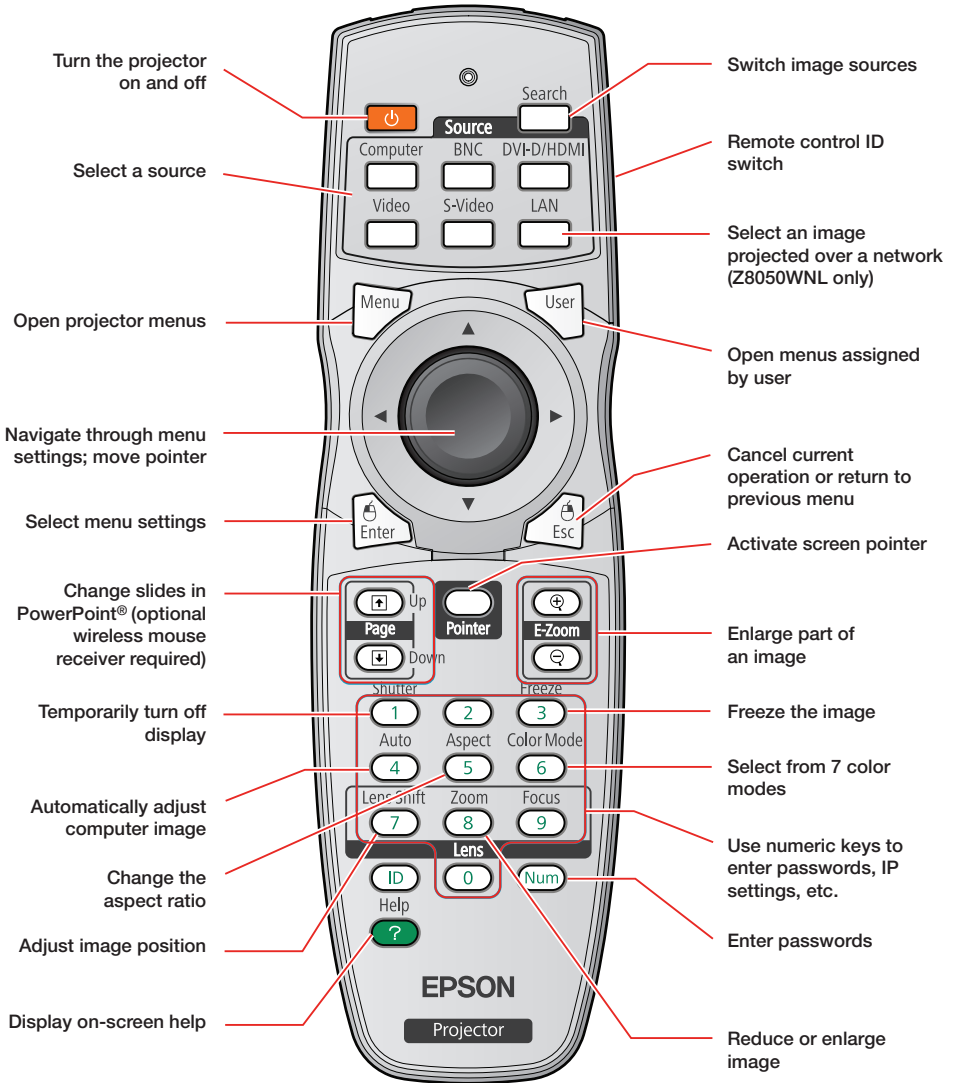

Replacement Parts

Product	Part Number
Replacement lamp one-pack (ELPLP51)	V13H010L51
Replacement lamp two-pack (ELPLP52)	V13H010L52
Air filter	V13H134A23

You can purchase replacement parts from an Epson authorized reseller. See “Where to Get Help” inside this card for more information.

EPSON[®]
EXCEED YOUR VISION



Epson, Instant Off, and Quick Corner are registered trademarks and Epson Exceed Your Vision is a registered logomark of Seiko Epson Corporation. PowerLite and PrivateLine are registered trademarks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2009 Epson America, Inc. 10/09

CPD-27504R1

Printed in XXXXXX



411821600