



DW60H3010FV
DW60H3010FW
DW60H5050FW
DW60H5050FS
DW60H6050FW
DW60H6050FS

Dishwasher user manual

imagine the possibilities

Thank you for purchasing this Samsung product.



Safety instructions

Congratulations on your new Samsung dishwasher. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your dishwasher's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this user manual.

Warning and important safety instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your dishwasher.

Because the following operating instructions cover various models, the characteristics of your dishwasher may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

Important safety symbols

	Hazards or unsafe practices that may result in severe personal injury and/or property damage.
	Hazards or unsafe practices that may result in personal injury and/or property damage.
	To reduce the risk of fire, explosion, electric shock, or personal injury when using your dishwasher, follow these basic safety precautions:
	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the appliance is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning symbols are here to prevent injury to you and others.

Please follow them explicitly.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.



To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Safety instructions

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

The door should not be left in the open position since this could present a tripping hazard.

WARNING: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

INSTRUCTIONS WHEN USING YOUR DISHWASHER

 This dishwasher is not designed for commercial use. It is intended for use in domestic households and in similar working and residential environments such as:

- Shops
- Offices and showrooms

and by residents in establishments such as:

- Hostels and guest houses.

 It must only be used as a domestic appliance as specified in these user manual, for cleaning domestic crockery and cutlery.

Any other usage is not supported by the manufacturer and could be dangerous.

 The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

 Do not use solvents in the dishwasher. Danger of explosion.

 Do not inhale or ingest dishwasher detergent. Dishwasher detergents contain irritant or corrosive ingredients which can cause burning in the nose, mouth and throat if swallowed, or inhibit breathing. Consult a doctor immediately if detergent has been swallowed or inhaled.

 Avoid leaving the door open unnecessarily, as you could trip over it.

 Do not sit or lean on the opened door. This could cause the dishwasher to tip and be damaged, and you could get injured.

 Only use detergent and rinse aid formulated for domestic dishwashers. Do not use washing-up liquid.

 Do not use the strong acid cleaning agent.

 Do not fill the rinse aid reservoir with powder or liquid detergent. This will cause serious damage to the reservoir.

 Inadvertently filling the salt reservoir with powder or liquid dishwasher detergent will damage the water softener. Make sure you have picked up the correct packet of dishwasher salt before filling the salt reservoir.

 Please only use special coarse grained dishwasher salt for reactivation, as other salts may contain insoluble additives which can impair the functioning of the softener.

 In an appliance with a cutlery basket (depending on model), cutlery is cleaned and dried more if placed in efficiently the basket with the handles downwards. However, to avoid the risk of injury, place knives and forks etc. with the handles upwards.

 Plastic items which cannot withstand being washed in hot water, such as disposable plastic containers, or plastic cutlery and crockery should not be cleaned in the dishwasher. The high temperatures in the dishwasher may cause them to melt or lose shape.

 On models with Delay Start function, make sure that the dispenser is dry before adding detergent. Wipe dry if necessary. Detergent will clog if poured into a damp dispenser and may not be thoroughly dispersed.

Safety instructions

 Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.

INSTRUCTIONS FOR PROTECTING YOUR CHILDREN

 This appliance is not a toy! To avoid the risk of injury, keep children well away and do not allow them to play in or around the dishwasher or to use the controls. They will not understand the potential dangers posed by it. They should be supervised whenever you are working in the kitchen. There is also a danger that children playing might shut themselves in the dishwasher.

 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.

 Older children may only use the dishwasher when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

 **KEEP CHILDREN AWAY FROM DETERGENTS!** Dishwasher detergents contain irritant and corrosive ingredients which can cause burning in the mouth, nose and throat if swallowed, or inhibit breathing. Keep children away from the dishwasher when the door is open. There could still be detergent residues in the cabinet. Consult a doctor immediately if your child has swallowed or inhaled detergent.

INSTRUCTIONS FOR INSTALLING YOUR DISHWASHER

 Before setting up the appliance, check it for any externally visible damage. Under no circumstances should you use a damaged appliance. A damaged appliance could be dangerous.

 The dishwasher must only be plugged into the electricity supply via a suitable switched socket. The electrical socket must be easily accessible after the dishwasher is installed so that it can be disconnected from the electricity supply at any time. (Refer to the “Parts and features” section on page 11.)

 There must be no electrical sockets behind the dishwasher. Danger of overheating and fire risk if the dishwasher were to be pushed up against a plug.

 The dishwasher must not be installed under a hob. The high radiant temperatures which are sometimes generated by a hob could damage the dishwasher. For the same reason it should not be installed next to open fires or other appliances which give off heat, such as heaters etc.

 Do not connect the dishwasher to the mains supply until it has been fully installed and any adjustment has been made to the door springs.

 Before connecting the appliance, check that the connection data on the data plate (voltage and connected load) match the mains electricity supply. If in any doubt, consult a qualified electrician.

 The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective grounding system. It is most important that this basic safety requirement is present and regularly tested and where there is any doubt the electrical system in the house should be checked by a qualified electrician.
The manufacturer cannot be held liable for the consequences of an inadequate grounding system (e.g. electric shock).

 Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

 This appliance may only be installed in mobile installations such as ships if a risk assessment of the installation has been carried out by a suitably qualified engineer.

 The plastic housing of the water connection contains an electrical component. The housing must not be submerged in water.

 There are electrical wires in the hose of Aqua-Stop. Never cut the water inlet hose, even if it is too long.

 Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons can be dangerous. The manufacturer cannot be held liable for unauthorised work.

 The integrated waterproof system offers protection from water damage, provided the following conditions are met:

- The dishwasher is correctly installed and plumbed in.
- The dishwasher is properly maintained and parts are replaced where it can be seen that this is necessary.
- The stopcock has been turned off when the appliance is not used for a longer period of time (e.g. during holidays).
- The waterproof system will work even if the appliance is switched off. However, the appliance must remain connected to the electricity supply.

 A damaged appliance can be dangerous. If the dishwasher gets damaged, switch it off at the mains and call your dealer or the service department.

 Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Repairs should only be undertaken by an approved service technician.

 Faulty components must only be replaced by original spare parts. Only when these parts are fitted can the safety of the appliance can be guaranteed.

 Always disconnect the dishwasher from the electrical supply for maintenance work (switch off at the wall socket and remove the plug).

 If the connection cable is damaged it must be replaced with a special cable, available from the manufacturer. For safety reasons, this must only be fitted by the service department or an authorised service technician.

Safety instructions

 **WARNING** In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

 **CAUTION** In the event of a fault or for cleaning purposes, the appliance is only completely isolated from the electricity supply when:

- it is switched off at the wall socket and the plug is withdrawn, or
- it is switched off at the mains, or
- the mains fuse is disconnected, or
- the screw-out fuse is removed (in countries where this is applicable).

 Do not make any alterations to the appliance, unless authorised to do so by the manufacturer.

 **CAUTION** Never open the casing/housing of the appliance.

 **CAUTION** Tempering with electrical connections or components and mechanical parts is highly dangerous and can cause operational faults or electric shock.

 While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the guarantee will be invalidated.

 **CAUTION** When installing the product, make sure there is space at the top, left, right and back of the product to ensure proper ventilation.
If there is insufficient space between the product and the sink, it may damage the sink or allow mold to grow.

 Make sure that your dishwasher's hardness level setting is correct as your area.
(Refer to the "Water softener" section on page **21**.)

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH visit: samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html

INSTRUCTION ABOUT THE WEEE MARK



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Contents

PARTS AND FEATURES

11

- 11 Dishwasher features
- 14 Control panel
- 16 Displays

INSTALLING YOUR DISHWASHER

18

- 18 Water supply and drain
- 20 Connection of drain hoses
- 20 Position the appliance
- 20 Start of dishwasher

USING THE DETERGENT AND WATER SOFTENER

21

- 21 Water softener
- 22 Loading the salt into the softener
- 23 Fill the rinse aid dispenser
- 25 Function of detergent
- 27 How to use the Multi in 1 option

LOADING THE DISHWASHER RACKS

28

- 28 Loading the upper basket
- 30 Loading the lower basket
- 30 Folding spikes of lower basket
- 31 Cutlery(silverware) tray
- 33 For washing in the dishwasher the following cutlery/dishes

WASHING PROGRAMMES

34

- 34 Turning on the appliance
- 34 Change the programme
- 35 At the end of the wash cycle
- 35 Wash cycle table

CLEANING AND CARE

38

- 38 Cleaning the filters
- 39 Cleaning the spray arms
- 39 Cleaning the door
- 39 Caring for the dishwasher
- 39 Protect against freezing
- 40 How to maintain your dishwasher

TROUBLESHOOTING

41

- 41 Before calling for service
- 44 Error codes

APPENDIX


45

- 45 Specifications
- 45 Product dimension

Parts and features

DISHWASHER FEATURES

Front & Rear view (DW60H6050)

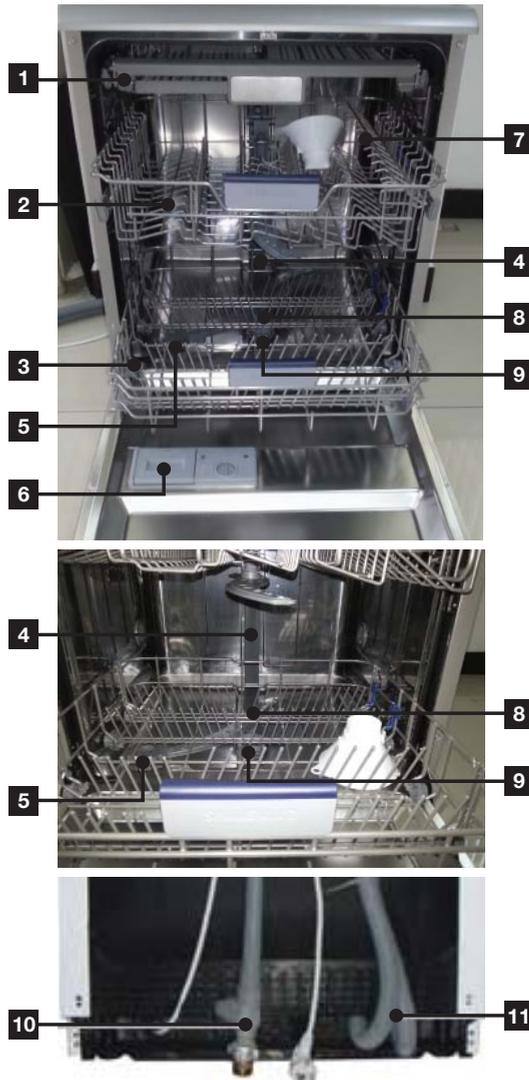


1	3rd Rack
2	Upper Basket
3	Lower Basket
4	Duct Nozzle
5	Salt Container
6	Dispenser
7	Cup Shelf
8	Spray arms
9	Filter assembly
10	Inlet hose
11	Drain hose

 Accessory parts - User manual, Salt funnel, cutlery basket.


Parts and features

Front & Rear view (DW60H5050)

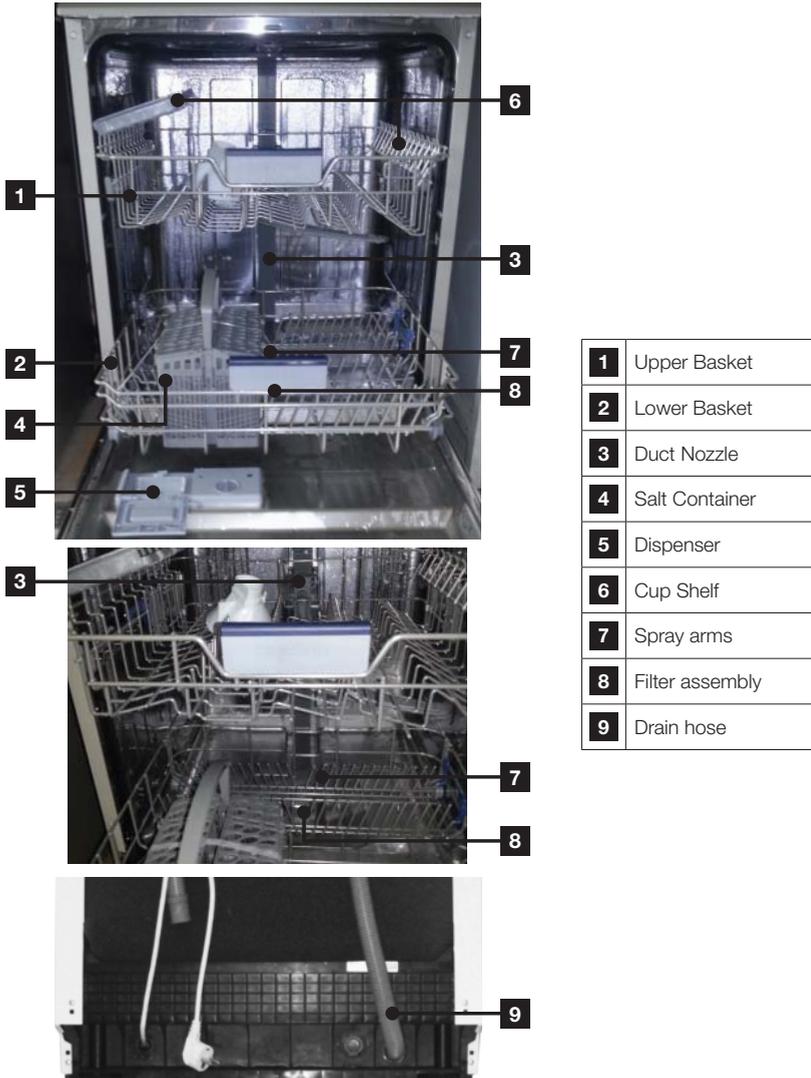

 Accessory parts - User manual, Salt funnel, cutlery basket.

Front & Rear view (DW60H3010)

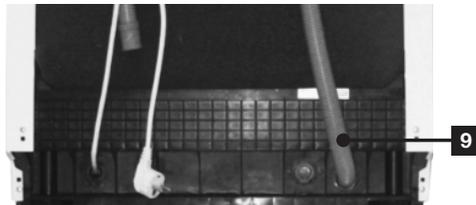


1	Upper Basket
2	Lower Basket
3	Duct Nozzle
4	Salt Container
5	Dispenser
6	Cup Shelf
7	Spray arms
8	Filter assembly
9	Drain hose

 Accessory parts - User manual, Salt funnel, cutlery basket.

Parts and features

CONTROL PANEL

DW60H6050/DW60H5050

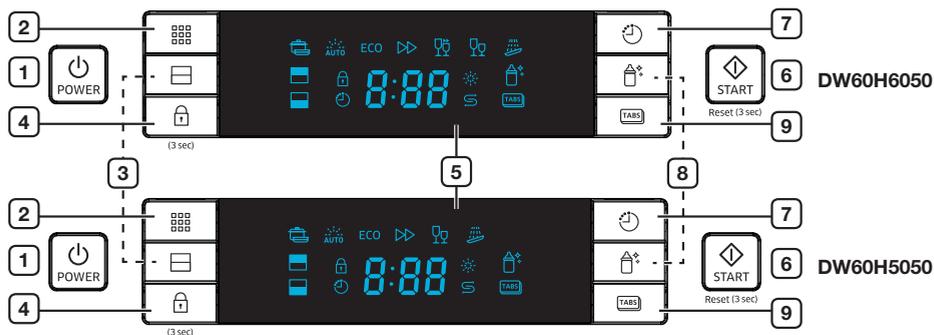


1	POWER BUTTON	Press this button to turn on your dishwasher: the screen lights up.
2	PROGRAM BUTTON	To select washing program press this button.
3	HALF LOAD BUTTON	For small amount of loading items, use either the upper or lower basket only to save energy. Press the Half load button to select the upper or lower basket.
4	CHILD LOCK BUTTON	This option allows you to lock the buttons on the control panel so children cannot accidentally start the dishwasher by pressing the buttons on the panel. To lock and unlock the buttons on the control panel, hold down both the Child lock buttons for three (3) seconds.
5	DISPLAY WINDOW	Running indicator, delay time, error codes and etc.
6	START BUTTON	In Power on condition, close the dishwasher door and select the cycle and desired options. Press the Start button to begin the cycle. When you want to pause the dishwasher while running, press the Start button and make sure to open the door slowly and carefully. You can reset the machine by pressing the Start button for 3 seconds during washing. After reset, the dishwasher goes to the initial state except salt consumption setting of water softener.
7	DELAY START BUTTON	Press this button to set the delayed hours for washing. You can delay the start of washing up to 24 hours. One press on this button delays the start of washing by one hour.
8	HYGIENE BUTTON	Push the Hygiene button for the best possible hygiene in your dishwasher. At the final rinse it heat up to 67 °C and hold this temperature for a several minutes. This function is available with all program except Pre Wash, Delicate and Quick Wash.
9	MULTI IN 1 BUTTON	To select Multi in 1 option which needs salt and rinse aid but a Multi in 1 tablet. This option can be selected on Intensive, Auto or ECO program only.

- When the door is open only the **Power** button will operate.
- You can select options (**Multi in 1**, **Delay start** and/or **Half load**) before starting a cycle.

IMPORTANT: To get the best performance from your dishwasher, read all the operating instructions before using it for the first time.

DW60H3010

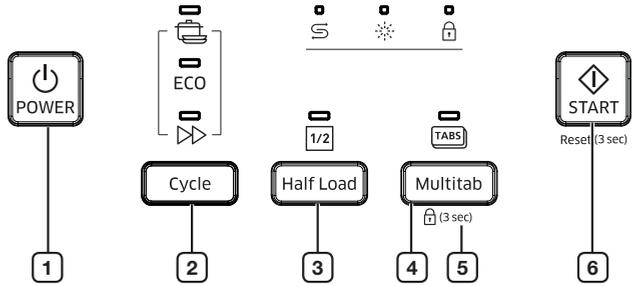

1	POWER BUTTON	Press this button to turn on your dishwasher: the screen lights up.
2	CYCLE BUTTON	To select washing program press this button.
3	HALF LOAD BUTTON	To select Half Load function. (With this Half Load function you can only use it when you have only about or less than 6 place setting dishware, and you will see less water and energy consumption. It can only be used with Intensive, Auto, ECO and Delicate.)
4	MULTI TAB BUTTON	To select Multi tab option which needs salt and rinse aid but a Multi In 1 tablet. This option can be selected on Intensive, Auto or ECO program only.
5	CHILD LOCK	This option allows you to lock the buttons on the control panel so children cannot accidentally start the dishwasher by pressing the buttons on the panel. To lock and unlock the buttons on the control panel, hold down both the Multi tab for three (3) seconds.
6	START BUTTON	In Power on condition, close the dishwasher door and select the cycle and desired options. Press the Start button to begin the cycle. When you want to pause the dishwasher while running, press the Start button and make sure to open the door slowly and carefully. You can reset the machine by pressing the Start button for 3 seconds during washing. After reset, the dishwasher goes to the initial state except salt consumption setting of water softener.


- When the door is open only the **Power** button will operate.
- You can select options (**Multi tab** and/or **Half load**) before starting a cycle.

IMPORTANT: To get the best performance from your dishwasher, read all the operating instructions before using it for the first time.

Parts and features


DISPLAYS

DW60H6050/DW60H5050

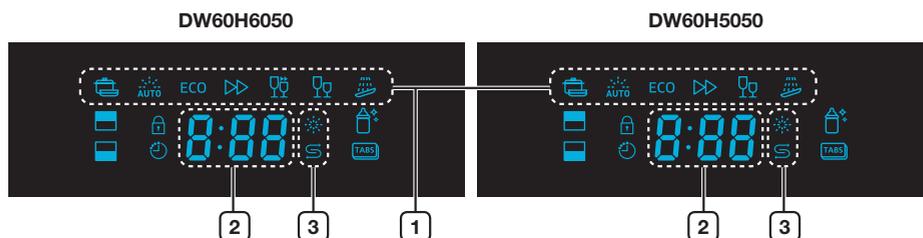

1	PROGRAM ICONS	Press the Program button to select each program.
	INTENSIVE	Heavily soiled items include pots and pans
	AUTO WASH	Lightly to heavily soiled daily using items, automatic detection of the amount of soils.
ECO	ECONOMY	Normally soiled daily using items, with reduced energy and water consumptions.
	EXPRESS	Normal daily used items, with short cycle time.
	DELICATE	Lightly soiled delicate items.
	QUICK WASH	Lightly soiled with very short cycle time. (DW60H6050)
	PRE WASH	Cold water rinse for removing dirt before running another program.
2	3*8 SEGMENT	Display the remaining time, error code, or delay time.
3	REFILL INDICATORS	If Rinse or Salt Refill indicator is lit, it means rinse or salt is needed to refill.
	RINSE REFILL INDICATOR	If Rinse or Salt Refill indicator is lit, it means rinse or salt needs to be refilled. To refill the rinse reservoir, refer to the "When to refill the rinse aid dispenser" section on page 23 .
	SALT REFILL INDICATOR	If the "Salt Refill" indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled. To refill the salt reservoir, refer to the "Loading the salt into the softener" section on page 22 .

DW60H3010

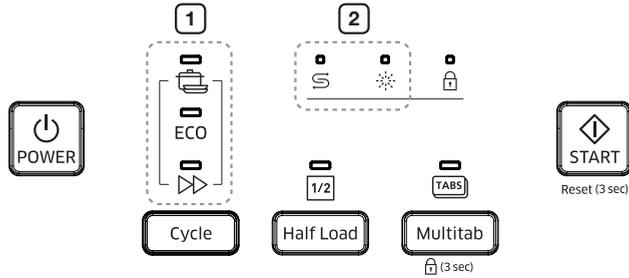

1	CYCLE	Press the Cycle button to select each program.
	INTENSIVE	Heavily soiled items include pots and pans
ECO	ECONOMY	Normal daily used items, with reduced energy and water consumption.
	EXPRESS	Normal daily used items, with short cycle time.
2	REFILL INDICATORS	If Rinse or Salt Refill indicator is lit, it means rinse or salt is needed to refill.
	RINSE REFILL INDICATOR	If Rinse or Salt Refill indicator is lit, it means rinse or salt needs to be refilled. To refill the rinse reservoir, refer to the "Rinse Aid dispenser" section on page 24 .
	SALT REFILL INDICATOR	If the "Salt Refill" indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled. To refill the salt reservoir, refer to the "Loading the salt into the softener" section on page 22 .

Installing your dishwasher



WARNING : Electrical shock hazard

Disconnect electrical power before installing dishwasher.
Failure to do so could result in death or electrical shock.



ATTENTION: The installation of the pipes and electrical equipments should be done by professionals.

About electricity connecting



CAUTION, for personal safety:

DO NOT USE AN EXTENSION CORD OR AN ADAPTER PLUG WITH THIS APPLIANCE.
DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD GROUNDING PRONG FROM THE POWER CORD.

Electrical requirements

- An 220-240 V~, 50 Hz fuse or a circuit breaker.
- An individual branch circuit serving your dishwasher.

Grounding instructions



Insure proper ground exists before use



This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance of electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.



WARNING: Improper connection of the equipment grounding conductor can result in the risk of an electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance.

WATER SUPPLY AND DRAIN

Cold water connection

Connect the cold water supply hose to a threaded 3/4 (inch) connector and make sure that it is fastened tightly in place.


If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear. This precaution is needed to avoid the risk of the water inlet to be blocked and damage the appliance.



Provided water supply hose has the aqua-safe system. Ensure that water supply hose's aqua-safe pipe is connected to the faucet. (DW60H6050, DW60H5050)



DW60H6050
DW60H5050

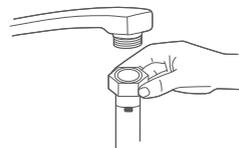

DW60H3010

Hot water connection

The water supply to the appliance can also be connected to the house hot water line (centralized system, heating system), as long as it does not exceed a temperature of 60 °C. In this case, the wash cycle time will be shortened by about 15 minutes and the wash efficiency slightly reduced. The connection must be made to the hot water line following the same procedures as those for the connection to the cold water line.



Positioning the appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation.

How to drain excess water from hoses

If the sink is 1000 mm higher from the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or suitable container that is held outside and lower than the sink.

Water outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water inlet hose is not kinked or squashed.

Extension hose

If you need a drain hose extension, Use a similar size and quality drain hose.

It must be no longer than 4 metres; otherwise the cleaning effect of the dishwasher could be reduced.

Syphon connection

The waste connection must be at a height of between 40 cm (minimum) and 100 cm (maximum) from the bottom of the dishwasher. The water drain hose should be fixed by a hose clip.

Aqua-safe (DW60H6050/DW60H5050)


The Aqua-safe System is a safety valve system, preventing water leaks. If the water inlet hose starts to leak anytime, the safety valve cuts off the running water. If the water inlet hose or the safety valve is damaged, remove and replace it.

Do not enlarge or shorten the inlet hose.

Installing your dishwasher

CONNECTION OF DRAIN HOSES

Insert the drain hose into a drain pipe with a minimum diameter of 4 cm, or let it run into the sink, making sure to avoid bending or crimping it. The top of the hose must be at a height between 40 and 100 cm. The free end of the hose must not be immersed in water to avoid the back flow of it.

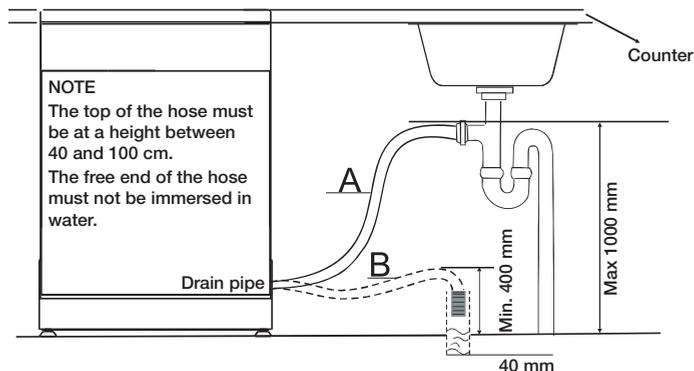


POSITION THE APPLIANCE

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or walls. The dishwasher is equipped with water supply and drain hoses that can be positioned either to the right or the left sides to facilitate proper installation.

Levelling the Appliance

Once the appliance is positioned for levelling, the height of the dishwasher may be altered via adjustment of the screwing level of the feet. In any case, the appliance should not be inclined more than 2°.

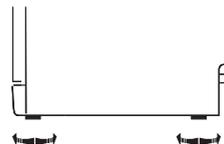

START OF DISHWASHER

The following should be checked before starting the dishwasher.

1. the dishwasher is level and fixed
2. the inlet valve is opened
3. There is no leakage at the connections of the conducts
4. the wires are tightly connected
5. the power is switched on
6. the inlet and drain hoses are not knotted
7. All packaging materials and printings have been taken out of the dishwasher

⚠ ATTENTION: After installation please put this manual in a safe place. The contents of this manual can be useful to users.

Using the detergent and water softener

WATER SOFTENER

The water softener must be set manually, using the water hardness dial.

The water softener is designed to remove minerals and salts from the water, which could have a detrimental or adverse effect on the operation of the appliance. The higher the content of these minerals and salts, the harder your water is. The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area.

Adjusting salt consumption

The dishwasher is designed to allow for adjusting the amount of salt consumed based on the hardness of the water used. This is intended to optimise the level of salt consumption. To set the salt consumption, proceed as below:

1. Switch on the appliance;
2. Press the **Start** button for more than 3 seconds to start the water softener set model within 60 seconds after the appliance was switched on;
3. Press the **Start** button to select the proper set according to your local environment, the sets will change in the following sequence: H1 → H2 → H3 → H4 → H5 → H6; It is recommended that adjustments should be made in accordance with the following table.
* The manufactory setting: H4 (EN 50242)
4. Wait for 5 seconds to end the set up model.

WATER HARDNESS				Selector Position		Salt consumption (gram/cycle)	Autonomy (cycles/1 kgs)
° dH	° fH	° Clark	mmol/l	DW60H6050 series DW60H5050 series	DW60H3010 series		
0-5	0-9	0-6	0-0.94	H1	Express	0	/
6-11	10-20	7-14	1.0-2.0	H2	ECO	20	60
12-17	21-30	15-21	2.1-3.0	H3	Express, ECO	30	50
18-22	31-40	22-28	3.1-4.0	H4	Intensive	40	40
23-34	41-60	29-42	4.1-6.0	H5	Intensive, Express	50	30
35-55	61-98	43-69	6.1-9.8	H6	Intensive, ECO	60	20

-  1 dH (German degree) = 0.178 mmol/l
- 1 Clark (British degree) = 0.143 mmol/l
- 1 fH (French degree) = 0.1 mmol/l

-  Contact your local water board for information on the hardness of your water supply.

WATER SOFTENER

The hardness of the water varies from place to place. If hard water is used in the dishwasher, deposits may form on dishes and utensils. The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water.

Using the detergent and water softener

LOADING THE SALT INTO THE SOFTENER


Always use salt intended for use with dishwasher.

The salt container is located beneath the lower rack and should be filled as follows:

ATTENTION

- Only use salt specifically designed for use in dishwashers. All other types of salt not specifically designed for use in a dishwasher, especially table salt, will damage the water softener. In case of damages caused by the use of unsuitable salt the manufacturer does not give any warranty nor is liable for any caused damages.
- Only fill with salt just before starting one of the complete washing programs. This will prevent any grains of salt or salty water, which may have been split, remaining of the bottom of the machine for any period of time, which may cause corrosion.
- After the first wash cycle the control panel light expires.

1. Remove the lower basket and then unscrew and remove the cap from the salt container.

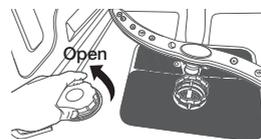


2. If you are filling the container for the first time, fill 2/3 of its volume with water (around 1 liter).

3. Place the end of the funnel (supplied) into the hole and introduce about 1.5 kg of salt. It is normal for a small amount of water to come out of the salt container.



4. Carefully screw the cap back on.

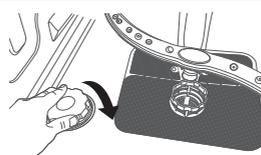

5. Usually, the salt warning light will be off after the salt container is filled with salt.

-  The salt container must be refilled when the salt warning light on the control panel comes on. Although the salt container is filled enough, the indicator light may not switch off until the salt fully dissolves. If there is no salt warning light on the control panel, you can judge when to load the salt into the softener by the cycles that the dishwasher has run.
- If a lot of salt is split inside the dishwasher, run a pre wash program to reduce the spillage.

FILL THE RINSE AID DISPENSER

Function of rinse aid

Rinse aid is automatically added during the last rinse, ensuring thorough rinsing, and spot and streak free drying.


⚠ ATTENTION: Only use branded rinse aid for the dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent). This would damage the appliance.

When to refill the rinse aid dispenser

If there is no rinse-aid warning light in the control panel, you can judge the amount of rinse-aid by the colour of the optical level indicator "D" located next to the cap. When the rinse-aid container is full, the whole indicator will be dark. As the rinse-aid diminishes, the size of the dark dot decreases. You should never let the rinse aid get below 1/4 full.

As the rinse aid diminishes, the size of the black dot on the rinse aid level indicator changes, as illustrated below.

- Full
- 3/4 full
- 1/2 full
- 1/4 full : Should refill to eliminate spotting
- Empty

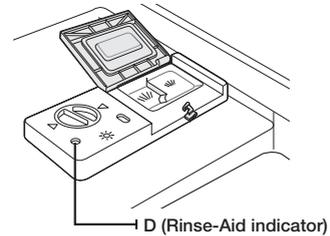

Using the detergent and water softener

Rinse Aid dispenser

1. To open the dispenser, turn the cap to the "Open" (left) arrow and lift it out.



2. Pour the rinse aid into the dispenser, being careful not to overfill.



3. Replace the cap by inserting it aligned with "Open" arrow and turning it to the closed (right) arrow.



The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes that can leave spots and streaks. It also improves drying by allowing water to run off the dishes.

Your dishwasher is designed to use liquid rinse aids. The rinse aid dispenser is located inside the door next to the detergent dispenser. To fill the dispenser, open the cap and pour the rinse aid into the dispenser until the level indicator turns completely black. The volume of the rinse aid container is about 130 ml.

Be careful not to overfill the dispenser, because this could cause over sudsing. Wipe away any spills with a damp cloth. Don't forget to replace the cap before you close dishwasher door.

 **ATTENTION:** Clean up any rinse aid spilt during filling with an absorbent cloth to avoid excess foaming during the next wash.

Adjusting rinse aid dispenser

The rinse aid dispenser has four settings. Always start with the dispenser set on "3". If spots and poor drying are problems, increase the amount of rinse aid dispensed by removing the dispenser lid and rotating the dial to "4". We suggest you to set on "3" (Factory value is "3").



 Increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce it if there are sticky whitish streaks on the dishes or a bluish film on glassware or knife blades.

FUNCTION OF DETERGENT

Detergents with its chemical ingredients are necessary to remove dirt, crush dirt and transport it out of the dishwasher. Most of commercial quality detergents are suitable for this purpose.

⚠ WARNING: Dishwasher detergent is corrosive! Take care to keep it out of reach of children.



Proper Use of Detergent

Use only detergent specifically made for use in dishwashers. Keep your detergent fresh and dry. Don't put powder detergent into the dispenser until you're ready to wash dishes.

Concentrated detergent

Based on their chemical composition, dishwasher detergent can be split in two basic types:

- conventional, alkaline detergents with caustic components
- low alkaline concentrated detergents with natural enzymes

The use of "normal" washing programs in conjunction with concentrated detergents reduces pollution and is good for your dishes; these wash programmes are specially matched to the dirt-dissolving properties of the enzymes of the concentrated detergent. For this reason "normal" wash programmes in which concentrated detergents are used can achieve the same results that can otherwise only be achieved using "Intensive" programmes.

Detergent tablets

Detergent tablets of different brands dissolve at different speeds. For this reason some detergent tablets cannot dissolve and develop their full cleaning power during short programmes.


Therefore please use long programmes when using detergent tablets, to ensure the complete removal of detergent residuals.

Detergent dispenser


The dispenser must be refilled before the start of each wash cycle following the instructions provided in the Wash Cycle Table. Your dishwasher uses less detergent and rinse aid than conventional dishwashers. Generally, only one tablespoon of detergent is needed for a normal wash load. Also, more heavily soiled items need more detergent. Always add the detergent just before starting the dishwasher, otherwise it could get damp and will not dissolve properly.

Fill the detergent in dispenser

1. If the lid is closed: press release button. The lid springs open.

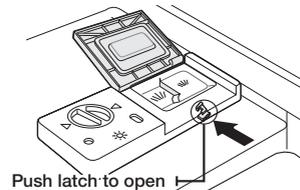

2. Always add the detergent just before starting each wash cycle. Only use branded detergent aid for dishwasher.

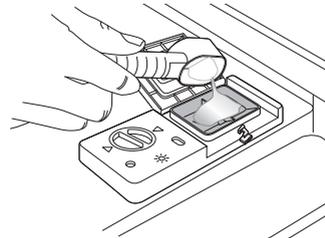


Using the detergent and water softener

Amount of detergent to use

1. Fill the detergent dispenser with detergent.
The marking indicates the dosing levels, as illustrated on right:
 - A. This section is for main wash detergent, approximately 25 g
 - B. This section is for the pre wash detergent, approximately 5 g

 If the dishes are heavily soiled, place an additional detergent dose in the pre-wash detergent chamber. This detergent will take effect during the pre-wash phase.

 You can find information about the amount of detergent for the single programmes on the "Wash cycle table". (See page 35)
Please be aware, that according to the soiling level and the specific hardness of water differences are possible.

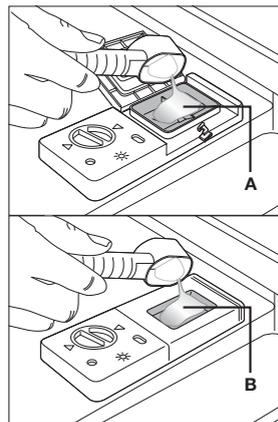

2. Close the lid and press until it locks in place.

 Please observe the manufacturers dosing and storage recommendations as stated on the detergent packaging.

Detergents

There are 3 sorts of detergents.

1. With phosphate and with chlorine.
2. With phosphate and without chlorine.
3. Without phosphate and without chloride.

Normally new pulverised detergent is without phosphate. The water softener function of phosphate is not given. In this case we recommend to fill salt in the salt container even when the hardness of water is only 6 dH. If detergents without phosphate were used in case of hard water often white spots appear at dishes and glasses. In this case please add more detergent to reach better results. Detergents without chlorine do only bleach a little. Strong and coloured spots will not removed completely. In this case please choose a programme with higher temperature.

HOW TO USE THE MULTI IN 1 OPTION

Your dishwasher has a Multi in 1 option which does not need salt and rinse aid but a 3 In1 tablet. This option can select on Intensive, Eco program only.

 The Multi in 1 setting is only for use with Multi in 1 tablets. If using Multi in 1 tablet without this option, the appliance will not get its best performance.

1. Put the Multi in 1 tablet into the container then start the Multi in 1 option.
2. Close the lid and press until it locks in place.

 When using Multi in 1 compact combination detergents ensure that the lid can be closed correctly.

 **ATTENTION:** Keep all detergents in a safe place out of children's reach. Always add the detergent in the dispenser just before starting the dishwasher.



Loading the dishwasher racks

For best performance of the dishwasher, follow these loading guidelines. Features and appearance of racks and silverware baskets may vary from your model.

⚠ Attention before or after loading the dishwasher racks

Scrape off any large amounts of leftover food. It is not necessary to rinse the dishes under running water. Place objects in the dishwasher in the following order:

1. Items such as cups, glasses, pots/pans, etc. are stood upside down.
2. Curved items, or those with recesses, should be at a slant so that water can run off.
3. They are stacked securely and can not tip over.
4. They do not prevent the spray arms from rotating while washing takes place.


Very small items should not be washed in the dishwasher as they could easily fall out of the racks.

🗑 Removing the dishes


To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first and then the upper basket.

LOADING THE UPPER BASKET


The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water. Always place glasses, cups & bowls upside down.

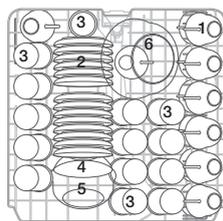

DW60H6050
(14 place setting)

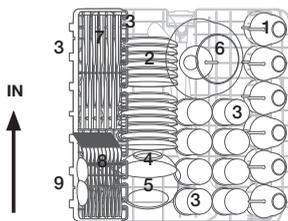

DW60H5050
(13 place setting)

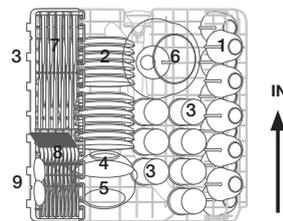

DW60H3010
(12 place setting)



Cups
Saucers



Glasses



Small serving bowl



Medium serving bowl



Large serving bowl



Knives



Forks



Soup spoons


Adjusting the Upper Basket

The height of the upper basket can be adjusted in order to create more space for large utensils both for the upper/lower basket.

DW60H6050/DW60H5050

1. To lower the upper rack, press the "A" levers located at the left and right sides of the upper basket and push the upper basket downwards slightly at the same time.
2. To raise the upper rack, just pull the upper basket upwards without operating any levers.

⚠ Caution: We recommend adjusting the height of the upper basket before loading dishes into the basket. If you adjust the the basket after loading the dishes, you may damage the dishes.

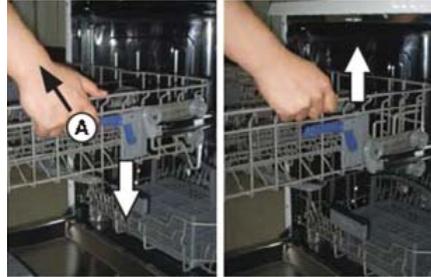


To lower position

To upper position

DW60H3010

The height of the upper basket can be adjusted by placing the wheels on different height of the rails. Long items, serving cutlery, salad servers and knives should be placed on the shelf so that they do not obstruct the rotation of the spray arms.

⚠ Caution: We recommend adjusting the height of the upper basket before loading dishes into the basket. If you adjust the the basket after loading the dishes, you may damage the dishes.

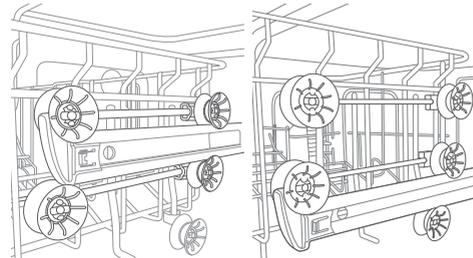

To lower position

To upper position

Loading the dishwasher racks


LOADING THE LOWER BASKET

We recommend that you place large items which are most difficult to clean in to the lower rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right.

It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm. Pots, serving bowls, etc. must always be placed top down.

Deep pots should be slanted to allow water to flow out.

The bottom rack feature fold down tine rows so that larger or more pots and pans can be loaded.

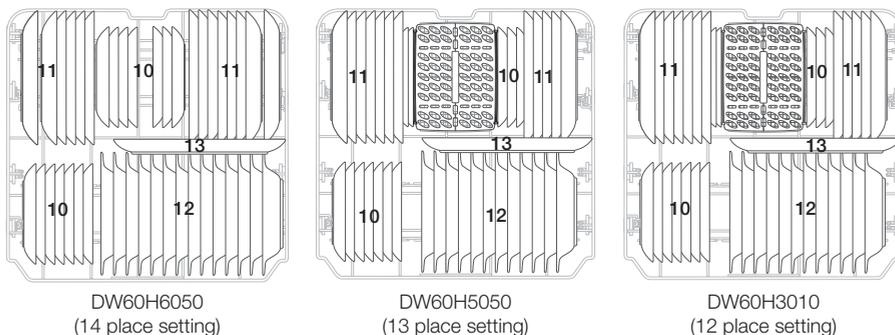

Dessert dishes




Dinner plates



Soup bowls




Oval platter

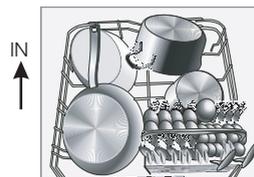

 Long items, serving cutlery, salad servers and big knives should be placed on the shelf so that they do not obstruct the rotation of the spray arms.

FOLDING SPIKES OF LOWER BASKET


For better stacking of pots and pans, the spikes can be folded down and/or removable tine as show in the picture below.

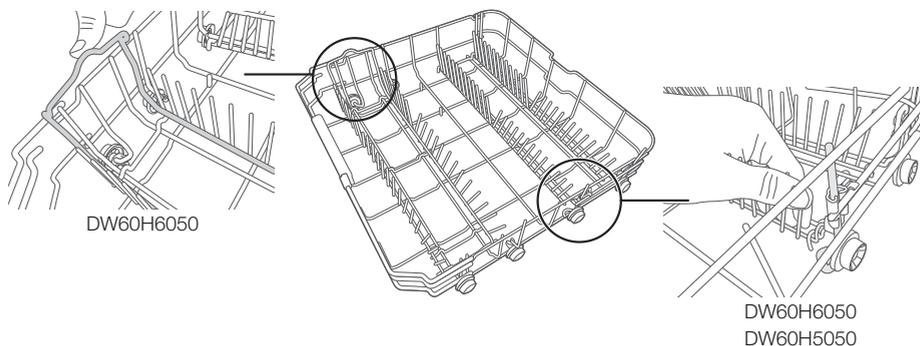

CUTLERY(SILVERWARE) TRAY

Silverware should be placed in the cutlery tray with handles at the bottom: The spoon should be loaded individually into the appropriate slots, especially long utensils should be placed in the horizontal position at the front of the upper basket.

DW60H6050

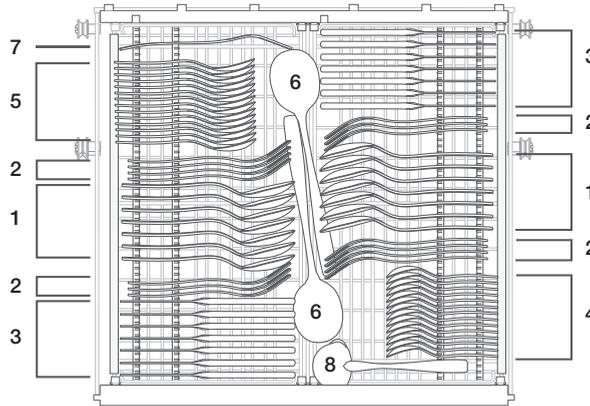

1	Soup spoons		5	Dessert spoons	
2	Forks		6	Serving spoons	
3	Knives		7	Serving forks	
4	Teaspoons		8	Gravy ladles	




WARNING


- Do not let any item extend through the bottom.
- Always load sharp utensils with the sharp point down!

Loading the dishwasher racks



DW60H5050/DW60H3010

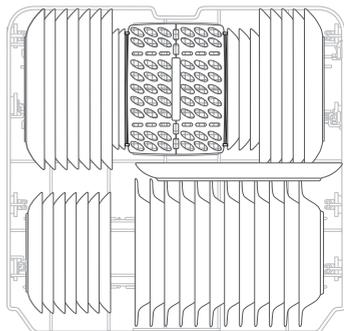

DW60H5050

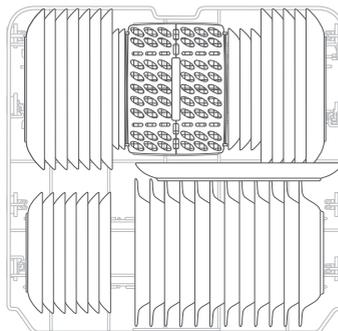

DW60H3010

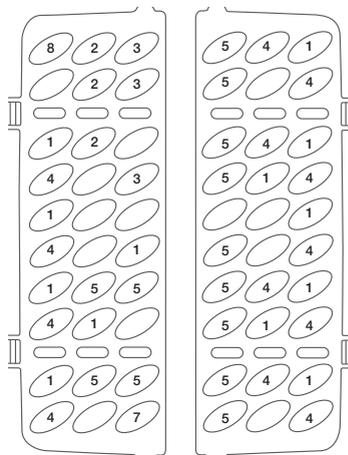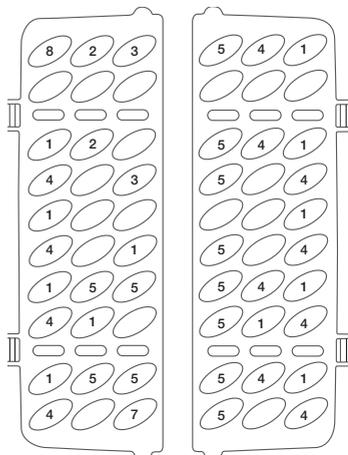

1	Soup spoons		5	Dessert spoons	
2	Forks		6	Serving spoons	
3	Knives		7	Serving forks	
4	Teaspoons		8	Gravy ladles	



WARNING

- Do not let any item extend through the bottom.
- Always load sharp utensils with the sharp point down!

FOR WASHING IN THE DISHWASHER THE FOLLOWING CUTLERY/ DISHES

Are not suitable	Are of limited suitability
Plastic items that are not heat resistant. Older cutlery with glued parts that is not temperature resistant. Bonded cutlery items or dishes. Pewter or cooper items Lead crystal glass. Steel items subject to rusting. Wooden platters. Items made from synthetic fibres.	Some types of glasses can become dull after a large number of washes. Silver and aluminium parts have a tendency to discolour during washing. Glazed patterns may fade if machine washed frequently.

-  Do not try and wash items soiled with cigarette ash, candle wax, lacquer or paint. If you buy new dishes please make sure that they are suitable for dishwashers.
-  Please do not overload your dishwasher. There is only space for 12 standard dishes. Do not use dishes that are not suitable for dishwashers. This is important for good results and for reasonable energy consumption.

When loading the dishes and cutlery

Dishes and cutlery must not impede the rotation of the spray arms.

Load hollow items such as cups, glasses, pans etc. with the opening downwards so that water cannot collect in the container or a deep base.

-  Dishes and items of cutlery must not lie inside one another, or cover each other
 - To avoid damage to glasses, they must not touch.
 - Load large items which are most difficult to clean into the lower rack.
 - The upper rack is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.

ATTENTION

Long bladed knives stored in an upright position are a potential hazard!
 Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.

Damage to glassware and other dishes.

Possible causes	Suggested remedy
<ul style="list-style-type: none"> • Type of glass or manufacturing process. Chemical composition of detergent. • Water temperature and duration of dishwasher programme. 	<ul style="list-style-type: none"> • Use glassware or porcelain dishes that have been marked dishwasher-proof by the manufacturer. • Use a mild detergent that is described as kind of dishes. If necessary, seek further information from detergent manufacturers. • Select a programme with as low a temperature. • To prevent damage, take glass and cutlery out of the dishwasher as soon as possible after the programme has ended.

Washing programmes

TURNING ON THE APPLIANCE

Starting a cycle wash

1. Draw out the lower and upper basket, load the dishes and push them back..
It is recommended to load the lower basket first, then the upper one (see the section entitled "Loading the dishwasher racks").
2. Pour in the detergent (see the section entitled "Using the detergent and water softener").
3. Insert the plug into the socket. The power supply is 220-240 V~, 50 Hz, the specification of the socket is 15A 250 VAC. Make sure that the water supply is turned on to proper pressure.
4. Close the door, press the **Power** button, to switch on the machine.
5. Press the **Program** button, the wash program will be changed as follows:

DW60H6050	ECO → Express → Quick Wash → Delicate → Pre Wash → Intensive → Auto
DW60H5050	ECO → Express → Delicate → Pre Wash → Intensive → Auto
DW60H3010	ECO → Express → Intensive

If a wash program is selected, the response light will light. Press the **Start** button, the dishwasher begins to start.

-  When you press the **Start** button to pause during washing, the running indicator will stop blinking and the dishwasher will beep every minute unless you press the **Start** button to start.

CHANGE THE PROGRAMME

Premise:

1. A cycle that is underway can only be modified if it has only been running for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained the wash water. If this is the case, the detergent dispenser must be refilled (see the section entitled "Fill the detergent in dispenser").
2. Press the **Start** button, the machine will be in standby state, press the **Program** button more than 3 seconds then you can change the program to the desired cycle setting.

-  If you open the door during a wash cycle, the machine will pause. The program light will stop blinking and the buzzer will beep every minute unless you close the door. After you close the door, the machine will keep on working after 3 seconds automatically.
- If your model has broken memory function, the machine will go on to finish the selected program after the power cut.

Add a dish

A forgotten dish can be added at any time before the detergent dispenser opens.

1. Press the **Start** button and make sure to open the door slowly and carefully as there is a possibility of injury from the hot steam inside the dishwasher.
2. After the spray arms stop working, you can open the door completely.
3. Add forgotten dishes.
4. Close the door. The dishwasher will work after 3 seconds.

-  **WARNING:** It is dangerous to open the door when washing, because the hot water may scald you. If the door is opened while the dishwasher is running, a safety mechanism is activated and stops the cycle.

AT THE END OF THE WASH CYCLE

When the working cycle has finished, the buzzer of dishwasher will beep shortly, then stop. In the digital display appears "0", only in this case the programme has ended.

1. Switch off the dishwasher by pressing the **Power** button.
2. Turn off the water tap!

 **Open the door carefully. Hot steam may escape when the door is opened!**

- Hot dishes are sensitive to knocks. The dishes should be allowed to cool down around 15 minutes before removing from the appliance.
- Open the dishwasher's door, leave it and wait a few minutes before removing the dishes. In this way they will be cooler and the drying will be improved.
- Unloading the dishwasher.



It is normal that the dishwasher is wet inside.

Empty the lower basket first and then the upper one. This will avoid water dripping from the upper basket onto the dishes in the lower one.

WASH CYCLE TABLE

DW60H6050/DW60H5050

Program	Description of Cycle	Detergent (Prewash/Main wash) (g)	Running time (min)	Energy (kWh)	Water (ℓ)
Intensive	Pre Wash (50 °C)	5/30	175	1.65	18
	Wash (60 °C)				
	Rinse				
	Rinse				
	Rinse (65 °C)				
	Drying				
Intensive + Hygiene	Pre Wash (50 °C)	5/30	195	1.75	18
	Wash (60 °C)				
	Rinse				
	Rinse				
	Rinse (70 °C)				
	Drying				
ECO *	Pre Wash	5/27.5 (13 setting) 5/30 (14 setting)	183	1.04 (13 setting) 1.05 (14 setting)	12
	Wash (45 °C)				
	Rinse (65 °C)				
	Drying				
	Drying				
ECO + Hygiene	Pre Wash	5/27.5 (13 setting) 5/30 (14 setting)	185	1.15 (13 setting) 1.20 (14 setting)	12
	Wash (45 °C)				
	Rinse (70 °C)				
	Drying				
	Drying				
Delicate	Pre Wash	5/30	115	0.9	14
	Wash (40 °C)				
	Rinse				
	Rinse (60 °C)				
	Drying				
Express	Pre Wash	5/30	60	1	10.5
	Wash (60 °C)				
	Rinse (60 °C)				
	Drying				

Washing programmes

Program	Description of Cycle	Detergent (Prewash/Main wash) (g)	Running time (min)	Energy (kWh)	Water (ℓ)
Express + Hygiene	Pre Wash	5/30	70	1.25	10.5
	Wash (60 °C)				
	Rinse (70 °C)				
	Drying				
Quick Wash (DW60H6050)	Wash (40 °C)	30	35	0.6	11.5
	Rinse				
	Rinse (45 °C)				
Quick Wash + Hygiene (DW60H6050)	Wash (40 °C)	30	55	1.15	11.5
	Rinse				
	Rinse (70 °C)				
Auto	Pre Wash (45 °C)	5/30	120-180	0.9-1.3	8.5-12.5
	Auto (45-55 °C)				
	Rinse				
	Rinse (60 °C)				
	Drying				
Auto + Hygiene	Pre Wash (45 °C)	5/30	120-180	0.9-1.3	8.5-12.5
	Auto (45-55 °C)				
	Rinse				
	Rinse (70 °C)				
	Drying				



* EN 50242: This program is the test cycle. The information for comparability test in accordance with EN 50242, as follows;

- Capacity: 12 place setting
- Position of Upper Basket: to lower position
- Rinse aid setting: 4



The wash time varies depending on the pressure and temperature of the supplied water.



Quick Wash: Continuous use of the Quick Wash cycle for an extended time is not recommended. This may reduce the performance of the water softener.

DW60H3010

Program	Description of Cycle	Detergent (Prewash/Main wash) (g)	Running time (min)	Energy (kWh)	Water (ℓ)
Intensive	Pre Wash (50 °C)	5/25 (1 or 2 pieces)	145	1.6	19.5
	Wash (65 °C)				
	Rinse				
	Rinse				
	Rinse (65 °C)				
	Drying				
Intensive + Half load	Pre Wash (50 °C)	15 (Or 1 piece)	130	1.2	15
	Wash (65 °C)				
	Rinse				
	Rinse (55 °C)				
	Drying				
ECO	Pre Wash	5/25	175	1.02	12
	Wash (50 °C)				
	Rinse				
	Rinse (65 °C)				
	Drying				
ECO + Half load	Pre Wash	15	150	0.85	11.5
	Wash (50 °C)				
	Rinse				
	Rinse (60 °C)				
	Drying				
Express	Pre Wash (50 °C)	5/25	60	1	11
	Wash (60 °C)				
	Rinse (60 °C)				
	Drying				
Express + Half load	Pre Wash (50 °C)	15	60	0.85	10.5
	Wash (60 °C)				
	Rinse (55 °C)				
	Drying				



The wash time varies depending on the pressure and temperature of the supplied water.


Cleaning and care

CLEANING THE FILTERS

Filtering system

For your convenience, we have placed the drain pump and filtering system within easy reach inside the tub. There are three components of the filtering system: the main filter, the coarse filter, and the fine filter.

- 1. Main filter:** Food and soil particles trapped by this filter are pulverized by a special jet on the lower spray arm and washed down the drain.
- 2. Coarse filter:** Larger items, such as pieces of bone or glass, that could clog the drain are trapped in the coarse filter. To remove an item caught in this filter, gently squeeze the tabs on top of this filter and lift it out.
- 3. Fine filter:** This filter holds soil and food residue in the sump area and prevents it from being redeposited on the dishes during a cycle.

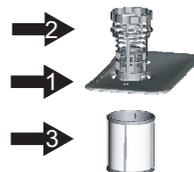

⚠ ATTENTION: Do not put the fine filter upside down.

Filter assembly

For best performance and results, the filter assembly must be cleaned. The filter efficiently removes food particles from the wash water, allowing it to be recirculated during the cycle. For this reason, it is a good idea to remove the larger food particles trapped in the filter after each wash cycle by rinsing the semicircular filter and cup under running water. To remove the filter assembly, turn it in anti-clockwise direction and lift the filter assembly up. The entire filter assembly should be cleaned regularly.

To clean the coarse filter and the fine filter, use a cleaning brush. Then, reinsert the entire assembly in the dishwasher, positioning in its seat, pressing downward, turning it clockwise direction.




The dishwasher must never be used without the filters. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

⚠ WARNING: Never run the dishwasher without the filters in place. When cleaning the filters, do not damage them. Otherwise the filters may not perform as intended and poor wash results or damage to the internal parts may be encountered.

CLEANING THE SPRAY ARMS


It is necessary to clean the spray arms regularly as hard water chemicals may clog the spray arm jets and bearings. To remove the middle spray arm, hold the nut, rotate the arm clockwise to remove it. To remove the lower spray arm, pull out the spray arm upward. Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing them thoroughly.

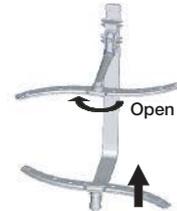

CLEANING THE DOOR

To clean the edge around the door, you should use only a soft warm, damp rag. To prevent penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.

Also, never use abrasive cleaners or scouring pads on the outer surfaces because they will scratch the finish. Some papers towels can also scratch or leave marks on the surface.

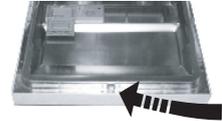

⚠ WARNING: Never use a spray cleaner to clean the door panel for it could damage the door lock and electrical components. It is not advised to use the abrasive agent or some paper towel because of the risk of scratching or leaving spots on the stainless steel surface.

CARING FOR THE DISHWASHER

To clean the control panel use a lightly damp cloth then dry thoroughly. To clean the exterior use a good appliance polish wax.

Never use sharp objects, scouring pads or harsh cleaners on any part of the dishwasher.

PROTECT AGAINST FREEZING

If your dishwasher is left in an unheated place during the winter:

1. Cut off electrical power to the dishwasher.
2. Turn off the water supply and disconnect the water inlet pipe from the water valve.
3. Drain water from the inlet pipe and water valve. (Use a pan to catch the water)
4. Reconnect the water inlet pipe to the water valve.
5. Remove the filter in the tub the bottom and use a sponge sock up water.

Cleaning and care

HOW TO MAINTAIN YOUR DISHWASHER

- **After Every Wash**

After every wash, turn off the water supply to the appliance and leave the door slightly ajar so that moisture and odours not trapped inside.

- **Remove the Plug**

Before cleaning or performing maintenance, always remove the plug from the socket.

- **No Solvents or Abrasive cleaning**

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Use only a cloth and warm soapy water. To remove spots or stains from the surface of the interior, Use a cloth dampened with water and a little white vinegar, or a cleaning product made specifically for dishwashers.

- **When You Go on Holiday**

When you go on holiday, it is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly ajar. This will help the seals last longer and prevent odours from forming within the appliance.

- **Moving the Appliance**

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

- **Seals**

One of the factors that cause odours to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

Troubleshooting

The manufacturer, following a policy of constant development and up-dating of the product, may make modifications without giving prior notice.

BEFORE CALLING FOR SERVICE

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Dishwasher doesn't run	<ul style="list-style-type: none"> Fuse blown or the circuit breaker acted. 	<ul style="list-style-type: none"> Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher.
	<ul style="list-style-type: none"> Power supply is not turned on. 	<ul style="list-style-type: none"> Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into the wall socket.
	<ul style="list-style-type: none"> Water pressure is low. 	<ul style="list-style-type: none"> Check that the water supply is connected properly and the water is turned on.
Drain pump doesn't stop	<ul style="list-style-type: none"> Overflow. 	<ul style="list-style-type: none"> The system is designed to detect an overflow. When it does, it shuts off the circulation pump and turns on the drain pump.
Noise	<ul style="list-style-type: none"> Some audible sounds are normal. 	<ul style="list-style-type: none"> Sound from soft food shredding action and detergent cup opening.
	<ul style="list-style-type: none"> Utensils are not secure in the baskets or something small has dropped into the basket. 	<ul style="list-style-type: none"> To ensure everything is secured in the dishwasher.
	<ul style="list-style-type: none"> Motor hums. 	<ul style="list-style-type: none"> Dishwasher has not been used regularly. If you do not use it often, remember to set it to fill and pump out every week, which will help keep the seal moist.
Suds in the tub	<ul style="list-style-type: none"> Improper detergent. 	<ul style="list-style-type: none"> Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the tub. Close and latch the dishwasher, then start the "soak" wash cycle to drain out the water. Repeat if necessary.
	<ul style="list-style-type: none"> Spilled rinse agent. 	<ul style="list-style-type: none"> Always wipe up rinse agent spills immediately.
Stained tub interior	<ul style="list-style-type: none"> Detergent with colorant was used. 	<ul style="list-style-type: none"> Make sure that the detergent is the one without colorant.
Dishes are not dried	<ul style="list-style-type: none"> Rinse agent dispenser is empty. 	<ul style="list-style-type: none"> Make sure that the rinse agent dispense is filled.
Dishes and flatware not clean	<ul style="list-style-type: none"> Improper program. 	<ul style="list-style-type: none"> Select a more intensive wash program.
	<ul style="list-style-type: none"> Improper rack loading. 	<ul style="list-style-type: none"> Make sure that the action of the detergent dispenser and spray arms are not blocked by large dishware.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Spots and filming on glasses and flatware	<ol style="list-style-type: none"> 1. Extremely hard water. 2. Low inlet temperature. 3. Overloading the dishwasher. 4. Improper loading. 5. Old or damp powder detergent. 6. Empty rinse agent dispenser. 7. Incorrect dosage of detergent. 	<p>To remove spots from glassware:</p> <ol style="list-style-type: none"> 1. Take out all metal utensils out of the dishwasher. 2. Do not add detergent. 3. Choose the longest cycle. 4. Start the dishwasher and allow it to run for about 18 to 22 minutes, then it will be in the main wash. 5. Open the door to pour 2 cups of white vinegar into the bottom of the dishwasher. 6. Close the door and let the dishwasher complete the cycle. If the vinegar does not work: Repeat as above, except use 1/4 cup (60 ml) of citric acid crystals instead of vinegar.
Cloudiness on glassware	<ul style="list-style-type: none"> • Combination of soft water and too much detergent. 	<ul style="list-style-type: none"> • Use less detergent if you have soft water and select a shortest cycle to wash the glassware and to get them clean.
Yellow or brown film on inside surfaces	<ul style="list-style-type: none"> • Tea or coffee stains. 	<ul style="list-style-type: none"> • Using a solution of 1/2 cup of bleach and 3 cups warm water to remove the stains by hand. <p>⚠ WARNING: You have to wait for 20 minutes after a cycle to let the heating elements cool down before cleaning interior; Failing to follow this instruct may result in the risk of burns.</p>
	<ul style="list-style-type: none"> • Iron deposits in water can cause an overall film. 	<ul style="list-style-type: none"> • You have to call a water softener company for a special filter.
White film on inside surface	<ul style="list-style-type: none"> • Hard water minerals. 	<ul style="list-style-type: none"> • To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent for the risk of foaming or suds.
Detergent cup lid won't latch	<ul style="list-style-type: none"> • Dial is not in the OFF position. 	<ul style="list-style-type: none"> • Turn the Dial to OFF position and slide the door latch to the left.
Detergent left in dispenser cups	<ul style="list-style-type: none"> • Dishes block detergent cups. 	<ul style="list-style-type: none"> • Re-loading the dishes properly.
Steam	<ul style="list-style-type: none"> • Normal phenomenon. 	<ul style="list-style-type: none"> • There is some steam coming through the vent by the door latch during drying and water draining.
Black or gray marks on dishes	<ul style="list-style-type: none"> • Aluminum utensils have rubbed against dishes. 	<ul style="list-style-type: none"> • Use a mild abrasive cleaner to eliminate those marks.
Water standing in the bottom of the tub	<ul style="list-style-type: none"> • This is normal. 	<ul style="list-style-type: none"> • A small amount of clean water around the outlet on the tub bottom keeps the water seal lubricated.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Dishwasher leaks	<ul style="list-style-type: none"> • Overfill dispenser or rinse aid spills. 	<ul style="list-style-type: none"> • Be careful not to overfill the rinse aid dispenser. Spilled rinse aid could cause overusing and lead to overflowing. Wipe away any spills with a damp cloth.
	<ul style="list-style-type: none"> • Dishwasher isn't level. 	<ul style="list-style-type: none"> • Make sure the dishwasher is level.
Buttons are not working on power on state	<ul style="list-style-type: none"> • Door is open. 	<ul style="list-style-type: none"> • When door is opened, buttons are not working except Power button. Close the door and press the button.
	<ul style="list-style-type: none"> • Child lock function is selected. 	<ul style="list-style-type: none"> • When selected Child lock function, buttons are not responded. To unlock this function, hold down both the Multi in 1 and Delay start buttons for three (3) seconds. Also, Child lock function is released when power cord is reconnected.



The result of washing performance may be caused by a power supply issue. Try another program before contacting for service.

Troubleshooting

ERROR CODES

If an error occurs an error code may be displayed to inform you:

CODES		MEANING	POSSIBLE CAUSES	NOTE
DW60H6050 DW60H5050	DW60H3010			
4E		Water supply error	<p>Inlet water continually for 4 minutes in any case or no water in normal water inlet step.</p> <p>Over 2L inletting except water inlet step.</p> <ul style="list-style-type: none"> If water inletting below low level quantity at step when heater work, heater is not work by safety device. If water inletting over low level quantity at any step, heater is controlled by thermister. 	DW60H6050 DW60H5050 DW60H3010
HE		Heater error	Heating continually for 60 minutes, yet still not arrive the anticipated temperature.	
LE		Leakage error	<p>If the leakage switch is on for 2 seconds.</p> <p>When power S/W is off, LE error is not occurred when happen the leakage on off-state, but if the door is closed, the washer can drain away the water automatically when happen the leakage on off-state.</p>	
tE		Failure of temperature sensor	Abnormal of the thermistor (short circuit/open circuit)	




WARNING: If overflow occurs, turn off the main water supply before calling a service. If there is water in the base pan because of an over fill or small leak, the water should be removed before restarting the dishwasher.

Appendix

SPECIFICATIONS

Model	DW60H3010FV / DW60H3010FW / DW60H5050FW / DW60H5050FS / DW60H6050FW / DW60H6050FS	
Type	Freestanding Dishwasher	
Power	220-240 V / 50 Hz AC only	
Water pressure	0.04-1.0 MPa	
Rated power usage	1760-2100 W	
Hot water connection	Max 60 °C	
Dry type	Condensed dry system	
Wash type	Rotating nozzle spray	
Dimensions	598 x 600 x 845 mm (Width x Depth x Height)	
Wash capacity	DW60H6050	14 place setting
	DW60H5050	13 place setting
	DW60H3010	12 place setting
Weight	DW60H6050	Unpacked 57.5 kg
	DW60H5050	Unpacked 56 kg
	DW60H3010	Unpacked 43 kg

PRODUCT DIMENSION

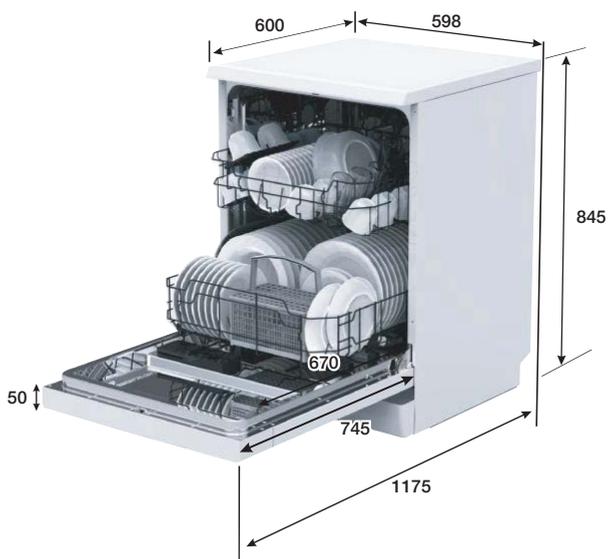


For standard test (DW60H5050)


 The information for comparability test in accordance with EN 50242, as follows:
The diagrams below show the proper way to load the baskets based on the European Standards (EN50242).

- Washing capacity: 13 place settings
- Test standard: EN50242/ IEC60436
- Position of upper basket: to lower position
- Wash cycle: Eco
- Additional options: None
- Rinse aid setting: 3
- Water softener setting: H4
- Dosage of the standard detergent: pre/wash 5 g + main/wash 27.5 g
- For the arrangement of the items, refer below figures


<Upper basket>

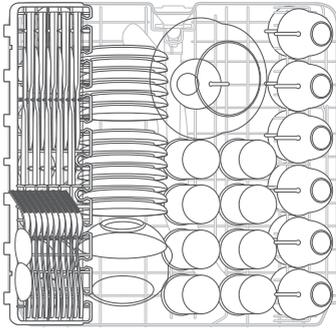

<Lower basket>

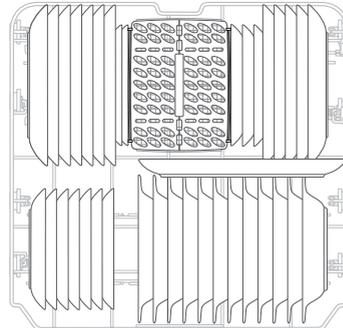

<Silverware basket>

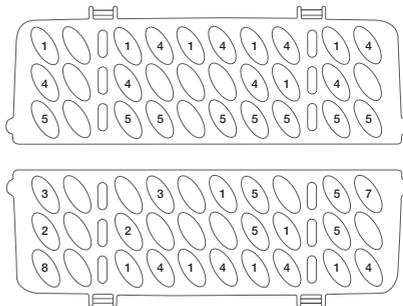


1	Soup spoons	
2	Forks	
3	Knives	
4	Teaspoons	
5	Dessert spoons	
6	Serving spoons	
7	Serving forks	
8	Gravy ladles	

For standard test (DW60H6050)


 The information for comparability test in accordance with EN 50242, as follows:
The diagrams below show the proper way to load the baskets based on the European Standards (EN50242).

- Washing capacity: 14 place settings
- Test standard: EN50242/ IEC60436
- Position of upper basket: to lower position
- Wash cycle: Eco
- Additional options: None
- Rinse aid setting: 3
- Water softener setting: H4
- Dosage of the standard detergent: pre/wash 5 g + main/wash 30 g
- For the arrangement of the items, refer below figures


<Upper basket>

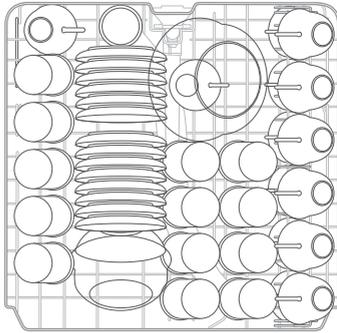


<Lower basket>

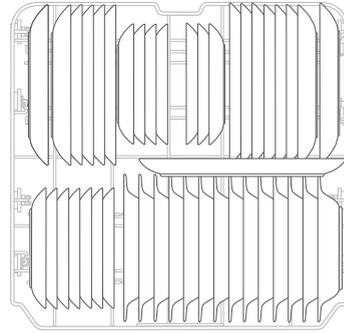

<Silverware basket>

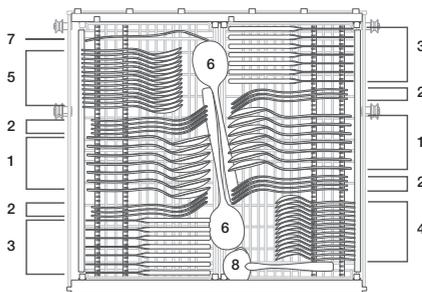

 1	Soup spoons	
2	Forks	
3	Knives	
4	Teaspoons	
5	Dessert spoons	
6	Serving spoons	
7	Serving forks	
8	Gravy ladles	

Product fiche

REGULATION (EU) NO 1059/2010

Supplier	SAMSUNG	SAMSUNG	SAMSUNG
Model name	DW60H3010FV DW60H3010FW	DW60H5050FW DW60H5050FS	DW60H6050FW DW60H6050FS
Rated Capacity (place setting)	12	13	14
Energy efficiency class	A+	A+	A+
Annual energy consumption, (AE c) (kWh/year) ¹⁾	289	295	298
Standard cycle energy consumption, (E t) (kWh)	1.02	1.04	1.05
Power consumption in off mode, P o (W)	0.45	0.45	0.45
Power consumption in left-on mode, P I (W)	0.49	0.49	0.49
Annual water consumption, (AW c) (L/year) ²⁾	3920	3360	3360
Drying efficiency class, A (most efficient) to G (least efficient)	A	A	A
Standard programme ³⁾	Eco	Eco	Eco
Programme time for the standard cycle, (min)	175	183	183
Duration of the left-on mode, (T I) (min)	Unlimited	Unlimited	Unlimited
Airborne acoustical noise emissions (dBA re 1pW)	52	46	46
Installation	Built-in		
	Built-under	Yes	Yes
	Free standing	Yes	Yes

-  1) based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption will depend on how the appliance is used.
- 2) based on 280 standard cleaning cycles. Actual water consumption will depend on how the appliance is used.
- 3) 'Standard programme' is the standard cleaning cycle to which the information in the label and the fi che relates, that this programme is suitable to clean normally soiled tableware, and that it is the most effi cient programme in terms of combined energy and water consumption.
- 4) The wash time varies depending on the pressure and temperature of the supplied water.

Terminology for dishwasher

1. Circulation Motor	A motor that sucks the water remaining on the floor of the dishwasher and injects water using high pressure through the internal water passages to the top Middle and lower nozzles.
2. Drain Pump	The pump that drains the polluted water from the dishwasher generated while the dishwasher is running.
3. Heater	The heater is located on the water passages inside the dishwasher. It heats the flowing water to increase wash efficiency.
4. Flow Meter	Measure the amount of supplied water by counting the pulses of the hall IC located at the next of the inlet valve.
5. Distributor	Located at the output end of the sump inside the dishwasher. It turns the flow of the water that goes to the bottom part of the dishwasher on or off. (This model does not have this part)
6. Dispenser	The location where the detergent and rinse aids are stored so they can be used by the dishwasher. The dispenser automatically supplies detergent and rinse aids to the inside of the dishwasher when they are needed.
7. Tub Assy	An internal case made of stainless steel that makes up the basic framework of the dishwasher.
8. Sump Assy	The place inside the dishwasher where water is collected. The injected water gathers here after circulation. The sump Assy is connected to the circulation motor and drain pump.
9. Tub Front Assy	An internal case made of stainless steel that makes up internal part of the front door.
10. Base Assy	A plastic part that makes up the basic bottom framework.
11. Basket Assy	The upper and lower racks where dishes can be loaded.
12. Middle/Lower Nozzles	Washes dishes by rotating and injecting the supplied water through the water passage at high pressure.
13. Case Brake	A passage that adjusts the air pressure by connecting the pressure of the inside air which is expanded at high temperature during wash and rinse cycles and the outside air pressure.
14. Door Lock Switch	Detects whether the door of the dishwasher is open or closed if the door is open while the dishwasher is running the cycle is temporary stopped.

Note



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
UK	0330 SAMSUNG (7267864)	www.samsung.com/uk/support
EIRE	0818 717100	www.samsung.com/ie/support

DD81-01651F-01