

VIERA

Panasonic®

Operating Instructions Plasma Television

Model No.

**TH-42PZ800E
TH-50PZ800E**



Contents

Be Sure to Read

- Safety Precautions 4
(Warning / Caution)
- Notes 5
- Maintenance 5

Quick Start Guide

- Accessories / Options 6
- Identifying Controls 9
- Basic Connection 10
- Auto Setup 12
- How to Use Menu Functions 14

VIERA
Link

QLink

DVB®

AVCHD™

DOLBY
DIGITAL PLUS™

SRS TruSurround XT

SD HC™
FULL HD
1920×1080p

HD
TV
1080p

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Please read these instructions before operating your set and retain them for future reference.
The images shown in this manual are for illustrative purposes only.
Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance.

**For more detailed instructions, refer to the Operating Instructions on the CD-ROM.
To view the Operating Instructions on the CD-ROM, you need a computer equipped with a CD-ROM drive, and Adobe® Reader® (Version 7.0 or later is recommended) installed on your computer.**

Depending on the operating system or settings on your computer, the Operating Instructions may not start automatically.

In this case, open the PDF file under \MANUAL\PDF manually to view the instructions.

English



TQB0E0603U-G

Turn your own living room into a movie theatre!

Experience an amazing level of multi-




Notice for DVB functions

- Any functions related to DVB (Digital Video Broadcasting) will work in areas where DVB-T digital terrestrial broadcasting are received. Consult your local Panasonic dealer with coverage areas.
- DVB functions may not be available in some countries.
- Some functions may not be available in some countries.
- This TV has the capability for DVB specifications. But future DVB services cannot be guaranteed.

media excitement

Enjoy rich multi-media

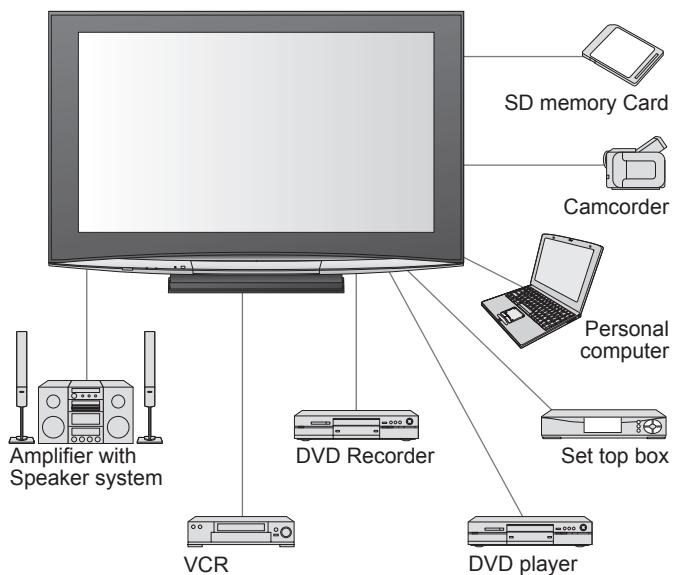

Up to 100,000 hours Plasma Panel Lifetime

The Plasma display panel used in the 2008 VIERA TV range is rated for up to 100,000 hours.*


*This measurement is based on the time taken for the brightness of the panel to reduce to half of its maximum level.
The time taken to reach this level may vary depending on the image content and the environment where the TV is used.
Image retention and malfunctions are not taken into account.

Safety Precautions

Warning

Handling the mains plug and lead

- Insert the mains plug fully into the socket outlet. (If the mains plug is loose, it could generate heat and cause fire.)
- Ensure that the mains plug is easily accessible.
- Ensure the earth pin on the mains plug is securely connected to prevent electrical shock.
 - An apparatus with CLASS I construction shall be connected to a mains socket outlet with a protective earthing connection.
- Do not touch the mains plug with a wet hand. (This may cause electrical shock.)
- Do not use any mains lead other than that provided with this TV. (This may cause fire or electrical shock.)
- Do not damage the mains lead. (A damaged lead may cause fire or electrical shock.)
- Do not move the TV with the lead plugged in the socket outlet.
- Do not place a heavy object on the lead or place the lead near a high-temperature object.
- Do not twist the lead, bend it excessively, or stretch it.
- Do not pull on the lead. Hold onto the mains plug body when disconnecting lead.
- Do not use a damaged mains plug or socket outlet.

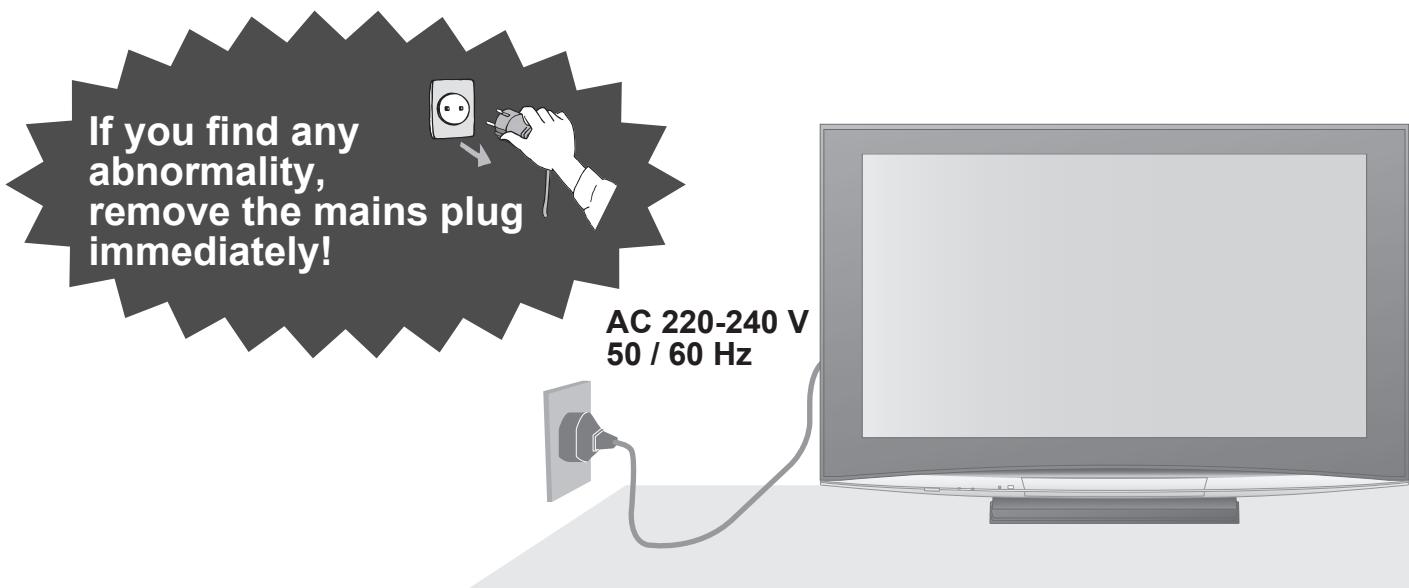

Power source

- This TV is designed to operate on 220-240 V, 50 / 60 Hz AC.

Do not remove covers

NEVER modify the TV yourself

(High-voltage components may cause serious electrical shock.)

- Have the TV checked, adjusted, or repaired at your local Panasonic dealer.

Keep liquids away from the TV

- To prevent damage which may result in fire or shock hazard, do not expose this appliance to dripping or splashing.
- Do not place containers with water (flower vase, cups, cosmetics, etc.) above the TV. (including on shelves above, etc.)

Do not expose to direct sunlight and other sources of heat

- Avoid exposing the TV to direct sunlight and other sources of heat. To prevent fire never place any type of candle or naked flame on top or near the TV.

Do not place foreign objects inside the TV

- Do not allow any objects to drop into the TV through the air vents (fire or electrical shock may result).

Do not place the TV on sloped or unstable surfaces

- The TV may fall off or tip over.

Use only the dedicated pedestals / mounting equipment

- Using an unapproved pedestal or other fixtures may make the TV unstable, risking injury. Be sure to ask your local Panasonic dealer to perform setup.
- Use approved pedestals / mounts (p. 6).

Do not allow children to handle SD Card

- As with a small object, SD Card can be swallowed by young children. Please remove SD Card immediately after use.

Notes

Caution

■ When cleaning the TV, remove the mains plug

- Cleaning an energized TV may cause electrical shock.

■ When the TV is not going to be used for a long period of time, remove the mains plug


- This TV will still consume some power even in the Off mode, as long as the mains plug is still connected to a live socket outlet.

■ Transport only in upright position

- Transporting the TV with its display panel facing upright or downward may cause damage to the internal circuitry.

■ Allow sufficient space around the TV for radiated heat

Minimum distance

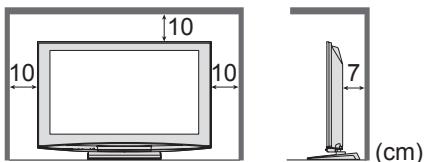

- When using the pedestal, keep the space between the bottom of the TV and the floor surface.
- In case of using Wall-hanging bracket, follow the manual of it.

■ Do not block the rear air vents

- Blocked ventilation by newspapers, table cloths, curtains, etc. may cause overheating, fire or electrical shock.

■ Do not expose your ears to excessive volume from the headphones

- Irreversible damage can be caused.

Do not display a still picture for a long time

This causes the image to remain on the plasma screen ("image retention").

This is not considered a malfunction and is not covered by the warranty.

Typical still images

- Programme number and other logos
- Image displayed in 4:3 mode
- Video game
- Computer image



To prevent image retention, contrast is lowered automatically after a few minutes if no signals are sent or no operations are performed.

■ Auto power standby function

- If no signal is received and no operation is performed in Analogue TV mode for 30 minutes, the TV will automatically go to standby mode.

■ Keep the TV away from these types of equipment

- Electronic equipment

In particular, do not place video equipment near the TV (electromagnetic interference may distort images / sound).

- Equipment with an infrared sensor

This TV also emits infrared rays (this may affect operation of other equipment).

Maintenance

First, remove the mains plug from the socket outlet.

Display panel

Regular care: Gently wipe the surface clean of dirt by using a soft cloth.

Major contamination: Wipe the surface clean using a soft cloth dampened with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Then, using a soft dry cloth, evenly wipe the surface clean until it is dry.

Caution

- The surface of the display panel has been specially treated and may be easily damaged.
Do not tap or scratch the surface with your fingernail or other hard object.
- Take care not to subject the surface to insect repellent, solvent, thinner, or other volatile substances (this may degrade surface quality).

Cabinet, Pedestal

Regular care: Wipe the surface clean using a soft dry cloth.

Major contamination: Dampen a soft cloth with clean water or water containing a small amount of neutral detergent. Then, wring the cloth and wipe the surface clean with it. Finally, wipe the surface clean with a dry cloth.

Caution

- Take care not to subject the TV's surfaces to detergent.
(A liquid inside the TV could lead to product failure.)
- Take care not to subject surfaces to insect repellent, solvent, thinner, or other volatile substances
(this may deteriorate the surface by peeling the paint).
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time.

Mains plug

Wipe the mains plug with a dry cloth at regular intervals. (Moisture and dust may lead to fire or electrical shock.)

Accessories / Options

Standard accessories

- Remote Control
● N2QAYB000238



- Operating Instructions
- Pan European Guarantee Card

Check that you have the accessories and items shown

 
- Batteries for the Remote Control (2)
● R6 (UM3)



- Cleaning cloth



- Clamper (2)
→ p. 8



- Mains Lead
→ p. 11




- This product contains possibly dangerous parts (such as plastic bags), that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

Optional accessories


Plasma TV stand

- TY-S42PZ800W (TH-42PZ800E)
- TY-S50PZ800W (TH-50PZ800E)

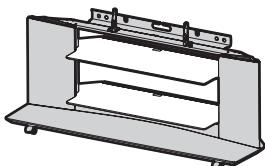


Wall-hanging bracket (vertical)

- TY-WK42PV4W

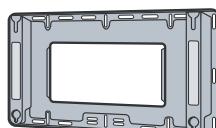

(angle)

- TY-WK42PR4W

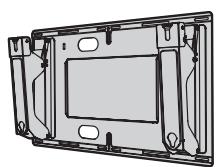


Caution


- In order to maintain the unit's performance and safety, be absolutely sure to ask your dealer or a licenced contractor to secure the wall-hanging brackets.
- Carefully read the instructions accompanying the plasma TV stand or pedestal, and be absolutely sure to take steps to prevent the TV from tipping over.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause product damage.

Installing remote's batteries

1

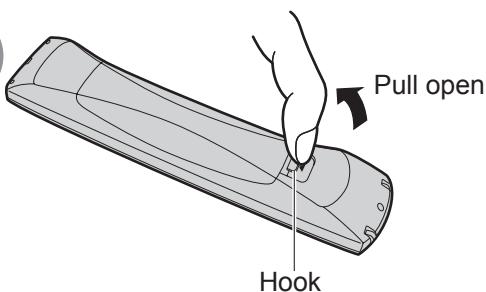

2

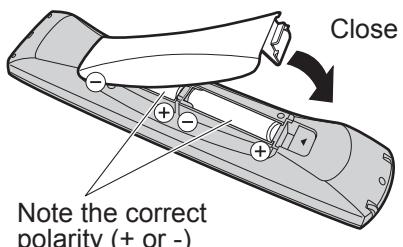

Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
 - Do not mix old and new batteries.
 - Do not mix different battery types (such as alkaline and manganese batteries).
 - Do not use rechargeable (Ni-Cd) batteries.
 - Do not burn or breakup batteries.
- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Attaching the pedestal

Warning

Do not disassemble or modify the pedestal.

- Otherwise the TV may fall over and become damaged, and personal injury may result.

Caution

Do not use any other TV and displays.

- Otherwise the TV may fall over and become damaged, and personal injury may result.

Do not use the pedestal if it becomes warped or physically damaged.

- If you use the pedestal while it is physically damaged, personal injury may result. Contact your nearest Panasonic dealer immediately.

During set-up, make sure that all screws are securely tightened.


- If insufficient care is taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

Ensure that the TV does not fall over.

- If the TV is knocked or children climb onto the pedestal with the TV installed, the TV may fall over and personal injury may result.

Two or more people are required to install and remove the TV.


- If two or more people are not present, the TV may be dropped, and personal injury may result.

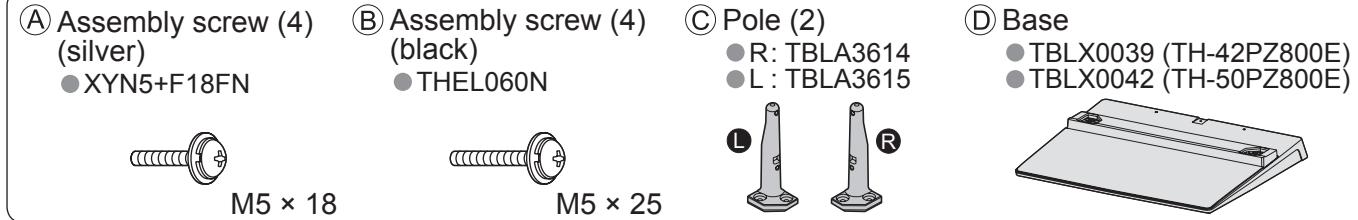

Assembling the pedestal

Use the four assembly screws (A) to fasten the left and right poles to the base securely.


- Make sure that the screws are securely tightened.
- Forcing the assembly screws the wrong way will strip the threads.
- "L" or "R" mark is stamped on the bottom of the pole.

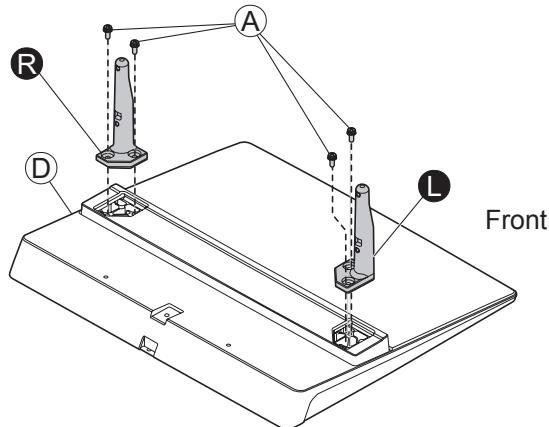

Securing the TV

Use the assembly screws (B) to fasten securely.


- Make sure that the screws are securely tightened.
- Carry out the work on a horizontal and level surface.

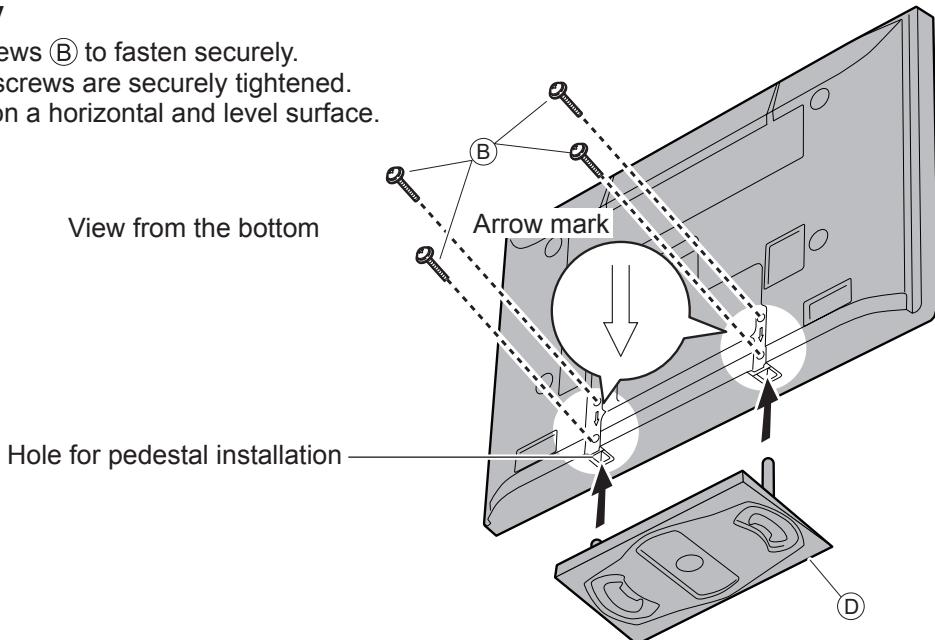

Accessories / Options

Using the clamper


Rear of the TV

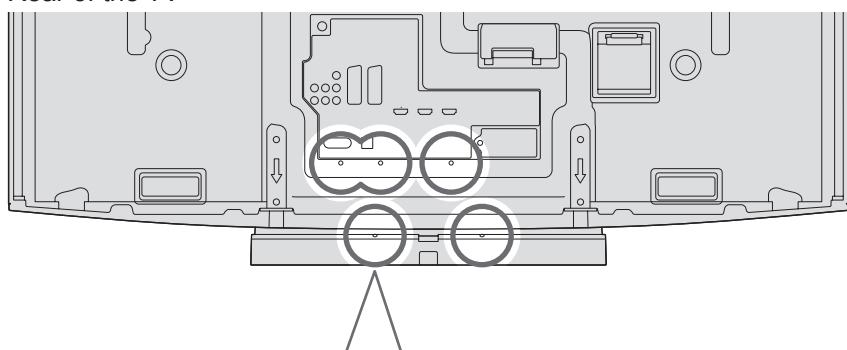

- Do not bundle the RF cable and mains lead together (could cause distorted image).
- Fix cables with clamps as necessary.
- When using the optional accessory, follow the option's assembly manual to fix cables.


■ Attach the clamper

hole

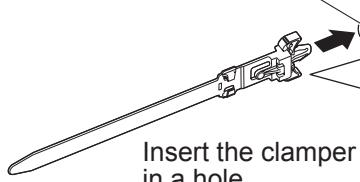


Insert the clamper
in a hole

To remove
from the TV:

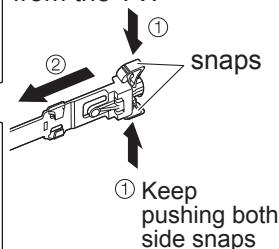

① Keep
pushing both
side snaps


■ Bundle the cables

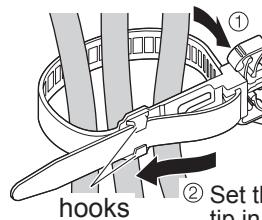

hooks

② Set the
tip in the
hooks


To loosen:

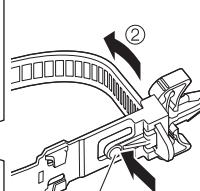

① Keep
pushing
the knob


Adjust the panel to your desired angle

- Ensure that the pedestal does not hang over the edge of the base even if the TV swivels to the full rotation range.
- Do not place any objects or hands within the full rotation range.

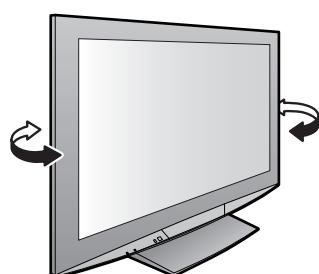


- TH-42PZ800E
a: 521 mm / b: 425 mm / c: 15°
- TH-50PZ800E
a: 513 mm / b: 453 mm / c: 10°

Set the mark at the centre as illustrated,
to have the swivel positioned at the
centre of the rotation angle.

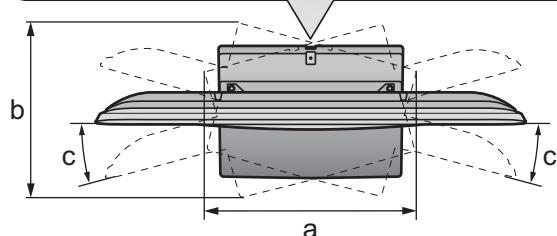

(View from the top)

Identifying Controls

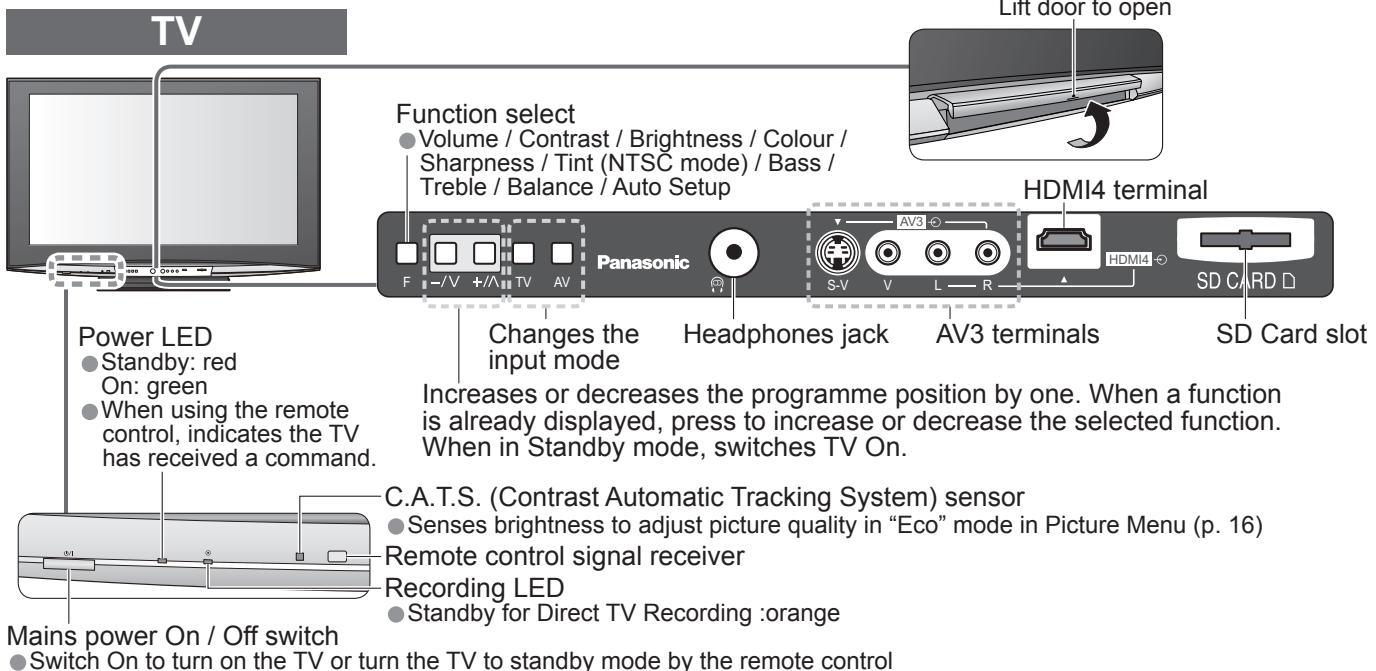

Remote Control



Basic Connection


External equipment and cables shown are not supplied with this TV.

Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any leads. When disconnecting the mains lead, be absolutely sure to disconnect the mains plug at the socket outlet first.

Example 1 Connecting aerial

TV only


Rear of the TV

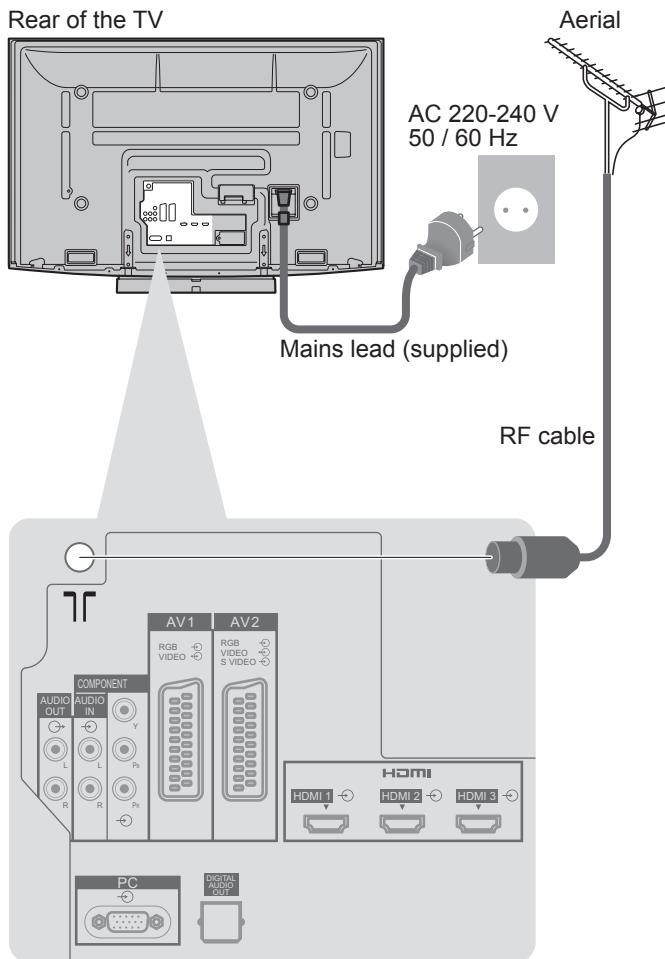

Example 2 Connecting DVD Recorder / VCR

TV, DVD Recorder or VCR

Rear of the TV

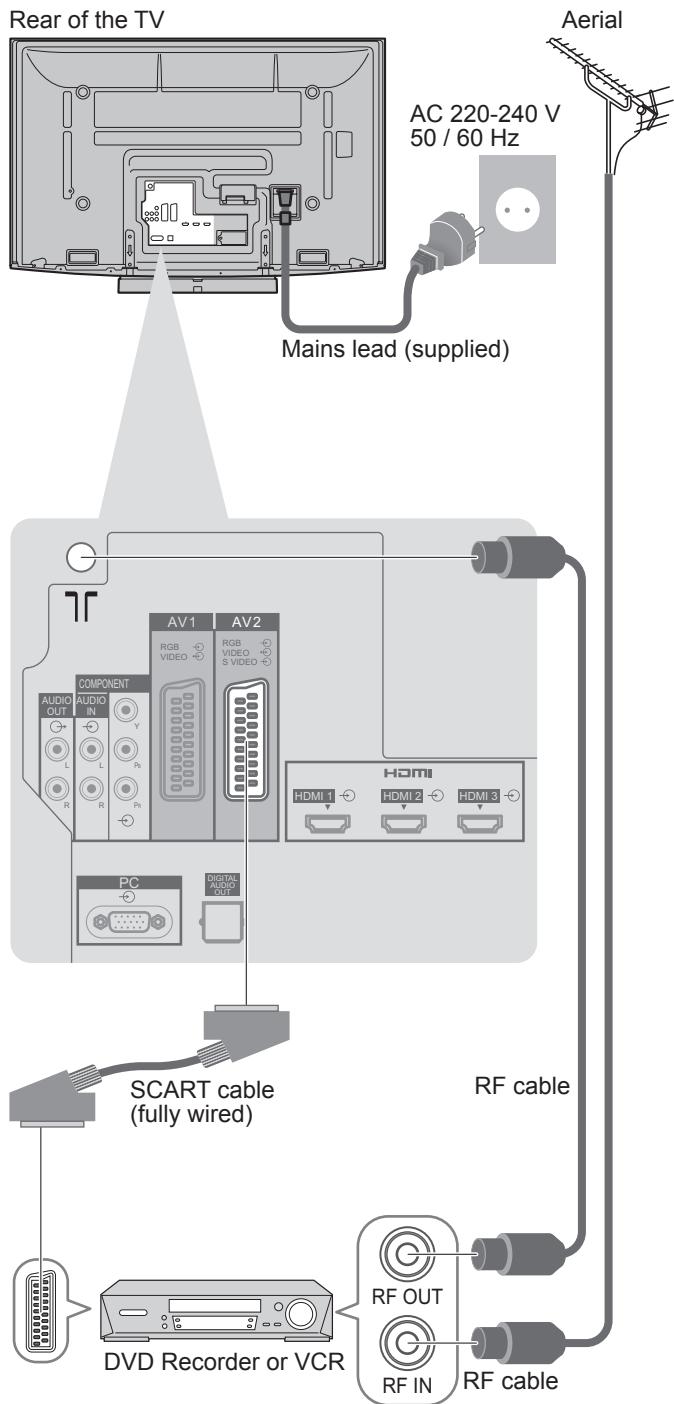



Note

- Connect to AV1 / AV2 for a DVD Recorder / VCR supporting Q-Link.
- For HDMI-compatible equipment, possible to connect to HDMI terminals (HDMI1 / HDMI2 / HDMI3 / HDMI4) by using HDMI cable.
- Read the manual of the equipment too.

Example 3 Connecting DVD Recorder / VCR and Set top box

TV, DVD Recorder / VCR and Set top box


Rear of the TV

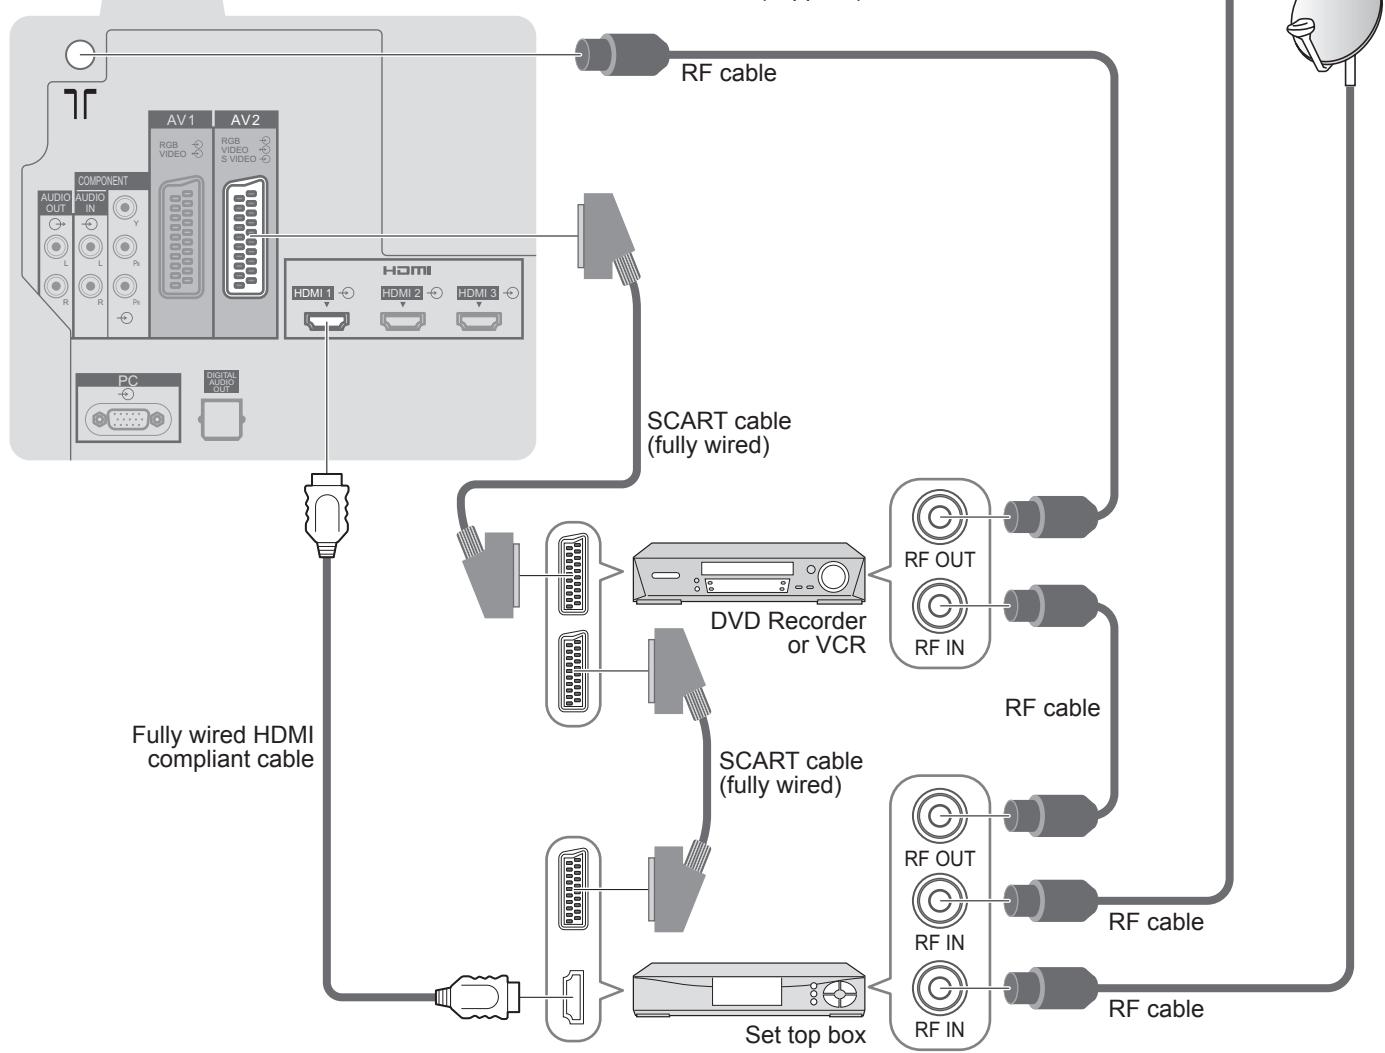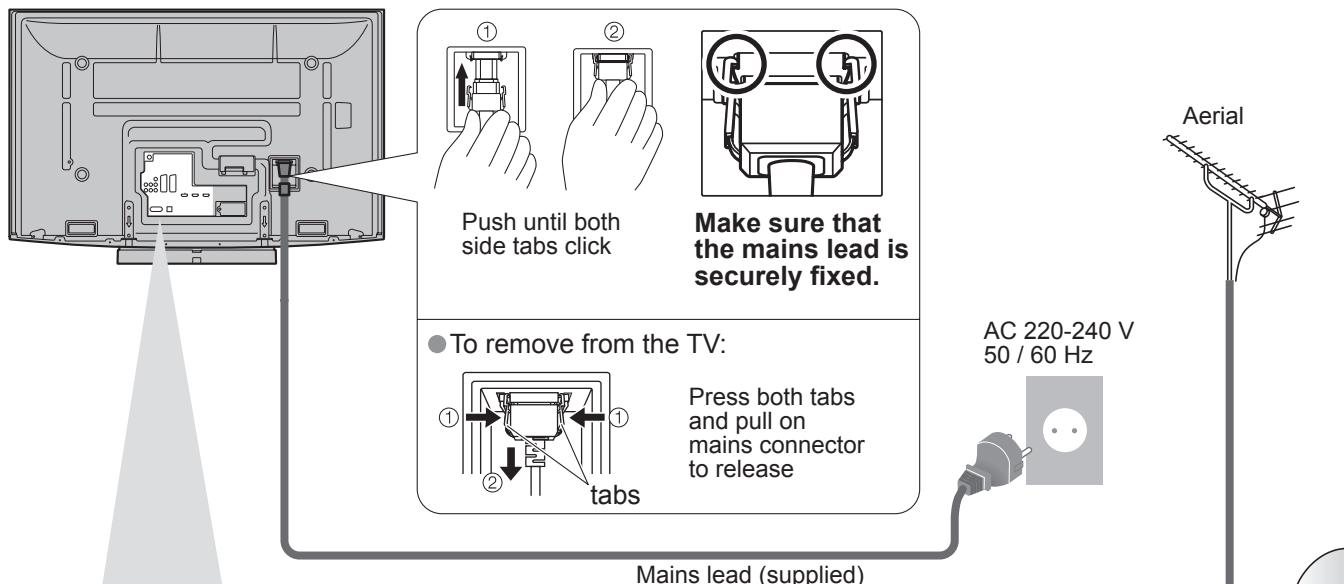

Auto Setup

Search and store TV programmes automatically.

These steps are not necessary if the setup has been completed by your local dealer.

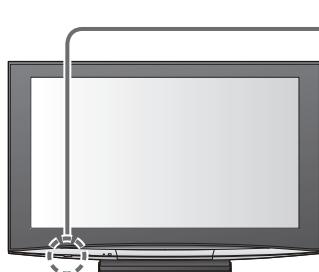


1

Plug the TV into mains socket and switch On
(Takes a few seconds to be displayed)




- You can now use the remote control to turn On the TV or turn the TV to standby mode.
(Power LED: On)

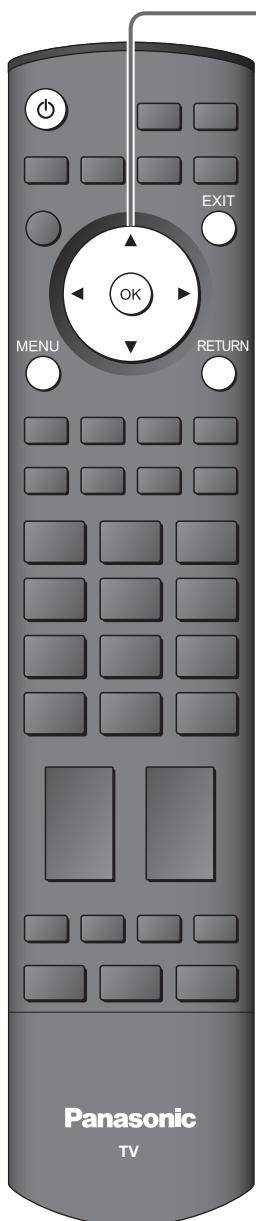

2

Select the language


Menüsprache	Dansk	Polski	Srpski
Deutsch	Svenska	čeština	Hrvatski
English	Norsk	Magyar	Slovenščina
Français	Suomi	Slovenčina	Latviešu
Italiano	Türkçe	Bългарски	eesti keel
Español	Ελληνικά	Română	Lietuvių
Português			
Nederlands			

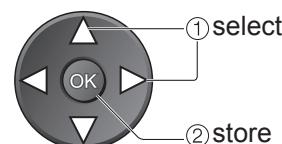

3

Select your country

Country	Germany	Denmark	Poland
Austria	Sweden	Czech	
France	Norway	Hungary	
Italy	Finland	Slovakia	
Spain	Luxembourg	E.Uu	
Portugal	Belgium		
Switzerland	Netherlands		
Malta	Turkey		
Andorra	Greece		

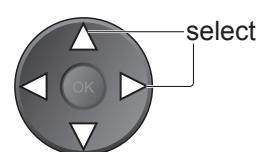

- Depending on the selected countries, you may also be required to select the region.

4

Start Auto Setup



Auto Setup - Digital and Analogue			
Digital Scan	5	169	
Analogue Scan	2	78	41
Information about 5 channels			
Channel	Service Name	Type	Quality
62	CBBC Channel	Free TV	10
62	BBC Radio Wales	Free TV	10
62	Ed	Free TV	10
29	Cartoon Nwk	Free TV	10
33	BBC1	Analogue	-
Free TV: 4	Pay TV: 0	Data: 0	Analogue: 2
EXIT RETURN			

- Auto Setup will start to search for TV programmes and store them. The sorted programme order depends upon the TV signal, the broadcasting system and reception conditions.


- Depending on the selected countries, you may be required to select the Favourite Network.

- If Q-Link, VIERA Link or similar technology, compatible recorder is connected, programme, language, country / region settings are automatically downloaded to the recorder.

5

Select the picture setting

Please select your viewing environment.
 Home Shop

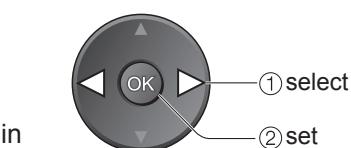

- "Shop" and "Home" are equal to "Dynamic" and "Normal" respectively - "Viewing Mode" in "Picture Menu" (p. 16)

Auto Setup is now complete and your TV is ready for viewing.



Using the On Screen Displays


● Auto Setup

Many features available on this TV can be accessed via the On Screen Display menu.

■ How to use remote control

- MENU Open the main menu
-  Move the cursor / select the menu
-  Move the cursor / adjust levels / select from a range of options
-  Access the menu / store settings after adjustments have been made or options have been set
- RETURN Return to the previous menu
- EXIT Exit the menu system and return to the normal viewing screen

■ ON SCREEN HELP Instructions box (example: Sound Menu)

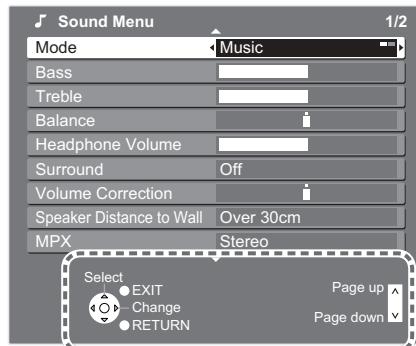

On-screen operation guide
will help you.

Note

- If tuning has failed ➔ “Auto Setup” (p. 18)
- If downloading has failed ➔ “Download” (p. 18)
- To initialize all settings ➔ “Shipping Condition” (p. 19)
- If you turned the TV Off during Standby mode last time, the TV will be in Standby mode when you turn the TV On with Mains power On / Off switch.


How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions.



1

Display the menu

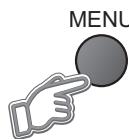


- Displays the functions that can be set (varies according to the input signal)

2

Select the menu




(example: Picture Menu)

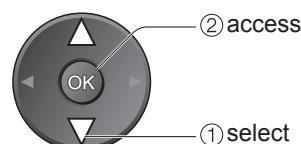

3

Select the item

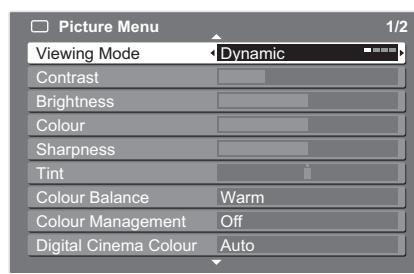


(example: Picture Menu)




4

Adjust or select

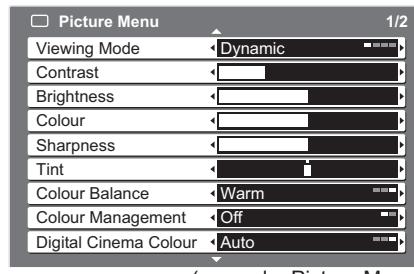

(example: Picture Menu)

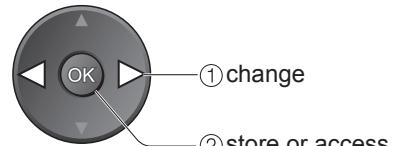

■ To return to TV at any time
→ EXIT

■ To return to the previous screen
→ RETURN

■ To change menu pages
→ ↑ up
↓ down

 
Choose from among alternatives

Number and positions of alternatives




Changed

Adjust using the slide bar



Moved

 
Go to the next screen




Displays the next screen

Enter characters by free input menu

You can enter names or numbers freely for some items.

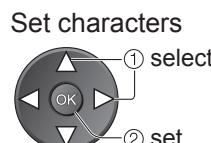

■ Overview

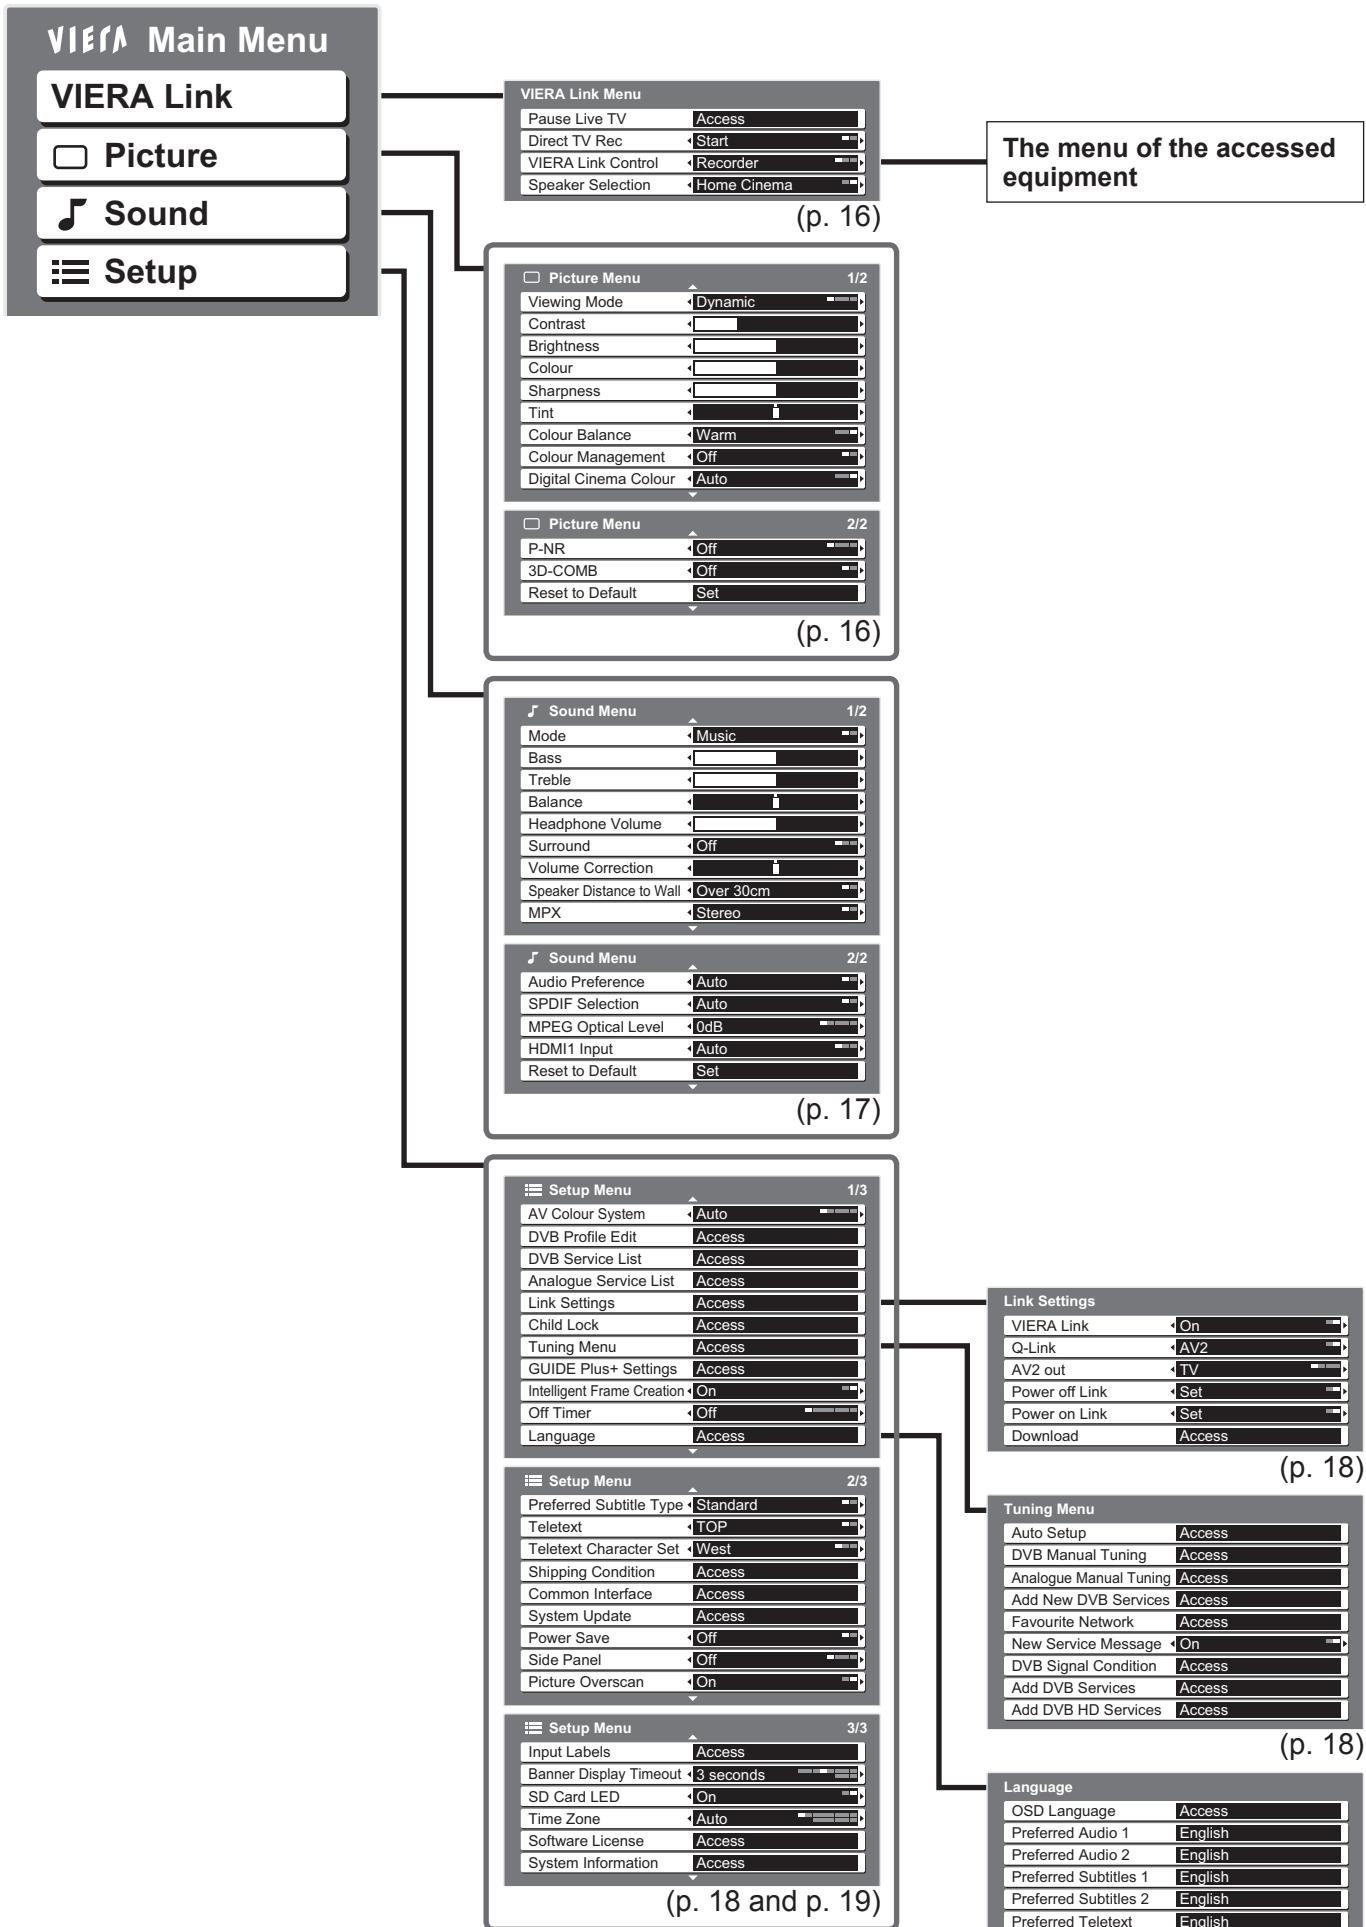

● Only available items can be selected.

How to Use Menu Functions

■ Menu list

Menu	Item	Adjustments / Configurations (alternatives)
VIERA Link	Pause Live TV	
	Direct TV Rec	Controls the connected equipment with VIERA Link function, and enables various convenient recording, playback, etc. ● You can also access VIERA Link Menu directly using the VIERA Link button on the remote control.
	VIERA Link Control	
	Speaker Selection	
Picture	Viewing Mode	Basic picture mode (Dynamic / Normal / Cinema / Eco) Dynamic : Provides enhanced picture contrast and sharpness when viewing in a bright room Normal : Recommended for viewing under normal ambient room lighting conditions Cinema : For watching movies in a darkened room producing a cinema-like picture Eco : Adjusts picture settings automatically dependent on ambient lighting conditions ● Set for each input signal
	Contrast, Brightness, Colour, Sharpness	Increases or decreases the levels of these options according to your personal preference
	Tint	With an NTSC signal source connected to the TV, the picture hue can be adjusted to suit your taste ● For NTSC signal reception only
	Colour Balance	Allows you to set the overall colour tone of the picture (Cool / Normal / Warm)
	Colour Management	Automatically adjusts colours to vivid ones (Off / On) ● Not valid on PC signal
	Digital Cinema Colour	Displays the vivid images with the expanded colour gamut (Off / On / Auto) This is effective when watching HD moving pictures ● HDMI input mode or Movie View Mode only
	P-NR	Picture Noise Reduction Automatically reduces unwanted picture noise and flicker noise in the contoured parts of a picture (Off / Min / Mid / Max) ● Not valid on PC signal
	3D-COMB	Occasionally, whilst viewing still or slow moving pictures, colour patterning may be seen Set to "On" to display sharper and more accurate colours (Off / On) ● For PAL or NTSC signal reception only ● Not valid on RGB, S-Video, Component, PC, HDMI and SD Card
	Reset to Default	Press the OK button to reset the present Picture Mode to the default settings

■ Menu list

Menu	Item	Adjustments / Configurations (alternatives)
Sound	Mode	Basic sound mode (Music / Speech)
	Bass	Increases or decreases level to enhance or minimise lower, deeper sound output
	Treble	Increases or decreases level to enhance or minimise sharper, higher sound output
	Balance	Adjusts volume level of right and left speakers
	Headphone Volume	Adjusts the volume of the headphones
	Surround	Surround sound settings (Off / Simulated Surround / SRS TruSurround XT) Simulated Surround: Provides a dynamic enhancer to simulate improved spatial effects SRS TruSurround XT: SRS TruSurround XT® creates a high quality surround sound effect using just two speakers from the source which can output surround encoded signals ● Switching is also possible by the Surround button on the remote control.
	Volume Correction	Adjusts volume of individual programme or input mode
	Speaker Distance to Wall	Adjusts the low frequency sound (Over 30cm / Up to 30cm) ● If the back space between the TV and wall is over 30 cm, "Over 30cm" is recommended. ● If the back space between the TV and wall is within 30 cm, "Up to 30cm" is recommended.
	MPX	Select stereo / monaural (Mono / Stereo) ● Normally: Stereo ● Stereo signal cannot be received: Mono ● M1 / M2: Available while mono signal is transmitted ● Analogue mode only
	Audio Preference	Selects the initial setting for audio tracks (Auto / MPEG) Auto : Automatically selects the audio tracks if programme has more than two tracks. The priority is given in the following order - Dolby Digital Plus, HE-AAC, Dolby Digital, MPEG. MPEG : The priority is given to MPEG as long as the programme contains MPEG audio. ● Dolby Digital Plus and Dolby Digital are the methods of coding digital signals developed by Dolby Laboratories. Apart from stereo (2ch) audio, these signals can be multi-channel audio. ● HE-AAC is a perceptual coding method used to compress digital audio for efficient storage and transmission. ● MPEG is an audio compression method that compresses audio to the smaller size without any considerable loss of audio quality. ● Dolby Digital Plus and HE-AAC are the technologies for HD (High definition) programmes. ● DVB mode only
	SPDIF Selection	Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT terminal (Auto / PCM) Auto : Dolby Digital Plus and Dolby Digital are output as Dolby Digital Bitstream. HE-AAC and MPEG are output as PCM. PCM : Digital output signal is fixed to PCM. ● DVB mode or Movie View Mode only
	MPEG Optical Level	Normally, MPEG sound is larger comparing with the other types of audio track You can adjust the audio level of MPEG output from DIGITAL AUDIO OUT terminal as the initial setting ● 0dB to -12dB in -2dB reductions ● DVB mode only
	HDMI1 / 4 Input	Select to fit the input signal (Auto / Digital / Analogue) Auto : Automatic detection of digital or analogue sound source Digital : HDMI cable connection Analogue : HDMI-DVI adapter cable connection ● HDMI input mode only ● HDMI2 / 3 terminals are for digital signal only ● No setting for HDMI2 / 3 available
	Reset to Default	Press the OK button to reset the present Sound Mode to the default settings

● A different menu will be displayed while PC or SD Card is used.

● Only available items can be selected.

How to Use Menu Functions

■ Menu list

Menu	Item	Adjustments / Configurations (alternatives)
Link Settings	AV Colour System	Selects optional colour system based on video signals in AV mode (Auto / PAL / SECAM / M.NTSC / NTSC)
	DVB Profile Edit	Creates list of favourite programmes
	DVB Service List	Skips the unwanted DVB programmes
	Analogue Service List	Skips the unwanted Analogue programmes or edits Analogue programmes
	VIERA Link	Sets to use VIERA Link functions (Off / On)
	Q-Link	Selects which AV terminal is to be used for data communication between this TV and a compatible recorder (AV1 / AV2) ● Select the connected terminal to the recorder even it is not compatible with Q-Link.
	AV1 / AV2 out	Chooses the signal to be transmitted from the TV to Q-Link (TV / AV1 / AV2 / AV3 / Monitor) ● Monitor: Image displayed on screen ● Component, PC and HDMI signals cannot be outputted.
	Power off Link	Sets to use Power off Link function (No / Set)
	Power on Link	Sets to use Power on Link function (No / Set)
	Download	Downloads programme, language, country / region settings to a Q-Link or VIERA Link compatible equipment connected to the TV
Setup	Child Lock	Locks a programme / AV input to prevent access to it
	Auto Setup	Automatically sets the programmes received in the area
	DVB Manual Tuning	Sets the DVB programmes manually
	Analogue Manual Tuning	Sets the Analogue programmes manually
	Add New DVB Services	Adds new DVB services
	Favourite Network	Selects your favourite network for each broadcasters
	New Service Message	Selects whether to give a notification message when a new DVB service is found
	DVB Signal Condition	Checks the DVB signal condition
	Add DVB Services	Retunes all TV programmes to add DVB services ● All the previous tuning settings are erased. ● Use this function if DVB services start in your area.
	Add DVB HD Services	Retunes all TV programmes to add DVB HD services ● All the previous tuning settings are erased. ● Use this function if DVB HD services start in your area.
GUIDE Plus+ Settings	Update	Performs the update of the GUIDE Plus+ schedule and advertising informations for the GUIDE Plus+ system
	Postcode	Sets your postcode for using the GUIDE Plus+ system
	System Information	Displays the system information of the GUIDE Plus+ system
	Intelligent Frame Creation	Automatically compensates the picture frame rate to make the image smooth (Off / On) ● Not valid on PC signal
	Off Timer	Sets the time the TV automatically turns Off (Off / 15 / 30 / 45 / 60 / 75 / 90 minutes)

■ Menu list

Menu	Item	Adjustments / Configurations (alternatives)
Setup	Language	<p>OSD Language Changes language for on-screen displays</p> <p>Preferred Audio 1 / 2 Selects the preferred language for DVB multi audio (depending on the broadcaster)</p> <p>Preferred Subtitles 1 / 2 Selects the preferred language for DVB subtitles (depending on the broadcaster)</p> <p>Preferred Teletext Selects the preferred language for DVB teletext service (depending on the broadcaster)</p>
	Preferred Subtitle Type	<p>Selects the preferred subtitle type (Standard / Hard of Hearing)</p> <ul style="list-style-type: none"> ● “Hard of Hearing” provides aids in understanding and enjoyment with DVB subtitles (depending on the broadcaster). ● “Preferred Subtitles 1 / 2” in “Language” are given priority.
	Teletext	Teletext display mode (TOP (FLOF) / List)
	Teletext Character Set	<p>Selects teletext language (West / East1 / East2)</p> <ul style="list-style-type: none"> ● West: English, French, German, Greek, Italian, Spanish, Swedish, Turkish, etc. ● East1: Czech, English, Estonian, Lettish, Rumanian, Russian, Ukrainian, etc. ● East2: Czech, Hungarian, Lettish, Polish, Rumanian, etc.
	Shipping Condition	Resets all settings, for example, when moving house
	Common Interface	Uses include to watch pay-TV
	System Update	Downloads new software to TV
	Power Save	Reduces brightness of picture to economise on power consumption (Off / On)
	Side Panel	<p>Increases the brightness of the side panel (Off / Low / Mid / High)</p> <ul style="list-style-type: none"> ● The recommended setting is “High” to prevent panel “image retention”.
	Picture Overscan	<p>Selects the screen area displaying the image (Off / On)</p> <p>On : Enlarged the image to hide the edge of the image.</p> <p>Off : Displayed the image in the original size.</p> <ul style="list-style-type: none"> ● Set to “On” if noise is generated on the edge of the screen. ● This function is available when aspect is set to Auto (16:9 signal only) or 16:9. ● This function can be memorized separately for SD (Standard definition) and HD (High definition) signals.
	Input Labels	Labels or skips each input terminal
	Banner Display Timeout	Sets how long the information banner stays on screen <ul style="list-style-type: none"> ● 0 (No display) to 10 sec. in 1-sec. increments
	SD Card LED	Lights blue LED while SD Card is inserted (Off / On)
	Time Zone	Adjusts the time data
	Software License	Displays the software licence information
	System Information	Displays the system information of this TV

- A different menu will be displayed while PC or SD Card is used.
- Only available items can be selected.

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

		TH-42PZ800E	TH-50PZ800E
Power Source	AC 220-240 V, 50 / 60 Hz		
Power Consumption	Average use	385 W	495 W
	Standby condition	0.4 W (Without monitor out recording) 20 W (With monitor out recording)	

- This equipment complies with the EMC standards listed below.
EN55013, EN61000-3-2, EN61000-3-3, EN55020, EN55022, EN55024.

Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number

Serial Number

Matsushita Electric Industrial Co., Ltd.

Web Site : <http://www.panasonic-europe.com>

© 2008 Matsushita Electric Industrial Co., Ltd. All Rights Reserved.

Printed in Czech Republic