



Quick Reference Manual



Get more than just protection for your device. Pick the time and place, and a team member will meet you to setup, troubleshoot, repair or replace your product.

Enroll, at samsung.com/us/support/premium-care

Get to know your product:

 
- Access user manuals, tips and more at samsung.com/us/support

Ask the community:

- Ask questions and get solutions from Samsung customers, at us.community.samsung.com

Contact us for support:

- For hardware or software support, visit samsung.com/us/support/contact or call us at 1.800.SAMSUNG
- Find a service location near you, at support-us.samsung.com/cyberlocator/asc_locator.jsp

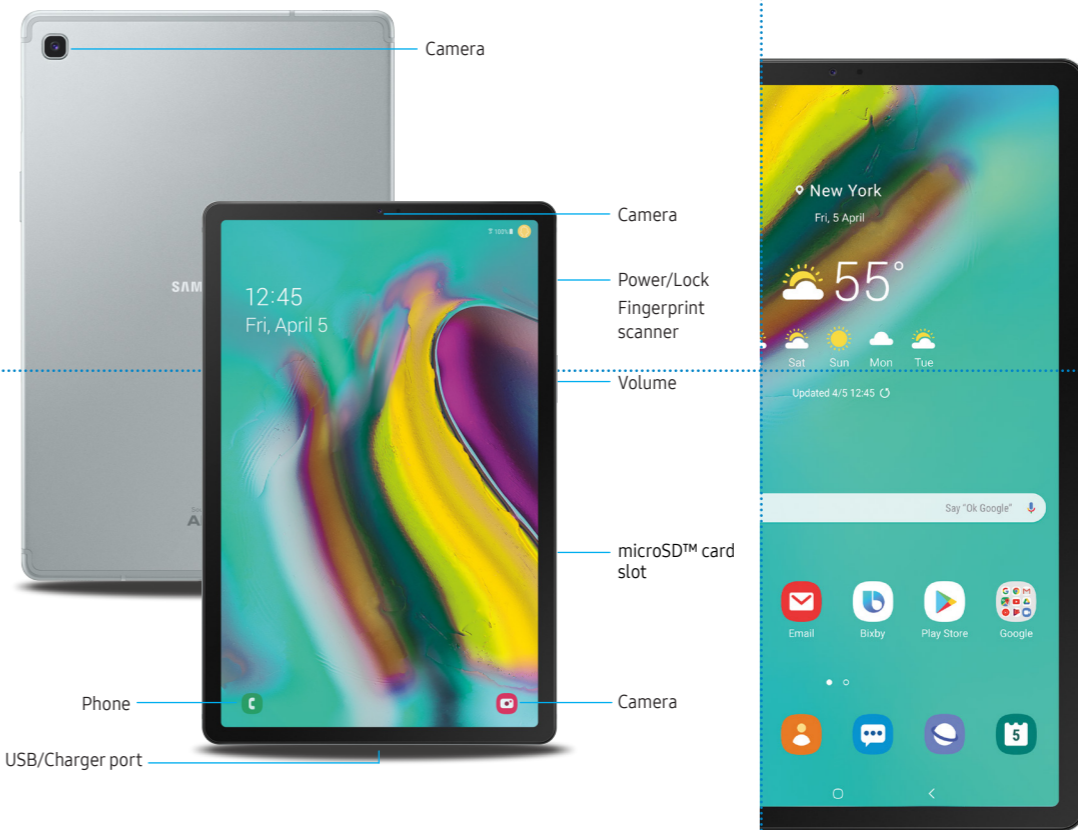

©2019 Samsung Electronics America, Inc. Samsung and Galaxy Tab are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of tablet may vary.



Printed in Vietnam
GH68-50292F

Device features

Expandable storage Expand storage with a microSD™ card.

Flexible security Biometric security feature.

 
Family share Connect with your loved ones by sharing photos, events, reminders and notes.

Bixby home See upcoming appointments, photos, tomorrow's weather and more.

Multiuser Allows multiple users for one device.

Customize your device

Tap **Settings** to customize, connect or turn on options to personalize your device.

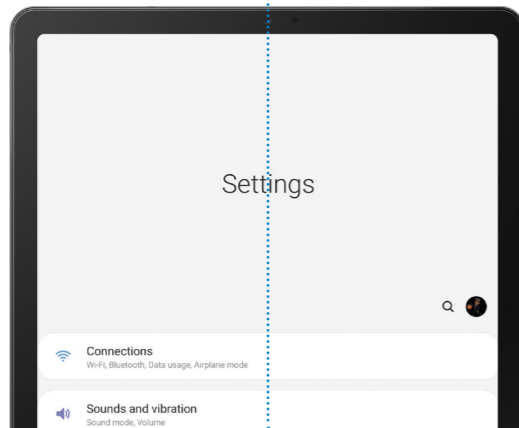

Connections Connect to Wi-Fi network, Bluetooth device and other connection options.

Lockscreen Select a screen lock type and set security options.

Display Customize the Home screen and display brightness.

Sound Set device volume and sounds.

Wallpaper Change the look of the Home and Lock screens.

Accounts and backup Tap Users to add additional users for the device.


Biometrics and security Set biometric security options.

Call and message continuity

Never miss calls and directly reply to messages even if your phone is out of reach.


Note:

- You must be signed in to your Samsung account to use this feature
- You can only make emergency calls using your phone
- Call quality may decrease


1. From Settings , tap Connections  > Call and message continuity and follow the prompts to complete setup.

Follow the same step to setup Call and message continuity on your phone.

2. Once both devices are connected, the device will appear on the connected device list.

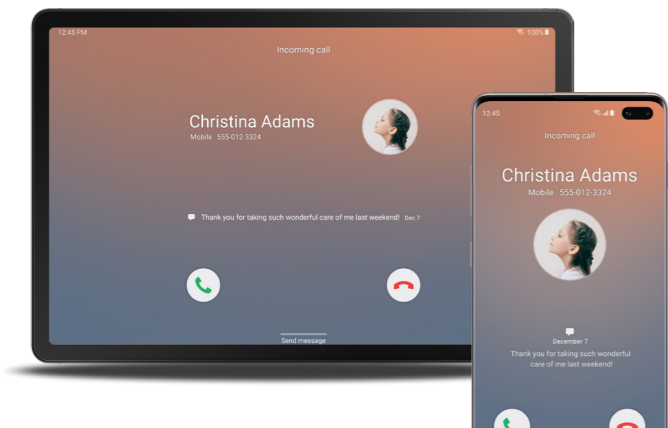


Set up your device

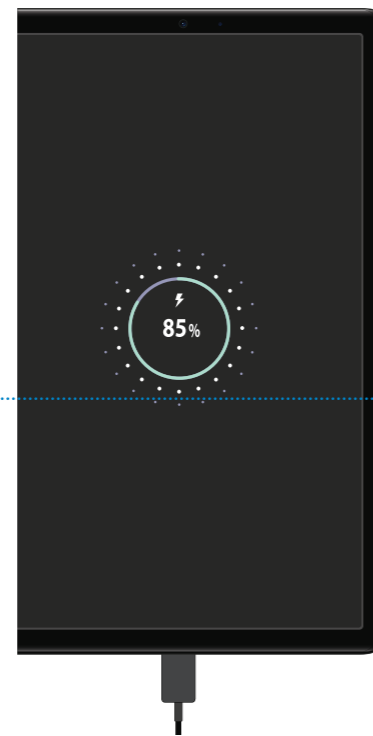 

Install an optional microSD card

1. Use the tray removal tool to open the microSD™ card tray.
2. Insert the microSD card (sold separately) into the tray with the gold contacts facing down, as shown.

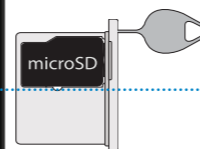

Charge the battery

Before turning on your device charge it fully with the provided charger.

 
Note: Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

Bixby

Set reminders, see upcoming appointments, photos, tomorrow's weather and more.



To launch Bixby, from the home screen swipe right and follow the prompts to set up.

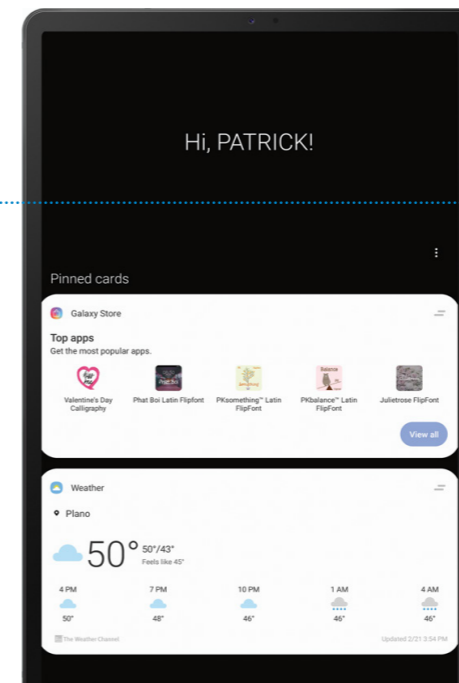Visit samsung.com/us/support/owners/app/Bixby for more information.



Learn more

The Help feature will give you access to the user manual and information on how to use your device.

To open the Help feature, from the Home screen, swipe up and tap Settings  > Help .



 
Playstore




Contacts



Galaxy Store



Personalized device support

 

Connect and control smart devices



Accessibility settings

