

SONY[®]

A-E99-100-11 (1)

HD Color Video Camera

Command List

Version 1.00

BRC-H900

Table of Contents

VISCA RS-232C/RS-422 Commands	3
Overview of VISCA	3
VISCA Communication Specifications	4
VISCA Device Setting Command	6
VISCA Command/ACK Protocol	7
VISCA Camera-Issued Messages	8
BRC-H900 Commands	9
BRC-H900 Command List (1/5)	9
BRC-H900 Command List (2/5)	10
BRC-H900 Command List (3/5)	11
BRC-H900 Command List (4/5)	12
BRC-H900 Command List (5/5)	13
BRC-H900 Inquiry Command List (1/3)	14
BRC-H900 Inquiry Command List (2/3)	15
BRC-H900 Inquiry Command List (3/3)	16
BRC-H900 Block Inquiry Command List	17
VISCA Command Setting Values	25
Pan/Tilt Status Code List	27
Memory Function (Inquiry Commands)	28
Revision History	29

VISCA¹⁾ RS-232C/RS-422 Commands

Use of RS-232C/RS-422 control software based upon this command list may cause malfunction or damage to hardware and software. Sony Corporation is not liable for any such damage.

Overview of VISCA

In VISCA, the side outputting commands, for example, a computer, is called the controller, while the side receiving the commands, such as a BRC-H900, is called the peripheral device. The BRC-H900 serves as a peripheral device in VISCA. In VISCA, up to seven peripheral devices like the BRC-H900 can be connected to one controller using communication conforming to the RS-232C/RS-422 standard. The parameters of RS-232C/RS-422 are as follows.

- Communication speed: 9600 bps/38400 bps
- Data bits : 8
- Start bit : 1
- Stop bit : 1
- Non parity

Flow control using XON/XOFF and RTS/CTS, etc., is not supported.

Peripheral devices are connected in a daisy chain. As shown in Fig. 1, the actual internal connection is a one-direction ring, so that messages return to the controller via the peripheral devices. The devices on the network are assigned addresses.

The address of the controller is fixed at 0.

The addresses of peripheral devices are as follows.

When the camera address selector is set to 0 (automatic setting mode)

The peripheral devices are assigned to the addresses, 1, 2, 3... in the connected order, starting from the one connected nearest to the controller. These addresses are set when the controller sends address commands during initialization of the network.

When the camera address selector is set to 1 through 7 (manual setting mode)

The addresses of the peripheral devices will be set to the pre-selected numbers. Within a single system, the same number can be used only once. If an address selector number other than 0 is used, set the camera address selectors on the connected BRC-H900 cameras to different numbers.


Note

In the same network, all the camera address selectors should be set to "0" (automatic setting) or all the selectors should be manually set to "1" to "7". Do not mix the automatic and manual settings.

Each VISCA equipment has VISCA IN and VISCA OUT connectors.

Set the DTR input (the S output of the controller) of VISCA IN to H when controlling VISCA equipment from the controller.

Fig. 1 VISCA network configuration

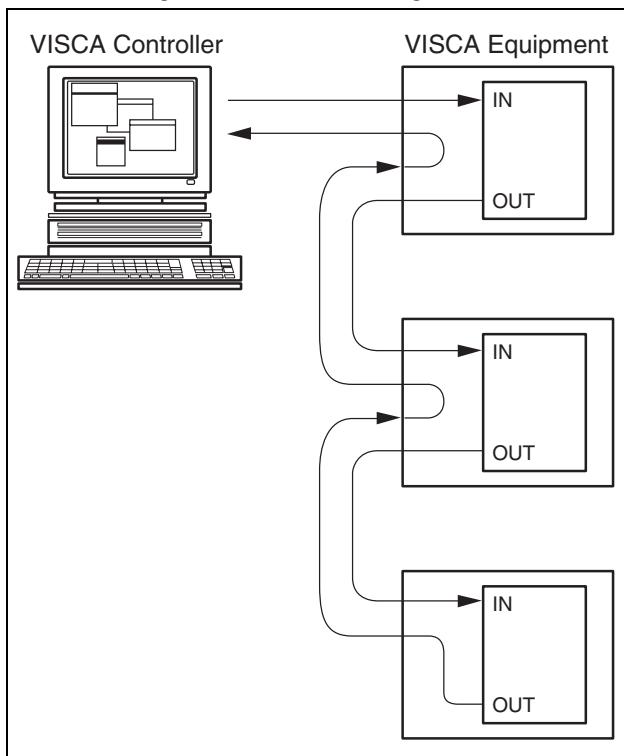

1) VISCA is a protocol developed by Sony for controlling a consumer's camcorder. "VISCA" is a trademark of Sony Corporation.

VISCA Communication Specifications

VISCA packet structure

The basic unit of VISCA communication is called a packet (Fig. 2). The first byte of the packet is called the header and comprises the sender's and receiver's addresses. For example, the header of the packet sent to the BRC-H900 assigned address 1 from the controller (address 0) is 81H in hexadecimal. The packet sent to the

BRC-H900 assigned address 2 is 82H. In the command list, as the header is 8X, input the address of the BRC-H900 to X. The header of the reply packet from the BRC-H900 assigned address 1 is 90H. The packet from the BRC-H900 assigned address 2 is A0H.

Some of the setting commands for BRC-H900 can be sent to all devices at one time (broadcast). In the case of broadcast, the header should be 88H in hexadecimal. When the terminator is FFH, it signifies the end of the packet.

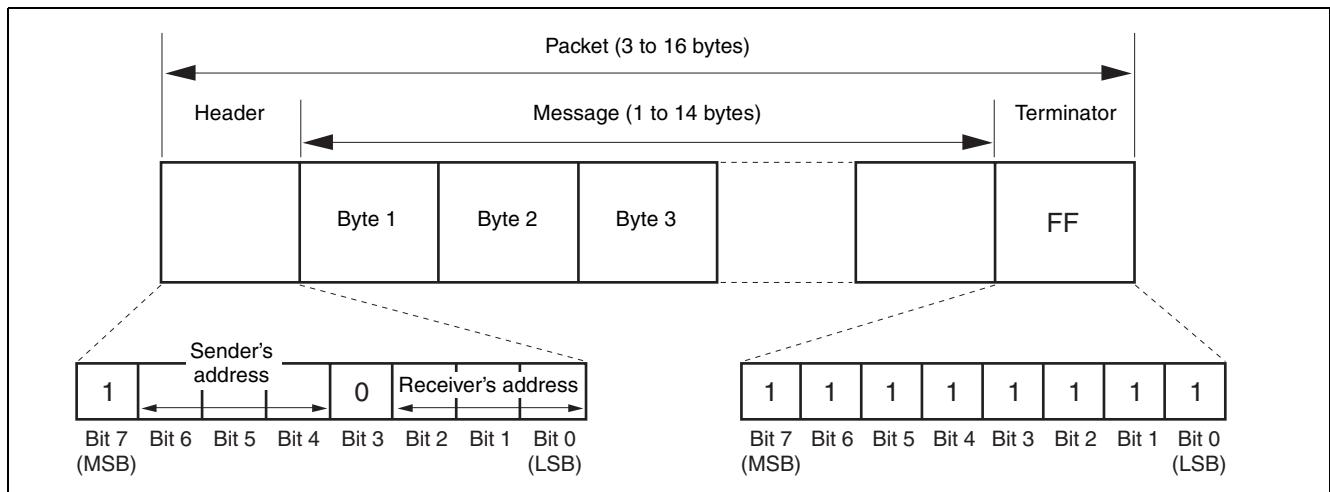


Fig. 2 Packet structure

Note

Fig. 2 shows the packet structure, while Fig. 3 shows the actual waveform. Data flow will take place with the LSB first.

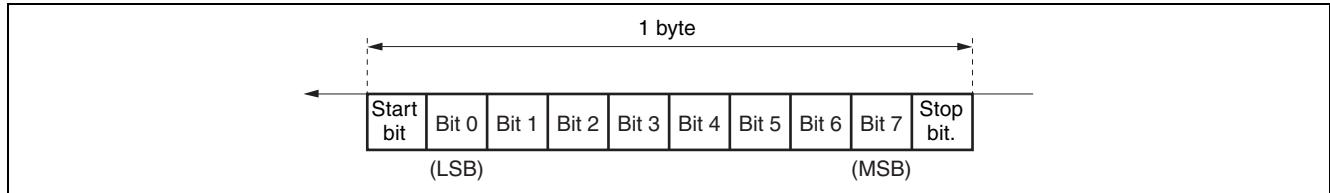



Fig. 3 Actual waveform for 1 byte.

Timing Chart

As VISCA command processing can only be carried out a maximum of one time in a Vertical (V*) cycle, it takes maximum 4V-cycle time for an ACK/Completion to be returned.

If the Command and ACK/Completion communication time is shorter than 1V-cycle time, a command can be received at every 1V cycle. From this point, if two or more commands are to be sent successively, wait for a reply command (an ACK or error message for a general command, and an inquiry packet for an inquiry command) of the previous command to be received before sending the next command.

*1V=16.7 msec (NTSC, 1080/59.94i, 720/59.94p), 20 msec (PAL, 1080/50i, 720/50p)

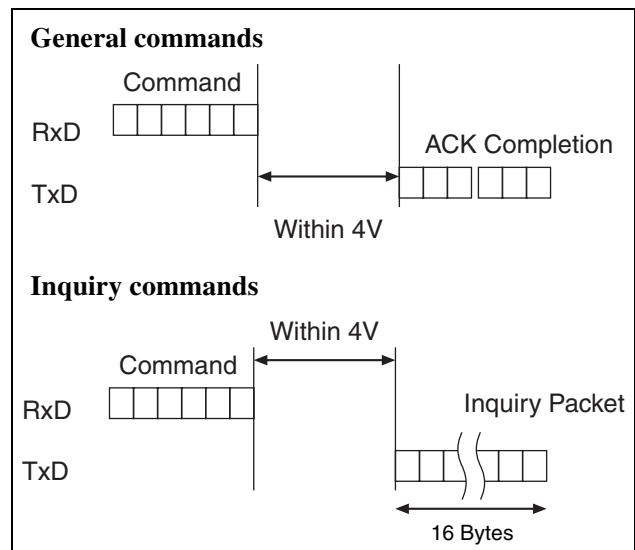

Command and inquiry

● Command

Sends operational commands to the BRC-H900.

● Inquiry

Used for inquiring about the current state of the BRC-H900.

	Command Packet	Note
Inquiry	8X QQ RR ... FF	QQ ¹⁾ = Command/Inquiry, RR ²⁾ = category code
1)	QQ = 01 (Command), 09 (Inquiry)	
2)	RR = 00 (Interface), 04 (camera 1), 06 (Pan/Tilt)	

X = 1 to 7: BRC-H900 address

For actual values to be sent, see Command Lists or Inquiry Command Lists.

Responses for commands and inquiries

● ACK message

Returned by the BRC-H900 when it receives a command. No ACK message is returned for an inquiry.

● Completion message

Returned by the BRC-H900 when execution of commands or inquiries is completed. In the case of inquiry commands, reply data for the inquiry is contained after the 3rd byte of the packet. If the ACK message is omitted, the socket number will contain 0.

	Reply Packet	Note
Ack	X0 4Y FF	Y = socket number
Completion (Commands)	X0 5Y FF	Y = socket number
Completion (Inquiries)	X0 5Y ... FF	Y = socket number

X = 9 to F: BRC-H900 address + 8

● Error message

When a command or inquiry command could not be executed or failed, an error message is returned instead of a completion message.

Error Packet	Description
X0 6Y 01 FF	Message length error
X0 6Y 02 FF	Syntax Error
X0 6Y 03 FF	Command buffer full
X0 6Y 04 FF	Command canceled
X0 6Y 05 FF	No socket (to be canceled)
X0 6Y 41 FF	Command not executable

X = 9 to F: BRC-H900 address + 8, Y = socket number

Socket number

When command messages are sent to the BRC-H900, it is normal to send the next command message after receiving the completion message or error message. However, to deal with advanced uses, the BRC-H900 has two buffers (memories) for commands, so that up to two commands including the commands currently being executed can be received. (There is a wait longer than a 1V cycle between commands.) However, depending on the command, it may be necessary to wait until the first command is completed. When the BRC-H900 receives commands, it notifies the sender which command buffer was used, using the socket number of the ACK message. As the completion message or error message also has a socket number, it indicates which command has ended. Even when two command buffers are being used, a BRC-H900 management command and some inquiry messages can be executed.

The ACK message is not returned for these commands and inquiries, and only the completion message of socket number 0 is returned.

Command execution cancel

To cancel a command which has already been sent, send a Cancel command as the next command. To cancel one of two commands which have been sent, use the cancel message.

	Cancel Packet	Note
Cancel	8X 2Y FF	Y = socket number

X = 1 to 7: BRC-H900 address, Y = socket number

Error message “Command canceled” will be returned for this command, but this is not a fault. It indicates that the command has been canceled.

Note

To cancel a command when VISCA PAN-TILT Drive (page 12) is being executed, wait at least 200 msec after executing. Then send a cancel command to ensure that PAN-TILT Drive stops effectively.

To execute a PAN-TILT Drive command again, wait at least 200 msec after the message “Command canceled” has appeared.

VISCA Device Setting Command

Before starting control of the BRC-H900, be sure to send the Address command and the IF_Clear command using the broadcast function.

For VISCA network administration

• Address

Sets an address of a peripheral device. Use when initializing the network, and receiving the following network change message.

• Network Change

Sent from the peripheral device to the controller when a device is removed from or added to the network. The address must be re-set when this message is received.

	Packet	Note
Address	88 30 01 FF	Always broadcasted.
Network Change	X0 38 FF	

X = 9 to F: BRC-H900 address + 8

VISCA interface command

• IF_Clear

Clears the command buffers in the BRC-H900. When cleared, the operation currently being executed is not guaranteed.

	Command Packet	Reply Packet	Note
IF_Clear	8X 01 00 01 FF	X0 50 FF	
IF_Clear (broadcast)	88 01 00 01 FF	88 01 00 01 FF	

X = 1 to 7: BRC-H900 address (For inquiry packet)
X = 9 to F: BRC-H900 address +8 (For reply packet)

VISCA interface and inquiry

• CAM_VersionInq

Returns information on the VISCA interface.

Inquiry	Inquiry Packet	Reply Packet	Description
CAM_VersionInq	8X 09 00 02 FF	Y0 50 GG GG HH HH JJ JJ KK FF	GGGG = Vender ID (0001: Sony) HHHH = Model ID 0501: BRC-H700 0502: BRU-H700 0505: BRC-Z700 0507: BRC-Z330 050B: BRC-H900 JJJJ = ROM revision KK = Maximum socket # (02)

X = 1 to 7: BRC-H900 address (For inquiry packet)
X = 9 to F: BRC-H900 address +8 (For reply packet)

VISCA Command/ACK Protocol

Command	Command Message	Reply Message	Comments
General Command	81 01 04 38 02 FF (Example)	90 41 FF (ACK)+90 51 FF (Completion) 90 42 FF 90 52 FF	Returns ACK when a command has been accepted, or Completion when a command has been executed.
	81 01 04 38 FF (Example)	90 60 02 FF (Syntax Error)	Accepted a command which is not supported or a command lacking parameters.
	81 01 04 38 02 FF (Example)	90 60 03 FF (Command Buffer Full)	Could not accept the command as there are two commands currently being executed.
	81 01 04 08 02 FF (Example)	90 61 41 FF (Command Not Executable) 90 62 41 FF	Could not execute the command in the current mode.
Inquiry Command	81 09 04 38 FF (Example)	90 50 02 FF (Completion)	Does not return ACK.
	81 09 05 38 FF (Example)	90 60 02 FF (Syntax Error)	Accepted an incompatible command.
Address Set	88 30 01 FF	88 30 02 FF	The device address number plus 1 is returned.*
IF_Clear (Broadcast)	88 01 00 01 FF	88 01 00 01 FF	The same command is returned.
IF_Clear (For x)	8x 01 00 01 FF	z0 50 FF (Completion)	ACK is not returned for this command.
Command Cancel	8x 2y FF	z0 6y 04 FF (Command Canceled)	Returned when the command of the socket specified is canceled. Completion for the command canceled is not returned.
		z0 6y 05 FF (No Socket)	Returned when the command of the specified socket has already been completed or when the socket number specified is wrong.

* When the camera address selector is set to an address other than 0, the value x in 88 30 0x FF will be variable.

Do not transmit the command (except Address Set, IF_Clear, Command Cancel, POWER (page 12)) when any menu is displayed on the screen. If displayed, clear the menu first using MENU Display OFF (page 13) Command, and then proceed.

VISCA Camera-Issued Messages

ACK/Completion Messages

Command	Command Message	Comments
ACK	z0 4y FF (y: Socket No.)	Returned when the command is accepted.
Completion	z0 5y FF (y: Socket No.)	Returned when the command has been executed.

z = Device address + 8

Error Messages

Command	Command Message	Comments
Syntax Error	z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
Command Buffer Full	z0 60 03 FF	Could not accept a command that is received while two commands are currently being executed (two sockets have been used).
Command Canceled	z0 6y 04 FF (y: Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.
No Socket	z0 6y 05 FF (y: Socket No.)	Returned when no command is executed in a socket specified by the cancel command, or when an invalid socket number is specified.
Command Not Executable	z0 6y 41 FF (y: Socket No.)	Returned when a command cannot be executed due to current conditions. For example, when a command for controlling the manual focus is received during the auto focus mode.

Network Change Message

Command	Command Message	Comments
Network Change	z0 38 FF	Issued when power is supplied to the camera.

BRC-H900 Commands

BRC-H900 Command List (1/5)

Command Set	Command	Command Packet	Comments
EXPOSURE	MODE	FULL AUTO	
		MANUAL	
		SHUTTER Pri	
		IRIS Pri	
		BACK LIGHT	Available only when MODE is set to FULL AUTO.
		SPOT LIGHT	
	IRIS	Reset	When EXPOSURE MODE is set to MANUAL or IRIS Pri, the setting is F5.6.
		Up (OPEN)	
		Down (CLOSE)	
		Direct	pq: See the VISCA Command Setting Values (IRIS) section
	SHUTTER	Reset	When EXPOSURE MODE is set to MANUAL or SHUTTER Pri, the setting is 1/60 (for 1080/59.94i, 720/59.94p). When EXPOSURE MODE is set to MANUAL or SHUTTER Pri, the setting is 1/50 (for 1080/50i, 720/50p).
		Up (HIGH)	
		Down (LOW)	
		Direct	pq: See the VISCA Command Setting Values (SHUTTER) section
	GAIN	Reset	When EXPOSURE MODE is set to MANUAL, the setting is 0dB.
		Up	
		Down	
		Direct	pq: See the VISCA Command Setting Values (GAIN) section
	AE SPEED	Direct	p 1: LOW 2: MID 3: HIGH
	AE LEVEL	Reset	
		Up	
		Down	
		Direct	p 5: -1.0 6: -0.5 7: 0 8: +0.5 9: +1.0
	AGC	ON/OFF	p 2: ON 3: OFF
	AGC LIMIT	Direct	p 0: 3dB 1: 6dB 2: 9dB 3: 12dB 4: 18dB
	AGC POINT	Direct	p 0: F5.6 1: F4 2: F2.8
	AUTO SHUTTER	Direct	p 2: ON 3: OFF
	SHUTTER LIMIT	Direct	p 0: 1/100 1: 1/125 2: 1/250 3: 1/500
	SHUTTER POINT	Direct	p 0: F5.6 1: F8 2: F11 3: F16

BRC-H900 Command List (2/5)

Command Set	Command	Command Packet	Comments
COLOR	WHITE BALANCE	- 8x 01 04 35 0p FF	p 0: AUTO 1: INDOOR 2: OUTDOOR 3: ONE PUSH 5: MANUAL
	One Push WB Trigger	- 8x 01 04 10 05 FF	
	R.GAIN	Reset 8x 01 04 03 00 FF	
		Up 8x 01 04 03 02 FF	
		Down 8x 01 04 03 03 FF	
		Direct 8x 01 04 43 00 00 0p 0q FF	pq: 00 (-128) - 80 (0) - FF (+127)
	B.GAIN	Reset 8x 01 04 04 00 FF	
		Up 8x 01 04 04 02 FF	
		Down 8x 01 04 04 03 FF	
		Direct 8x 01 04 44 00 00 0p 0q FF	pq: 00 (-128) - 80 (0) - FF (+127)
	SPEED	- 8x 01 04 56 0p FF	p: (Slow) 1, 2, 3, 4, 5 (Fast)
	OFFSET	Reset 8x 01 7E 01 2E 00 00 FF	
		Up 8x 01 7E 01 2E 00 02 FF	
		Down 8x 01 7E 01 2E 00 03 FF	
		Direct 8x 01 7E 01 2E 01 0p FF	p: 0 (-7) - 7 (0) - E (+7)
	MATRIX	- 8x 01 7E 01 3D 0p FF	p: 2 ON (STD) 3: OFF 4: ON (HIGH SAT) 5: ON (FL LIGHT)
	LEVEL	Reset 8x 01 04 09 00 FF	
		Up 8x 01 04 09 02 FF	
		Down 8x 01 04 09 03 FF	
		Direct 8x 01 04 49 00 00 00 0p FF	p: 0 (-7) - 7 (0) - E (+7)
	PHASE	Reset 8x 01 04 0F 00 FF	
		Up 8x 01 04 0F 02 FF	
		Down 8x 01 04 0F 03 FF	
		Direct 8x 01 04 4F 00 00 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	R-G	Direct 8x 01 7E 01 7A 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	R-B	Direct 8x 01 7E 01 7B 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	G-R	Direct 8x 01 7E 01 7C 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	G-B	Direct 8x 01 7E 01 7D 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	B-R	Direct 8x 01 7E 01 7E 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	B-G	Direct 8x 01 7E 01 7F 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
DETAIL	DETAIL	ON/OFF 8x 01 7E 01 60 0p FF	p 2: ON 3: OFF
	LEVEL	Reset 8x 01 04 02 00 FF	
		Up 8x 01 04 02 02 FF	
		Down 8x 01 04 02 03 FF	
		Direct 8x 01 04 42 00 00 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	FREQUENCY	Direct 8x 01 7E 01 61 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	CRISPENING	Direct 8x 01 7E 01 62 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	H/V RATIO	Direct 8x 01 7E 01 63 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	WHITE LIMITTER	Direct 8x 01 7E 01 64 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	BLACK LIMITTER	Direct 8x 01 7E 01 65 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	V DTL CREATION	- 8x 01 7E 01 66 0p FF	p: 0 NAM 1: G 2: G+R 3: Y
	KNEE APT LEVEL	Direct 8x 01 7E 01 67 0p 0q FF	pq: 00 (-99) - 63 (00) - C6 (+99)

* Number in () is MENU display values.

BRC-H900 Command List (3/5)

Command Set	Command	Command Packet	Comments
COLOR DETAIL	COLOR DETAIL	-	8x 01 7E 01 68 0p FF p 2: ON 3: OFF
	LEVEL	Direct	8x 01 7E 01 69 0p 0q FF pq: 00 (-99) - 63 (00) - C6 (+99)
	AREA INDICATION	-	8x 01 7E 01 6A 0p FF p 2: ON 3: OFF
	SATURATION	Direct	8x 01 7E 01 6B 0p 0q FF pq: 00 (-99) - 63 (00) - C6 (+99)
	PHASE	Direct	8x 01 7E 01 4D 00 0p 0q 0r FF pqr: 000 - 167 (h)
	WIDTH	Direct	8x 01 7E 01 6C 0p 0q FF pq: 00 (0) - 28 (40) - 5A (90)
KNEE	MODE	-	8x 01 7E 01 6D 0p FF p 2: ON 3: OFF
	AUTO KNEE	-	8x 01 7E 01 54 0p FF p 0: Auto 4: Off
	POINT	Direct	8x 01 7E 01 6E 0p 0q FF pq: 32 (50) - 5A (90) - 6D (109)
	SLOPE	Direct	8x 01 7E 01 6F 0p 0q FF pq: 00 (-99) - 63 (00) - C6 (+99)
	KNEE SAT LEVEL	Direct	8x 01 7E 01 70 0p 0q FF pq: 00 (00) - 32 (50) - 63 (+99)
GAMMA	MODE	-	8x 01 04 5B 0p FF p: 0 STD3 1: CINEMA1 2: STD1 3: STD2 4: STD4 5: CINEMA2 6: CINEMA3 7: CINEMA4
	LEVEL	Direct	8x 01 7E 01 71 0p 0q FF pq: 00 (-99) - 63 (00) - C6 (+99)
	BLACK	Direct	8x 01 7E 01 73 0p 0q FF pq: 00 (-99) - 63 (00) - C6 (+99)
	BLACK GAMMA	Direct	8x 01 7E 01 72 0p 0q FF pq: 00 (-99) - 63 (00) - C6 (+99)
FLICKER CANCEL	MODE	-	8x 01 04 32 0p FF p 2: ON 3: OFF
	FREQUENCY	-	8x 01 7E 01 74 0p FF 0: 50Hz 1: 60Hz
FOCUS	MODE	ON/OFF	8x 01 04 38 0p FF p 2: Auto 3: Manual
		Except ON/OFF	8x 01 04 38 10 FF
	One Push AF Trigger	-	8x 01 04 18 01 FF
	FOCUS ∞	-	8x 01 04 18 02 FF
PAN TILT	PAN TILT Limit	Limit Set	8x 01 06 07 00 0W 0Yp 0Yq 0Yr 0Ys 0Yt 0Zp 0Zq 0Zr 0Zs FF W: 1=UpRight 0=DownLeft Yp Yq Yr Ys Yt Zp Zq Zr Zs: See Pan/Tilt Position (for reference) in the VISCA Command Setting Values section
		Limit Clear	8x 01 06 07 01 0W 07 0F 0F 0F 0F 0F 0F 0F 0F FF
	RAMP CURVE	-	8x 01 06 31 0p FF p: 2 MODE1 3 MODE2
SYSTEM	IR RECEIVE	-	8x 01 06 08 pq FF pq: 02 ON 03 OFF 10 ON/OFF Toggle movement
	IMG FLIP	-	8x 01 04 66 0p FF p: 2 ON 3: OFF
	RAN REVERSE	-	8x 01 7E 01 06 00 0p FF p: 1 ON 0: OFF
	TILT REVERSE	-	8x 01 7E 01 09 00 0p FF p: 1 ON 0: OFF
	DISPLAY INFO	-	8x 01 7E 01 18 0p FF p: 2 ON 3: OFF
	SYNC MASTER	-	8x 01 7E 01 2C 0p FF p: 0 HD 3: SD
	HPHASE	Up	8x 01 7E 01 3E 00 02 FF
		Down	8x 01 7E 01 3E 00 03 FF
		Direct	8x 01 7E 01 5B 00 0p 0q 0r FF pqr: 000 - 3BF
	STEADY SHOT	-	8x 01 04 34 pq FF p: 2 ON 3: OFF
	COLOR BAR	-	8x 01 04 7D 0p FF p: 2 ON 3: OFF
	TALLY MODE	-	8x 01 7E 01 0A 01 0q FF q: 0 OFF 4: ON (LOW) 5: ON (HIGH)

BRC-H900 Command List (4/5)

Command Set	Command	Command Packet	Comments
VIDEO OUT	D-SUB 15 FORMAT	- 8x 01 7E 01 03 00 0p FF	p: 0 RGB 1: YPbPr
	ADD SYNC(RGB)	- 8x 01 7E 01 07 00 0p FF	p: 0 RGB SYNC OFF 2: RGB SYNCON
	SYNC TYPE	- 8x 01 7E 01 1A 00 0p FF	p: 0 3-state SYNC 1: VD
	IMG SIZE	- 8x 01 7E 01 3C 0p FF	p: 0 4: 3 [SQUEEZE] 1 16: 9 [LETTER] 2 4: 3 [CROP]
	SETUP	- 8x 01 7E 01 3F 0p FF	p: 0 ON (7.5IRE) 1: OFF (0IRE)
POWER	ON/OFF	- 8x 01 04 00 0p FF	p: 2 ON 3: OFF
PRESET Drive Speed	-	- 8x 01 7E 01 0B 0p qq FF	p: Preset number of speed setting -1 (0-F) qq: p position direction speed 01-18 (h)
TALLY	ON/OFF	- 8x 01 7E 01 0A 00 0p FF	
PAN-TILT Drive	Up	- 8x 01 06 01 VV WW 03 01 FF	VV: PAN speed 00-18 (h) WW: TILT speed 00-18 (h)
	Down	- 8x 01 06 01 VV WW 03 02 FF	
	Left	- 8x 01 06 01 VV WW 01 03 FF	
	Right	- 8x 01 06 01 VV WW 02 03 FF	
	UpLeft	- 8x 01 06 01 VV WW 01 01 FF	
	UpRight	- 8x 01 06 01 VV WW 02 01 FF	
	DownLeft	- 8x 01 06 01 VV WW 01 02 FF	
	DownRight	- 8x 01 06 01 VV WW 02 02 FF	
	Stop	- 8x 01 06 01 VV WW 03 03 FF	
	ABS (Absolute Position)	- 8x 01 06 02 VV 00 0Yp 0Yq 0Yr 0Ys 0Yt 0Zp 0Zq 0Zr 0Zs FF	VV: Speed 00-18 (h)
	REL (Relative Position)	- 8x 01 06 03 VV 00 0Yp 0Yq 0Yr 0Ys 0Yt 0Zp 0Zq 0Zr 0Zs FF	Yp Yq Yr Ys Yt Zp Zq Zr Zs: See Pan/Tilt Position (for reference) in the VISCA Command Setting Values section
	Home	- 8x 01 06 04 FF	
	Reset	- 8x 01 06 05 FF	
CAMERA ID Setting	-	- 8x 01 04 22 0p 0q 0r 0s FF	pqr: 0000 - FFFF
TITLE Display (Preset Position)	Title Set1	- 8x 01 7E 01 14 uu vv 0w 0! 00 00 00 00 00 FF	uu: Character start position display, H position 00-1A vv: Character start position display, V position 00-0D w: Blinking character display 1 ON, 0 OFF !: Preset number of character display -1 0-F
	Title Set2	- 8x 01 7E 01 15 0! aa bb cc dd ee ff gg hh ii jj FF	!: Preset number of character display -1 0-F aa bb cc dd ee ff gg hh ii jj: First 10 characters setting (ASCII CODE 0x20-0x7E)
	Title Set3	- 8x 01 7E 01 16 0! kk ll mm nn oo pp qq rr ss tt FF	!: Preset number of character display -1 0-F kk ll mm nn oo pp qq rr ss tt: Last 10 characters setting (ASCII CODE 0x20-0x7E)
	Title Clear	- 8x 01 7E 01 17 0! 00 FF	!: Preset number of character display -1 0-F
	Title On	- 8x 01 7E 01 17 02 FF	
	Title Off	- 8x 01 7E 01 17 03 FF	

BRC-H900 Command List (5/5)

Command Set	Command	Command Packet	Comments
TITLE Display (Standard)	Title Set1	- 8x 01 7E 01 10 uu vv 0w 00 00 00 00 00 00 00 FF	uu: Character start position display, H position 00-1A vv: Character start position display, V position 00-0D w: Blinking character display 1 ON, 0 OFF
	Title Set2	- 8x 01 7E 01 11 aa bb cc dd ee ff gg hh ii jj FF	aa bb cc dd ee ff gg hh ii jj: First 10 characters setting (ASCII CODE 0x20-0x7E)
	Title Set3	- 8x 01 7E 01 12 kk ll mm nn oo pp qq rr ss tt FF	kk ll mm nn oo pp qq rr ss tt: Last 10 characters setting (ASCII CODE 0x20-0x7E)
	Title Clear	- 8x 01 7E 01 13 00 FF	
	Title On	- 8x 01 7E 01 13 02 FF	
	Title Off	- 8x 01 7E 01 13 03 FF	
MENU Display OFF	-	- 8x 01 06 06 03 FF	
PRESET	Set	- 8x 01 04 3F 00 0p FF	
	Reset	- 8x 01 04 3F 01 0p FF	
	Recall	- 8x 01 04 3F 02 0p FF	p: Preset number -1 0-F
Zoom	Stop	- 8x 01 04 07 00 FF	
	Tele (Standard Speed)	- 8x 01 04 07 02 FF	
	Wide (Standard Speed)	- 8x 01 04 07 03 FF	
	Tele (Variable Speed)	- 8x 01 04 07 2p FF	p: 0 (Slow) to 7 (Fast)
	Wide (Variable Speed)	- 8x 01 04 07 3p FF	
	Direct	- 8x 01 04 47 0p 0q 0r 0s FF	pqrs: See the VISCA Command Setting Values (ZOOM) section
FOCUS	Stop	- 8x 01 04 08 00 FF	
	Far (Standard Speed)	- 8x 01 04 08 02 FF	
	Near (Standard Speed)	- 8x 01 04 08 03 FF	
	Far (Variable Speed)	- 8x 01 04 08 2p FF	p: 0 (Slow) to 7 (Fast)
	Near (Variable Speed)	- 8x 01 04 08 3p FF	
	Direct	- 8x 01 04 48 0p 0q 0r 0s FF	pqrs: See the VISCA Command Setting Values (FOCUS) section

BRBK-SA1 Command

D-SUB 9Pin OUT1	-	8x 01 7E 01 24 0p 0q FF	p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 RGB 1 YCbCr
D-SUB 9Pin OUT2	-	8x 01 7E 01 25 0p 0q FF	p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 Y/C 1 VBS
RGB SYNC	-	8x 01 7E 01 26 0p 0q FF	p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 2 SYNC OFF 3 SYNC ON RGB
IMG SIZE	-	8x 01 7E 01 27 0p 0q FF	p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 4: 3 [SQUEEZE] 1 16: 9 [LETTER] 2 4: 3 [CROP]
SETUP	-	8x 01 7E 01 3B 0p 0q FF	p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 ON (7.5IRE) 1 OFF (0IRE)

BRBK-HSD2 Command

IMG SIZE	-	8x 01 7E 01 43 0p 0q FF	p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 4: 3 [SQUEEZE] 1 16: 9 [LETTER] 2 4: 3 [CROP]
----------	---	-------------------------	--

BRC-H900 Inquiry Command List (1/3)

Inquiry Command		Command Packet	Inquiry Packet	Comments	
EXPOSURE	MODE	FULL AUTO IRIS Pri SHUTTER Pri MANUAL Inquiry	8x 09 04 39 FF	y0 50 0p FF	p: 0 FULL AUTO 3 MANUAL A SHUTTER Pri B IRIS Pri
		BACK LIGHT ON/OFF Inquiry	8x 09 04 33 FF	y0 50 0p FF	p: 2 ON 3: OFF
		SPOT LIGHT ON/OFF Inquiry	8x 09 04 3A FF	y0 50 0p FF	p: 2 ON 3: OFF
	IRIS	-	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: See the VISCA Command Setting Values (IRIS) section
	SHUTTER	-	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: See the VISCA Command Setting Values (SHUTTER) section
	GAIN	-	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: See the VISCA Command Setting Values (GAIN) section
	AE SPEED	-	8x 09 04 5D FF	y0 50 0p FF	p 1: LOW 2: MID 3: HIGH
	AE LEVEL	-	8x 09 04 4E FF	y0 50 00 00 00 0p FF	p 5: -1.0 6: -0.5 7: 0 8: +0.5 9: +1.0
	AGC	ON/OFF Inquiry	8x 09 7E 01 75 FF	y0 50 0p FF	p: 2 ON 3: OFF
	AGC LIMIT	-	8x 09 04 2C 0p FF	y0 50 0p FF	p 0: 3dB 1: 6dB 2: 9dB 3: 12dB 4: 18dB
	AGC POINT	-	8x 09 7E 01 76 FF	y0 50 0p FF	p 0: F5.6 1: F4 2: F2.8
	AUTO SHUTTER	-	8x 09 7E 01 77 FF	y0 50 0p FF	p 2: ON 3: OFF
	SHUTTER LIMIT	-	8x 09 7E 01 78 FF	y0 50 0p FF	p 0: 1/100 1: 1/125 2: 1/250 3: 1/500
	SHUTTER POINT	-	8x 09 7E 01 79 FF	y0 50 0p FF	p 0: F5.6 1: F8 2: F11 3: F16
COLOR	WHITE BALANCE	MODE Inquiry	8x 09 04 35 FF	y0 50 0p FF	
	R.GAIN	-	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	
	B.GAIN	-	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	
	SPEED	-	8x 09 04 56 FF	y0 50 0p FF	
	OFFSET	-	8x 09 7E 01 2E FF	y0 50 00 00 00 0p FF	p: 0 (-7) - 7 (0) - E (+7)
	MATRIX	-	8x 09 7E 01 3D FF	y0 50 0p FF	
	LEVEL	-	8x 09 04 49 FF	y0 50 00 00 00 0p FF	p: 0 (-7) - 7 (0) - E (+7)
	PHASE	-	8x 09 04 4F FF	y0 50 00 00 00 0p FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	R-G	-	8x 09 7E 01 7A FF	y0 50 00 00 00 0p FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	R-B	-	8x 09 7E 01 7B FF	y0 50 00 00 00 0p FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	G-R	-	8x 09 7E 01 7C FF	y0 50 00 00 00 0p FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	G-B	-	8x 09 7E 01 7D FF	y0 50 00 00 00 0p FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	B-R	-	8x 09 7E 01 7E FF	y0 50 00 00 00 0p FF	pq: 00 (-99) - 63 (00) - C6 (+99)
	B-G	-	8x 09 7E 01 7F FF	y0 50 00 00 00 0p FF	pq: 00 (-99) - 63 (00) - C6 (+99)

* Number in () is MENU display values.

BRC-H900 Inquiry Command List (2/3)

Inquiry Command		Command Packet	Inquiry Packet	Comments
DETAIL	DETAIL	-	8x 09 7E 01 60 FF	y0 50 0p FF
	LEVEL	-	8x 09 04 42 FF	y0 50 00 00 0p 0q FF
	FREQUENCY	-	8x 09 7E 01 61 FF	y0 50 00 00 0p 0q FF
	CRISPENING	-	8x 09 7E 01 62 FF	y0 50 00 00 0p 0q FF
	H/V RATIO	-	8x 09 7E 01 63 FF	y0 50 00 00 0p 0q FF
	WHITE LIMITTER	-	8x 09 7E 01 64 FF	y0 50 00 00 0p 0q FF
	BLACK LIMITTER	-	8x 09 7E 01 65 FF	y0 50 00 00 0p 0q FF
	V DTL CREATION	-	8x 09 7E 01 66 FF	y0 50 0p FF
	KNEE APT LEVEL	-	8x 09 7E 01 67 FF	y0 50 00 00 0p 0q FF
COLOR DETAIL	COLOR DETAIL	-	8x 09 7E 01 68 FF	y0 50 0p FF
	LEVEL	-	8x 09 7E 01 69 FF	y0 50 00 00 0p 0q FF
	AREA INDICATION	-	8x 09 7E 01 6A FF	y0 50 0p FF
	SATURATION	-	8x 09 7E 01 6B FF	y0 50 00 00 0p 0q FF
	PHASE	-	8x 09 7E 01 4D FF	y0 50 00 00 0p 0q FF
	WIDTH	-	8x 09 7E 01 6C FF	y0 50 00 00 0p 0q FF
KNEE	MODE	-	8x 09 7E 01 6D FF	y0 50 0p FF
	AUTO KNEE	-	8x 09 7E 01 54 FF	y0 50 0p FF
	POINT	-	8x 09 7E 01 6E FF	y0 50 00 00 0p 0q FF
	SLOPE	-	8x 09 7E 01 6F FF	y0 50 00 00 0p 0q FF
	KNEE SAT LEVEL	-	8x 09 7E 01 70 FF	y0 50 00 00 0p 0q FF
GAMMA	MODE	-	8x 09 04 5B FF	y0 50 0p FF
	LEVEL	-	8x 09 7E 01 71 FF	y0 50 00 00 0p 0q FF
	BLACK	-	8x 09 7E 01 73 FF	y0 50 00 00 0p 0q FF
	BLACK GAMMA	-	8x 09 7E 01 72 FF	y0 50 00 00 0p 0q FF
FLICKER CANCEL	MODE	-	8x 09 04 32 FF	y0 50 0p FF
	FREQUENCY	-	8x 09 7E 01 74 FF	y0 50 0p FF
FOCUS	MODE	-	8x 09 04 38 FF	y0 50 0p FF
PAN TILT	RAMP CURVE	-	8x 09 06 31 FF	y0 50 0p FF
SYSTEM	IR RECEIVE	-	8x 09 06 08 FF	y0 50 0p FF
	IMG FLIP	-	8x 09 04 66 FF	y0 50 0p FF
	RAN REVERSE	-	8x 09 7E 01 06 FF	y0 50 0p FF
	TILT REVERSE	-	8x 09 7E 01 09 FF	y0 50 0p FF
	DISPLAY INFO	-	8x 09 7E 01 18 FF	y0 50 0p FF
	SYNC MASTER	-	8x 09 7E 01 2C FF	y0 50 0p FF
	HPHASE	-	8x 09 7E 01 3E FF	y0 50 00 0p 0q 0r FF
	STEADY SHOT	-	8x 09 04 34 FF	y0 50 0p FF
	COLOR BAR	-	8x 09 04 7D FF	y0 50 0p FF

BRC-H900 Inquiry Command List (3/3)

Inquiry Command		Command Packet	Inquiry Packet	Comments
VIDEO OUT	D-SUB 15 FORMAT	-	8x 09 7E 01 03 FF	y0 50 0p FF p: 0 RGB 1: YPbPr
	ADD SYNC(RGB)	-	8x 09 7E 01 07 FF	y0 50 0p FF p: 0 RGB SYNC OFF 2: RGB SYNCON
	SYNC TYPE	-	8x 09 7E 01 1A FF	y0 50 0p FF p: 0 3-state SYNC 1: VD
	IMG SIZE	-	8x 09 7E 01 3C FF	y0 50 0p FF p: 0 4: 3 [SQUEEZE] 1 16: 9 [LETTER] 2 4: 3 [CROP]
	SETUP	-	8x 09 7E 01 3F FF	y0 50 0p FF p: 0 ON (7.5IRE) 1: OFF (0IRE)
BRBK-SA1	D-SUB 9Pin OUT1	-	8x 09 7E 01 24 0p FF	y0 50 0q FF p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 RGB 1 YCbCr
	D-SUB 9Pin OUT2	-	8x 09 7E 01 25 0p FF	y0 50 0q FF p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 Y/C 1 VBS
	RGB SYNC	-	8x 09 7E 01 26 0p FF	y0 50 0q FF p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 2 SYNC OFF 3 SYNC ON RGB
	IMG SIZE	-	8x 09 7E 01 27 0p FF	y0 50 0q FF p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 4: 3 [SQUEEZE] 1 16: 9 [LETTER] 2 4: 3 [CROP]
	SETUP	-	8x 09 7E 01 3B 0p FF	y0 50 0q FF p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 ON (7.5IRE) 1 OFF (0IRE)
BRBK-HSD2	IMG SIZE	-	8x 09 7E 01 43 0p FF	y0 50 0q FF p: 0 Main Unit Card Slot 1 BRU-SF10 Card Slot 1 2 BRU-SF10 Card Slot 2 q: 0 4: 3 [SQUEEZE] 1 16: 9 [LETTER] 2 4: 3 [CROP]
POWER Status	ON/OFF Inquiry	-	8x 09 7E 04 00 FF	y0 50 0p FF p: 2 ON 3: OFF
CAMERA Software Version	-	-	8x 09 00 02 FF	y0 50 00 01 mn pq rs tu vw FF mnpq: Model Code (05xx) rstu: ROM version vw: Socket Number (02)
PRESET Drive Speed	-	-	8x 09 7E 01 0B 0p FF	y0 50 qq FF p: Preset number of speed retrieving -1 (0-F) qq: p position direction speed response 01-18 (h)
TALLY	-	-	8x 09 7E 01 0A FF	y0 50 0p FF p: 2 ON 3: OFF
PAN-TILT Position	-	-	8x 09 06 12 FF	y0 50 Yp Yq Yr Ys Yt Zp Zq Zr Zs FF Yp Yq Yr Ys Yt Zp Zq Zr Zs: See Pan/Tilt Position (for reference) in the VISCA Command Setting Values section
CAMERA ID	-	-	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF pqrs: ID
TITLE (Preset Postion)	ON/OFF Inquiry	-	8x 09 7E 01 17 FF	y0 50 0p FF p: 2 ON 3: OFF
TITLE Display (Standard)	ON/OFF Inquiry	-	8x 09 7E 01 13 FF	y0 50 0p FF p: 2 ON 3: OFF
MENU Display Status	ON/OFF Inquiry	-	8x 09 06 06 FF	y0 50 0p FF p: 2 ON 3: OFF
PRESET	-	-	8x 09 04 3F FF	y0 50 0p FF Return the last preset number which has been operated (VISCA parameters [0-F])
Zoom	-	-	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF pqrs: See the VISCA Command Setting Values (ZOOM) section
FOCUS	-	-	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF pqrs: See the VISCA Command Setting Values (FOCUS) section

BRC-H900 Block Inquiry Command List

Lens control system inquiry commands.....Command Packet 8x 09 7E 7E 00 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	Source Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
2	7	Zoom Position (HH)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
3	7	Zoom Position (HL)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
4	7	Zoom Position (LH)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
5	7	Zoom Position (LL)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
6	7	Focus Position (HH)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
8	7	Focus Position (HL)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
10	7	Focus Position (LH)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
11	7	Focus Position (LL)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
12	7	Focus Mode (1: Auto 0: Manual)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
14	7	Camera Memory Recall (1: Executing 0: Stopped)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
15	7	Focus Command (1: Executing 0: Stopped)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Camera control system inquiry commands (1/2)....Command Packet 8x 09 7E 7E 01 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	Source Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
2	7	WB R Gain(H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
3	7	WB R-Gain (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
4	7	WB B-Gain (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
5	7	WB B-Gain (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
6	7	COLOR SPEED (1 - 5)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
7	7	WHITE BALANCE MODE (0: Auto 1: Indoor 2: Outdoor 3: Onepush 5: Manual)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
8	7	DETAIL SETTING (0: Off 1: On)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
9	7	EXPOSURE MODE (0: Auto 1: Manual A: Shutter Pri B: Iris Pri)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
10	7	SPOT LIGHT MODE (1: On 0: Off)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
11	7	BACK LIGHT MODE (1: On 0: Off)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
12	7	EXPOSURE MODE Manual Gain Position
	6	
	5	
	4	
	3	
	2	
	1	
	0	
13	7	IMG FLIP MODE (1: On 0: Off)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
14	7	AE LEVEL (5: 1.0 6:-0.5 7: 0 8: +0.5 9: +1.0)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
15	7	1
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Camera control system inquiry commands (2/2).....Command Packet 8x 09 7E 7E 02 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	Source Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
2	7	1080/720 mode (1: 1080 0: 720)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
3	7	COLOR OFFSET 0 (-7) - 7 (0) - E (+7)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
4	7	MATRIX (2: On (STD) 3: OFF 4: ON (HIGH SAT) 5: ON (FL LIGHT))
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
5	7	STEADY SHOT (1: On 0: Off)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
6	7	FRECKER CANCEL FREQUENCY (0: 50Hz 1: 60Hz)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
7	7	GAMMA MODE (0 - 7)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
8	7	COLOR PHASE (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
9	7	COLOR PHASE (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
10	7	AE SPEED (1: Low 2: Mid 3: High)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
11	7	AGC MODE (1: ON 0: OFF)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
12	7	AGC LIMIT (0: 3dB 1: 6dB 2: 9dB 3: 12dB 4: 18dB)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
13	7	Auto Shutter (1: ON 0: OFF)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
14	7	AGC Point (0: F5.6 1: F4 2: F2.8)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
15	7	R-G (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
15	7	R-G (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Other enlargement inquiry commands (1/5) Command Packet 8x 09 7E 7E 03 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
1	0	Source Address
	7	
	6	
	5	
	4	
	3	
	2	
	1	
2	0	R-B (H)
	7	
	6	
	5	
	4	
	3	
	2	
3	1	R-B (L)
	0	
	7	
	6	
	5	
	4	
	3	
4	2	G-R (H)
	1	
	0	
	7	
	6	
	5	
	4	
5	3	G-R (L)
	2	
	1	
	0	

Byte	Bit	Comments
6	7	0
	6	
	5	
	4	
	3	
	2	
	1	
7	0	G-B (H)
	7	
	6	
	5	
	4	
	3	
	2	
8	1	G-B (L)
	0	
	7	
	6	
	5	
	4	
	3	
9	2	B-R (H)
	1	
	0	
	7	
	6	
	5	
	4	
10	3	B-R (L)
	2	
	1	
	0	
	7	
	6	
	5	
11	4	Shutter Pri Position
	3	
	2	
	1	
	0	
	7	
	6	
12	5	0
	4	
	3	
	2	
	1	
	0	
	7	
13	6	0
	5	
	4	
	3	
	2	B-G (H)
	1	
	0	
14	7	0
	6	
	5	
	4	
	3	B-G (L)
	2	
	1	
15	0	1
	7	
	6	
	5	
	4	
	3	
	2	

Byte	Bit	Comments
12	7	0
	6	
	5	
	4	
	3	
	2	
	1	
13	0	0
	7	
	6	
	5	
	4	
	3	
	2	
14	1	0
	0	
	7	
	6	
	5	
	4	
	3	
15	2	1
	1	
	0	
	7	
	6	
	5	
	4	

Other enlargement inquiry commands (2/5) Command Packet 8x 09 7E 7E 04 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	0
	6	1
	5	0
	4	1
	3	0
	2	0
	1	0
	0	0
2	7	0
	6	0
	5	0
	4	0
	3	Current R GAIN (H)
	2	
	1	
	0	
3	7	0
	6	0
	5	0
	4	0
	3	Current R GAIN (L)
	2	
	1	
	0	
4	7	0
	6	0
	5	0
	4	0
	3	Current B GAIN (H)
	2	
	1	
	0	
5	7	0
	6	0
	5	0
	4	0
	3	Current B GAIN (L)
	2	
	1	
	0	

Byte	Bit	Comments
6	7	0
	6	0
	5	0
	4	0
	3	DETAIL LEVEL (H)
	2	
	1	
	0	
7	7	0
	6	0
	5	0
	4	0
	3	DETAIL LEVEL (L)
	2	
	1	
	0	
8	7	0
	6	0
	5	0
	4	COLOR DETAIL AREA INDICATION (1: ON 0: OFF)
	3	COLOR DETAIL LEVEL (H)
	2	
	1	
	0	
9	7	0
	6	0
	5	0
	4	0
	3	COLOR DETAIL LEVEL (L)
	2	
	1	
	0	
10	7	0
	6	0
	5	COLOR DETAIL (1: On 0: Off)
	4	Shutter Current Position
	3	
	2	
	1	
	0	
11	7	0
	6	0
	5	0
	4	Iris Current Position
	3	
	2	
	1	
	0	

Byte	Bit	Comments
12	7	0
	6	0
	5	0
	4	Gain Current Position
	3	
	2	
	1	
	0	
13	7	0
	6	0
	5	0
	4	0
	3	DETAIL FREQUENCY (H)
	2	
	1	
	0	
14	7	0
	6	0
	5	0
	4	0
	3	DETAIL FREQUENCY (L)
	2	
	1	
	0	
15	7	1
	6	1
	5	1
	4	1
	3	1
	2	1
	1	1
	0	1

Other enlargement inquiry commands (3/5) Command Packet 8x 09 7E 7E 05 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
1	0	Source Address
	7	
	6	
	5	
	4	
	3	
	2	
	1	
2	0	V DETAIL CREATION 0 - 3
	7	
	6	
	5	
	4	
	3	
	2	
	1	
3	0	DETAIL CRISPENING (H)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
4	0	DETAIL CRISPENING (L)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
5	0	DETAIL H/V RATIO (H)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
6	0	DETAIL H/V RATIO (L)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
6	7	DETAIL WHITE LIMITTER (H)
	6	
	5	
	4	
	3	
	2	
	1	
7	0	DETAIL WHITE LIMITTER (L)
	7	
	6	
	5	
	4	
	3	
	2	
8	1	DETAIL BLACK LIMITTER (H)
	0	
	7	
	6	
	5	
	4	
	3	
9	2	DETAIL BLACK LIMITTER (L)
	1	
	0	
	7	
	6	
	5	
	4	
10	3	KNEE APT LEVEL (H)
	2	
	1	
	0	
	7	
	6	
	5	
11	4	KNEE APT LEVEL (L)
	3	
	2	
	1	
	0	
	7	
	6	

Byte	Bit	Comments
12	7	COLOR DETAIL SATURATION (H)
	6	
	5	
	4	
	3	
	2	
	1	
13	0	COLOR DETAIL SATURATION (L)
	7	
	6	
	5	
	4	
	3	
	2	
14	1	0
	0	
	5	
	4	
	3	
	2	
	1	
15	0	0
	7	
	6	
	5	
	4	
	3	
	2	

Other enlargement inquiry commands (4/5) Command Packet 8x 09 7E 7E 06 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	Source Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
2	7	COLOR DETAIL PHASE (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
3	7	COLOR DETAIL PHASE (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
4	7	COLOR DETAIL WIDTH (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
5	7	COLOR DETAIL WIDTH (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
6	7	KNEE POINT (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
7	7	KNEE POINT (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
8	7	KNEE SLOPE (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
9	7	KNEE SLOPE (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
10	7	KNEE SATLEVEL (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
11	7	KNEE SATLEVEL (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
12	7	GAMMA LEVEL (H)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
13	7	GAMMA LEVEL (L)
	6	
	5	
	4	
	3	
	2	
	1	
	0	
14	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
15	7	1
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Other enlargement inquiry commands (5/5) Command Packet 8x 09 7E 7E 07 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
1	0	Source Address
	7	
	6	
	5	
	4	
	3	
	2	
	1	
2	0	BLACK LEVEL (H)
	7	
	6	
	5	
	4	
	3	
	2	
3	1	BLACK LEVEL (L)
	0	
	7	
	6	
	5	
	4	
	3	
4	2	BLACK GAMM LEVEL (H)
	1	
	0	
	7	
	6	
	5	
	4	
5	3	BLACK GAMM LEVEL (L)
	2	
	1	
	0	

Byte	Bit	Comments
6	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
7	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
8	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
9	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
10	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
11	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
12	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
13	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
14	7	0
	6	
	5	
	4	
	3	
	2	
	1	
	0	
15	7	1
	6	
	5	
	4	
	3	
	2	
	1	
	0	

VISCA Command Setting Values

IRIS		
Parameter		
p	q	F No.
1	9	F1.9 (OPEN)
1	8	F2.2
1	7	F2.4
1	6	F2.6
1	5	F2.8
1	4	F3.1
1	3	F3.4
1	2	F3.7
1	1	F4
1	0	F4.4
0	F	F4.8
0	E	F5.2
0	D	F5.6
0	C	F6.2
0	B	F6.8
0	A	F7.3
0	9	F8
0	8	F8.7
0	7	F9.6
0	6	F10
0	5	F11
0	4	F12
0	3	F13
0	2	F15
0	1	F16
0	0	CLOSE

GAIN		
Parameter		
p	q	Gain (dB)
1	9	24
1	8	23
1	7	22
1	6	21
1	5	20
1	4	19
1	3	18
1	2	17
1	1	16
1	0	15
0	F	14
0	E	13
0	D	12
0	C	11
0	B	10
0	A	9
0	9	8
0	8	7
0	7	6
0	6	5
0	5	4
0	4	3
0	3	2
0	2	1
0	1	0
0	0	-3

SHUTTER		
Parameter		
p	q	Shutter Speed (sec)
0	F	1/8000
0	E	1/4000
0	D	1/2000
0	C	1/1000
0	B	1/500
0	A	1/250
0	9	1/125
0	8	1/120
0	7	1/100
0	6	1/60*

* The setting is 1/60 when the video format is set to 1080/59.94i or 720/59.94p.

The setting is 1/50 when the video format is set to 1080/50i or 720/50p.

Pan/Tilt Position (for reference)

Pan

Angle (degrees)	Left		Right							
	Yp	Yq	Yr	Ys	Yt	Yp	Yq	Yr	Ys	Yt
0	00000		00000							
10	00938		FF6C8							
20	01270		FED90							
30	01BA8		FE458							
40	024E0		FDB20							
50	02E18		FD1E8							
60	03750		FC8B0							
70	04088		FBF78							
80	049C0		FB640							
90	052F8		FAD08							
100	05C30		FA3D0							
110	06568		F9A98							
120	06EA0		F9160							
130	077D8		F8828							
140	08110		F7EF0							
150	08A48		F75B8							
160	09380		F6C80							
169	09BDE		F6422							

Tilt

Angle (degrees)	Up		Down					
	Zp	Zq	Zr	Zs	Zp	Zq	Zr	Zs
0	0000		0000					
10	0938		F6C8					
20	1270		ED90					
30	1BA8		E458					
40	24E0		-					
50	2E18		-					
60	3750		-					
70	4088		-					
80	49C0		-					
90	52F8		-					

Focus Ratio and Focus Distance (for reference)

Focus Ratio	Focus Distance
1000	∞
2000	14.6m
3000	6.3m
4000	3.9m
5000	2.8m
6000	2.2m
7000	1.7m
8000	1.4m
9000	1.2m
A000	1.0m
B000	0.9m
C000	0.8m

Zoom Position and Zoom Ratio (for reference)

Zoom Position	Zoom Ratio
0000	$\times 1$
1140	$\times 2$
1A80	$\times 3$
2180	$\times 4$
2740	$\times 5$
2BC0	$\times 6$
2F60	$\times 7$
32A0	$\times 8$
35A0	$\times 9$
3840	$\times 10$
3AA0	$\times 11$
3CC0	$\times 12$
3EC0	$\times 13$
4000	$\times 14$

Pan/Tilt Status Code List

P	Q	R	S	
0---	----	0---	- - - 1	Panning reaches the end of the left.
0---	----	0---	- - 1 -	Panning reaches the end of the right.
0---	----	0---	- 1 --	Tilting reaches the upper limit.
0---	----	0---	1 ---	Tilting reaches the lower limit.
0---	----	0---	1 1 1 1	Pan/tilt position cannot be detected.
0---	----	-- 0 0	-----	Pan functions normally.
0---	----	-- 1 0	-----	Pan mechanism is defective.
0---	-- 0 0	0---	-----	Tilt functions normally.
0---	-- 1 0	0---	-----	Tilt mechanism is defective.
0---	0 1 --	0---	-----	Pan/Tilt operating
0---	1 0 --	0---	-----	Pan/Tilt operations complete.
0-00	----	0---	-----	Not initialized
0-01	----	0---	-----	Initializing
0-10	----	0---	-----	Initialization completes.
0-11	----	0---	-----	Initialization failed.

(- : optional)

Memory Function (Inquiry Commands)

Preset No. last operated	pp: Memory number last operated	Comments
—	00	While no Recall commands are used after the power has been tuned on
1	7F	≠00 (or =00 for Reset, Set and Recall commands)
2	01	
3	02	
4	03	
5	04	
6	05	
7	06	
8	07	
9	08	
10	09	
11	0A	
12	0B	
13	0C	
14	0D	
15	0E	
16	0F	

Revision History

Version	Item	Description
1.00		New edition