

Preface

About this Manual

- The contents of this manual and the bundled Basic Reference are subject to change without notice.
- Note that the example screens and product illustrations shown in this User's Guide may differ somewhat from the screens and configuration of the actual camera.

Copyright

This manual contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright 2015

Declaration of Conformity

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.
- The company will not be responsible for any damage on internal parts, loss of captured data, or any cost incurred on the loss of the filmed data due to improper use of the camera that resulted in entry of water and malfunctioning.
- The company will not be responsible for any damage or accident (such as personal injury) that occurred when using the camera.

Safety and Handling Precautions

Camera Information

- Do not take apart or attempt to service the camera yourself.
- Do not expose the camera to moisture, or extreme temperatures.
- Allow the camera to warm up when moving from cold to warm temperatures.
- Do not touch and put pressure on the camera lens.
- Do not expose the lens to direct sunlight for extended periods.
- Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the product. Wipe the product with a slightly damp soft cloth.

- Do not use the flash or LED Light near a person's eyes to prevent possible eye injury.
- Do not use the camera while you are walking, driving or riding a vehicle.
- Please handle the camera strap with care, and never place the strap around the neck of an infant or child. Wrapping the strap around a neck may cause suffocation.
- Do not subject the LCD monitor to impact.
- To prevent the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Battery Information

- Turn off the camera before installing or removing the battery.
- Use only the provided batteries or type of battery and charger that came with your camera. Using other types of batteries or chargers may damage the device and invalidate the warranty.
- Inserting the battery upside down can cause damage to the product and possibly cause an explosion.
- When the camera is used for an extended period of time, it is normal for the camera body to feel warm.
- Download all pictures and remove the battery from the camera if you are going to store the camera for a long period of time.
- The type of battery and the battery power level may cause the lens to stick. Ensure you use the correct battery type and use a fully charged battery.
- Risk of explosion if incorrect battery is used. Dispose of used batteries according to the instructions.
- Please keep batteries out of reach of children to prevent from swallowing batteries, which might cause poisoning.

Notices

- All testing was carried out in an indoor testing environment. We cannot guarantee that there will be no damage or malfunction in other conditions.
- Please note that all accessories are not waterproof.
- Please close the battery cover correctly. If water, dust or sand is inside the camera, it will cause malfunction.
- Do not open or close the battery and USB cover at the locations like ocean or lake. Also, do not open or close them with wet hands.

-
- When you dive with the camera, please use the supplied strap, and make sure it is on your wrist.

After using the camera in water, please wipe off the water / dirt and dry the camera with a clean cloth.

Cautions

- Do not use the camera at a depth of 10 meters or more in water.
- Do not use the camera underwater over 1 hour.
- Do not open or close the battery and USB cover in water.
- Do not use the camera in hot water.
- Do not put too much pressure on the camera; otherwise the camera will be damaged when you dive with it.
- Do not leave your camera on the beach as sand can get inside the speaker and microphone. Moreover, the camera will get heated gradually and exceed the operation temperature when it is exposed to sunlight.
- Do not leave the camera in an environment with a high temperature of 40°C or above for a long period of time (especially at places under direct sun light, inside of vehicles, on the sand, or near a heating equipment).
- If your camera is stained with sunscreen lotion by accident, please clean it with warm water immediately; otherwise your camera body may become discoloured.
- If the camera has sustained strong shaking or high pressure, it may lose its waterproof capability. Please contact your reseller or our maintenance department if advice is needed.
- If any liquid falls on the surface of the camera or inside the battery/memory card compartment, please wipe it off using a soft cloth. Do not insert a wet memory card or battery.
- The waterproof ability of a camera body might start to diminish after a year. When this occurs, please contact your reseller or our maintenance department.
- When connecting to a PC, please make sure the ground function of PC works.
- When the camera is transferring data (like transfer pictures to a PC), please make sure the connection of data cable is normal and there is enough battery energy to keep the camera working well.

USB adapter Information

- Do not expose the adapter to high temperatures or high levels of moisture. Otherwise, it may cause a fire or electric shock.

-
- Do not attempt to repair, disassemble, change or transform the adapter.
- Avoid sudden changes in temperature, which may cause condensation on the adapter's internal surfaces. Please do not use it immediately in this situation.

Do not touch the plug with wet hands. Otherwise, it may cause electric shock.

- Do not use the travel voltage converter or AC/DC power inverter. Otherwise, it may cause damage, overheating, malfunction or fire to the camera.

Using this manual

Symbols used in this manual are explained below:

	<p>This indicates useful information when using your camera.</p>
	<p>This indicates an important message that should be read before using the function.</p>

Table of Contents

Preface	1
About this Manual	1
Safety and Handling Precautions.....	1
Using this manual	4
Introduction	7
System Requirements	7
Main Features.....	7
Package Contents	8
Camera Views.....	9
Camera Buttons.....	11
Navigation Control	12
Getting Started.....	13
Attach the Camera Strap	13
Inserting the Battery	14
Internal memory.....	16
Inserting an SD/SDHC/SDXC Memory Card.....	17
Charging the Battery by USB	18
Turning the Power On and Off.....	18
Initial Settings	19
Modes.....	19
Before using the camera under water.....	19
Cleaning of the camera after its underwater use	20
Notes on operating temperature, humidity, and condensation	21
Using the LCD monitor.....	22
LCD Monitor Layout	22
Recording Images and Videos	26
Taking Images.....	26
Setting the Zoom Control	26
Using EV Compensation	27
Using Flash.....	28
Using Self-timer	29
Setting the Focus Mode.....	30
Using the AE/AF LOCK/Delete Button	30
Recording Videos	33

Using the Record Menu	45
Using the Movie Menu	53
Playback	55
Viewing in Single Navigation	55
Viewing Thumbnails	55
Magnify	56
Playing Videos	57
Playing Voice Memo	57
Playback Menu.....	58
Using the Setup Menu	69
Setting Sounds	70
Setting Power Save	71
Setting Date & Time.....	71
Setting Language.....	71
Setting Display Mode.....	72
Setting TV Out.....	72
Setting LCD Brightness.....	73
Setting Format.....	73
Reset All.....	73
Making Connections.....	73
Connecting the Camera to a TV	74
Connecting the Camera to a PC	74
Connecting the Camera to a Printer	75
Setting the Print Mode Menu	76
Appendix	77
About Folder and File Names	77
Troubleshooting	77
Specifications	79

Introduction

Congratulations on your purchase of the new digital camera.

Capturing high-quality digital images is fast and easy with this state-of-the-art smart camera.

System Requirements

In order to get the most out of your camera, your computer must meet the following system requirements:

For Windows:

- Windows XP/Vista/Win7/Win8
- Processor: Intel Pentium D 3.0GHz or equivalent AMD Athlon, or faster
- Memory: 2 GB or above
- HDD space: 300MB or above
- 32bit colour display monitor
- Microsoft DirectX 9.0C
- USB port and CD-ROM drive

For Macintosh:

- Mac OS 10.3.9 ~ 10.8 <Mass storage>
- Memory: 1 GB or above
- Q. Time player ver. 6.0.3 or above
- USB port and CD-ROM drive


Main Features

- 20 mega pixels resolution
- Up to 4x optical zoom and 8x digital zoom
- 2.7 inch colour LCD monitor
- 64MB internal flash memory with optional external SD/SDHC/SDXC card
- Supports up to 4GB of SD card, and up to 32GB of SDHC card and to 64GB of SDXC card
- Easy-to-use button interface
- DCF, DPOF, PictBridge compatibility
- Slide Show enables you to playback photos, videos and corrupted files
- A/V output to view your images and videos on your TV


- USB port to transfer images and videos to your PC

Package Contents

Please check the contents of your camera package. It should contain:

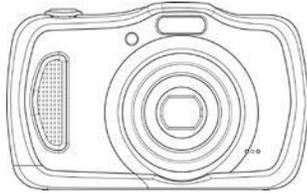

Digital camera

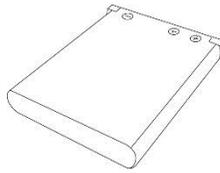


Rechargeable
battery
x 1 pcs




USB cable



Wrist strap

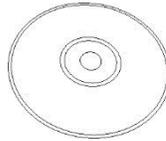

CD-Rom
Manual

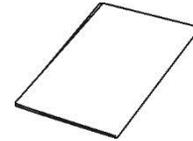


Quick Start Guide



Please note that all accessories are not waterproof.


Camera Views

Front View

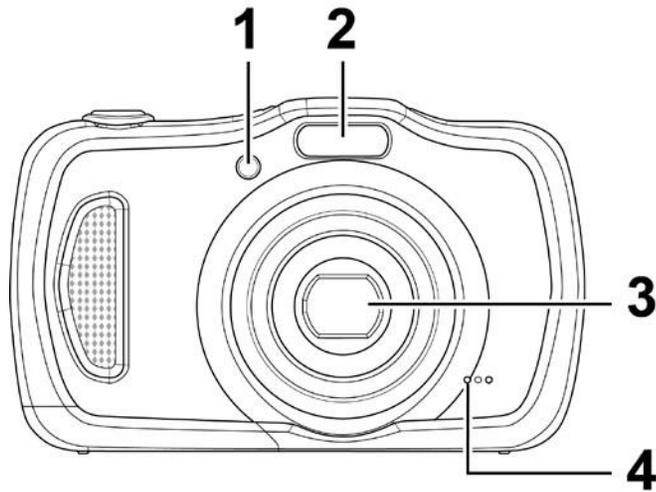

1. Self-timer LED/AF Assist Lamp
2. Flash
3. Lens
4. Microphone


Back View

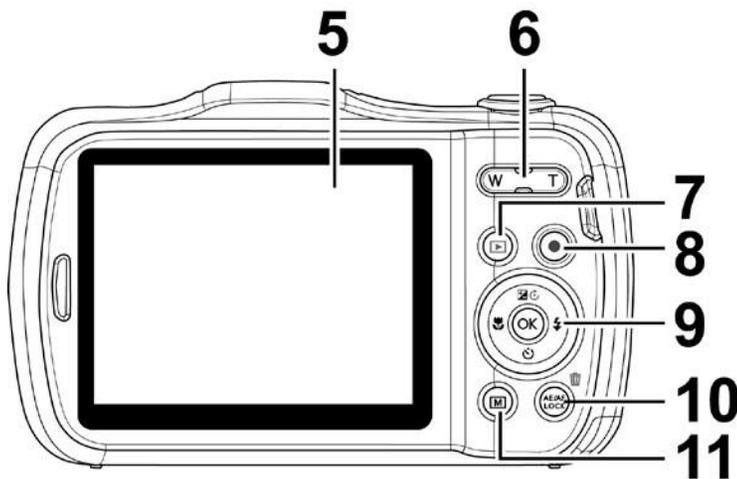

5. LCD monitor
6. Zoom button
7. Playback button
8. Movie button
9. OK button/4-way navigation control
10. AE/AF LOCK button/Delete
11. Menu button

Top View


12 13 14

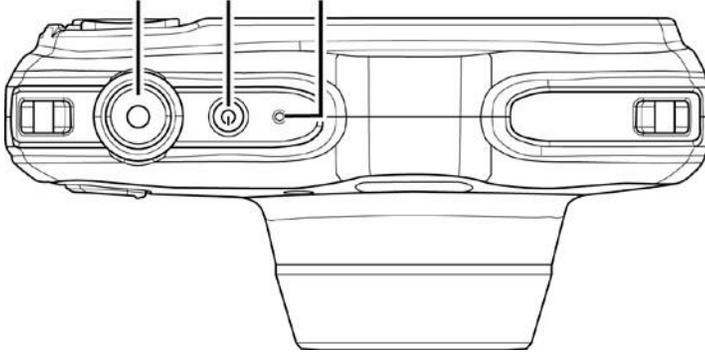

- 12. Shutter button
- 13. Power button
- 14. LED indicator light

Bottom View

15 16 17

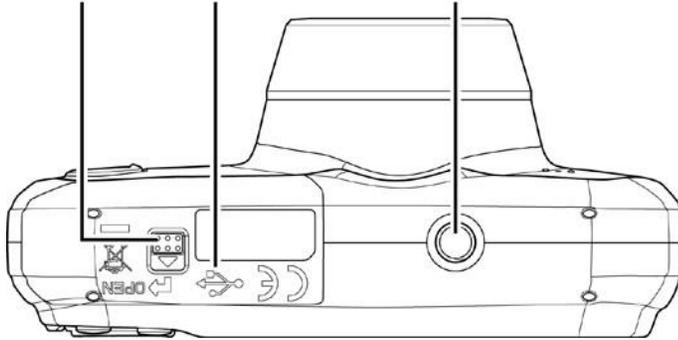

- 15. Battery/Memory card compartment
- 16. USB/TV Out
- 17. Tripod screw hole

Right View

18




- 18. Strap ring

Left View

19. Strap ring

20. Speaker

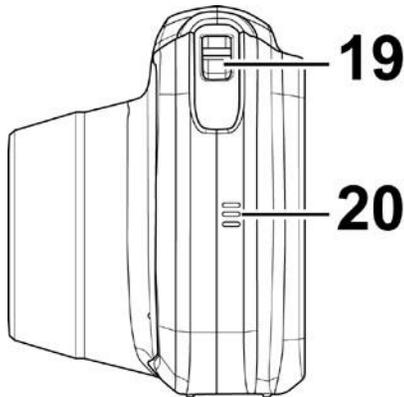

Camera Buttons


Your camera is equipped with different buttons for ease of use.

Button	Description
Power	Press the Power button to turn the power on/off.
Shutter	Press to capture an image.
Zoom button	In Photo mode and Recording video, press the Zoom button left to zoom out, right to zoom in. In Playback mode, press the Zoom button to zoom in to magnify image or zoom out to enter thumbnails.
Menu	Press to enter or exit menu/submenu.
AE/AF LOCK button/Delete	Press this button on your camera to lock focus and exposure, or delete an image or video clip. See "Using the AE/AF LOCK/Delete Button" on page 34 to know more about AE/AF LOCK/Delete button.
Playback	Press to enable Playback mode or return Record mode.
Movie	Press to start/stop recording video.

Navigation Control

The **4-way Navigation Control** and the **OK** button allow you to access the various menus available from the On Screen Display (OSD). You can configure a wide range of settings to ensure maximum results from your images and videos.

Further functions of these buttons are as follows:

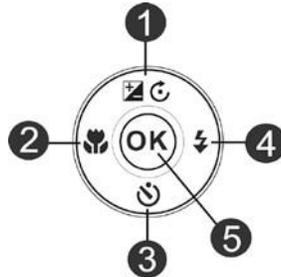

No.	Description
1	EV/Rotate Button
2	Macro Button
3	Self-timer Button
4	Flash Button
5	OK Button


Button	Description
OK	<ol style="list-style-type: none"> 1. Confirm a selection when using the OSD menus. 2. In Playback Movie mode, press to start video playback.
Flash/Right	<ol style="list-style-type: none"> 1. In Photo Mode, press to scroll through the flash mode options. (Auto Flash, Red-eye Reduction, Forced On, Slow Sync and Forced Off) 2. In Playback mode, press to view the next image or video clip. 3. In playback Movie mode, press to Forward video playback. 4. In Menu, press to enter the submenu or to navigate through the menu selections.

Focus/Left	<ol style="list-style-type: none"> 1. In Photo Mode, press to scroll through Focus options. (AF, Macro, Super Macro, Infinity, MF) 2. In Playback mode, press to view the previous image or video clip. 3. In Playback movie mode, press to Rewind video playback. 4. In Menu, press to exit a submenu or to navigate through the menu selections.
EV/Rotate/Up	<ol style="list-style-type: none"> 1. In Photo mode press to change the EV settings. 2. Playing Video file, press to Pause/Start video playback. 3. In Playback photo mode, press to rotate the image clockwise 90 degrees by each press of the button. This feature is applicable for still images only. 4. In Menu, press to navigate through the menu and submenu selections.
Self-timer/Down	<ol style="list-style-type: none"> 1. In Photo Mode, press to scroll through Self-time options. (Off, 10 sec., 2 sec. and Double) 2. Playing video file, press to stop video playback. 3. In Menu, press to navigate through the menu and submenu selections.

Getting Started


Attach the Camera Strap

Wrist strap

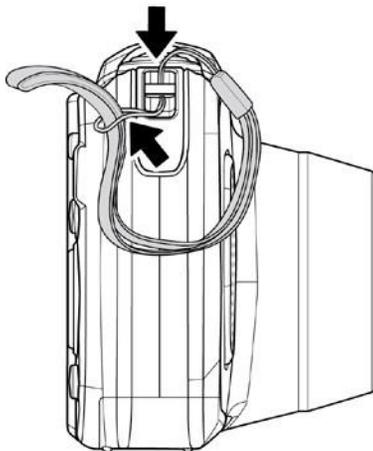

Neck strap

1. Please make sure the neck strap is strong and secure.
2. Follow the steps below to attach the neck strap to the camera.

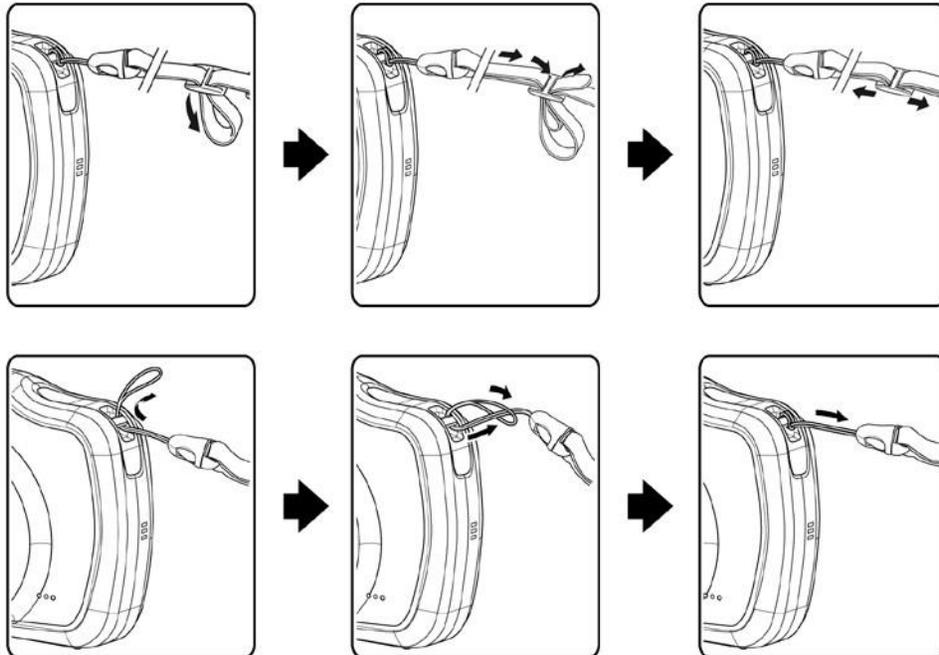

- In order to avoid dropping the camera, attaching the neck strap before using the camera is recommended.
- Wrapping the strap around your neck is dangerous. Take care that children do not hang the strap around their neck.

Inserting the Battery

Follow these instructions to insert the rechargeable battery into the battery/memory card compartment.

Please read "Battery Information" on page 2 before inserting/removing battery.

1. Make sure the power is off before inserting the battery.




2. Unlock and open the battery/memory card compartment at the bottom of the camera.



3. Insert the battery into the compartment with the terminal facing inside the camera with the back of the battery facing upwards.



4. Close the battery/memory card compartment, and the cover latch is buckled automatically. To ensure the water resistance, please pull down the cover latch (as illustrated) to lock the battery cover before using under water.

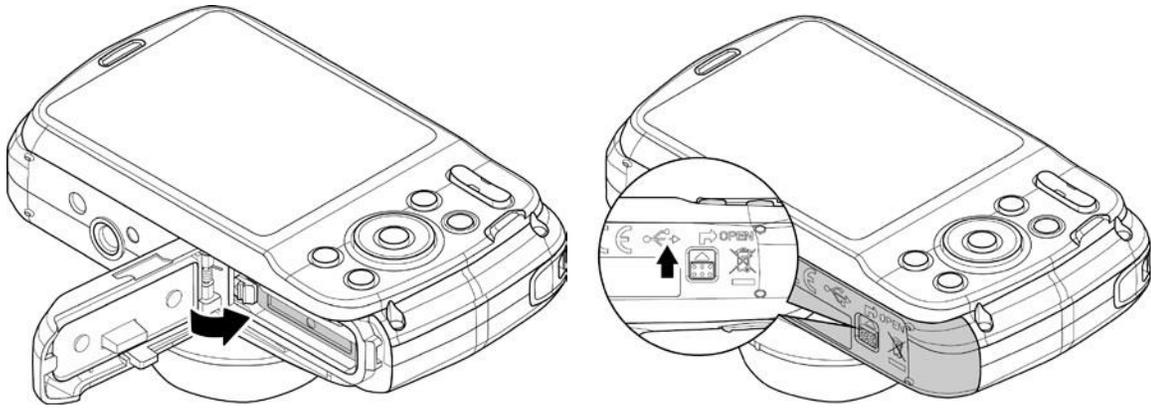

Battery - Back



Battery - Front

Camera Memory

Internal memory

Your camera is equipped with 64 MB of internal memory. Users can store files up to approximately 25 MB. If there is no memory card inserted in the memory card slot, all images and videos recorded are automatically stored in the internal memory.

External storage

Your camera supports SD cards of up to 4 GB in size. It also supports SDHC cards with a maximum capacity of 32 GB and SDXC cards with a maximum capacity of 64 GB. If there is a storage card inserted in the memory slot, the camera automatically saves all images and videos onto the external storage card. The icon  indicates the camera is using the SD card.



Not all cards will be compatible with your camera. When purchasing a card, please check the card's specifications and take the camera with you.

Inserting an SD/SDHC/SDXC Memory Card

Expand your camera's storage by using SD, SDHC or SDXC memory cards.

1. Unlock and open the Battery/memory card compartment at the bottom of the camera.
2. Insert the SD/SDHC/SDXC card into the memory card slot with the metallic part facing the back side of the camera.
3. Push the SD/SDHC/SDXC card into the memory slot until it clicks into place.
4. Close and lock the Battery/memory card compartment.



To remove the SD/SDHC/SDXC card

1. Unlock and open the battery/memory card compartment.
2. Gently push the card until it pops out.
3. Pull out the card carefully.



- Windows 2000/XP does not support SDXC card (exFAT format). But in Windows XP (Service Pack 2 or 3), you can download exFAT patch update to support SDXC card.
- To use the SDXC card with Mac OS, the OS version should be 10.5 or higher.
- The memory card that is not inserted correctly may cause damage to the camera. Please be careful when inserting the memory card.
- To prevent children from swallowing the memory card, please keep the memory card out of reach of children.




- Do not take out the memory card when the LED indicator light blinks, as doing so might cause images not being saved and might even damage the memory card.

Charging the Battery by USB

You can also charge the battery by connecting the USB cable to your camera and PC.

1. Connect the camera with the USB cable as shown.
2. Connect the other end with the USB adapter and plug it into a power outlet or the PC's USB port directly for charging.

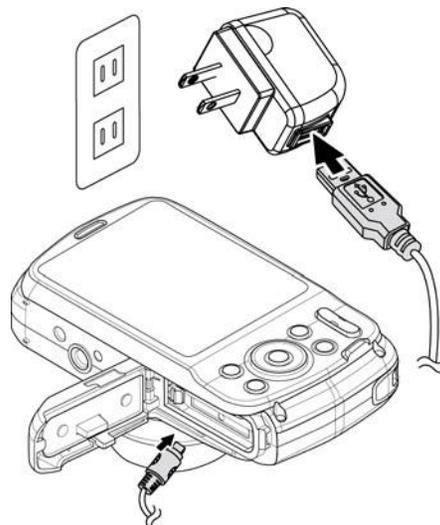

- When the battery is charging, the LED indicator flashes.
- When the battery is fully charged, the LED indicator goes off.
- When the battery is unusually charged, the LED indicator flashes rapidly.
- When the camera charges without the battery inside, the LED indicator goes off.
- It's recommended to not operate the camera when charging. Charging time depends on current battery capacity and charging conditions.



• You can also charge the battery with an Apple adapter. Its power output meets the standard 5V/500mA.

- If the battery is removed during charging, it will recover charging after you unplug or replug the USB cable.

Turning the Power On and Off

There are two ways to turn on the camera:

- The startup image displays briefly and the startup sound plays if enabled. The zoom lens extends and the camera is turned on in Record mode.
- The camera is turned on in Playback mode. The zoom lens is not extended.

To turn off the camera, press the **Power button**.

See "Modes" on page 21 to know more about Record and Playback mode.

Initial Settings

When you turn on your camera for the first time, you will be asked to do the initial settings of your camera. First is the setup of language menu. Specify in which language menus and messages are to be displayed on the LCD monitor.

Setting the Language

1. Press ▲, ▼, ◀ or ▶ to move through the selection.
2. Select a language, and then press **OK** to apply.

Setting the Date & Time

1. Press ◀ or ▶ to move through the selection.
2. Press ▲ or ▼ keys to change the value for the date and time.
3. Press **OK** to apply.
4. If necessary, press  to cancel and return to Language. Now, you are ready to start taking images and videos.



Holding down ▲ or ▼ keys to change the values continuously.

Modes

Your camera has three modes:

Record Mode

This is the default mode when you turn on the camera every time. You are able to take images in this mode.

Playback mode

Press the **Playback button**  after the camera is turned on to view and edit captured images or playback videos. The recording of voice memos attached to images is available in this mode.

Movie mode

Press the **Movie button**  after the camera is turned on to start/stop recording video in this mode.

Before using the camera under water

- Check contacts for the lids on the battery/memory card compartment and USB port. Check for any dust or other foreign objects. Note that even a strand of hair or sand will cause the entry of water into the camera.


- Check for any cracking, scratches, and other wearing on the waterproof pad of the lids of the battery/memory card compartment and USB port.
- Properly close the lids for the battery/memory card compartment and USB port until a clicking sound secures the positioning.
- Dropping the camera during its underwater use will cause the camera to sink further. Please use a strap or other means to prevent it from falling.

Cleaning of the camera after its underwater use

- After using the camera underwater, on the sand, or in another environment full of sand or dust, wipe away sand, dust, or salt one hour later with a dry cloth soaked with a little bit of water and then lay it to dry completely.
- If placed in a humid environment or with any other foreign object attached, the camera might be damaged, discoloured, corroded, generate foul smell, or its waterproof ability diminished.

The following steps are recommended for cleaning the camera if it will not be used for a long period of time:

- Close the lid for the battery/memory card compartment and wash the camera gently with clear water. Soak the camera for 10 minutes in a shallow basin filled with clear water.

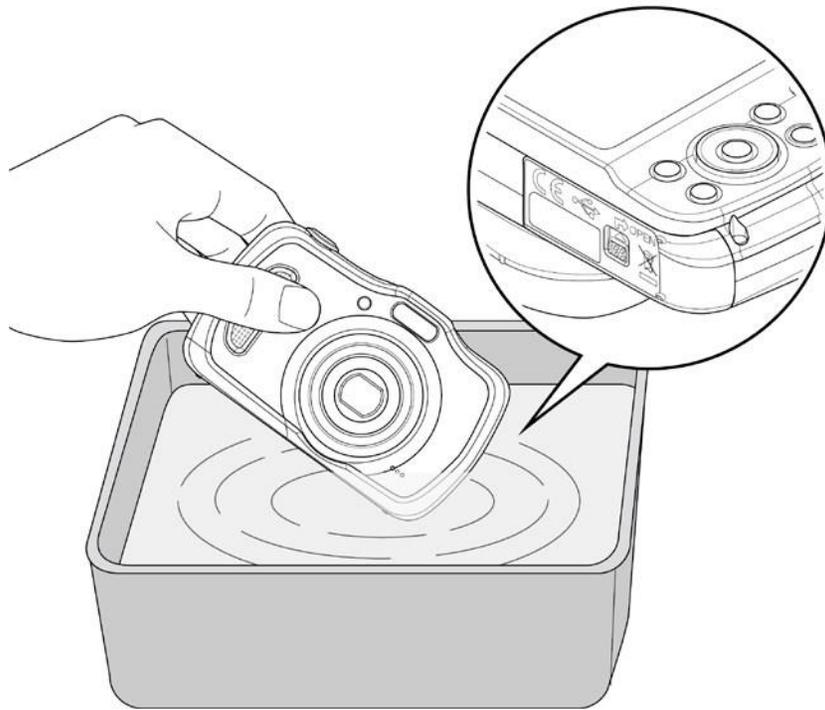

- Use a soft cloth to wipe away water and lay the camera dry at a cool and well-ventilated place.
- Do not dry the camera with the hot air from a hair dryer.
- Do not use chemicals (such as vapour oil, thinner, alcohol, or detergents), soap, or neutral detergents.
- The sound might be distorted if the opening of the speaker or microphone is filled with water drops. Please wipe away water with a soft and dry cloth.
- Do not puncture the opening of the speaker or microphone using a sharp tool. Any damage on the inside of the camera will cause its waterproof ability to diminish.

Notes on operating temperature, humidity, and condensation


- Functionality of the camera and durability of the battery will temporarily drop when using the camera in an area with a colder climate.
- To prevent icing on the button and distortion on the recorded sound, wipe away snow or water that are attached to the outside of the camera.
- With drastic changes in temperature, water drops will form on both inside and outside of the camera. This phenomenon is called “condensation”, which might be caused via the following circumstances:
 - The camera is suddenly dipped into water under a low temperature from a ground-based environment with a high temperature (such as on the sand or a place with direct sun light).
 - The camera is brought into the warm indoor from the cold outdoor.
 - Opening or closing the lids for the battery/memory card compartment and USB port in an environment with high humidity.
- To clear away condensation, open the lids for the battery/memory card slot and USB port after turning off the camera at a place with a stable ambient temperature (avoid any place with high temperature/humidity or any sandy or dusty place). Remove the battery and memory card, and store the camera with the lids open for the battery/memory card compartment and USB port in order for the temperature on the camera to adjust to the ambient temperature.
- If condensation cannot be cleared away, please contact the store where you bought your camera or contact our maintenance and repair department.

Using the LCD monitor

The LCD monitor shows all important information regarding camera settings as well as the visual image of your image or video. The display on the LCD monitor is called the On Screen Display or OSD.

LCD Monitor Layout

Photo Mode Screen Layout

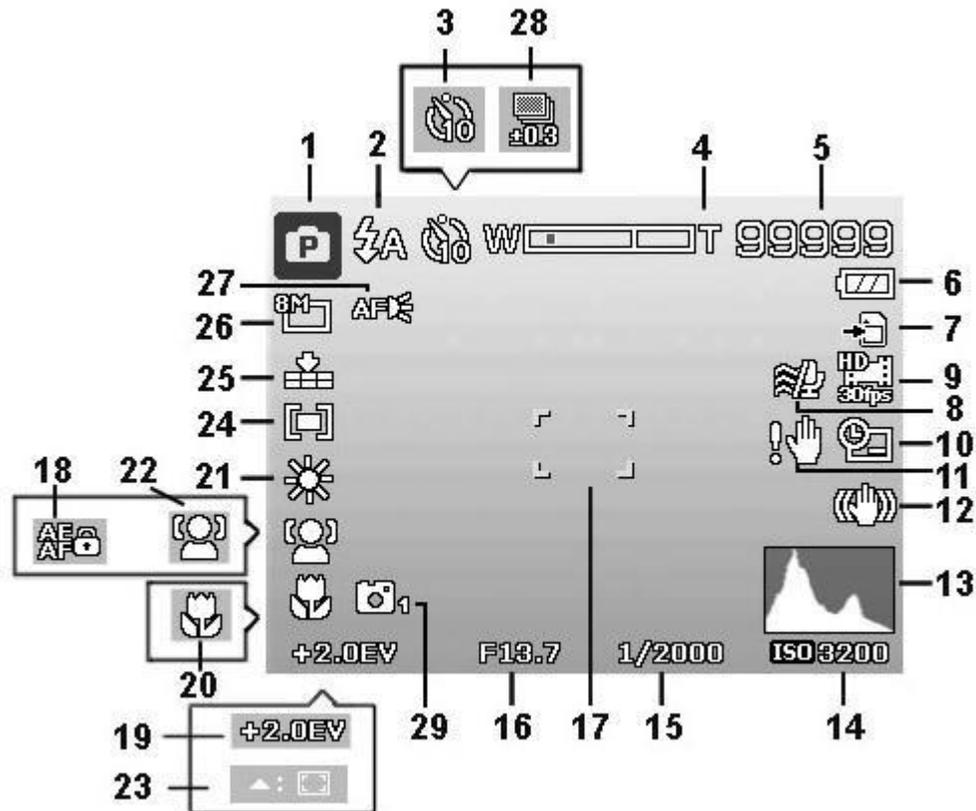

No.	Item	Description
1	Record Mode	Indicates the current mode.
2	Flash	Indicates flash settings.
3	Self-timer	Indicates self-timer settings.
4	Zoom indicator	Displays zoom.
5	Shots remaining	Indicates the remaining shots available.
6	Battery	Indicates battery level.
7	Storage media	Indicates current storage media in use.
8	Wind Cut	Reduces wind noise during movie recording.

9	Movie size	Indicates movie size.
10	Date stamp	Indicates date stamp is enabled.
11	Shake warning	Indicates the light is not enough and the camera is shaking, which may cause the captured image to blur. If the shake warning appears, you can still capture images. However, enable Stabilizer, flashlight or use of a tripod is recommended to stabilize the camera.
12	Stabilizer	Indicates stabilizer function is enabled.
13	Histogram	Graphic display of Brightness.
14	ISO	Displays ISO settings.
15	Shutter speed	Displays shutter speed settings.
16	Aperture value	Displays aperture settings.
17	Focus area	Indicates focus area.
18	AE/AF Lock	Indicates AE/AF Lock is enabled.
19	EV Compensation	Displays exposure compensation settings.
20	Focus mode	Indicates focus is enabled.
21	White balance	Displays white balance settings.
22	Face tracking	Indicates face tracking is enabled.
23	Tracking AF	Indicates tracking AF is enabled.
24	Metering	Displays metering settings.
25	Quality	Displays quality settings.
26	Photo size	Displays photo size settings.
27	AF lamp	Indicates AF lamp is enabled.
28	Exposure bracketing	Displays Exposure bracketing settings.
29	Stylish	Indicates Stylish function is enabled.

Movie Mode Screen Layout




Recording Layout

No.	Item	Description
1	PIV available	Indicates that you can capture a screenshot without stopping movie recording.
2	Recording status	Indicates recording status.
3	Recorded time	Displays recorded time.
4	AE/AF lock	Indicates AE/AF Lock is enabled.
5	Key indicator	Displays the commands on 4-way Navigation Control button.

Playback Mode Screen Layout

The Playback mode display varies depending on the type of image being viewed.

Playback mode display of still images:

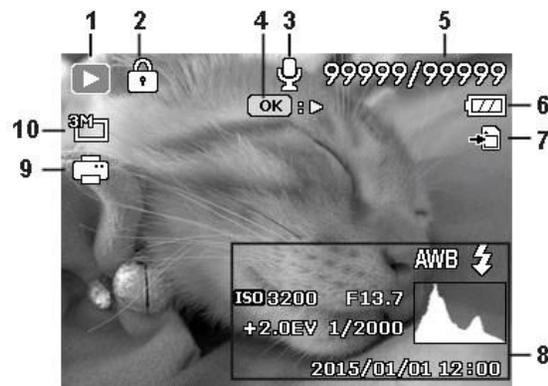

No.	Item	Description
1	Playback mode	Indicates playback mode.
2	Protect	Indicates file is protected.
3	Voice memo	Indicates voice memo is attached.
4	Button intro	Indicates the button to press on the camera to play a video file.
5	File no./Total no.	Indicates the file number over the total number of files in the storage card.
6	Battery	Indicates battery level.
7	Storage media	Indicates used storage memory.
8	Recording information	Displays recording information of the file.
9	DPOF	Indicates the file is marked for printing.
10	Image Size	Displays the image size settings.

Playback mode of videos:



No.	Item	Description
1	Playback mode	Indicates playback mode.
2	Protect	Indicates file is protected.
3	Video clip	Indicates the file is a video.
4	Button indicator	Displays the button info of Playback mode.
5	File no./Total no.	Indicates the file number over the total number of files in the storage card.

be a useful feature, the more an image is enlarged (zoomed), the more pixelated (grainier) the image will appear. Please refer to "Setting the Digital Zoom" on page 56 on how to setup digital zoom.


To adjust the optical zoom:

1. Press the Zoom button to zoom in or zoom out of an image.
2. The zoom indicator appears on the LCD monitor. 

Zoom button

1. Press the Zoom button (right) to zoom in.

2. Press the Zoom button (left) to zoom out.

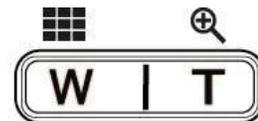


To adjust the digital zoom:

1. Activate digital zoom. See "Setting the Digital Zoom" on page 56.
2. Pressing the **Zoom button** (left/right) optically zooms in/out.
3. Release the **Zoom button**.

4x optical zoom

8x digital zoom

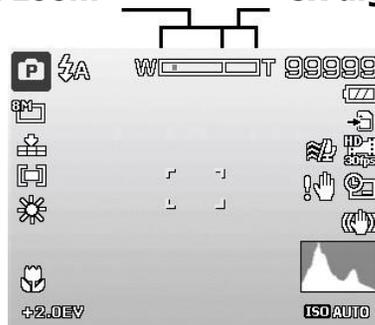

Using EV Compensation

Images can be captured with the overall scene intentionally made brighter or darker. These settings are used when a suitable brightness (exposure) cannot otherwise be obtained in circumstances where the difference in brightness between the subject and the background (the contrast) is large, or when the subject that you wish to capture is very small within the scene. Available for still images only.

- Press the **EV/Up** button on your camera to the EV Compensation function.
- To adjust EV settings, press the ▲ or ▼ keys to increase/decrease the value. As you adjust the settings, the LCD monitor synchronously displays the image applying the EV settings. Press the **OK** button to save and apply changes.
- The EV setting is only available in shooting still images.

EV/Up button launch



Using Flash

When taking pictures in difficult lighting conditions, use the **Flash/Right** button to get correct exposure. This function cannot be activated when recording videos or during continuous shooting.

To activate Flash:

- Press the **Flash/Right** button on your camera to launch the Flash function.
- To select flash options, press the ◀ or ▶



Flash/Right

button keys. Press the **OK** button to save and apply changes.

Your camera is equipped with five flash modes:

⚡A Auto Flash. The flash fires automatically whenever extra lighting is needed.

⚡👁 Red-eye reduction. The flash fires twice to reduce the red-eye effect.

⚡ Forced on. The flash fires whenever you press the Shutter button regardless of lighting conditions.

⚡SL Slow sync. The flash fires with a slow shutter speed.



 **Forced off.** The flash is turned off.



- Flash function is only available when shooting still images, but not available in Continuous shooting mode and D-Lighting.
- Do not press the flash while pressing the Zoom button. Press the flash after releasing the Zoom button if necessary.

Using Self-timer

The Self-timer allows you to take images after a pre-defined delay, while burst lets you take consecutive shots. This function is only available when recording still images. The Self-timer setting is automatically set to off when you turn off the camera.

To activate Self-timer:

- Press the **Self-timer/Down** button on your camera to launch the Self-timer function.
- To select Self-timer options, press the ▲ or ▼ keys. Press the **OK** button to save and apply changes.



Self-timer/Down button

Your camera is equipped with 4 Self-timer modes:

 **Off.** Captures an image without time delay.

 **10 Sec.** Sets a 10-second delay to capture image after pressing the Shutter button.

 **2 Sec.** Sets a 2-second delay to capture image after pressing the Shutter button.

 **Double.** Performs delay and capture twice:

- Performs a 10-second delay, then captures the image.
- Performs another 2-second delay then captures the image again.



Setting the Focus Mode

This function allows users to define the type of focus when recording a still image. To set the Focus mode:

- Press the **Focus/Left** button on your camera to launch the Focus function.
- To select focus options, press the ◀ or ▶ keys. Press the **OK** button to save and apply changes.

**Focus/Left
button**



Your camera supports the 4 focus modes:

AF Auto Focus. With auto focus, the camera will focus on the subject automatically.

  **Macro/Super Macro.** This mode is designed for close-up photography. When Super Macro is set, the focus cannot be adjusted until Super Macro is cancelled.



 **Infinity.** When Infinity is set, the camera focuses on distant objects.

MF Manual Focus. With manual focus, you can adjust the focus distance from 5cm to infinity by pressing the Up/Down button. Press OK button to lock the focus and exit the adjusting screen.

Using the AE/AF LOCK/Delete Button



Use the **AE/AF LOCK/Delete** button on your camera to lock focus and exposure, or delete an image/video clip.

AE/AF LOCK function

1. To lock AE/AF, press the AE/AF LOCK button during movie recording or half press the shutter button then press the AE/AF LOCK button in Photo mode. The AE/AF would be kept locked even release the shutter button.
2. To unlock AE/AF by any one of the following ways:

- Press the AE/AF LOCK button
- Rotate the zoom control
- Press the MENU/Playback/Movie/Power button to launch another function

Delete function

The Delete function allows you to remove unwanted files from the internal memory or from the memory card. Protected files cannot be erased; to delete, unprotect the file first. See "Protect" on page 66.

To delete an image/video clip:

1. Press the **Playback button**  on the camera.
2. View images/videos clips in Single navigation mode.
3. Use the ◀ or ▶ keys to scroll the display.
4. When the desired image/video clip is displayed on the LCD monitor, press the **Delete** button.
5. A confirmation selection appears on screen.
6. To close the Delete function and go back to the single navigation mode, press **Menu** button.

To delete a single file:

1. After a confirmation selection appears on screen. Select **Single**.
2. Press the **OK** button and select **Yes** to delete.
3. The next image is displayed on the LCD monitor. To delete another file, use the ◀ or ▶ keys to scroll through the images/videos clip. Repeat steps 1 to 2.
4. To close the Delete function and go back to the single navigation mode, press **Menu** button.





To delete attached voice memo:

1. After a confirmation selection appears on screen. Select **Single**.
2. A delete voice memo option will be added to the selection.
3. Select and press **OK** to delete voice memo only and back to single navigation.
4. Or select **Yes** to delete both image and its voice memo.




To delete multiple files:

1. After a confirmation selection appears on screen. Select **Multi**.
2. The images are displayed in thumbnail view on the LCD monitor.
3. Use the ◀ or ▶ keys to move through the files.
4. When the desired image/video clip is highlighted, use the ▲ or ▼ keys to mark/unmark image/video clip for deletion.
5. Repeat step 4 until all desired images which you would like to delete are marked.
6. Press the **OK** button. A confirmation selection appears.
7. Select **Yes** to confirm.
8. Press the **OK** button to delete marked files.

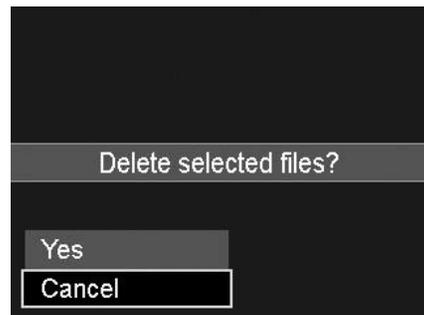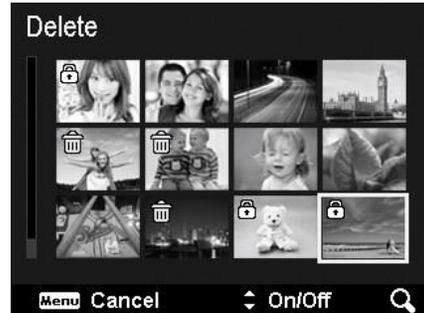

To delete all files:

1. After a confirmation selection appears on screen. Select **All**.
2. Select **Yes**.
3. Press the **OK** button to delete all files.

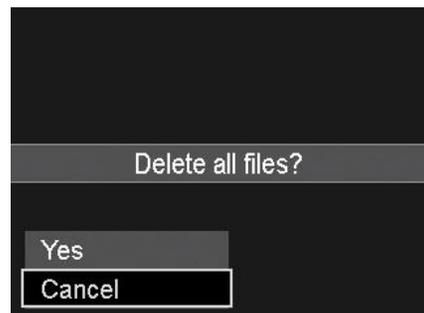

Recording Videos

You can record videos with the camera, the available recording time depends on the capacity of the memory card. Videos can be recorded until the maximum memory capacity has been reached. However the length of a single video may be limited (the limitation depends on the camera model).



1. Press the **Movie button** to start recording. 
2. Focus your camera on the subject that you want to take.
3. Use the **Zoom button** to zoom in and zoom out an image.
4. To stop recording, press the **Movie button**.



- The camera will automatically stop recording when the memory capacity is full.
- It will automatically stop recording when the recording time is over 29 minutes or the file size is over 4 GB.
- When the temperature of the CCD Sensor is over 63°C, the camera will display the warning message.
- When the temperature of CCD Sensor is over 65°C, the camera will shut down automatically.

PIV function

During the movie recording, press shutter button, the icon  displayed on LCD means that the current screen can be stored as a photo without stopping movie recording by full pressing the shutter button. The PIV feature is only applicable to movie size: 720p30 and VGAp30.



- When the movie size is 720p (30fps), the captured photos are saved at 1280 x 720 resolution.
- When the movie size is VGA (30fps), the capture photos are saved at 640 x 480 resolution.


Settings of Recording Videos

See "Using the Movie Menu" on page 59 for more details.

Setting the Scene Mode

By simply selecting one of the following 29 modes, you can capture the image with the most appropriate settings.

1. From the Record Menu, press to select **Scene Mode**.
2. Use the navigation controls to move through the selection.

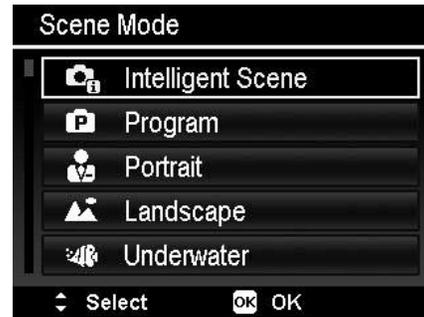

3. Press the **OK** button to save and activate the selected scene mode.

The table below shows the available scene mode settings.

Icon	Item	Description
	Intelligent Scene	The camera detects the shooting conditions and automatically switches to the appropriate scene mode. See "Using Intelligent Scene" on page 41 for more details.
	Program	The camera automatically adjusts suitable shooting settings like shutter speed and aperture values.
	Portrait	The camera blurs the background to focus on the subject.
	Landscape	This feature is used to emphasize wide scenic views.
	Underwater	This feature is used to capture the image under the water.
	Sunset	This feature enhances the red hue for recording sunset images.
	Dawn	This feature makes the sky clearer and bluer in the images.
	Backlight	This feature is used to capture the image of a backlight object by changing the metering.
	Kids	This feature is used to capture still images of moving kids.

	Night Scene	This feature is used to capture images with night scenery background.
	Fireworks	This feature slows shutter speed to capture fireworks explosions.

	Snow	This feature is used for snow scene.
	Beach	This feature is used for beach scene.
	Sports	This feature captures still images in high speed motions.
	Party	This feature is used for wedding or indoor party settings.
	Candlelight	This feature is used to capture warm candle light effects.
	Night Portrait	This feature is used to capture portrait pictures with night or dark backgrounds.
	Soft Skin	This feature enhances skin tone thus facial skin appears smooth.
	Flowing Water	This feature enhances smooth effects like water or silk.
	Food	This feature is used to capture food images. The increased saturation in this mode makes the captured image more enticing.
	Love Portrait	This feature uses face tracking to auto detect faces to capture portrait images without the help of others. When over two faces are detected, AF is automatically activated. The camera starts count down and captures a picture in two seconds.
	Self Portrait	This feature sets zoom to wide. When one face is detected, AF is automatically activated and plays the sound (Bi) for notice. Then camera starts count down and captures a picture in two seconds.


	D-Lighting	This feature applies digital processing only to the necessary portion(s) of the image and preserves details in highlights and shadows with natural contrast.
	Time Lapse	Use this feature to take photos automatically at the specified intervals. See "Using Time Lapse" on page 43 for more details.
	Panorama	Use this feature to create a panoramic photo by panning or tilting the camera.
ART	Art Effect	This feature applies different art effect on the still images.

	Burst	Fully press and hold the shutter button to continuously shoot until the shutter button is released or memory card is full.
	Speedy Burst	Captures 30 images in a shot when the Shutter button is pressed. Auto set Photo Size to 4:3 VGA only.
	GIF Capture	Use this feature to take a specific number of images in a specific shooting interval. The taken images will be combined into a GIF file and no longer exist individually. See "Using GIF Capture" on page 49 for more details.

Using Intelligent Scene

This feature is most useful for novice users to capture great images even without basic knowledge of photography. Simply frame the shot with the help of Intelligent Scene Mode, the camera automatically recognizes 7 kinds of scenes - Portrait, Landscape, Macro, Backlight, Backlight Portrait, Night Scene and Night Portrait - and selects the ideal settings.

Intelligent scene icon. After the camera detects the shooting conditions, this icon changes to show the detected scene mode.

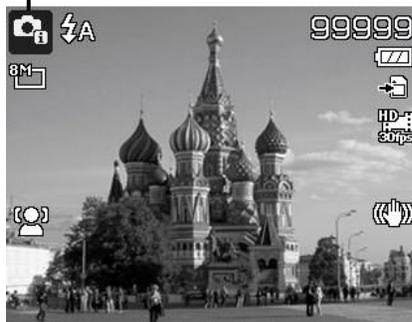

The camera changed to Landscape mode automatically.


To activate Intelligent Scene

1. Select **Intelligent Scene**  in **Scene Mode** menu.
2. Focus the camera on the subject to capture.
3. The camera detects the shooting conditions and switches to an appropriate scene mode.
4. Half press the Shutter button to focus the subject. The frame turns green to indicate focus is set.
5. Press the Shutter button to take the shot.



Using Kids Mode

Tactically, kids are the most difficult to photograph. They tend to be highly animated and can be a real challenge to make them pay attention for more than just a second or two. To capture a great moment for your kids, just keep the camera in kid mode. The mode provides higher shutter speed and always focuses on moving subject.

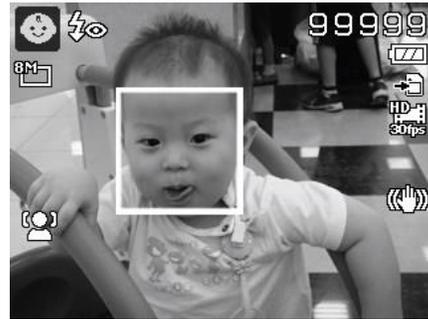

Using Sports Mode

When you need a series of sports motion images, such as a golf swing, or try to capture the images of a flying hummingbird/butterfly, be sure to switch the scene mode to sports mode.

Using Party Mode

Leave Party mode on! It can be difficult to photograph everyone at a party. While you have the whole gang together, take a group or family portrait. Party mode features Red-eye reduction flash and face tracking. You'll miss fewer shots, and have more time to focus on enjoying the party.

Using Food Mode

Share your dining experiences online with Food mode. This mode features macro focus and auto flash designed for close-up photography.

. Macro focus and Auto

Flash is enabled by using Food mode.



Using Love Portrait

Want to take a good image when there are just two of you? All you have to do is hold the camera and show your smiles together.

If two faces have been recognized, the camera performs a 2-second countdown with a beep notice then takes a shot without you having to press the **Shutter button**.

Using Self Portrait

When you are taking a photograph of yourself select self portrait mode. First the camera begins face tracking. If a face has been recognized, the camera

performs a 2-second countdown and then takes a photograph without you having to press the **Shutter button**.

Tips to make a great shape by self portrait photography:


- Lean in towards the camera to reduce double chin.
- Angle your body and bend your arms to look slimmer.
- Keep your shoulders back.

Using Time Lapse

Use this feature to take photos automatically at the specified intervals. The photo size will be 16:9 (2M). In Time Lapse mode, press **Down** button to launch the Time Lapse menu, and then press **Up/Down** button to select the options.



Available options are 30 sec. (Default), 1 min., 5 min., 10 min., 30 min., 60 min. Press **OK** button to apply the setting and close the menu.

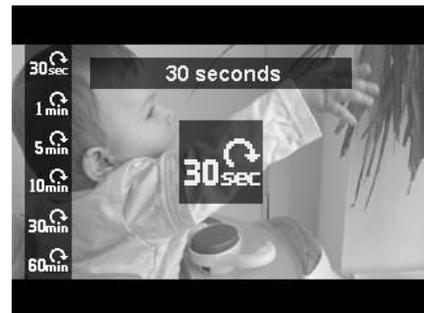

You can fully press the Shutter button to start recording, and fully press the Shutter button again to stop recording. The Time Lapse photos will be merged into a Time Lapse movie at 10 fps.



Photos taken from Time Lapse will be combined into a movie and will **NOT** exist individually in photo.

Using Panorama Mode

Use this feature to create a panoramic photo from multiple shots. You can combine several shots into one single image quickly and easily.





- The actual size of the stitched image may be different due to the panoramic angle as well as the level of camera shaking.
- It is recommended to use a tripod to stabilize the camera, and then move the camera slowly as you take the photograph.
- The longest time you can capture a photograph is approximately 30 seconds.
- If you select **From Top to Bottom** or **From Bottom to Top** in **360-degree** panorama, it is recommended to turn the camera over 90 degrees in order to make sure the camera is stable.
- In Panorama mode, uneven brightness may result in a difference between the captured image and its actual scene.

To stitch the still image


1. Press ▼ key to launch the **Angle Menu**. Use the ▲ or ▼ keys to select options. Press the **OK** button to save and apply changes.




2. Press ► key to launch the **Direction Menu**. Use the ◀ or ► keys to select options. Press the **OK** button to save and apply changes.



3. Fully **press** the shutter button to start shooting. When shooting starts, a white-cross appears on the centre and a yellow line is displayed horizontally (or vertically) through the screen. In addition, a shooting bar is displayed to present the shooting position and the white portion of the bar indicates which part of the scene has been taken.
4. If **you** move the camera without keeping it straight, the yellow line will move with the moving scene.

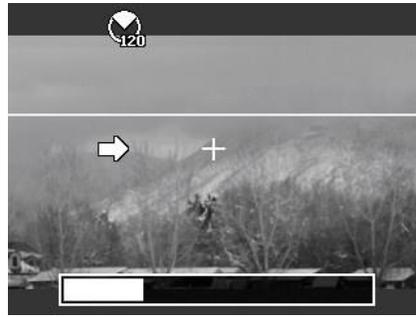


5.. When the white portion of the bar gets to the end the camera will finish automatically and will save the panorama image.

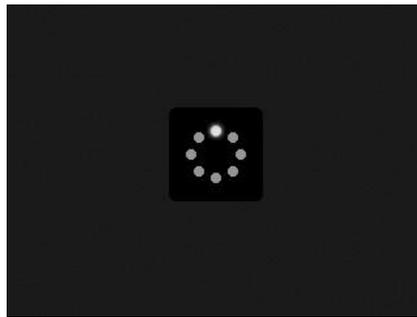

Using Art Effect

Effect that cannot be presented on Preview and which does not apply to movie recording and continuous shooting.

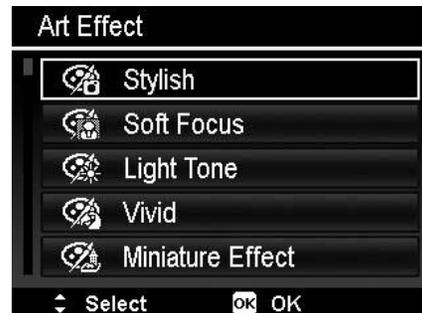

Press ▲ or ▼ keys to select between the following settings:

Icon	Item	Description
	Stylish	This feature is used to capture images with over-saturated colours, off-kilter exposure or blurring.
	Soft Focus	Produces halo around the photographed object to achieve the effect of soft focus.
	Light Tone	Reduces contrast to create a smooth and relaxed atmosphere.

	Vivid	The camera captures the image with more contrast and saturation emphasizing on the bold colours.
	Miniature Effect	Blur parts of the photo to make the scene look like a miniature scale model. It is recommended to capture from a high angle to simulate the miniature effect.
	Fisheye Lens	This feature captures images with fisheye lens effects.
	Astral	Image is applied with starburst.
	Poster	This feature captures images with old poster or illustration effects.
	Impressive Art	This feature captures images with dramatic contrast.
	B&W	Images are captured in black and white.
	Sepia	Images are captured in sepia tones.
	Colour Accent (Red)	Retains red tone while the rest of the scene becomes black and white.
	Colour Accent (Orange)	Retains orange tone while the rest of the scene becomes black and white.
	Colour Accent (Yellow)	Retains yellow tone while the rest of the scene becomes black and white.
	Colour Accent (Green)	Retains green tone while the rest of the scene becomes black and white.
	Colour Accent (Blue)	Retains blue tone while the rest of the scene becomes black and white.

	Colour Accent (Purple)	Retains purple tone while the rest of the scene becomes black and white.
---	---------------------------	--

Using Burst/Speedy Burst

Burst and Speedy Burst allow you to easily capture fast-moving targets, for example children playing, running dogs or exciting sport events.



Icon	Item	Description
	Burst	Fully press and hold the shutter button for continuous shooting until you release the shutter button or memory card is full.
	Speedy Burst	Captures 30 images in a shot when the Shutter button is pressed. Auto set Photo Size to 4:3 VGA only.



- If the remaining shots are less than 30 images, **Speedy Burst** will be disabled.
- When **Speedy Burst** is enabled, the Photo Size will be fixed at VGA, the Flash will be fixed at Forced Off, and the ISO will be fixed at Auto.

Using GIF Capture

Use this feature to take a specific number of images in a specific shooting interval. The taken images will be combined into a GIF file and no longer exist individually.

Press **OK button** in Preview to launch the GIF Setting. Use **Up/Down button** to adjust the shooting interval. Available options are 1 sec, 2 sec and 3 sec.



Use **Left/Right button** to adjust the number of shots. Available options are 5 pics and 10 pics.

A Pie Progress will be displayed on lower right corner of screen during GIF Capture. If all shots have been taken, these JPGs will be combined into a GIF and will be played in loop immediately, then a confirm box shows up. Select **Save** to save the file or select **Cancel** to erase the generated GIF.



Pie Progress



The taken images will be combined into a GIF file and no longer exist individually.

Using the Record Menu

If you are in Photo Mode, you can access the Record menu simply by pressing the **MENU button** on your camera.

When the menu is displayed, use the 4-way navigation control and the **OK** button to move through menu selections and apply your desired settings. To close the menu anytime, press the menu button again.

Record Menu

The Record menu allows you to change modes, and setup other capture settings.

To go to Record Menu:

Turn on the camera by pressing **Power button**.



Press to launch the Record Menu.

Use the ▲ or ▼ keys to move through the menu

To select an item, press ► or **OK** button.

Change the submenu settings using the 4-way navigation control.

Press the **OK** button to save and apply settings.



Photo Size

The Photo Size function is used to set the resolution before you capture the image. Changing the Photo Size affects the number of images that can be stored in your memory card. The higher the resolution, the more memory space is required.




The table below shows the Photo Size values for still images.

Icon	Pixel Size Suggestion	Printing Size
	5152 x 3864	A2 Size
	3264 x 2448	A3 Size
	2592 x 1944	A4 Size
	2048 x 1536	4" x 6"
	640 x 480	E-mail

Icon	Pixel Size	Printing Size Suggestion
	5152 x 3435	Standard print paper
	5152 x 2898	HDTV
	1920 x 1080	HDTV
	2992 x 2992	Square Composition

Quality

The Quality sets the quality (compression) at which the image is captured. The quality determines the amount of compression applied to your images. Fine quality would give you the best images with sharper details and less compression. However, the higher the quality, the more memory space is required in your memory card.

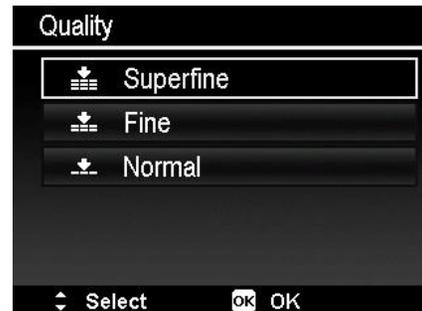

Icon	Item	Description
	Superfine	5x compression rate.
	Fine	8x compression rate.
	Normal	12x compression rate.

White Balance

This sets the white balance for a variety of lighting conditions.

- As you move through the selection, you can see the preview on the LCD monitor synchronously.
- Press ► to enter **WB Shift**. This feature allows you to correct the white balance of **AWB** option.



Icon	Item	Description
	Auto White Balance	The camera automatically adjusts the white balance.
	Daylight	Ideally used for bright sunny conditions.
	Cloudy	Ideally used for cloudy conditions.
	Tungsten	Ideally used for indoor images with tungsten or halogen lighting without a flash.
	Fluorescent 1	Ideally used for indoor images with bluish fluorescent lighting conditions.
	Fluorescent 2	Ideally used for indoor images with reddish fluorescent lighting conditions.

	<p>Custom</p>	<p>Used when light source cannot be specified. Press  for the camera to automatically adjust the appropriate white balance setting according to the environment.</p>
---	---------------	---

ISO

This sets the sensitivity for capturing images. When the sensitivity is raised (and the ISO figure is increased), photography will become possible even in dark locations, but the more pixelated (grainier) the image will appear. • Use a higher ISO setting in dim conditions and a lower ISO setting in brighter conditions.




Maximum ISO Auto

This feature allows the camera to adjust the ISO Auto from ISO 100 to the value set in Maximum sensitivity, according to light conditions. Available options are 200, 400, 800 (Default).



Metering

This sets the metering method for calculating exposure.

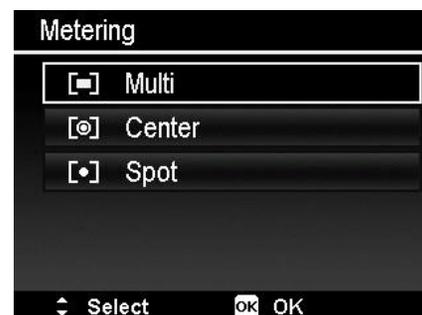


Icon	Item	Description
	<p>Multi</p>	<p>The entire area of the screen is measured, and the exposure is calculated.</p>

	Centre	Averages the light metered from the entire frame, but gives greater weight to the subject matter at the centre.
	Spot	A very small portion of the centre of the screen is measured, and the exposure is calculated.

Setting the Exposure Bracketing

Use this feature to take photos with different exposure compensation. Bracketing records 3 continuous images in the following order: Standard exposure, Underexposure and Overexposure.

Available settings are: Off, ± 0.3 , ± 0.7 and ± 1.0 .

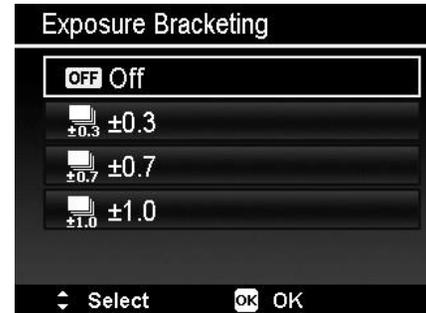

Setting the AF Area

AF stands for Automatic Focus. This feature determines the area on which the camera focuses.

To set AF Area

1. From the Record menu, select **AF Area**.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the **OK** button to save and apply changes.



The table below shows the available AF area settings.

Icon	Item	Description
	Face Tracking	This feature auto detects faces and tracks continuously.
	Wide	The camera automatically selects focus area within the wide frame.
	Centre	The focus area is fixed on the centre.

	Tracking AF	The camera will focus on the subject as it moves and will keep it continually in focus automatically.
---	-------------	---

Setting the AF Lamp

The AF Lamp function allows you to record images even low light conditions.

If AF Lamp is set to Auto, the AF lamp located in the front of the camera, see "Front View" on page 10, emits a red light by half pressing the Shutter button allowing the camera to focus easily.

To set AF Lamp

1. From the Record menu, select **AF Lamp**.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the **OK** button to save and apply changes.



Setting the AE-L/AF-L

This feature allows locking exposure or focus or both of them by pressing the AE/AF LOCK button. You can define the AE/AF LOCK button to be one of the following functions:

- AE-L: Lock/Unlock exposure.
- AF-L: Lock/Unlock focus.
- AE-L & AF-L: Lock/Unlock both exposure and focus.

Press the AE/AF LOCK button to unlock it.

To lock AE/AF, press the AE/AF LOCK button during movie recording or half press the shutter button then press the AE/AF LOCK button in Photo mode.



This function is shown only when Program mode is in use

Setting the Digital Zoom

This feature controls the digital zoom mode of your camera.

Your camera enlarges an image using the optical zoom first. When the zoom scale exceeds 4x, the camera uses digital zoom. To set Digital Zoom

1. From the Record menu, select **Digital Zoom**.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the **OK** button to save and apply changes.



The table below shows the available Digital Zoom settings.

Icon	Item	Description
	On	Enlarges all image sizes, but the image quality deteriorates.
	Off	Uses the optical zoom only.



Digital Zoom is not available if Face Tracking is on.

Setting the Date Stamp


The date of recording can be printed directly on the still images. This function must be activated before the image is captured. Once date and time are stamped on an image, they can no longer be edited or deleted.

Limitations of Date Stamp functions are as follows:

- Available for still images only.
- This feature does not apply continuous shooting mode.
- In vertical or rotated images, the date and time on your images still appear horizontally.

To set Date Stamp

1. From the Record menu, select **Date Stamp**.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the **OK** button to save and apply changes.

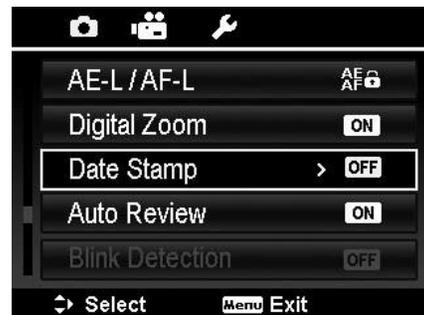

Setting Auto Review

The Auto Review function lets you view the captured image right after shooting it.

If Auto review is On, the camera will display the captured image for **1 second** on the LCD monitor.

To set Auto Review

1. From the Record menu, select **Auto Review**.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the **OK** button to save and apply changes.



Blink Detection

Nothing ruins a great picture more than having your subjects' eyes closed. Blink Detection provides you with extra assurance when capturing once-in-a-lifetime moments like holding a trophy with teammates after winning a basketball game.

If closed eyes are detected, a saving confirmation menu appears on the screen, allowing you to re-take the shot before your subject or subjects move on.

To activate Blink Detection

1. Enable Blink Detection from Record menu.
2. Half press the **Shutter button** to focus the subject. The frame turns green to indicate focus is set.
3. Press the **Shutter button** to capture the image and automatically save the Image.
4. If the camera detects subject blinked eye, a "**Save image**" or "**Cancel**" option appears on the screen.
5. Select **Save image** to save or **Cancel** to disregard




Blink Detection appears in Record menu only when Face Tracking is turned on.

Setting Grid Line

The Grid Line function will show a framing grid on the preview of your pictures. Available settings are: **On**, **Off**.

The configuration of Grid Line will be changed with different aspect ratio.

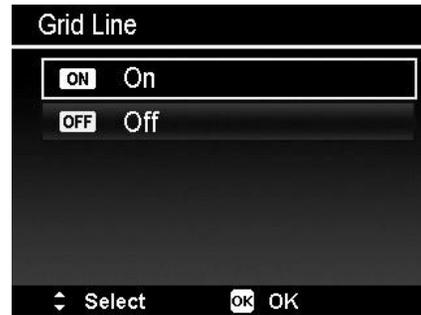

Setting Stabilizer

This function allows you to prevent blurred images caused by shaking.

1. Enable the Stabilizer under the Record Menu.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the OK button to save and apply changes.



Using the Movie Menu

You can access the Movie menu simply by pressing the **MENU button** on your camera.

When the menu is displayed, use the 4-way navigation control and the **OK** button to move through menu selections and apply your desired settings. To close the menu anytime, press the menu button again.

Setting Movie Mode

Use this function to adjust the resolution and quality of movie clips.






- The option FHD and HD only available when a SDHC class 4 or higher speed class card is inserted.
- Due to limits from the FAT format, VGA recording requires approximately 2 hours.

Setting Prerecord

You can catch the first three seconds of action you would have potentially missed. Once you have enabled this function, the camera starts recording video automatically before pressing Movie button. As soon as the Movie button is hit, the most recent three seconds of video are added to the beginning of the clip.

The icon is shown in red while the Prerecord is on.

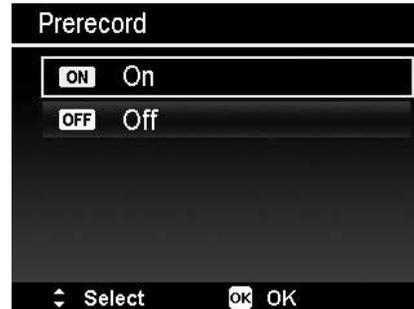

Prerecord will be cancelled in the following situation:

- After recording starts.
- Switch to Playback mode.
- Launch the Menu.
- Enter USB mode.
- Power off the camera.



Prerecord function will be disabled in the following situations:

- The prerecord time is less than 2 seconds.
- There is not enough internal memory to enable this function unless an additional memory card is inserted to the camera.

Setting Wind Cut

This feature reduces wind noise during movie recording.




Playback

You can playback still images and video clips on the LCD monitor.

Viewing in Single Navigation

The Single navigation mode displays the image one by one on the LCD monitor. To view images/video clips, follow the steps below.

1. Press the **Playback button**  on the camera.
2. The LCD monitor displays an image. To understand the icons and other information on the screen, please see "Photo Mode Screen Layout" on page 24.

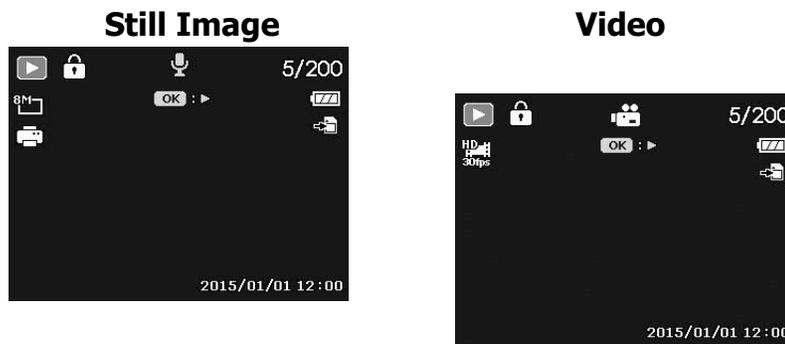

3. Use the ◀ or ▶ keys to view next/previous image/video.
4. To play a video clip, press the **OK** button. See "Playing Videos" on page 63 for more details.



15 When playing videos under playback mode, lens will retract after seconds, but the video playback will still continue.

Viewing Thumbnails

This function allows you to view 9 or 36 thumbnail images on the LCD monitor at the same time. Searching numerous images is much easier than single view navigation.

To set 9-images or 36-images mode

1. Press the Playback button  on the camera.
2. Press the Zoom button (left) once to enter 9-images mode or twice to enter 36-images mode.
3. Use the navigation controls to move through the items.
4. Press the OK button to select the image and view it normally.

Scroll bar.

If scroll bars appear, it indicates that the screen can be scrolled. 9 images (3x3) or 36 images (6x6) can be displayed at one time in Thumbnail Screen. Use the **4-way navigation control** to select the file and press the **OK button** to display the selected file in Single Navigation.



Thumbnail 3x3



Thumbnail 6x6

Thumbnail icons:

When you view the thumbnails, some images may contain icons. These icons indicate the type of file or recording.

Icon	Type	Description
	File Error	Indicates an error file.
	Video	Indicate videos with roll film pattern.

Magnify

The zoom view function works with still images only.

- In normal view, press the **Zoom button** (right) repeatedly until the desired zoom view appears.
- You can zoom to view an image of up to 12X.
- Use the navigation controls to view the zoomed image.



- Press the **Menu** button from any magnification ratio to return to Single Navigation.

Playing Videos

Press the **Playback button**  on the camera.

1. Use the navigation controls to scroll through the saved images. A video clip has a video icon displayed on screen.
2. Press the **OK** button to play the video.
3. During playback, press and hold the ◀ or ▶ keys to fast forward or rewind the video. The camera supports forward and rewind speed of up to 4x.
4. During playback, use the **Zoom buttons** to control volume. Press the right button to increase volume/Press the left button to decrease volume.
5. Press the ▲ key to pause playback. Press the key ▲ again to resume. When paused, the play info will remain on screen except  .
6. To forward or rewind the video frame by frame, press the key ▲ to pause playback, then press the ◀ or ▶ keys.
7. Press the ▼ key to stop the playback. The LCD monitor displays the video frame image in Single navigation mode.



- The play info, except the icon  , will be displayed when the video is paused, during REW/FF or frame by frame modes
- Volume cannot be adjusted when paused or during REW/FF modes.

Playing Voice Memo

Voice memo is separately recorded and attached to a captured image. See "Voice Memo" on page 68 on how to record voice memo.

1. Press the **Playback button**  on the camera.
2. Use the navigation controls to scroll through the saved images. An image file with voice memo has a voice memo icon located on the top centre of the LCD monitor. See picture on the right.
3. Press the OK button to play the voice recording.
4. During playback, use the **Zoom buttons** to control volume. Press the right button to increase volume/Press the left button to decrease volume.
5. Press the ▲ key to pause playback. Press the key ▲ again to resume. When paused, the play info will remain on screen except  .
6. Press the key ▼ to stop the playback. The LCD monitor displays the image in Single navigation mode.



Volume cannot be adjusted when you pause the voice memo.

Playback Menu

The Playback menu allows you to edit images, record voice memos, and setup playback settings.

To go to Playback Menu:

1. Press the **Playback button**  on the camera.
2. Press **Menu button** to launch the Playback Menu.
3. Use the ▲ or ▼ keys to move through the menu selections.
4. To select a menu, press ▶ or the **OK** button.
5. Change the submenu settings using the 4-way navigation control.
6. Press the **OK** button to save and apply settings.



Slide Show


The slide show function enables you to playback your photos, videos and error files according to naming order.

To view Slide Show:

1. From the Playback menu, select **Slide Show**. The Slide Show menu appears.
2. Set the slide show settings.
3. Select **Start**, then press the **OK** button to start the slide show.
4. During Slide Show, press the **UP** button to pause slide show.
5. Use the **▲** or **▼** keys to move through the options. Select whether to **Continue** or **Exit** the slide show.
6. Press the **OK** button to apply selected option.

To change slide show settings:

1. From the Slide show menu, use the **▲** or **▼** keys to move through the selections.
2. Select Interval setting. Press the **◀** or **▶** keys to adjust. Choose among the available interval settings: 1 sec., 3 sec., 5 sec., and 10 sec.
3. Select Repeat setting. Press the **◀** or **▶** keys to adjust. Available settings are: Yes, No.

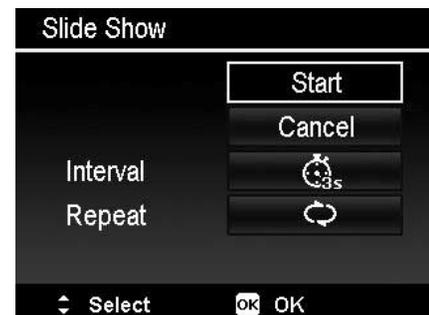

Protect

Set the data to read-only to prevent images from being erased by mistake.

A protected file has a lock icon  when viewed on Playback mode.

To protect files:

1. From the Playback menu, select **Protect**.
2. The Protect submenu is displayed on the LCD monitor.

Available select settings:


- **Single.** Select one file to lock/unlock.



- **Multi.** Select multiple files from the thumbnail view to lock/unlock.
- **Lock all.** Lock all files
- **Unlock all.** Unlock all files.


To protect/unprotect a single file:

1. Select **Single** in the Protect submenu, the images are displayed on the LCD monitor in single navigation mode.
2. Use ◀ or ▶ keys to scroll the display.
3. When the desired file is displayed on the LCD monitor, press the **OK** button to select **Lock/Unlock**.
4. To close the protect/unprotect function and go back to the Playback menu, select **Exit**.

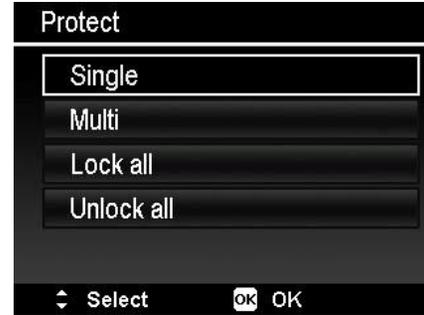


To protect/unprotect multiple files:

1. Select Multi in the Protect submenu, the images are displayed in thumbnail view on the LCD monitor.
2. Use the ◀ or ▶ keys to move through the files.
3. When the desired file is highlighted, use the ▲ or ▼ keys to mark/unmark the file for protection.
4. Repeat step 3 until all desired files to protect are marked.
5. Press the **OK** button to lock files and go back to Playback menu.

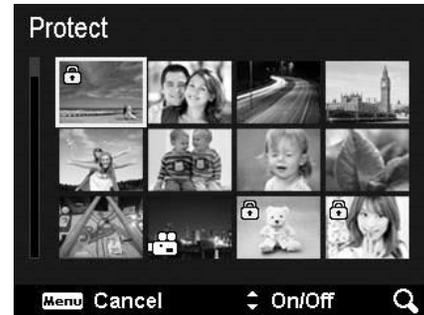


To protect all files:

1. Select **Lock all** in the Protect submenu. A confirmation message appears.
2. Select **Yes**.
3. Press the **OK** button to lock all files.

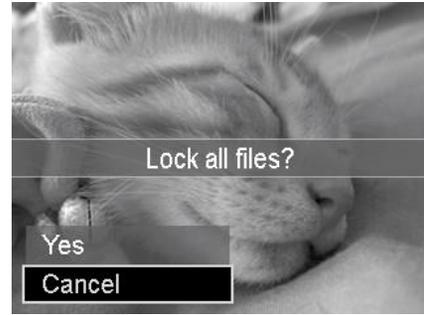

To unlock all files:

1. Select **Unlock all** in the Protect submenu. A confirmation message appears.
2. Select **Yes**.
3. Press the **OK** button to unlock all protected files.


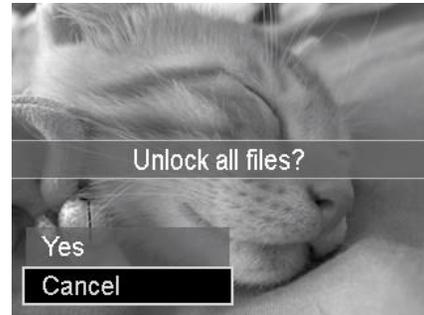


Voice Memo

A maximum of 30 seconds of audio can be recorded as a memo for captured still images.

To record voice memo:

1. Press the **Playback button**  on the camera.
2. Press the ◀ or ▶ keys to scroll and select an image to attach voice memo to.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Voice Memo**.
5. Select **Start**, then press the **OK** button to start recording.
6. Press the **OK** button again to stop recording.

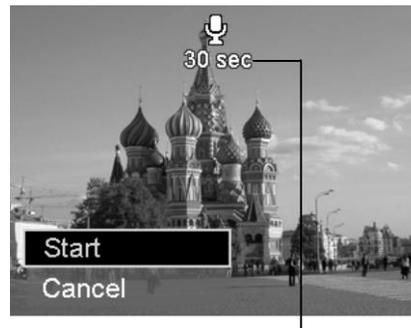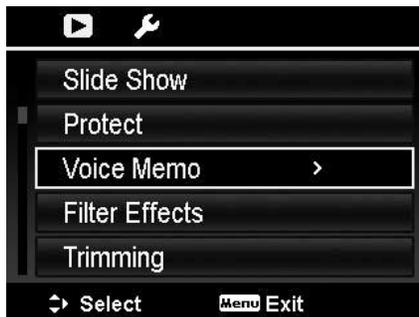

Time left (in seconds) for recording.




When you record a voice memo for an image with an existing voice memo, the old recording file would be replaced by the new one.

Filter Effects

Filter Effects function is only applicable to aspect ratio **4:3** photos with different artistic effect. Edited images in this function are saved as new files.

To activate Filter Effects:

1. Press the Playback button  on the camera.
2. Press the ◀ or ▶ keys to scroll and select an image to edit.
3. Press the **MENU** button to launch the

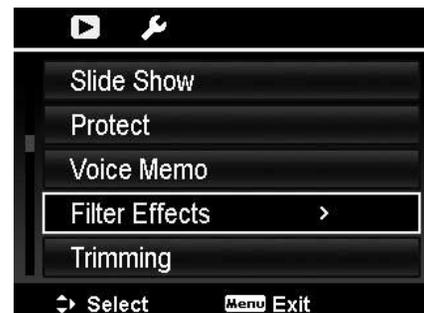

Playback menu.

4. Select **Filter Effects**. The Filter Effects submenu appears.
5. Press the ▲ or ▼ keys to scroll and **OK** button to select an option.

The succeeding table shows the available settings.

Item	Description
Soft	Image is applied with soft effect.
Colour Emphasis	Retains the colour tone you choose while the rest of the scene becomes black and white.
Vivid	Image is applied with more contrast and saturation emphasizing the bold colours.
Miniature Effect	Parts of the image will be blurred making the scene look like a miniature scale model. It is recommended to apply it to an image that is captured from a high angle to simulate the miniature effect.
Astral	Image is applied with starburst.
Impressive Art	Image is applied with dramatic contrast.
Painting	Image is applied with watercolour effect. Please note that if one image is applied with Painting function already, it cannot be applied with Astral again.
Negative	Image appears to be the opposite of the original image.
B&W	Image is applied with black and white.
Mosaic	Image is applied with mosaic tiles.
Sepia	Image is applied with sepia tones.

Trimming

The Trim function allows you to trim an image to another image size. This function is only available for still images.

To trim an image:

1. Press the Playback button  on the camera.
2. Press the ◀ or ▶ keys to scroll and select an image to trim.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Trimming**. The Trim screen layout is displayed on the LCD monitor.
5. Use the **Zoom button** to change the trimming frame as zoom in/out.



No.	Description
1	Enlarged image
2	4-way indicator
3	Trimmed size
4	The approx. location of the trimmed area
5	Image area



6. Use the navigation controls to move the image.
7. Press the **OK** button to apply changes. A menu selection appears.
8. Select whether to:
 - **Yes.** Save the new file as a new one.
 - **Cancel.** Cancel setting and go back to Playback Menu.
9. Press the **OK** button to save/cancel changes.




- Trim function is not available for images with image size set to VGA.
- All images will be trimmed in 4:3 ratio regardless of its original image ratio.

Resize


Resizes a previously saved image to create a small copy photo; only resizing to a smaller size is available.

To resize an image:

1. Press the **Playback button**  on the camera.
2. Use the ◀ or ▶ keys to scroll and select an image to resize.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Resize**. The Resize submenu is
5. Select size among: 640, 320, and 160.
6. After selecting size, a menu selection appears.
7. Press the **OK** button to save/cancel changes.
8. The resized image is saved as a new photo.

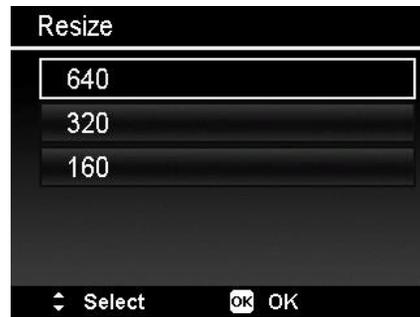

displayed on the LCD monitor.

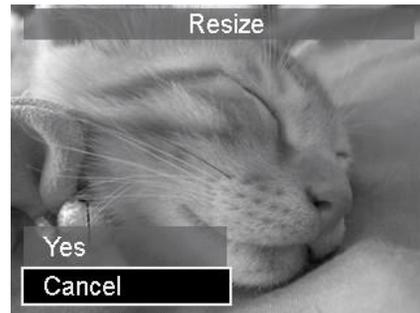


• Resize function is only applicable to aspect ratio 4:3 photos.

- The original photos can be resized more than once. However, each resized photo cannot be resized again.

Startup Image

You can specify the startup image from the captured images on the camera.

1. Press the **MENU** button to launch the Playback menu.
2. Select **Startup Image**. The menu selection appears.
3. Select options:
 - **System**. Use camera default image.
 - **My Photo**. Use the ◀ or ▶ keys to scroll and select desired image.
 - **Off**. Disable the startup image.
4. Press the **OK** button to apply changes.

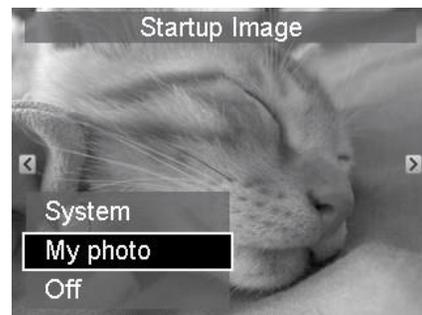

The startup image will still be displayed even if the selected image was deleted.

DPOF

DPOF is the abbreviation for Digital Print Order Format, which allows you to embed printing information on your memory card. You can select the images to be printed and how many prints to make with the DPOF menu in the camera or insert the memory card to the card compatible printer. When the printer starts printing, it will read the embedded information on the memory card and print the specified images.

To set DPOF:

1. Press the **Playback button**  on the camera.
2. Press **Menu button** to launch the Playback Menu.
3. Select **DPOF**. The submenu appears.

Available settings are as follows:

- **Select Images.** Mark images in the memory card.
- **Reset.** Reset all DPOF settings to initial default settings.




To set DPOF on images:

1. Select **Select Images** on the DPOF submenu.
2. Use the ◀ or ▶ keys to scroll and select images to mark for printing.
3. When the desired image is highlighted, use the ▲ or ▼ to increase/decrease number.
4. Press the **OK** button to define the DPOF settings and select **Done** to save DPOF settings.



To reset DPOF:

1. Select **Reset** on the DPOF submenu.
2. The camera auto reset all DPOF settings.

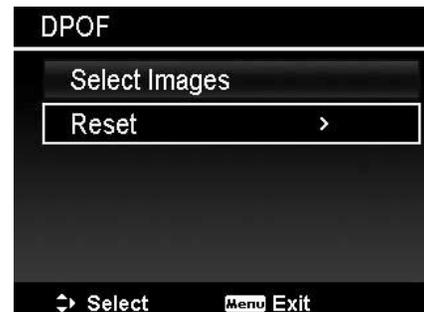


Copy

Use this feature to copy images between internal memory and memory card.

To copy images between internal memory and memory card:

1. Press the **Playback button**  on the camera.
2. Press **Menu button** to launch the Playback Menu.
3. Select **Copy** and choose a method you want to copy images to. After choosing, available settings are as follows:
 - **Selected images.** Select the chosen images from the storage device
 - **All images.** Copy all images to the storage device you prefer.

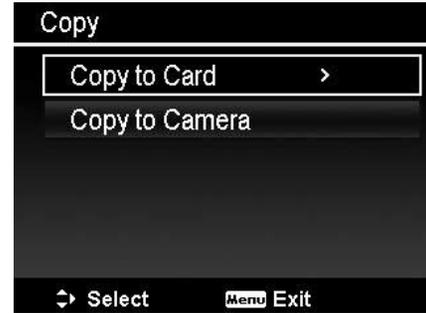


To copy selected images:

1. Select **Selected images** on the Copy submenu.
2. Use the ◀ or ▶ keys to scroll and select images to mark for Copying.
3. When the desired image is highlighted, use the ▲ or ▼ keys to mark/unmark the file for copying.
4. Press the **OK** button and select **Yes** to start copying.



To copy all images:

1. Select **All images** on the Copy submenu.
2. Select **Yes** to start copying.

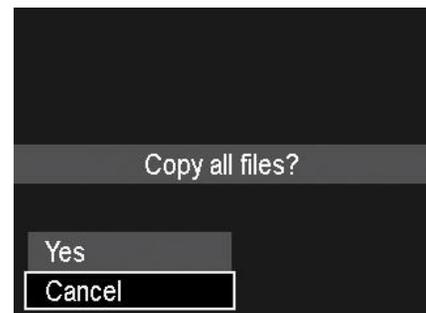

If no memory card or a locked card is inserted, this option would be in grey.


Movie Paste

Use this feature to combine two videos with the same specification (movie size and fps) into one video. To combine two videos:

1. Press the **Playback button**  on the camera.
2. Use the ◀ or ▶ keys to scroll and select the original video.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Movie Paste**. The videos with the same specification as the original video are displayed on the LCD monitor.
5. Use the ◀ or ▶ keys to scroll and the ▲ or ▼ keys to mark/unmark the second video.
6. Press the **OK** button and select **Yes** to merge it to the end of the original video and overwrite it.



- The total length of the combined video cannot be over 30 minutes.
- After combining videos, the second video will no longer exist with a separate file.

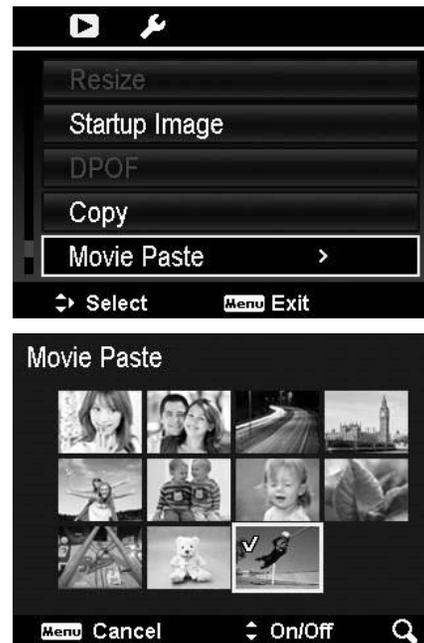


Face Retouch

This function is only applicable to still images that were captured with Face Tracking.

When you enter the Face Retouch menu, if the photograph has over two faces locate the cursor on the picture, if the photograph has one face locate the cursor on the function at the right side of the menu.

Only one face can be retouched at a time. All functions will be reset to 0 when you exit from Face Retouch menu, no matter if you save the picture or cancel the setting.

Pictures that have been edited with Face Retouch will be saved as new images and can be edited with this function again.

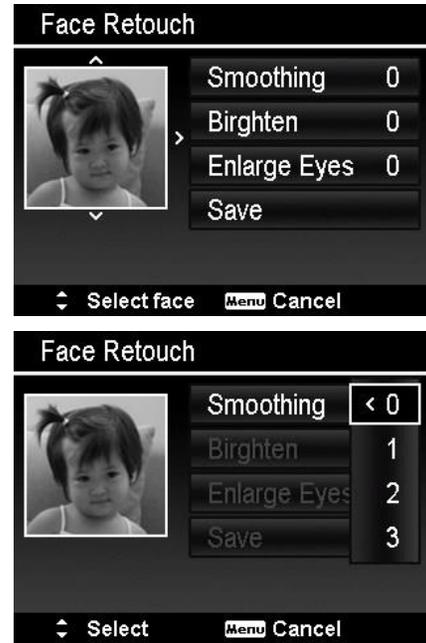


Item	Available Settings	Description
Smoothing	0-3	The Smoothing levels are 0-3.
Brighten	0-3	The Brighten levels are 0-3.
Enlarge Eyes	0-3	The Enlarge Eyes levels are 0-3.
Save	N/A	Save the image.

Using the Setup Menu

You can access the Setup menu whether you are in Record or Playback mode. The Setup menu allows you to configure general camera settings.

To go to Setup Menu:

1. Press **Menu** button to launch the Record/Playback Menu.
2. Use the ◀ or ▶ keys to switch the menu tab to **Setup** menu.
3. Use the ▼ or ▲ keys to move through the menu selections.
4. To select an item, press the **OK** button or ▶ key.
5. Change the submenu settings using the 4-way navigation control.
6. Press the **OK** button to save and apply settings.

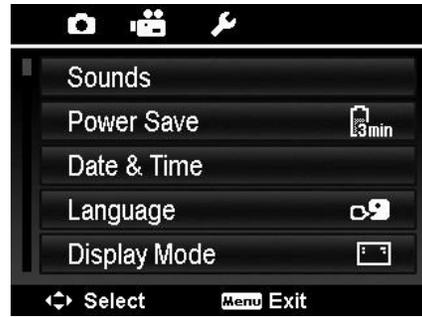

Setting Sounds

Use the Sound menu functions to control the sounds produced by the camera.

1. From the Setup menu, select **Sounds**.
2. Adjust sound settings.
3. Press the **OK** button to apply changes.




Item	Available Settings	Description
Startup	Sound 1, Sound 2, Sound 3, Off	Selects the startup sound when camera is turned on.
Shutter	On, Off	Enables or disables shutter sound when Shutter button is pressed. Shutter sound is not available when recording videos.
Beep volume	0-4	Adjusts volume.

Setting Power Save

The Power Save function allows you to set an idle time after which the camera automatically gets into sleep mode to save power. After a minute of being in sleep mode, the camera eventually turns off.

This function is not available in the following instances:

- Recording a video file
- Playing a Slide Show/video file
- Using the USB connector
- AE/AF has been locked
- During Movie Paste
- During interval time on Time Lapse

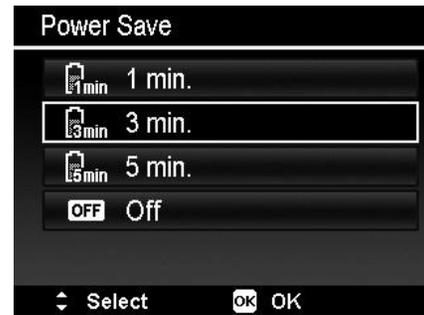

Setting Date & Time

Use the Date & Time function to set the date and time of your camera. This function is useful in attaching date stamps on captured images. Your camera uses a 24-hour time format.

1. Press the navigation controls to adjust date and time value. By holding down the ▼ or ▲ keys, the numeric values changes continuously.
2. Press the **OK** button to apply changes.



Setting Language

Specify in which language menus and messages are to be displayed on the LCD monitor.

1. Use the navigation control to scroll through the list and select the desired language.
2. Press the **OK** button to confirm and apply settings.




Setting Display Mode

This function controls the icon display on the LCD monitor for both Record mode and Playback mode.

Available settings are: On, Detailed Info, Off.

If Display Mode is set to Off, the mode icon and remaining shots will display for 2 seconds in the following situations:

- Power on the camera
- Switch from Playback to Record mode
- After shooting
- Close the menu and back to preview

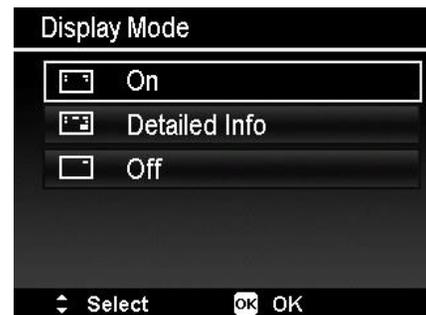


Setting TV Out

Use the TV Out function to adjust video output signal to accommodate different regional settings. If TV out is not set correctly, the image may not display properly on TV.

Available settings are:

- **NTSC.** Applicable in Japan, USA, Canada, Taiwan and others.
- **PAL.** Applicable in Europe, Asia (excluding Taiwan), Oceania and others.

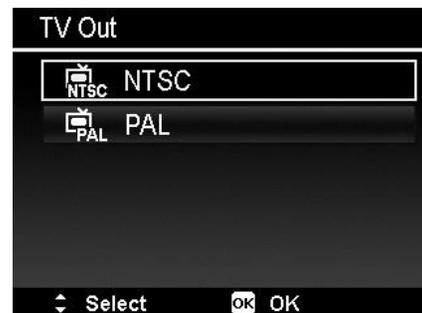


Setting LCD Brightness

Select a brightness level for the LCD monitor.


Available settings are:

- **Auto.** Auto detects the LCD brightness.
- **Bright.** Enhance the LCD brightness.
- **Normal.** Normal LCD brightness.

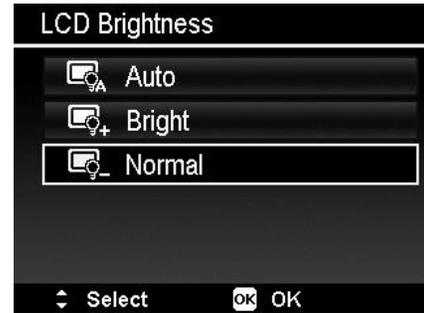

Setting Format

This utility formats current used memory (Internal memory or Memory card) and erases all stored images and data.

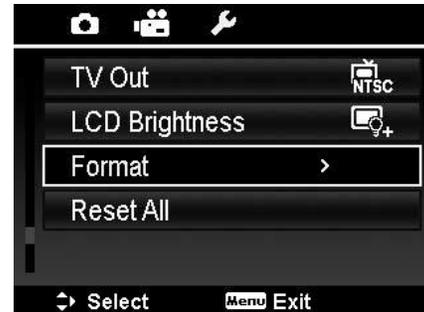


If a locked card has been inserted, the option would be grey.

Reset All

Use this function to reset the camera to its factory settings. However, the following settings are exceptions and are not affected by Reset.

- Date & Time
- Language
- TV Settings
- Custom White Balance data

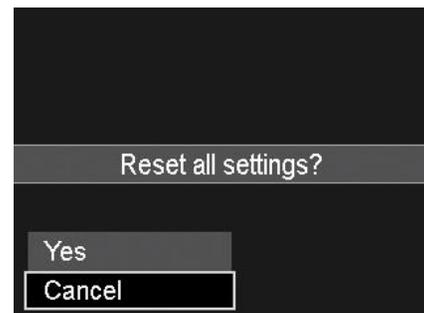

Making Connections


You can connect your camera to: TV, computer, or a printer.

Connecting the Camera to a TV

You can play back your images on a TV screen. Before connecting to any video devices, make sure you select NTSC/PAL to match the broadcast standard of the video equipment you are going to connect to the camera.

To connect your camera to a TV:


1. Turn on the camera.
2. Set the TV to match the TV's video out format. See "Setting TV Out" on page 78.
3. Connect the USB/AV 2-in-1 cable to the USB port on the bottom of your camera.
4. Connect the other end of the cable to the TV's AV input port.
5. The LCD monitor turns black and all images and video clips are displayed on the TV.

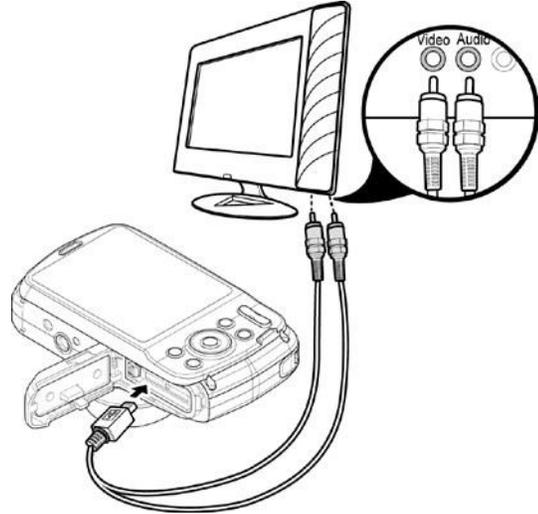

Connecting the Camera to a PC

You can transfer images and video files to your PC.

1. Connect one end of the USB cable to an available USB port on your computer.
2. Connect the other end of the USB cable to the USB terminal on the camera.
3. Turn on the camera.

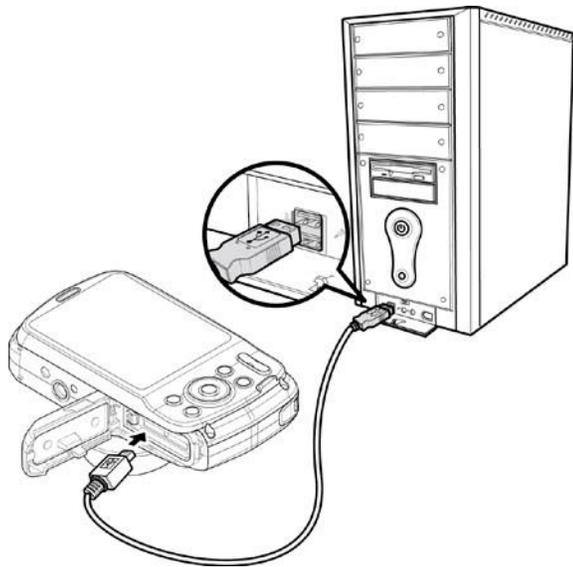

4. The PC starts to detect the connection while the LCD monitor appears **Connecting...**



5. Connection established and the LCD monitor will be turned off.
6. Access the files in the camera by your PC.




- The camera's internal memory and memory card would display as removable drives in Vista/Win7/Win8 PC.
- When this camera is connected to your PC, two removable drives will display. Please click AP link (Magix) in the second drive, and then Setup window will display (an Internet connection is required). After installation, you can import / edit your photos, movies and music. Please note that AP link (Magix) is the trial version and will be used permanently after registration.

Connecting the Camera to a Printer

You can print your images directly using a **PictBridge compatible** printer.

1. Turn on your Printer. Check that the printer is turned on, there is paper in the printer, and there are no printer error messages.
2. Connect one end of the USB cable to the printer and the other end to the USB terminal on the camera.
3. Enter the print mode and print the selected images.

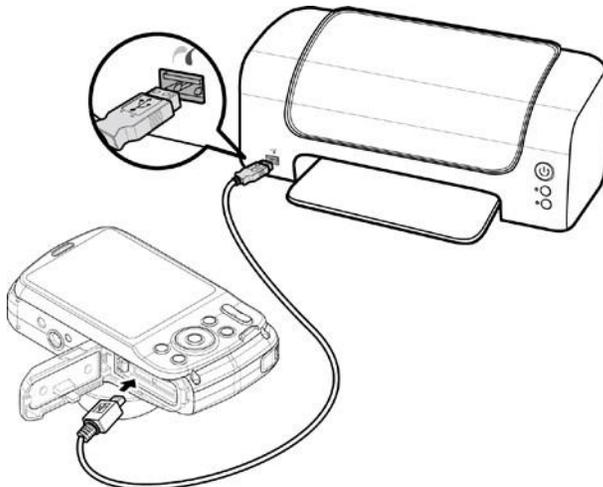


For more details on "Setting the Print Mode Menu" go on to the following page.

Setting the Print Mode Menu

Print Mode menu appears on the screen after the connection between a printer and your camera is established.


Print Mode includes three major settings:

- **Print Select.** An image can then be selected to print.
- **Print All.** Prints all images.
- **Print DPOF.** Prints the images which are set DPOF.

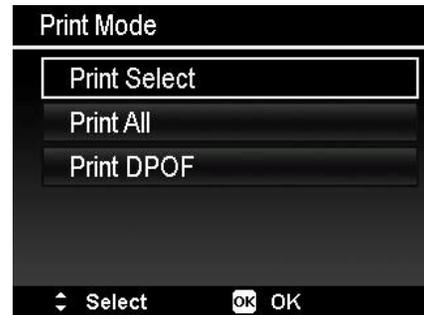

To set Print Select

1. Use the ◀ or ▶ keys to scroll and select an image for printing.
2. Specify the number of copies. Use the ▲ or ▼ key to increase/decrease number.
3. Press the **OK** button to enter printer settings.

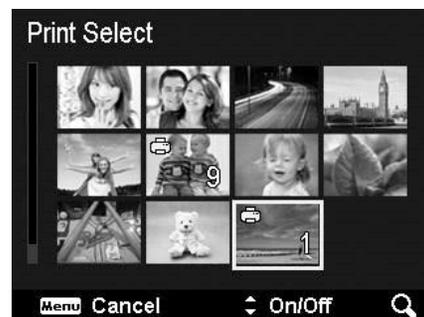


To set Print All and Print DPOF

Repeat the same steps 1 to 2, then enter printer settings.

To set Printer Settings

1. Use the ▲ or ▼ key to specify a print option.
2. Modify paper size, quality, date and info by the ◀ or ▶ keys. Available setting:
 - Paper size: Default / A4 / 4"x6"
 - Quality: Default / Fine / Normal
 - Capture Date: Yes / No
 - Capture Info: Yes / No
3. Select **Print** on the screen for printing.

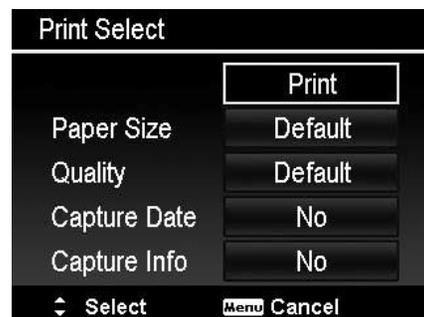

Or **Cancel** to go back to Print Mode. Start Printing

- LCD monitor appears "Now printing...".
- Or press Menu button to stop printing anytime.



Appendix

About Folder and File Names

Your camera automatically creates a specific directory of folders in the internal memory cards to organize captured images and video files.

File Naming

File names begin with "DSCI" and are followed by a 4-digit number that increases in sequence. File numbering starts from 0001 when a new folder is created.

The highest file number is 9999, if exceeds 9999, the camera will start over the file number from 0001.



Do not change the folder and file names in the memory card using your PC. It may be unable to playback the data using the camera.

Troubleshooting

Problem	Cause and/or Action
Camera does not turn on.	The battery may be exhausted, charge or replace.
Camera turns off automatically.	<ul style="list-style-type: none">• Power Saving may have activated. Turn power back on.• The battery may be exhausted. Charge the battery.
Empty battery icon is displayed on the LCD, then the camera turns off.	The battery is exhausted, charge or replace.

LCD monitor displays "Not available for this file".	Function is only available for specific file types. File format is not supported.
LCD monitor displays "Memory full".	Memory card is full. Replace the memory card with a new one or delete unnecessary images.
LCD monitor displays "File locked".	This file is locked. Unlock the file. See "Protect" on page 66.

Problem	Cause and/or Action
LCD monitor displays "Card locked".	The memory card is protected. Remove the card and slide the write-protect switch to its unlock position.
LCD monitor displays "Card error".	Memory card format may not be supported by the camera. Please go to Setup menu to format the card.
LCD monitor displays "Memory card is damaged".	The card may be damaged. You can either change the card or wipe to clean the connected points.
LCD monitor displays "Copy error".	The memory card is protected. Remove the card and slide the write-protect switch to its unlock position. The memory card is full. Replace card or delete unnecessary files.
No image displays on the TV screen.	Incorrect TV-out type was selected. Set the correct TV-out type to match your TV system.
The lens got stuck up.	Do not force the lens to go back. The type of the battery used may be incorrect or the battery power level is too low. Change the battery or charge the battery before using the camera.

Specifications

Sensor	20M Pixels
Lens	Focal Length: 26 mm ~ 104 mm (35 mm equivalent) 4x optical zoom, 8x digital zoom
LCD monitor	2.7" Colour LCD
Focusing Range	Normal: Wide: 5 cm ~ infinity Tele: 60 cm ~ infinity Macro: Wide: 5 cm ~ 100 cm Tele: 60 cm ~ 200 cm Super Macro: Wide: 5 cm
Aperture	Wide: F3.2; Tele: F5.8
Shutter	Shutter Speed: Auto: 1 - 1/2,000 sec. Night: 1 - 1/2,000 sec. Fireworks: 4 sec.
File Format	Still Image: EXIF 2.3 compatible format (JPEG compression) AVI (Video: MJPEG , Audio: mono) Audio: WAV
Resolution (Photo)	Aspect ratio 4:3 20M (5152 x 3864), 8M (3264 x 2448), 5M (2592 x 1944), 3M (2048 x 1536), VGA (640 x 480) Aspect ratio 3:2 5152 X 3435 Aspect ratio 16:9 14M (5152 x 2898), 2M (1920 x 1080) Aspect ratio 1:1 2992 x 2992

Resolution (Movie)	<ul style="list-style-type: none"> • 720p30 • VGAp30
Scene Mode	Intelligent Scene, Program, Portrait, Landscape, Underwater, Sunset, Dawn, Backlight, Kids, Night Scene, Fireworks, Snow, Beach, Sports, Party, Candlelight, Night Portrait, Soft Skin, Flowing Water, Food, Love Portrait, Self Portrait, D-Lighting, Time Lapse, Panorama, Art Effect, Burst, Speedy Burst, GIF Capture
ISO Equivalent	Auto, ISO 100, ISO 200, ISO 400, ISO 800, ISO 1600, ISO 3200, ISO 6400
Maximum ISO Auto	ISO 200, ISO 400, ISO 800
White Balance	Auto White Balance, Daylight, Cloudy, Tungsten, Fluorescent 1, Fluorescent 2, Custom
Exposure Control	+2.0EV / +1.7EV / +1.3EV / +1.0EV / +0.7EV / +0.3EV / 0EV / -0.3EV / -0.7EV / -1.0EV / -1.3EV / -1.7EV / -2.0EV
Metering	Multi, Center, Spot
Self-timer	Off, 10 sec., 2 sec., Double
Flash	Auto Flash, Red-eye Reduction, Forced On, Slow Sync, Forced Off
Storage	Internal memory: 64MB flash memory External memory: SD (up to 4GB), SDHC card (up to 32GB guaranteed), SDXC card (up to 64GB guaranteed)
OSD Language	English, Français, Español, Deutsch, Italiano, Русский, Português, Português BR, Nederlands, Türkçe, Polski, Magyar, Română, Čestina, Български, Hrvatski, Slovensky, Slovenščina, Ελληνικά, Svenska, Norsk, Suomi, Danish, عربي, Indonesia, Malay, ไทย, 日本語, 한국어, 简体中文, 繁體中文
Interface	USB/AV OUT
TV system	NTSC/PAL (selected by Setup MENU)

Battery	Li-ion battery: NP45 (3.7V 700mAh)
Battery Level	Full-Half (65% ± 15%) Half-Low (25% ± 15%) Low-Exhausted (10% ± 10%)
USB adapter	Rated input voltage: AC 100V-240V (160mA, 50/60Hz) Rated output voltage: DC 5V/1A Operating temperature: 0°C - 40°C
Operating Temperature	0°C - 40°C
Operating Humidity	0% - 90%
Microphone	Built-in
Speaker	Built-in
Dimensions	107.5 x 66.15 x 50.45 (mm) (with the lens mounting ring)
Weight	162 g (no battery) 178 g (with battery)