
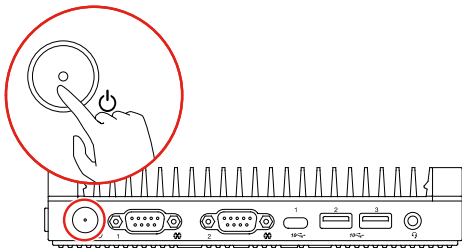
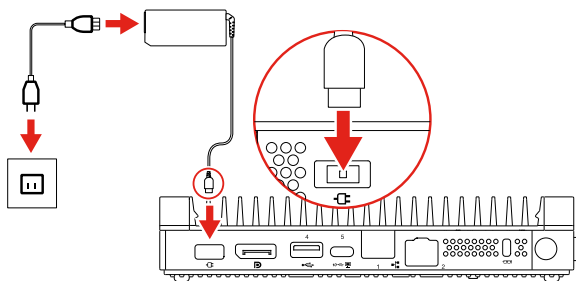


ThinkCentre M90n-1


Setup Guide

Lenovo

Initial Setup

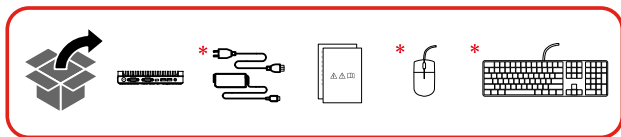

Overview

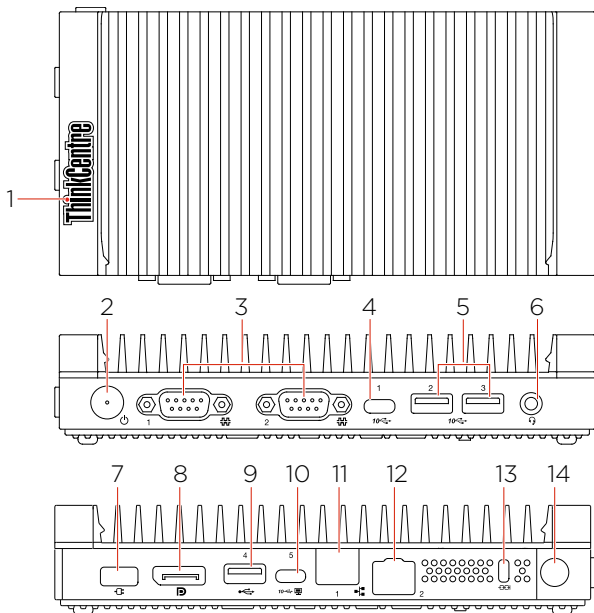

1. ThinkCentre® LED
2. Power button
3. Serial connectors (2)
4. USB-C™ connector (USB 3.1 Gen 2)
5. USB 3.1 connectors Gen 2 (2)
6. Headset connector
7. Power adapter connector
8. DisplayPort® 1.2 out connector
9. USB 2.0 connector / USB 3.1 connector Gen 2
10. USB-C connector (USB 3.1 Gen 2)
- * 11. Ethernet connector
12. Ethernet connector
13. Security-lock slot
- * 14. Wi-Fi antenna slot

* For selected models

i Read the statement on USB transfer rate in the *User Guide*. Refer to the *Safety and Warranty Guide* for accessing the *User Guide*.

Additional information

European Union – compliance with the Radio Equipment Directive

Hereby, Lenovo (Singapore) Pte. Ltd., declares that the radio equipment type ThinkCentre M90n-1 is in compliance with Directive 2014/53/EU.

The full text of the system EU declaration of conformity and the EU wireless module declarations are available at the following Internet addresses:

- For desktop and all-in-one computers:
<https://www.lenovo.com/eu-doc-desktops>
- For workstations:
<https://www.lenovo.com/eu-doc-workstations>

This radio equipment operates with the following frequency bands and maximum radio-frequency power:

Technology	Frequency band [MHz]	Maximum transmit power
WLAN 802.11b/g/n	2400 - 2483.5	< 20 dBm
WLAN 802.11a/n/ac	5150 - 5725	< 23 dBm
WLAN 802.11a/n/ac	5725 - 5875	< 13.98 dBm
Bluetooth BR/EDR/LE	2400 - 2483.5	< 20 dBm

E-manual



First Edition (June 2019)

© Copyright Lenovo 2019.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Reduce | Reuse | Recycle

