

Welcome Start Guide



SAMSUNG Galaxy Tab S6



My carrier

This guide provides you with the information you need to get started. For more information and additional support, please visit [T-Mobile.com/support](https://www.t-mobile.com/support) where you can:

- Register at my.t-mobile.com to check your minutes, pay your bill, upgrade your device, and change your rate plan.
- Review your device's User Manual and troubleshooting FAQs.
- View the latest troubleshooting solutions in the Support Forums or ask a question of your own.

Access account information:

- From a home screen swipe up, and then tap T-Mobile folder > T-Mobile.
- Choose from an available category.

Services

If you are a new T-Mobile® customer and your service is not yet activated, call Customer Care at 1.800.937.8997 and a T-Mobile Activations representative will assist you.

You need the following information when activating service:

- Your Service Agreement and the agent code on your Agreement
- Your name, home address, home phone number, and billing address
- Note:** For business and government accounts, please provide the name of the organization, the address, and the tax ID.
- Your Social Security number, current driver's license number, and date of birth for credit check purposes

- Your choice of T-Mobile rate plan and services (see [T-Mobile.com](https://www.t-mobile.com) for the latest plan information)
- SIM serial number and IMEI number (located on the box barcode label)

Service or use is your agreement to T-Mobile's Terms and Conditions. T-Mobile requires Arbitration of Disputes unless, for new customers, you opt-out within 30-days, or for existing customers, you previously opted-out. Failure to activate service within 30-days from purchase will also be considered acceptance. For details, see T-Mobile's Terms and Conditions at [T-Mobile.com/terms-conditions](https://www.t-mobile.com/terms-conditions).

About your device




- Camera**
- Volume**
- S Pen**
- S Pen button**
To charge the S Pen, place the S Pen on the slot with S Pen button facing up, and the tip facing down.
- Camera**
- Side key (Power/Bixby)**
 - Power on: Long press
 - Short press: Lock screen
 - Long press: Bixby Voice
 - Double press: Launch camera
 - Power off: Long press with Volume down
- SIM/micro SD**
- USB C/USB C Audio port**

Set up your device

Remove SIM/microSD tray
Use the tool to open the SIM/microSD™ card tray.

Insert SIM/microSD card
Slide the SIM card and the optional microSD card (microSD card sold separately) into the tray with the gold contacts facing down.


Charge your device
Before turning on your device, charge it.
Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

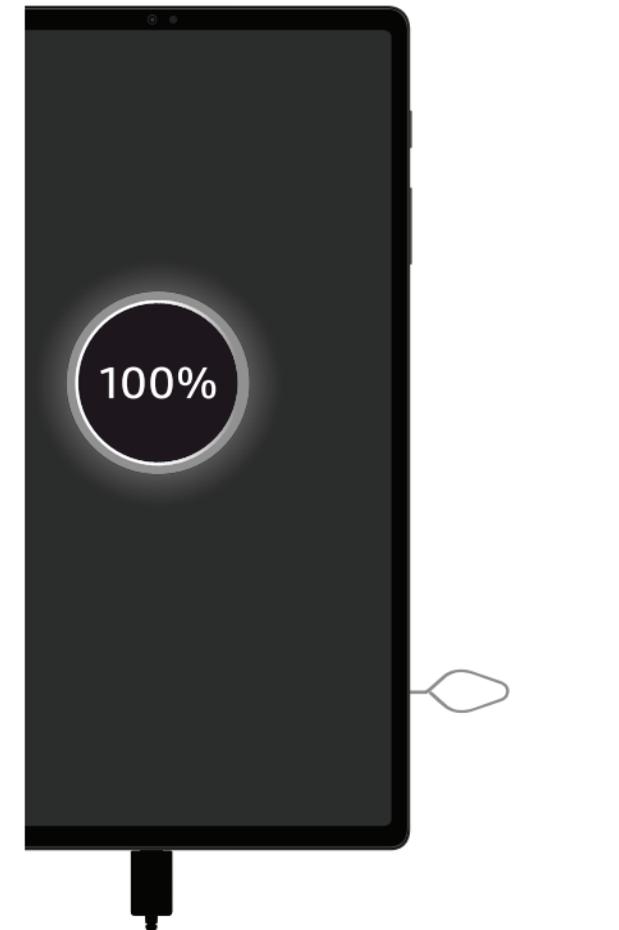

Customize your device


From a home screen swipe up, and then tap **Settings** to customize, connect or turn on options to personalize your device:

- Wallpaper** Change the look of the Home and Lock screens.
- Accounts and backup** Tap Users to add additional users for the device.
- Biometrics and security** Set biometric security options.
- Connections** Connect to Wi-Fi network, Bluetooth device and other connection options.
- Lock screen** Select a screen lock type and set security options.
- Display** Customize the Home screen and display brightness.
- Sounds and vibration** Set device volume and sounds.

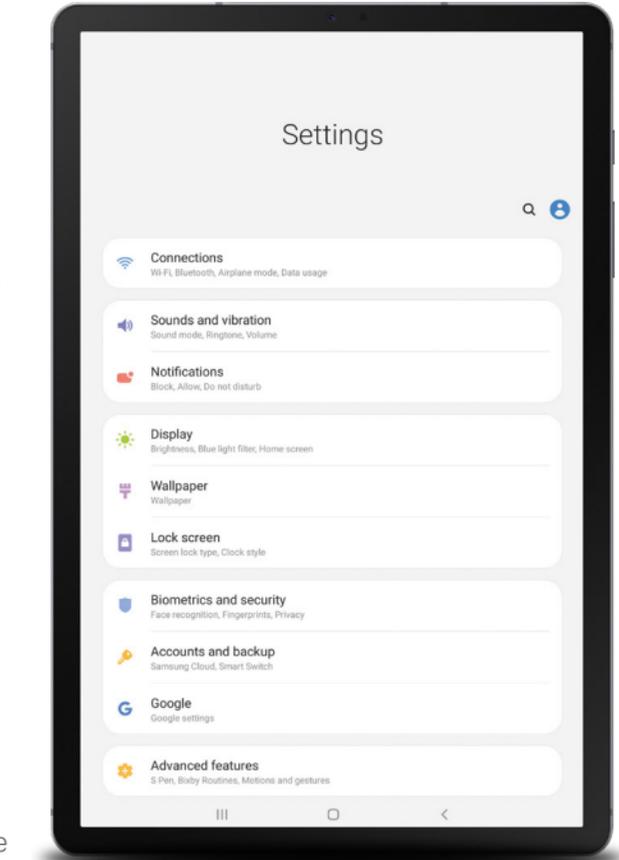

Search

From the home screen swipe up, and search for anything on the device. For example enter an app or settings name.

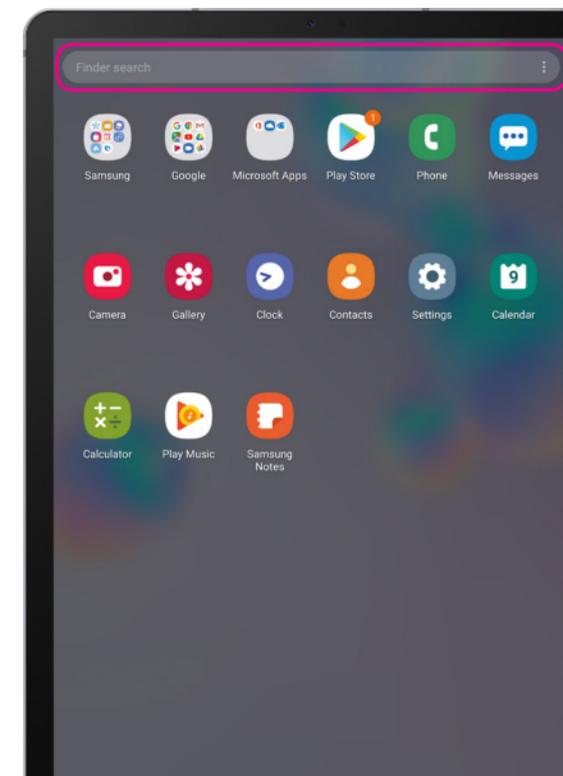

Call and text without your phone

Never miss a call and directly reply to messages even if your phone is out of reach.

1. Sign in to your Samsung account.

2. From **Settings** , tap **Advanced features**  > **Call & text on other devices** and follow the prompts to complete setup.

Follow the same step to setup Call and message continuity on your phone.

3. Once both devices are connected, the device will appear on the connected device list.

Note: Emergency calls can only be made using your phone.

4. To make a call from your tablet, tap **Phone** .



S Pen

The S Pen™ enables fast, accurate, and precise input while providing a natural writing experience. Write and draw directly into emails or the calendar, as well as Word, Excel, PowerPoint, and PDF documents.

S Pen button

Press and hold the S Pen button to open an app remotely.

A single or double press can open an app, capture a photo, navigate, scroll and more.

Remove the S Pen, and tap **Settings**  > **Air actions** to set the S Pen remote features.



Air Command

To launch Air Command, tap the screen with the tip of the S Pen and then tap .

▪ **Create note** Create short notes.

▪ **View all notes** Displays notes.

▪ **Smart select** Instantly outline and crop anything on the screen and freely edit or share with others.

▪ **Screen write** Capture a screen image and write or draw on it.

▪ **Live messages** Create a short animated message.

▪ **AR Doodle** Draw and write on photos.

▪ **Translate** Hover the S Pen over a word to view its definition and pronunciation.

▪ **Penup** Draw, color, edit, and share live drawings.

▪ **Add shortcuts** Select an app or function to open or turn on using Air command.

Learn more

Need help?

Use the Help feature to access the user manual and other information on how to use your device, including:

 Downloading apps

 Downloading apps created for Galaxy devices.

 Connecting and controlling smart devices

 Managing contacts

 Configuring accessibility settings

To open, from the Home screen, swipe up and tap **Settings**  > **Help** .

Samsung Care

How can we help you?

Get to know your product:

- Access user manuals, tips and more at samsung.com/us/support.

Ask the community:

- Ask questions and get solutions from Samsung customers, at us.community.samsung.com.

Contact us for support:

- For hardware or software support, visit samsung.com/us/support/contact or call us at 1.800.SAMSUNG.
- Find a service location near you, at samsung.com/us/support/service/locations

Legal

APPROVED FIRMWARE VERSIONS

This device will only operate with firmware versions that have been approved for use by T-Mobile and the device manufacturer. If unauthorized firmware is placed on the device it will not function.

INFORMATION ABOUT SAFEGUARDING HANDSETS

T-Mobile encourages customers to take appropriate measures to secure their handsets and invites them to take advantage of the features available on this handset to help secure it from theft and/or other unauthorized access and use. This handset has a locking function (e.g., user-defined codes or patterns) that can serve as a first line of defense against unauthorized use or access to stored information. Preloaded security applications that allow customers to track or locate misplaced devices can be found on several T-Mobile devices. Lost or stolen devices should be immediately reported to T-Mobile so that proper measures can be taken to protect accounts. For additional information, visit: T-Mobile.com/devicesecurity and T-Mobile.com/responsibility/privacy/privacy-choice/protecting-your-privacy.

ADDITIONAL INFORMATION

Use of some content or features may require qualifying service, or access to a Wi-Fi connection.

Coverage not available in some areas.

See **Terms and Conditions (including arbitration provision)** at T-Mobile.com, for rate plan information, charges for features and services, and restrictions and details.



©2019 Samsung Electronics America, Inc. Samsung and Galaxy Tab are both trademarks of Samsung Electronics Co., Ltd. Google Play, Gmail, Chrome, YouTube and Google are trademarks of Google LLC. LTE is a trademark of ETSI. T-Mobile and the magenta color are registered trademarks of Deutsche Telekom AG.

Device and screen images simulated. Appearance of device may vary.