

ST121UTP

Instruction Manual

VGA Video Extender

VGA Video Extender over Cat5

CONVERGEAV **StarTech.com** 
Making hard-to-find easy!®

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Table of Contents

Introduction	1
Packaging Contents.....	1
System Requirements	1
Installation.....	1
Hardware Installation.....	1
Local Unit.....	2
Remote Unit.....	2
Driver Installation.....	4
Troubleshooting	5
Wiring Diagram	6
Specifications.....	7
Technical Support.....	8
Warranty Information	8

Introduction

Packaging Contents

- 1 x ST121UTP Local Unit
- 1 x ST121UTP Remote Unit
- 1 x Mounting Bracket kit
- 2 x Power Adapters
- 1 x Instruction Manual

System Requirements


- VGA enabled video source and display
- Available power outlet at local and remote locations

Installation


Hardware Installation

This product is composed of two different units: the Local Unit and the Remote Unit. The Local Unit takes the output from a VGA signal source (usually a computer) and transmits it to the Remote Unit over Category 5 Ethernet cable. The remote displays (monitor, projector, etc) connect to the Remote Unit using standard VGA connections and displays the image from the local computer onto the remote displays.

Local Unit

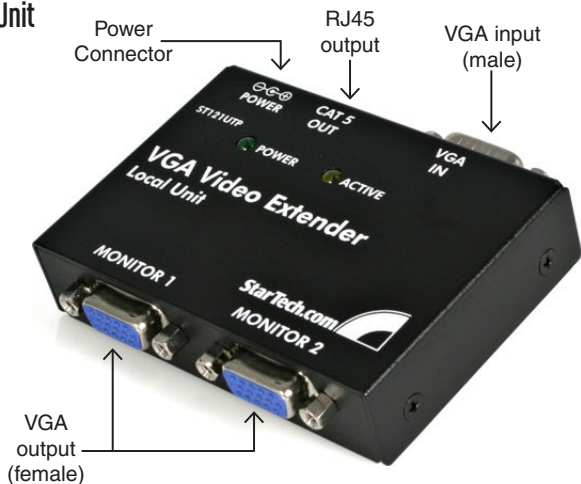

Remote Unit

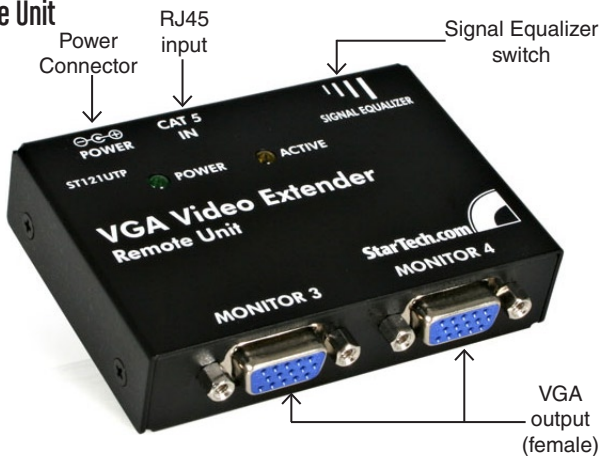

Preparing Your Site

1. Determine where the local computer will be located and set up the computer.
2. Determine where the remote display(s) will be located and place/mount them appropriately.
3. If you are using surface cabling, ensure you have enough Cat5 unshielded twisted pair (UTP) Ethernet cabling to connect the Local Unit to the Remote Unit's location, and that each end is terminated with a RJ45 connector.

OR

If you are using premise cabling, ensure that the Cat5 unshielded twisted pair (UTP) Ethernet Cabling between the Local Unit and the Remote Unit has been properly terminated in a wall outlet in each location and there is a patch cable long enough to connect the Remote Unit and the Local Unit to their respective outlets.

Installing the Local Unit

1. Place the Local Unit near the local (source) computer.
2. Switch off the computer and disconnect any existing VGA cables.
3. If desired, connect the VGA cable from the local computer display(s) to the "Monitor" ports on the Local Unit. This will enable you to see video locally while an image is transmitted to the remote display. You may choose to connect up to two local displays, one for each "Monitor" port. Both outputs display the same image.
4. Connect a male-to-female DE-15 VGA cable (not provided) to the VGA Output on the local computer. Connect the opposite end to the VGA IN port on the Local Unit.
5. Connect the Cat5 cable connection to the "CAT5 OUT" on the Local Unit.
6. Connect the Power Adapter (provided) into an appropriate power source and plug the opposite end into the power connector on the Local Unit. The POWER LED will light up.

Installing the Remote Unit

1. Connect the Remote Unit to the Cat5 cable connection from the Local Unit, to the “CAT5 IN” port.
2. Connect the VGA cable from the remote display(s) to the opposite side of the Remote Unit, marked “Monitor”. You may choose to have either one or two displays at the remote location connected to the Remote Unit. Both outputs display the same image.
3. Connect the Power Adapter (provided) into an appropriate power source and plug the opposite end into the power connector on the Remote Unit. The POWER LED will light up.

CAUTION: The Category 5 Ethernet cables that connect the Local and Remote Units carry electrical current and should not be plugged in to other devices, as they may cause damage. We strongly recommend marking the Ethernet cables you are using with this product at both locations for easy identification.

Completing the Installation

1. Switch on the local computer and local display(s) (if used).
2. Switch on the display(s) at the remote location.
3. Verify that the remote display is properly displaying the image from the local computer connected to the Local Unit.
4. Use the Signal Equalizer to improve the image on the remote display(s) based on the approximate length of Ethernet cable between the Local and Remote Units.

CAT5 cable length		Equalizer position
meter	feet	
0 ~ 40	0 ~ 131	—
40 ~ 80	131 ~ 262	—
80 ~ 120	262 ~ 394	—
120 ~ 160	394 ~ 525	—

Driver Installation

No driver installation is required for this video extender as it is an external hardware only solution, invisible to the computer system.

Troubleshooting

The following section provides troubleshooting help. The solutions are arranged in the order they should be attempted in most situations. If you continue to have difficulties after attempting the solutions in this section, please contact StarTech.com technical support.

Symptom: The remote displays are black or display a “no signal” message.

Cause: The Remote Unit is not receiving a signal from the Local Unit.

Remedy:

1. Check that the display is receiving power and that all cables are connected.
2. Check that the display is connected to the Remote Unit.

Symptom: The remote displays do not display an image when the local computer wakes up from Standby Mode.

Remedy: Power the remote displays OFF and ON again.

Symptom: One or more remote displays is distorted, noisy, or displays a “signal error” or similar error message.

Cause: The screen resolution and/or refresh rate on the local computer may be set too high for the capabilities of the remote display.

Remedy:


1. Adjust the local computer to a lower resolution and refresh rate until the remote display shows an image.
2. Gradually increase the resolution and refresh rate on the local computer until the remote displays ceases to display an image.
3. Return the resolution and refresh rate on the local computer to the highest resolution and refresh rate setting that displayed an image on the remote display.

- Adjust the Signal Equalizer on the Remote Unit for best performance.

NOTE: If you are still unable to see an image at the remote location after trying the above solutions, it is recommended that you verify the Ethernet cable installation to the remote display before calling technical support. This can be used using a standard cable tester. If you do not have a cable tester, contact a local computer service or wiring professional.

Wiring Diagram

Pin	Wire Color	Pair
1	White/Orange	2
2	Orange	2
3	White/Green	3
4	Blue	1
5	White/Blue	1
6	Green	3
7	White/Brown	4
8	Brown	4

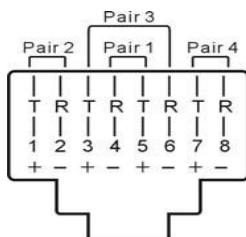

Specifications

Connectors (Local)	1 x DE-15 VGA male 1 x DE-15 VGA female 1 x RJ45 1 x Power Connector
Connectors (Remote)	2 x DE-15 VGA female 1 x RJ45 1 x Power Connector
LEDs	1 x Power, 1 x Activity
Maximum Distance	150m (500 ft) @ 1024x768
Maximum Resolution	1440x900 @ 50m (150 ft)
Power Adapter	9VDC, 600mA, center positive
Dimensions	60.0mm x 83.0mm x 20.0mm
Weight	181g

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

Warranty Information

This product is backed by a one year warranty.

In addition, StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.



StarTech.com has been making “hard-to-find easy” since 1985, providing high quality solutions to a diverse IT and A/V customer base that spans many channels, including government, education and industrial facilities to name just a few. We offer an unmatched selection of computer parts, cables, A/V products, KVM and Server Management solutions, serving a worldwide market through our locations in the United States, Canada, the United Kingdom and Taiwan.

Visit **www.startech.com** today for complete information about all our products and to access exclusive interactive tools such as the Cable Finder, Parts Finder and the KVM Reference Guide.