



OMEN by HP 15 Notebook PC (model numbers 15-ce000 through 15-ce099)

Maintenance and Service Guide

© Copyright 2017 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. NVIDIA is a trademark and/or registered trademark of NVIDIA Corporation in the U.S. and other countries. Intel and Core are trademarks of Intel Corporation in the U.S. and other countries. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: May 2017

Document Part Number: 931980-001

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions of Windows. This computer may require upgraded and/or separately purchased hardware, drivers and/or software to take full advantage of Windows functionality. Go to <http://www.microsoft.com> for details.


In accordance with Microsoft's support policy, HP does not support the Windows 8 or Windows 7 operating system on this product or provide any Windows 8 or Windows 7 drivers on <http://support.hp.com>.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Important Notice about Customer Self-Repair Parts

 **CAUTION:** Your computer includes Customer Self-Repair parts and parts that should only be accessed by an authorized service provider. See Chapter 5, "Removal and replacement procedures for Customer Self-Repair parts," for details. Accessing parts described in Chapter 6, "Removal and replacement procedures for authorized service provider parts," can damage the computer or void your warranty.

Safety warning notice


 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

Table of contents

1 Product description	1
2 External component identification	4
Right side	4
Left side	6
Display	9
Keyboard area	10
TouchPad	10
Lights	11
Button	12
Special keys	13
Action keys	14
Bottom	15
Locating system information	15
3 Illustrated parts catalog	16
Computer major components	16
Display assembly subcomponents	23
Miscellaneous parts	25
4 Removal and replacement procedures preliminary requirements	27
Tools required	27
Service considerations	27
Plastic parts	27
Cables and connectors	28
Drive handling	28
Grounding guidelines	29
Electrostatic discharge damage	29
Packaging and transporting guidelines	30
Workstation guidelines	30
Equipment guidelines	31
5 Removal and replacement procedures for Customer Self-Repair parts	32
Component replacement procedures	32
Battery	33
Hard drive	35

Solid state drive	37
Memory module	38
6 Removal and replacement procedures for authorized service provider parts	39
Component replacement procedures	39
WLAN module	40
Speakers	42
Memory card reader board	44
TouchPad	46
Hinge covers	48
System support brackets	49
Power connector cable	51
Fans	52
USB board	54
Heat sink	56
Power button board	59
System board	61
Display assembly	65
Keyboard/top cover	67
Display bezel	70
Display hinges	72
Webcam	74
Display panel	76
Display cable and webcam cable	79
WLAN antennas	81
Back cover	83
7 Using Setup Utility (BIOS)	84
Starting Setup Utility (BIOS)	84
Updating Setup Utility (BIOS)	84
Determining the BIOS version	84
Downloading a BIOS update	85
8 Using HP PC Hardware Diagnostics (UEFI)	86
Downloading HP PC Hardware Diagnostics (UEFI) to a USB device	87
9 Backing up, restoring, and recovering	88
Creating recovery media and backups	88
Creating HP Recovery media (select products only)	88
Using Windows tools	89

Restore and recovery	90
Recovering using HP Recovery Manager	90
What you need to know before you get started	90
Using the HP Recovery partition (select products only)	91
Using HP Recovery media to recover	91
Changing the computer boot order	92
Removing the HP Recovery partition (select products only)	92
10 Specifications	93
Computer specifications	93
39.6 cm (15.6-in) display specifications	94
Hard drive specifications	94
11 Power cord set requirements	96
Requirements for all countries	96
Requirements for specific countries and regions	97
12 Recycling	99
Index	100

1 Product description


Category	Description
Product Name	OMEN by HP 15 Laptop PC
Processors	7th Generation Intel processors Intel® Core i7-7700HQ processor (2.8GHz, turbo up to 3.8GHz, 2400 MHz, 6 MB L3 cache) Intel Core i5-7300HQ processor (2.5 GHz, turbo up to 3.5GHz, 2400 MHz, 6 MB L3 cache)
Graphics	Internal graphics: Intel HD Graphics 630 Discrete graphics: NVIDIA N17E-G1 (GeForce GTX 1060) Max-Q with up to 6144 MB of dedicated video memory (256 MBx32 GDDR5 8 Gbps x 6 PCs) AMD R17M-P1-70 (Radeon RX 550) with up to 2048 MB of dedicated video memory (128 MBx32 GDDR5 6Gbps x 4 PCs) Hybrid graphics: NVIDIA N17P-G1 (GeForce GTX 1050 Ti) with up to 4096 MB of dedicated video memory (256 MBx32 GDDR5 7Gbps x 4 PCs) NVIDIA N17P-G0 (GeForce GTX 1050) with up to 4096 MB of dedicated video memory (256 MBx32 GDDR5 7Gbps x 4 PCs) NVIDIA N17P-G0 (GeForce GTX 1050) with up to 2048 MB of dedicated video memory (128 MBx32 GDDR5 7Gbps x 4 PCs)
Panel	15.6-in (3840x2160) ultra high definition (UHD), white light emitting diode (WLED), AntiGlare, typical brightness: 300 nits, slim (3.2-mm), ultra-wide viewing angle (UWVA), electronic data processing (eDP) and panel self-refresh (PSR) 15.6-in (3840x2160) UHD, WLED, AntiGlare, typical brightness: 300 nits, slim (3.2-mm), UWVA, eDP and Nvidia self-refresh (NVSR), with G-Sync support 15.6-in (1920x1080), high definition (FHD), WLED, AntiGlare, typical brightness: 300 nits, slim (3.2-mm), UWVA, eDP+PSR 15.6-in (1920x1080), FHD, WLED, AntiGlare, typical brightness: 300 nits, slim (3.2-mm), UWVA, eDP, NVSR, with G-Sync support 15.6-in (1920x1080), FHD, WLED, AntiGlare, typical brightness: 220 nits, slim (3.2-mm), UWVA, eDP, with FreeSync support
Memory	Support for 16384 GB of DDR4 2400 MHz system memory in the following configurations: 16384 GB (8192 GB × 2) 12288 GB (8192 GB × 1 + 4096 GB × 1) 8192 GB (8192 GB × 1) 8192 GB (4096 GB × 2) 6144 GB (4096 GB × 1 + 2048 GB × 1) 4096 GB (4096 GB × 1)
Hard drive	Support for the following single hard drive and solid state drive configurations:


Category	Description
	<p>2 TB 5400 rpm, 7-mm hybrid drive with 8 GB NAND</p> <p>1 TB 7200 rpm, 9.5-mm hard drive</p> <p>Support for the following dual-storage configurations:</p> <p>2 TB 5400 rpm, 9.5-mm/7.2-mm hard drive with 256 GB PCIe NVMe TLC M.2 solid state drive</p> <p>1 TB 7200 rpm, 9.5-mm hard drive with 512 GB PCIe NVMe TLC M.2 solid state drive</p> <p>1 TB 7200 rpm, 9.5-mm hard drive with 256 GB PCIe NVMe TLC M.2 solid state drive</p> <p>1 TB 7200 rpm, 9.5-mm hard drive with 128 GB PCIe NVMe TLC M.2 solid state drive</p>
Optical drive	Support for external 9.5 mm tray load, SATA, DVD+/-RW DL SuperMulti drive
Audio and video	<p>Support for the following integrated cameras:</p> <p>HP Wide Vision camera: high definition (FHD 1080 by 30 frames/sec), infrared (IR), fixed (no tilt), with activity light</p> <p>HP Wide Vision camera: high definition (HD 720 by 30 frames/sec), fixed (no tilt), with activity light</p> <p>Support for Windows Hello</p> <p>Dual digital microphones with appropriate software - echo cancellation, noise suppression</p> <p>Dual speakers</p> <p>Bang & Olufsen Audio</p>
Ethernet	Gigabit LAN
Wireless	<p>Realtek RTL8822BE 802.11 ac 2×2 WiFi + BT 4.2 Combo Adapter</p> <p>Intel Dual Band Wireless-AC 7265 802.11 AC 2×2 WiFi + BT 4.2 Combo Adapter</p> <p>Compatible with Miracast-certified devices</p>
External media cards	HP Multi-Format Digital Media Card Reader with push-push technology. Supports SD/SDHC/SDXC
Ports	<p>AC adapter: HP Smart pin plug (4.5-mm barrel)</p> <p>Audio: one combo audio-out (headphone)/audio-in (microphone) jack</p> <p>HDMI: v2.0 supporting: up to 4096×2160 at 60 Hz with HDCP 2.2</p> <p>Mini DisplayPort</p> <p>RJ-45/Ethernet</p> <p>(3) USB 3.x (1 on left side, 2 on right side)</p> <p>(1) USB Type-C (Generation 2, with Thunderbolt) on left side (select models only)</p> <p>(1) USB Type-C (Generation 1) on left side</p>
Keyboard/pointing devices	<p>Full size backlit 4-coat paint island-style keyboard with numeric key pad in Dragon Red color</p> <p>TouchPad:</p> <p>TouchPad with image sensor</p> <p>Multitouch gestures enabled by default</p> <p>Support for Modern Touchpad gestures</p> <p>Taps enabled by default</p>
Power requirements	200-W Smart AC adapter (using 4.5 mm plug) with localized cable plug support, for use only on models equipped with the Nvidia N17E GPU





Category	Description
	<p>150-W Smart AC adapter (using 4.5 mm plug) with localized cable plug support, for use only on models equipped with the Nvidia N17P or AMD R17M GPUs</p> <p>1 meter power cord</p> <p>4-cell, 70-Wh, 4.55-Ah, Li-ion battery</p>
Security	<p>Kensington Lock slot</p> <p>TPM 2.0 support</p>
Operating system	<p>Preinstalled:</p> <p>Windows 10 Pro</p> <p>Windows 10</p>
Serviceability	<p>End user replaceable parts:</p> <p>Hard drive</p> <p>Solid state drive</p> <p>Optical drive</p> <p>Memory module</p> <p>AC adapter</p> <p>Battery</p> <p>MiniCard Components</p> <p>SIM card (for WWAN)</p>


2 External component identification

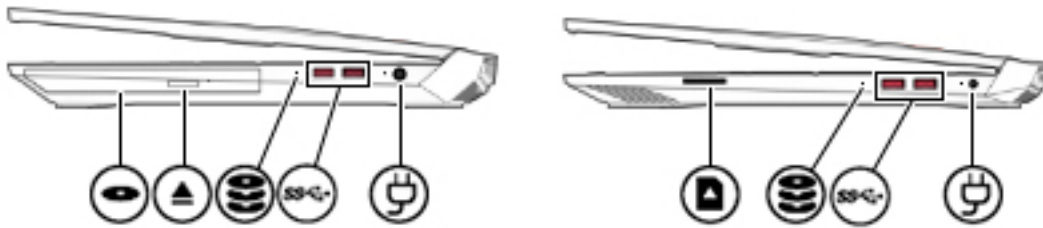Right side


 **NOTE:** Refer to the illustration that most closely matches your computer.











Component	Description
Optical drive (select products only)	Depending on your computer model, reads an optical disc or reads and writes to an optical disc. NOTE: For disc compatibility information, type <code>help</code> in the taskbar search box, select Help and Support , and then type <code>disc compatibility</code> in the search box.
 Optical drive eject button (select products only)	Releases the optical drive disc tray.
 Drive light	<ul style="list-style-type: none"> Blinking white: The hard drive or the solid-state drive is being accessed. Amber: HP 3D DriveGuard has temporarily parked the hard drive.
 Memory card reader	<p>Reads optional memory cards that enable you to store, manage, share, or access information.</p> <p>To insert a card:</p> <ol style="list-style-type: none"> Hold the card label-side up, with connectors facing the computer. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. <p>To remove a card:</p> <ul style="list-style-type: none"> Press in on the card, and then remove it from the memory card reader.
 USB 3.x SuperSpeed ports (2)	Connect a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provide high-speed data transfer.
AC adapter and battery light	<ul style="list-style-type: none"> White: The AC adapter is connected and the battery is fully charged. Blinking white: The AC adapter is disconnected and the battery has reached a low battery level.

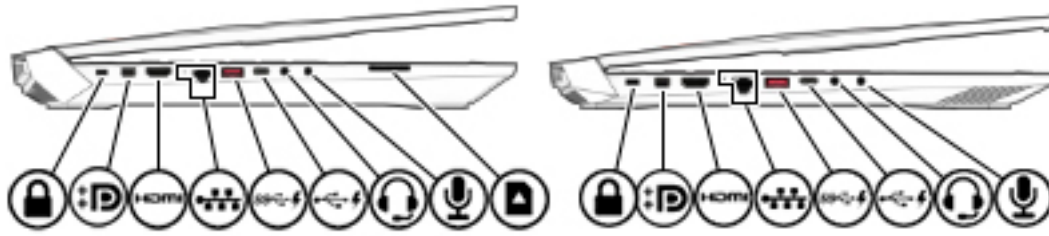

Component	Description
	Power connector
	<ul style="list-style-type: none">• Amber: The AC adapter is connected and the battery is charging.• Off: The battery is not charging.
	Connects an AC adapter.


Left side


 **NOTE:** Refer to the illustration that most closely matches your computer.









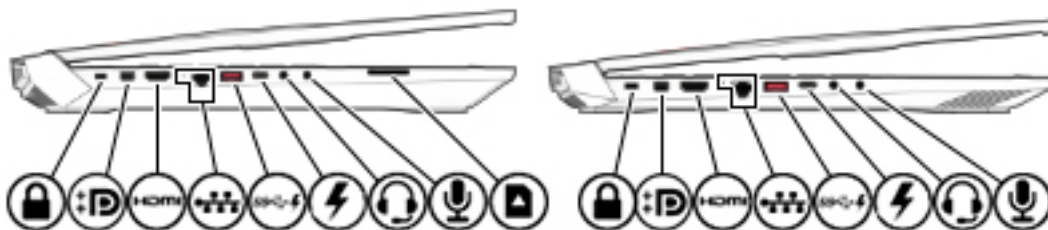


Component	Description
 Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
 Mini DisplayPort	Connects an optional digital display device, such as a high-performance monitor or projector.
 HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.
 RJ-45 (network) jack/status lights	Connects a network cable. <ul style="list-style-type: none"> • White: The network is connected. • Amber: Activity is occurring on the network.
 USB 3.x SuperSpeed port with HP Sleep and Charge	Connects a USB device, provides high-speed data transfer, and even when the computer is off, charges most products such as a cell phone, camera, activity tracker, or smartwatch.
 USB Type-C port with HP Sleep and Charge	Connects a USB device that has a Type-C connector, provides high-speed data transfer, and even when the computer is off, charges products such as a cell phone, camera, activity tracker, or smartwatch. – or – Connects a display device that has a USB Type-C connector, providing DisplayPort output. NOTE: Cables and/or adapters (purchased separately) may be required.
 Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: <ul style="list-style-type: none"> ▲ Select the Start button, select HP Help and Support, and then select HP Documentation.

Component	Description
	NOTE: When a device is connected to the jack, the computer speakers are disabled.
 Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone. NOTE: The audio-in (microphone) jack does not support optional combo devices, such as a headset. NOTE: When devices are connected to the audio-out (headphone)/ Audio-in (microphone) combo jack and the audio-in (microphone) jack at the same time, the audio-in jack has higher priority.
 Memory card reader	Reads optional memory cards that enable you to store, manage, share, or access information. To insert a card: <ol style="list-style-type: none"> 1. Hold the card label-side up, with connectors facing the computer. 2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. To remove a card: <ul style="list-style-type: none"> ▲ Press in on the card, and then remove it from the memory card reader.


 **NOTE:** Refer to the illustration that most closely matches your computer.









Component	Description
 Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
 Mini DisplayPort	Connects an optional digital display device, such as a high-performance monitor or projector.
 HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.
 RJ-45 (network) jack/status lights	Connects a network cable. <ul style="list-style-type: none"> • White: The network is connected. • Amber: Activity is occurring on the network.

Component	Description
 USB 3.x SuperSpeed port with HP Sleep and Charge (2)	Connects a USB device, provides high-speed data transfer, and even when the computer is off, charges most products such as a cell phone, camera, activity tracker, or smartwatch.
 USB Type-C power connector and Thunderbolt port with HP Sleep and Charge	Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery. – and – Connects and charges most USB devices that have a Type-C connector, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer. NOTE: Cables and/or adapters (purchased separately) may be required. – and – Connects a display device that has a USB Type-C connector, providing DisplayPort output. NOTE: Your computer may also support a Thunderbolt docking station.
 Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: <ul style="list-style-type: none"> ▲ Select the Start button, select HP Help and Support, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
 Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone. NOTE: The audio-in (microphone) jack does not support optional combo devices, such as a headset. NOTE: When devices are connected to the audio-out (headphone)/Audio-in (microphone) combo jack and the audio-in (microphone) jack at the same time, the audio-in jack has higher priority.
 Memory card reader	Reads optional memory cards that enable you to store, manage, share, or access information. To insert a card: <ol style="list-style-type: none"> 1. Hold the card label-side up, with connectors facing the computer. 2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. To remove a card: <ul style="list-style-type: none"> ▲ Press in on the card, and then remove it from the memory card reader.

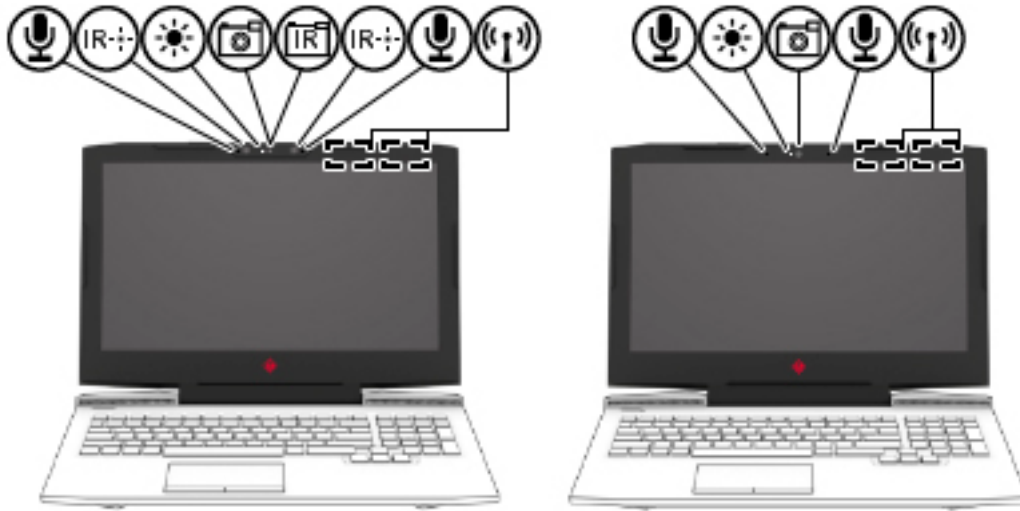Display

 **NOTE:** Refer to the illustration that most closely matches your computer.



Component	Description
 Internal microphones (2)	Record sound.
 Infrared camera lights (2)	On: The infrared camera is in use.
 Camera light	On: The camera is in use.
 Camera/Infrared camera	Allows you to video chat, record video, and record still images. – or – Allows a facial recognition logon to Windows, instead of a password logon.
 WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).

*The antennas are not visible from the outside of the computer, and antenna location varies. For optimal transmission, keep the areas immediately around the antennas free from obstructions.


For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- ▲ Select the **Start** button, select **HP Help and Support**, and then select **HP Documentation**.


Keyboard area

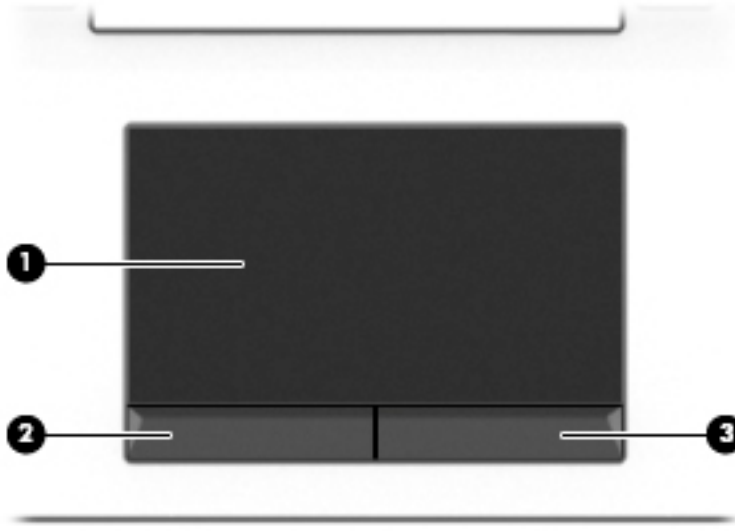

TouchPad




Component		Description
(1)	TouchPad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left TouchPad button	Functions like the left button on an external mouse.
(3)	Right TouchPad button	Functions like the right button on an external mouse.

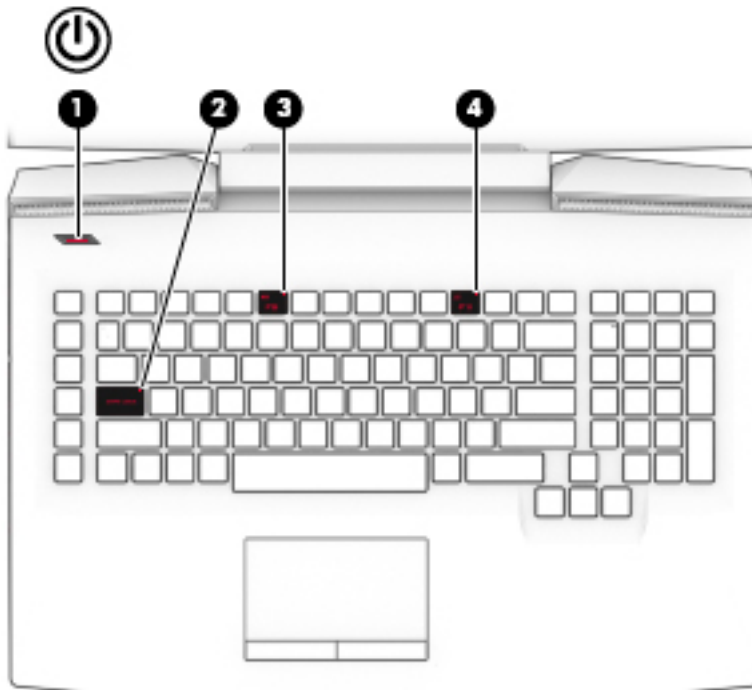
Lights




Component	Description
(1)  Power light	<ul style="list-style-type: none">• On: The computer is on.• Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components.• Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2) Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(3)  Mute light	<ul style="list-style-type: none">• On: Computer sound is off.• Off: Computer sound is on.
(4) TouchPad light	<ul style="list-style-type: none">• On: The TouchPad is off.• Off: The TouchPad is on.




Button

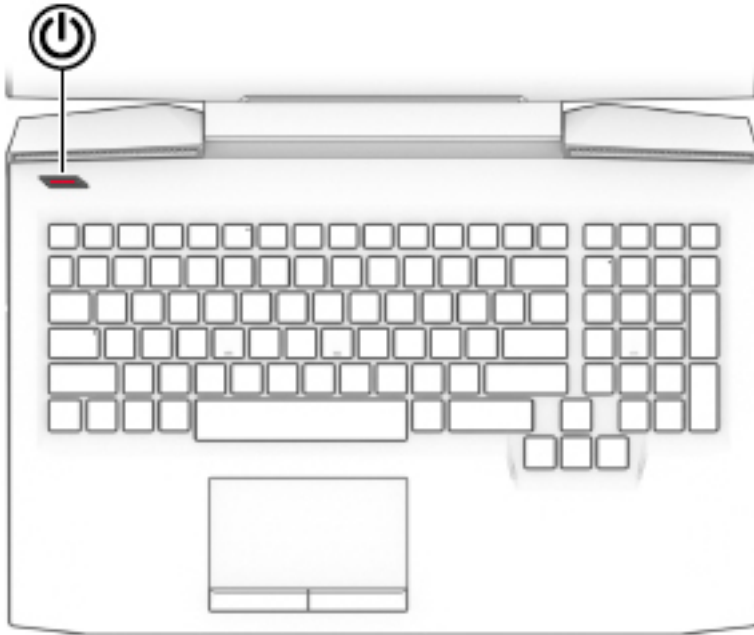

Component	Description
 Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button briefly to initiate Sleep.• When the computer is in the Sleep state, press the button briefly to exit Sleep.• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options.</p> <ul style="list-style-type: none">▲ Type <code>power</code> in the taskbar search box, and then select Power & sleep settings. <p>– or –</p> <p>Right-click the Start button, and then select Power Options.</p>

Special keys

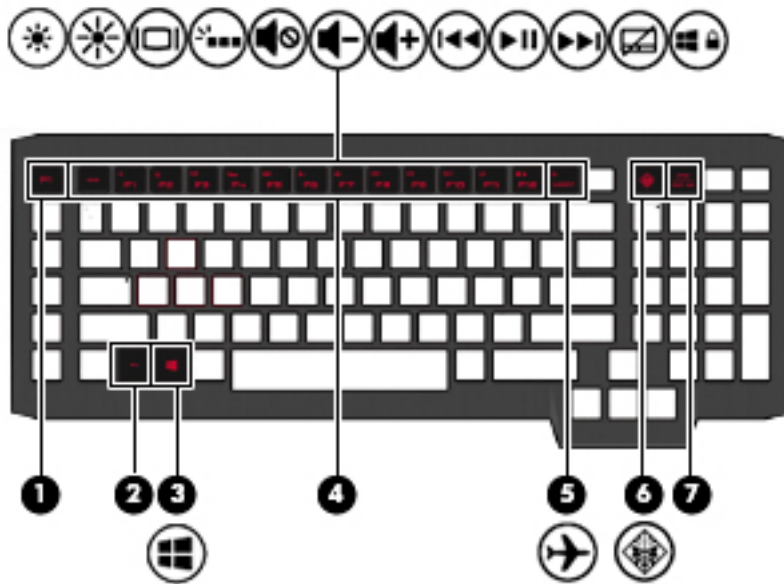














Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes specific functions when pressed in combination with another key.
(3)  Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4) Action keys	Execute frequently used system functions.
(5)  INSERT/Airplane mode key (also referred to as the wireless button)	Turns the insert mode on or off. – or – Turns the airplane mode on or off. ▲ Press and hold the key in combination with the <code>fn</code> key. NOTE: The airplane mode key is also referred to as the wireless button. NOTE: A wireless network must be set up before a wireless connection is possible.
(6)  OMEN key	Opens the OMEN Command Center software.
(7) END/PRT SC key	Turns the END mode on or off. – or – Prints the screen image. ▲ Press and hold the key in combination with the <code>fn</code> key.


Action keys

An action key performs the function indicated by the icon on the key. To determine which keys are on your product, see [Special keys on page 13](#).

▲ To use an action key, press and hold the key in combination with the **fn** key.

Icon	Description
	Decreases the screen brightness incrementally as long as you hold down the key.
	Increases the screen brightness incrementally as long as you hold down the key.
	Switches the screen image between display devices connected to the system. For example, if a monitor is connected to the computer, repeatedly pressing this key alternates the screen image from the computer display to the monitor display to a simultaneous display on both the computer and the monitor.
	Turns the keyboard backlight off or on. NOTE: To conserve battery power, turn off this feature.
	Mutes or restores speaker or headphone sound.
	Decreases speaker or headphone volume incrementally while you hold down the key.
	Increases speaker or headphone volume incrementally while you hold down the key.
	Plays the previous track of an audio CD or the previous section of a DVD or a Blu-ray Disc (BD).
	Starts, pauses, or resumes playback of an audio CD, a DVD, or a BD.
	Plays the next track of an audio CD or the next section of a DVD or a BD.
	Turns the TouchPad off or on.
	Disables the Windows key  .

Bottom

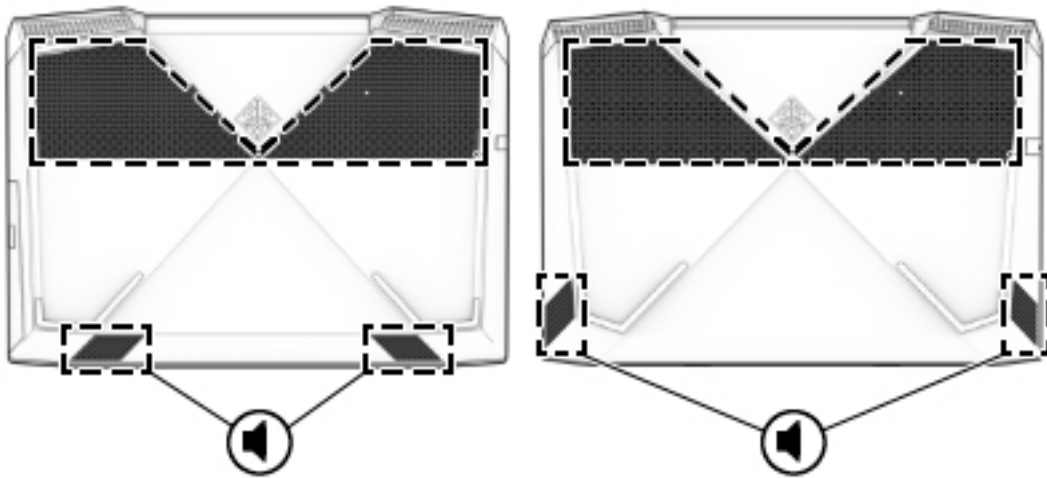

Component	Description
Vents	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
Speakers	Produce sound.

Locating system information

Important system information is located on the bottom edge of the tablet or on the keyboard base. You may need the information when travelling internationally or when you contact support:



- (1): Serial number
- (2): Product number
- (3): Warranty period
- (4): Model number




Using Windows, briefly press the **fn+esc** key combination to display the System Information screen, which provides the product name and serial number of your computer, as well as information about the memory, processor, BIOS, and keyboard.

3 Illustrated parts catalog

Computer major components

-
-  **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.
 -  **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Locating system information on page 15](#) for details.
-

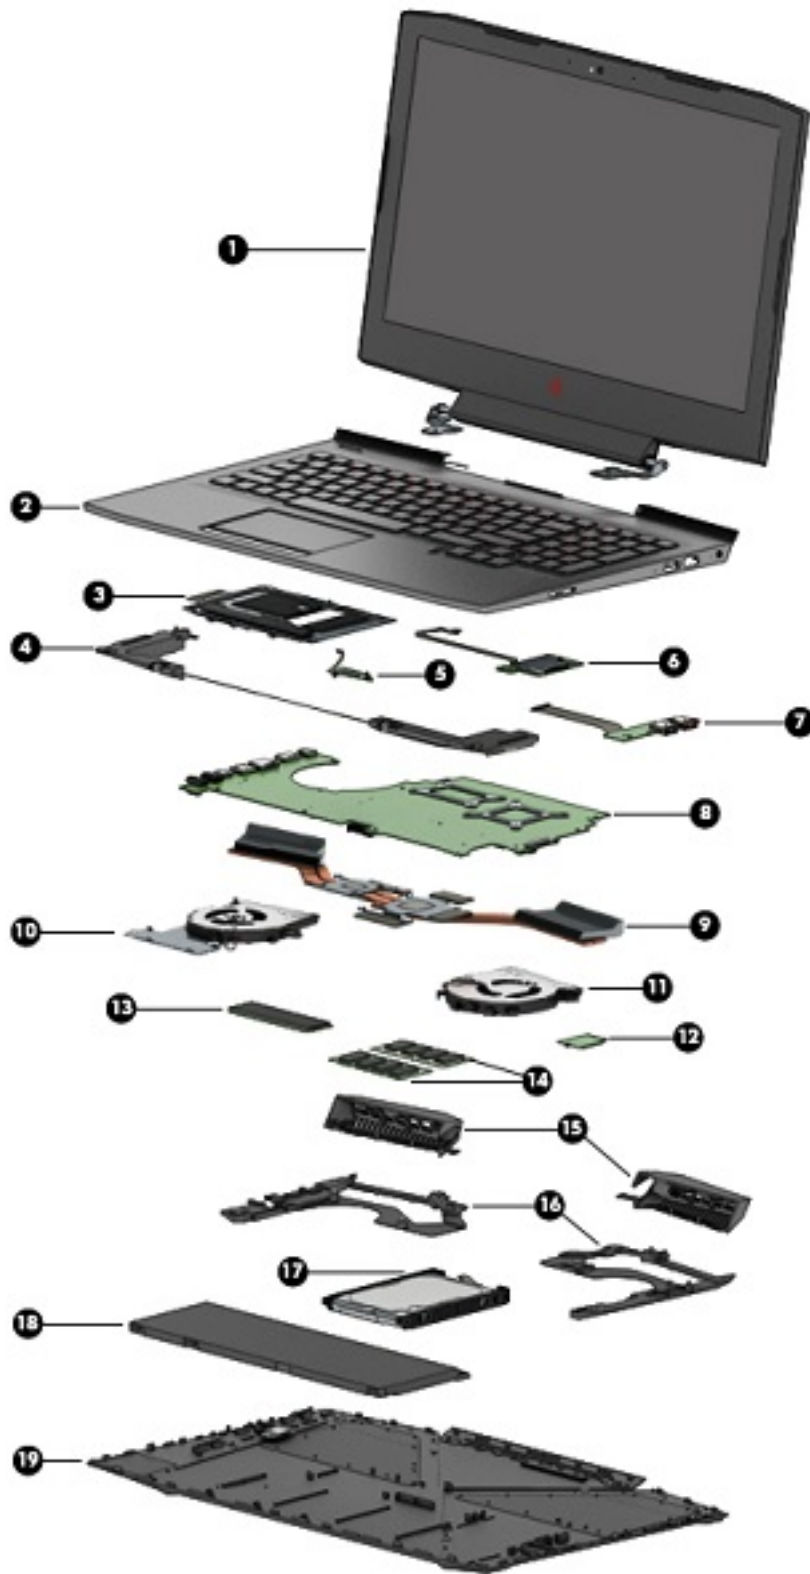

Item	Component	Spare part number
(1)	Display assembly: For display assembly spare part information, see Display assembly subcomponents on page 23 .	

Item	Component	Spare part number
(2)	Keyboard/top cover (for use only on computer models equipped with a USB 3.x Thunderbolt port)	
	For use internationally	929479-B31
	For use in Belgium	929479-A41
	For use in Bulgaria	929479-261
	For use in Canada	929479-DB1
	For use in the Czech Republic and Slovakia	929479-FL1
	For use in France	929479-051
	For use in Germany	929479-041
	For use in Greece	929479-151
	For use in Hungary	929479-211
	For use in Israel	929479-BB1
	For use in Italy	929479-061
	For use in Japan	929479-291
	For use in Latin America	929479-161
	For use in Norway	929479-DH1
	For use in Portugal	929479-131
	For use in Romania	929479-271
	For use in Russia	929479-251
	For use in Saudi Arabia	929479-171
	For use in Slovenia	929479-BA1
	For use in South Korea	929479-AD1
	For use in Spain	929479-071
	For use in Switzerland	929479-BG1
	For use in Taiwan	929479-AB1
	For use in Thailand	929479-281
	For use in Turkey	929479-141
	For use in the United Kingdom and Singapore	929479-031
	For use in the United States	929479-001
	Keyboard/top cover (for use only on computer models equipped with a standard USB 3.x port)	
	For use Internationally	929478-B31
	For use in Belgium	929478-A41
	For use in Bulgaria	929478-261
	For use in Canada	929478-DB1
	For use in Czech Republic and Slovakia	929478-FL1


Item	Component	Spare part number
	For use in France	929478-051
	For use in Germany	929478-041
	For use in Greece	929478-151
	For use in Hungary	929478-211
	For use in Israel	929478-BB1
	For use in Italy	929478-061
	For use in Japan	929478-291
	For use in Latin America	929478-161
	For use in Norway	929478-DH1
	For use in Portugal	929478-131
	For use in Romania	929478-271
	For use in Russia	929478-251
	For use in Saudi Arabia	929478-171
	For use in Slovenia	929478-BA1
	For use in South Korea	929478-AD1
	For use in Spain	929478-071
	For use in Switzerland	929478-BG1
	For use in Taiwan	929478-AB1
	For use in Thailand	929478-281
	For use in Turkey	929478-141
	For use in the United Kingdom and Singapore	929478-031
	For use in the United States	929478-001
(3)	Touchpad (does not include the Touchpad button bracket, spare part number 929462-001)	929472-001
(4)	Speakers	929477-001
(5)	Power button board (does not include the power button board connector cable, spare part number 929448-001)	929468-001
(6)	Memory card reader board (does not include the memory card reader board connector cable, spare part number 934752-001)	
	For use only on computer models equipped with an Nvidia N17E GPU	929470-001
	For use only on computer models equipped with an Nvidia N17P GPU	929471-001
	For use only on computer models equipped with an AMD R17M GPU	929469-001
(7)	USB board (does not include the USB board connector cable, spare part number 929447-001)	
	For use only on computer models equipped with an Nvidia N17E GPU	929470-001
	For use only on computer models equipped with an Nvidia N17P GPU	929466-001

Item	Component	Spare part number
	For use only on computer models equipped with an AMD R17M GPU	929467-001
(8)	System board	
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17E 6 GB GPU (Generation 1), and the Windows 10 operating system	929486-601
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17E 6 GB GPU (Generation 1), and a non-Windows 10 operating system	929486-001
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 1), and the Windows 10 operating system	929481-601
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 1), and a non-Windows 10 operating system	929481-001
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 0), and the Windows 10 operating system	929483-601
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 0), and a non-Windows 10 operating system	929483-001
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 2 GB GPU (Generation 0), and the Windows 10 operating system	929482-601
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 2 GB GPU (Generation 0), and a non-Windows 10 operating system	929482-001
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an AMD R17M 2 GB GPU, and the Windows 10 operating system	929487-601
	Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an AMD R17M 2 GB GPU, and a non-Windows 10 operating system	929487-001
	Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17E 6 GB GPU (Generation 1), and the Windows 10 operating system	937751-601
	Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17E 6 GB GPU (Generation 1), and a non-Windows 10 operating system	937751-001
	Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 1), and the Windows 10 operating system	929480-601
	Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 1), and a non-Windows 10 operating system	929480-001
	Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 0), and the Windows 10 operating system	929485-601

Item	Component	Spare part number
	Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 0), and a non-Windows 10 operating system	929485-001
	Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 2 GB GPU (Generation 0), and the Windows 10 operating system	929484-601
	Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 2 GB GPU (Generation 0), and a non-Windows 10 operating system	929484-001
(9)	Heatsink:	
	For use only on computer models equipped with an Nvidia N17E GPU	929559-001
	For use only on computer models equipped with an Nvidia N17P GPU (Generation 1)	929457-001
	For use only on computer models equipped with an Nvidia N17P GPU (Generation 0)	931246-001
	For use only on computer models equipped with an AMD R17M GPU	929560-001
(10)	Fan (right)	929456-001
(11)	Fan (left)	929455-001
(12)	WLAN module:	
	Intel Dual Band Wireless-AC 7265 802.11 AC 2x2 WiFi + BT 4.2 Combo Adapter	793840-001
	Realtek RTL8822BE 802.11 ac 2x2 WiFi + BT 4.2 Combo Adapter	915623-001
(13)	Solid state drive	
	512 GB 2280 M2	847110-020
	256 GB 2280 M2	847109-023
	128 GB 2280	912322-006
(14)	Memory module (DDR4, 2400-Mhz)	
	8 GB	862398-850
	4 GB	862397-850
	2 GB	864271-850
(15)	Hinge covers	
	Hinge cover (left)	929474-001
	Hinge cover (right)	929475-001
(16)	System support brackets	not spared
(17)	Hard drive: (does not include the hard drive bracket, spare part number 929561-001, or connector cable, spare part number 929450-001.)	
	2 TB, 5400 rpm, 7mm (for use only in a dual storage configuration with the 256 GB solid state drive)	912487-850
	2 TB, 5400 rpm + 8 GB NAND Hybrid, 7mm	929167-850
	1 TB, 7200 rpm, 9.5mm	766644-001

Item	Component	Spare part number
(18)	Battery (4-cell, 70-WHr, 4.55-AH, Li-ion)	917724-855
(19)	Bottom cover	929443-001

Display assembly subcomponents

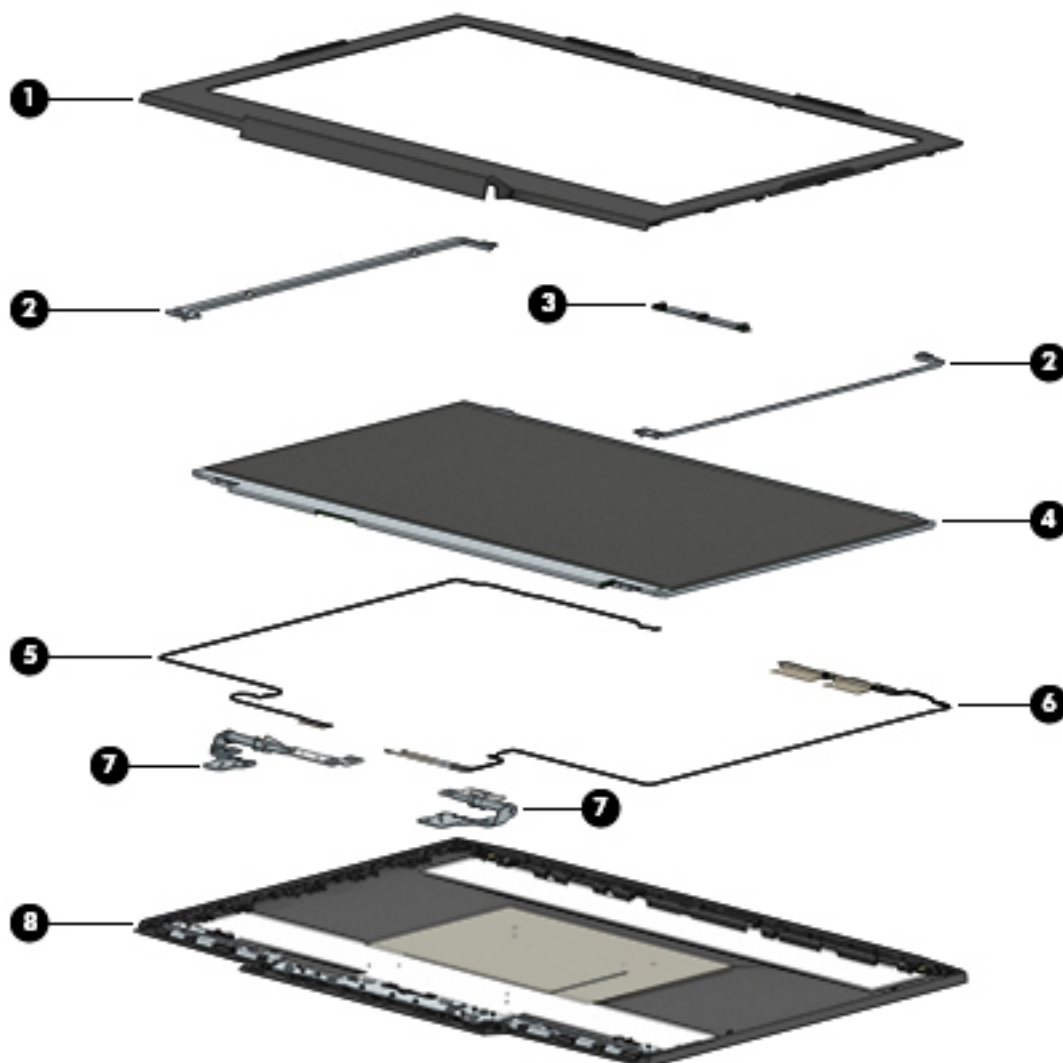

Item	Component	Spare part number
(1)	Bezel:	
	For computer models equipped with an infrared webcam	929446-001
	For computer models equipped with a standard webcam	929444-001
(2)	Display bracket:	
	Left bracket	929461-001
	Right bracket	929460-001
(3)	Webcam:	
	For computer models equipped with an infrared webcam	919579-007
	For computer models equipped with a standard webcam	919573-009
(4)	Display panel:	

Item	Component	Spare part number
	15.6 in, WLED, UHD, UWVA, eDP+NVSR display panel for use only on models equipped with an Nvidia N17E GPU	920041-002
	15.6 in, WLED, FHD, UWVA, eDP+NVSR display panel for use only on models equipped with an Nvidia N17E GPU	923006-001
	15.6 in, WLED, UHD, UWVA, EDP+PSR display panel for use only on models equipped with an Nvidia N17P GPU	929115-002
	15.6 in, WLED, FHD, UWVA, EDP+PSR display panel for use only on models equipped with an Nvidia N17P GPU	930619-001
	15.6 in, WLED, FHD, UWVA, eDP display panel for use only on models equipped with an AMD R17M GPU	752920-019
(5)	Display panel cable:	
	For use only on computer models equipped with a UHD display panel and infrared webcam	929454-001
	For use only on computer models equipped with a UHD display panel and standard webcam	929453-001
	For use only on computer models equipped with a FHD display panel and infrared webcam	929452-001
	For use only on computer models equipped with a FHD display panel and standard webcam	929451-001
(6)	WLAN antenna (includes cable)	929441-001
(7)	Display hinges	929464-001
(8)	Back cover:	
	For use only on computer models equipped with an infrared webcam	938038-001
	For use only on computer models equipped with a standard webcam	929442-001

Miscellaneous parts

Component	Spare part number
AC adapter:	
For use only on computer models equipped with an Nvidia N17E GPU	835888-001
For use only on computer models equipped with an Nvidia N17P or AMD R17M GPU	917649-850
HDMI to VGA adapter	701943-001
Optical drive	747080-001
Plastics kit	929473-001
Power cord (3-pin, black, 1-m, for use only on computer models equipped with an Nvidia N17E GPU):	
For use in Argentina	401328-018
For use in Australia	100661-021
For use in Denmark	130627-014
For use in Europe	100614-016
For use in India	403440-008
For use in Israel	398062-011
For use in Italy	109197-012
For use in Japan	653326-005
For use in North America	121565-023
For use in the People's Republic of China	286496-024
For use in Saudi Arabia	187487-012
For use in South Korea	231216-015
For use in Switzerland	150304-015
For use in Taiwan	393312-008
For use in Thailand	285052-013
For use in the United Kingdom and Singapore	100613-021
Power cord (3-pin, black, 1-m, for use only on computer models equipped with an Nvidia N17P or AMD R71M GPU):	
For use in Argentina	920689-003
For use in Australia	920689-011
For use in Denmark	920689-007
For use in Europe	920689-005
For use in India	920689-016
For use in Israel	920689-008
For use in Italy	920689-002
For use in Japan	920689-017

Component	Spare part number
For use in North America	920689-001
For use in the People's Republic of China	920689-014
For use in Saudi Arabia	920689-010
For use in South Korea	267836-008
For use in Switzerland	920689-009
For use in Taiwan	920689-015
For use in Thailand	920689-012
For use in the United Kingdom and Singapore	920689-006
Rubber kit	936974-001
Screw kit	929476-001
USB Type-C to USB Type-A dongle	833960-001

4 Removal and replacement procedures preliminary requirements


Tools required

You will need the following tools to complete the removal and replacement procedures:


- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic

Cables and connectors

⚠ CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing an optical drive, be sure that a disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive or an optical drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package “FRAGILE.”

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

CAUTION: A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from plastic foam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and plastic foam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive equipment must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:


- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.


Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part not supported by the Customer Self-Repair program may void your warranty. Check your warranty to determine if Customer Self-Repair is supported in your location.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Locating system information on page 15](#) for details.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

There are as many as thirteen screws that must be removed, replaced, and/or loosened when servicing Customer Self-Repair parts. Make special note of each screw size and location during removal and replacement.

Battery

Description	Spare part number
4cell, 70Whr, 4.55Ah, Li-ion battery	917724-855


Before disassembling the computer, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Remove the battery:


- ⚠ **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.
- ⚠ **CAUTION:** Removing a user-replaceable battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before removing the battery.

1. Position the computer upside down on a flat surface.
2. Loosen the captive Phillips screws **(1)**.
3. Remove the remaining eight Phillips PM2.0×4.7 screws **(2)** from the bottom cover.

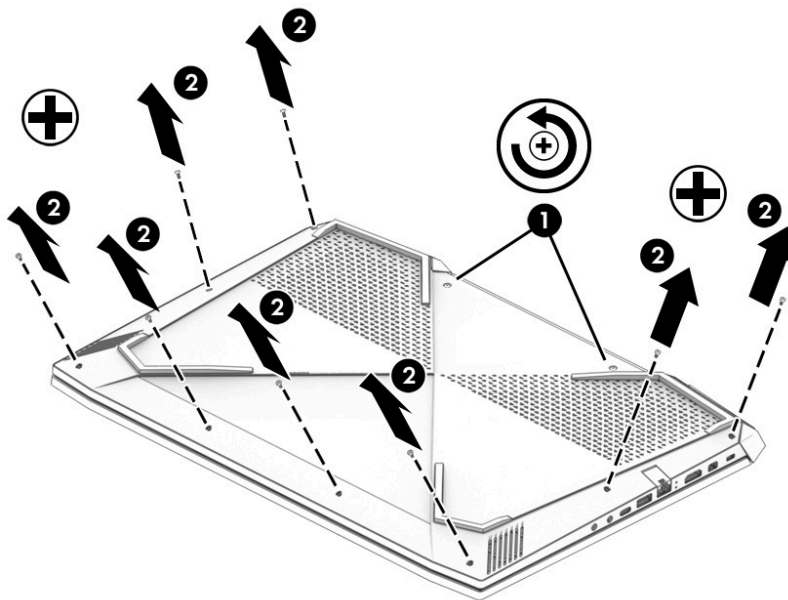


4. Using a case utility tool, gently separate the bottom cover from the enclosure **(1)**.

5. Remove the bottom cover (2).

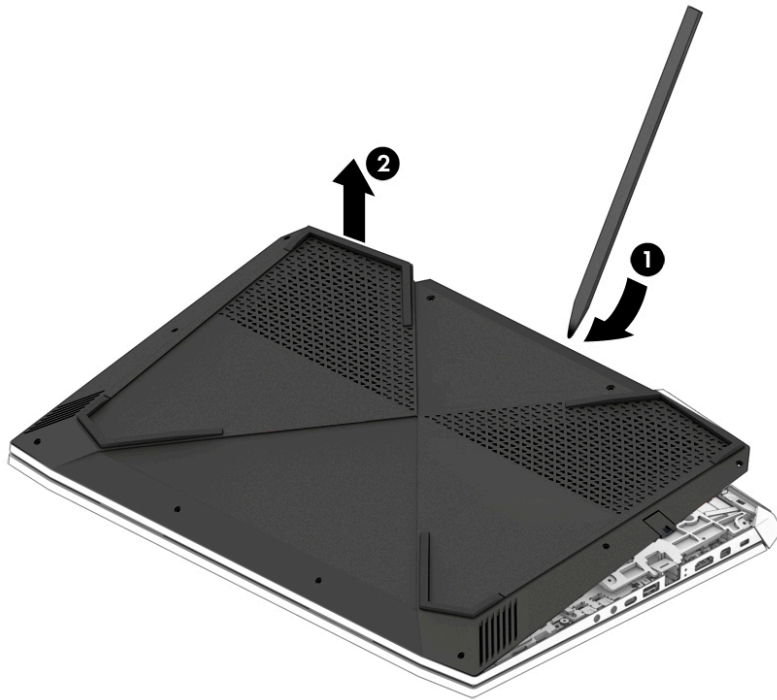

6. Remove the four Phillips PM2.0×5.7 screws (1) that secure the battery to the keyboard/top cover.
7. Lift the battery out of the bottom enclosure (2).

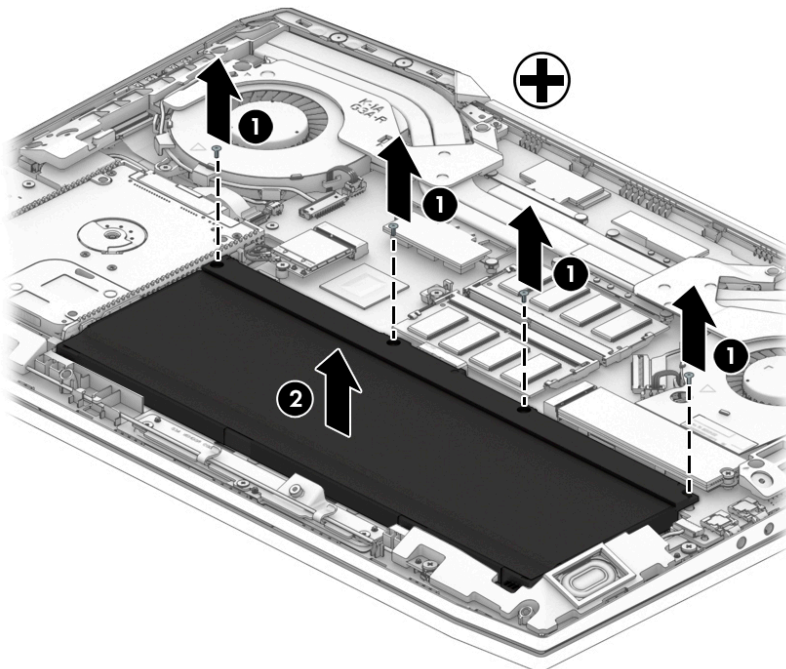

To insert the battery, reverse the removal procedures.

Hard drive



NOTE: The hard drive spare part does not include the hard drive bracket (929561-001) or connector cable (929450-001).

Description	Spare part number
2 TB, 5400 rpm, 7mm (for use only in a dual storage configuration with the 256 GB solid state drive)	929167-850
2 TB, 5400 rpm + 8 GB NAND Hybrid, 7mm	929167-850
1 TB, 7200 rpm, 9.5mm	766644-001
Hard drive bracket kit	929561-001
Hard drive connector cable	929450-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the hard drive, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)).

Remove the hard drive:


1. Release the hard drive connector cable from the zero insertion force (ZIF) connector **(1)** on the system board.
2. Remove the hard drive connector cable from the ZIF connector **(2)**.
3. Lift the top edge of the hard drive upward **(3)**.

4. Slide the hard drive toward the top of the computer (4), then remove it from the computer.

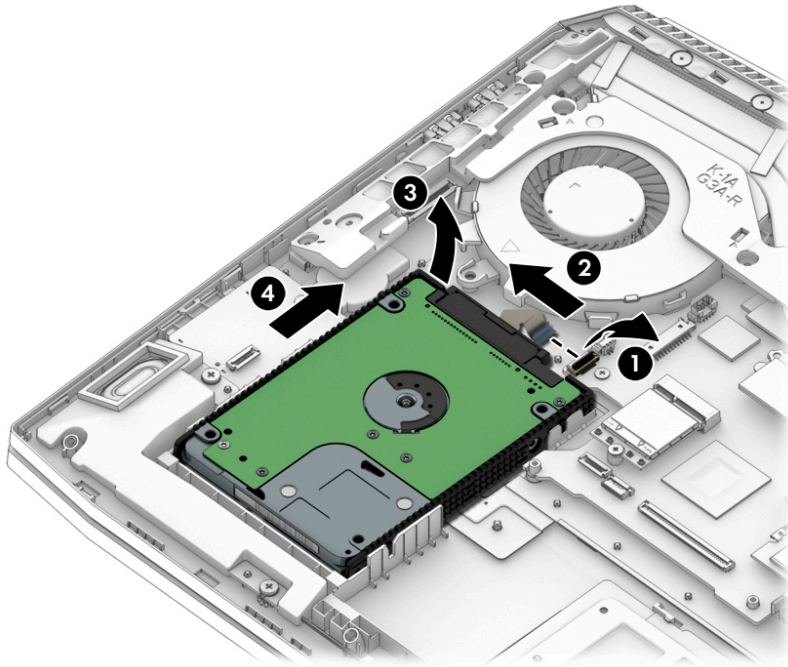

Disassemble the hard drive:


1. Remove the bracket (1) from the sides of the hard drive.
2. Remove the hard drive connector cable (2) from the hard drive.

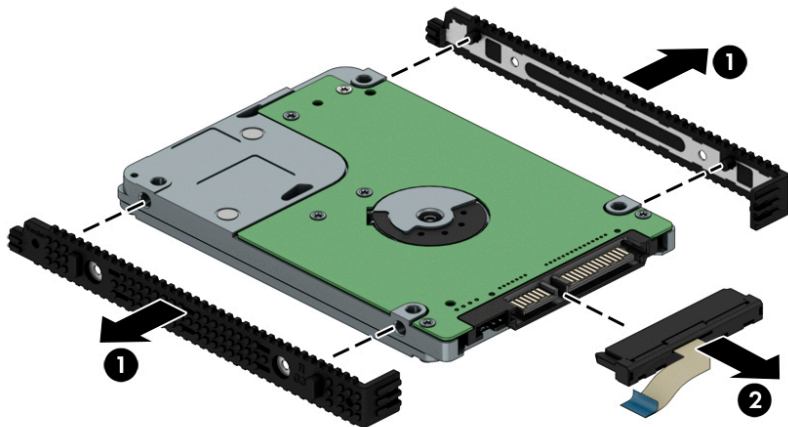

Reverse this procedure to install the hard drive.

Solid state drive

Description	Spare part number
512 GB	847110-020
256 GB	847109-023
128 GB	912322-006


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the solid state drive, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)).

Remove the solid state drive:

1. Remove the Phillips screw **(1)**.
2. Remove the solid state drive at an angle **(2)**.

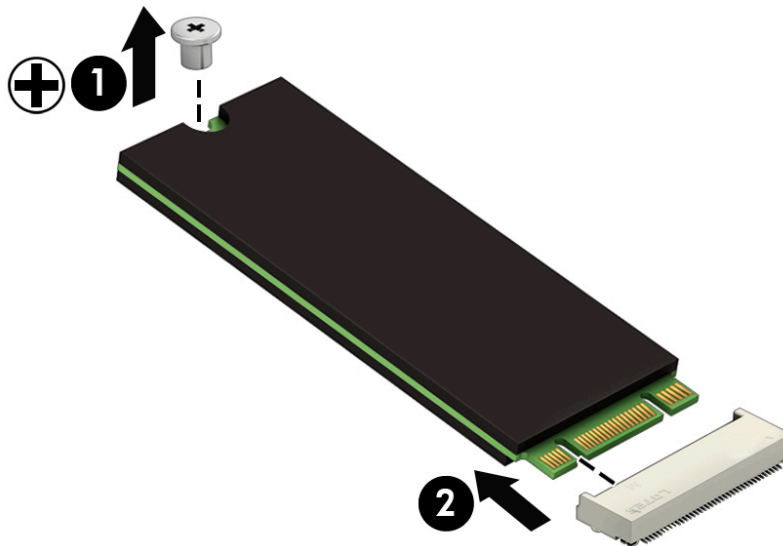

Reverse this procedure to install the solid state drive.

Memory module


Description	Spare part number
8 GB	862398-850
4 GB	862397-850
2 GB	864271-850

Before removing the memory module, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)).


Remove the memory module(s):

1. Release the retention clips holding the memory module in place **(1)**.
2. Slide the memory module out of the connector **(2)**.

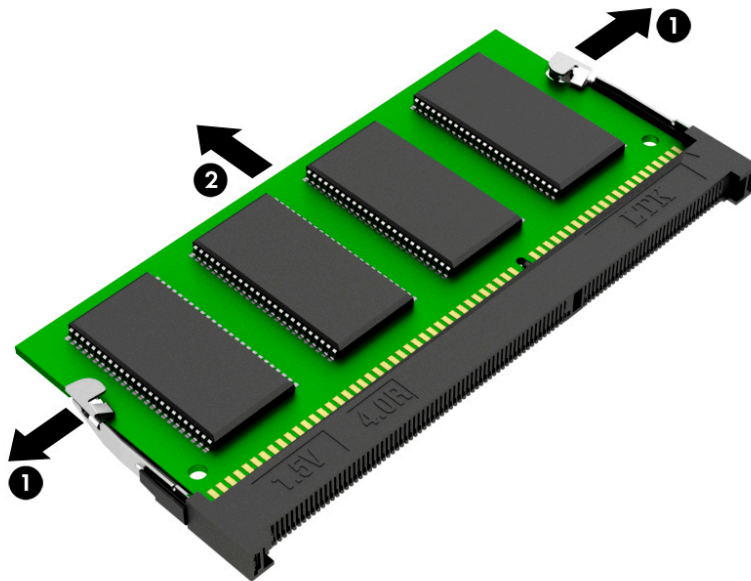



Reverse this procedure to install the memory module.

6 Removal and replacement procedures for authorized service provider parts

 **CAUTION:** Components described in this chapter should be accessed only by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

Component replacement procedures


 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Locating system information on page 15](#) for details.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

There are as many as eighty-six screws that must be removed, replaced, and/or loosened when servicing the parts described in this chapter. Make special note of each screw size and location during removal and replacement.

WLAN module

Description	Spare part number
Realtek RTL8822BE 802.11 ac 2×2 WiFi + BT 4.2 Combo Adapter	915623-001
Intel Dual Band Wireless-AC 7265 802.11 AC 2×2 WiFi + BT 4.2 Combo Adapter	793840-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the WLAN module, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)).

Remove the WLAN module:

1. Disconnect the WLAN antenna cables (**1**) from the terminals on the WLAN module.

 **NOTE:** The WLAN antenna cable labeled “1” connects to the WLAN module “Main” terminal labeled “1”. The WLAN antenna cable labeled “2” connects to the WLAN module “Aux” terminal labeled “2”.

2. Remove the Phillips PM2.0×3.4 screw (**2**) that secures the WLAN module to the system board (the WLAN module tilts up).
3. Remove the WLAN module (**3**) by pulling the module away from the slot at an angle.

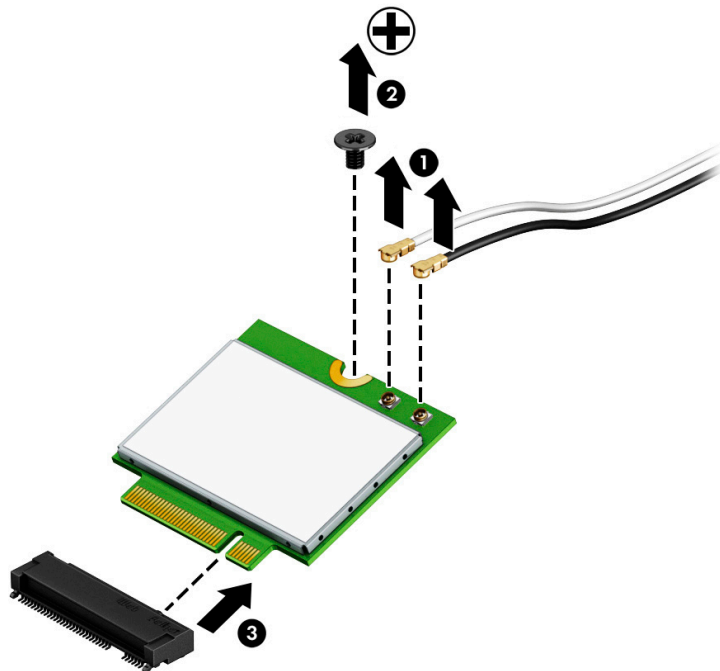



NOTE: The WLAN module configuration in the computer may not match the illustration exactly.

Reverse this procedure to install the WLAN module.

Speakers



NOTE: The speaker spare part kit includes both speakers and the connector cable.

Description	Spare part number
Speaker kit	929477-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the speakers, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)).

Remove the speakers:


1. Disconnect the speaker cable from the system board **(1)**.
2. Remove the four Phillips PM2.0×6.3 screws **(2)** that secure the speakers to the computer.
3. Remove the cable from clips built into the chassis **(3)**.

4. Remove the speakers **(4)** from the computer.

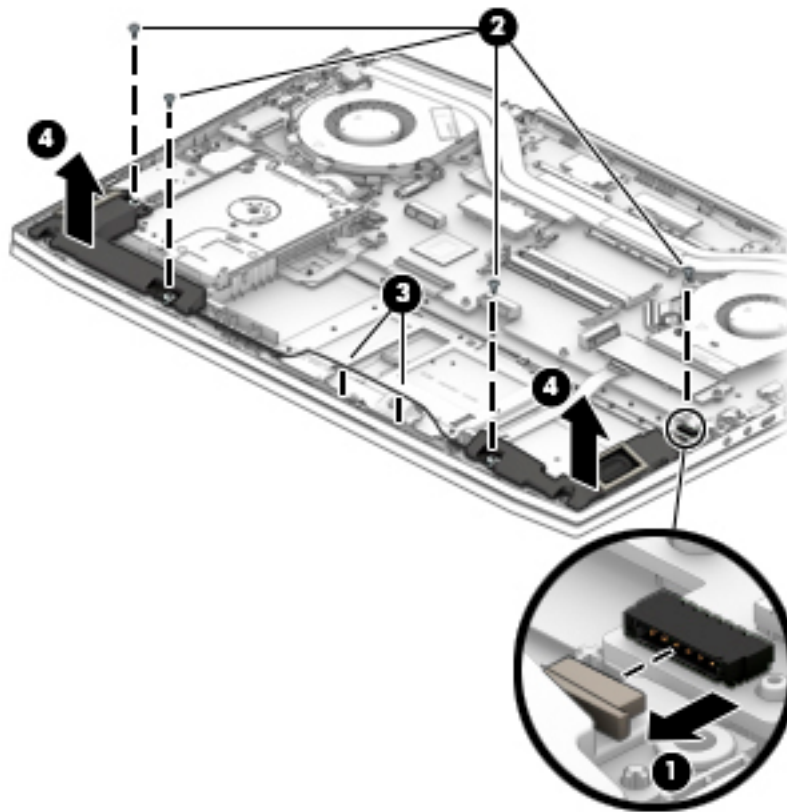


Reverse this procedure to install the speakers.

Memory card reader board

 **NOTE:** The memory card reader board spare part kit does not include the connector cable.

Description	Spare part number
Memory card reader board (for use only on computer models equipped with an Nvidia N17E GPU)	929470-001
Memory card reader board (for use only on computer models equipped with an Nvidia N17P GPU)	929471-001
Memory card reader board (for use only on computer models equipped with an AMD R17M GPU)	929469-001
Memory card reader board connector cable	934752-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the memory card reader board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hard drive (see [Hard drive on page 35](#)).
 - b. Speakers (see [Speakers on page 42](#)).

Remove the memory card reader board:

1. Disconnect the connector cable from the system board **(1)**.
2. Remove the Phillips PM2.0×3.4 screw **(2)** that secures the board to the computer.
3. Remove the memory card reader board from the computer **(3)**.

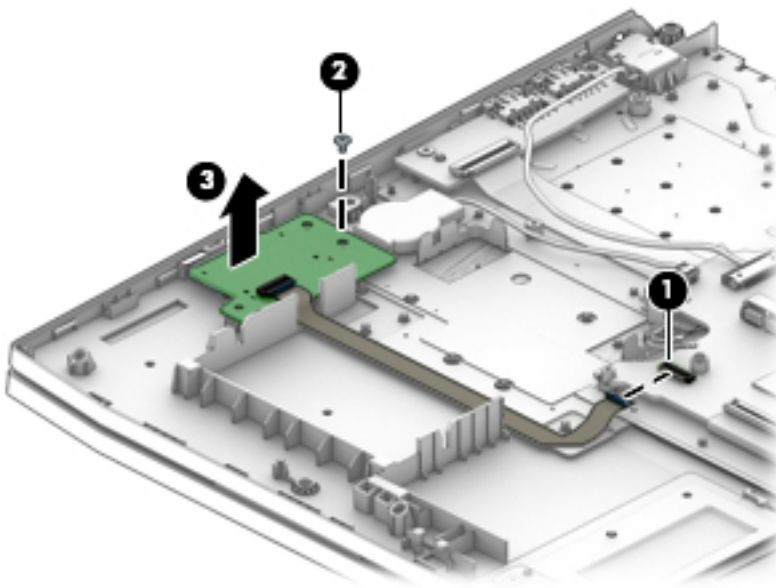

Reverse this procedure to install the memory card reader board.

TouchPad



NOTE: The TouchPad spare part kit includes the TouchPad connector cable, but does not include the TouchPad bracket.

Description	Spare part number
TouchPad board (with connector cable)	929472-001
TouchPad bracket	929462-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the TouchPad, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - ▲ Speakers (see [Speakers on page 42](#)).

Remove the TouchPad:


1. Disconnect the TouchPad connector cable from the system board **(1)**.
2. Disconnect the TouchPad from the keyboard/top cover **(2)**.
3. Remove the 4 Phillips PM2.0×3.4 screws **(3)**.
4. Remove the TouchPad bracket.

5. Remove the TouchPad from the computer (4).

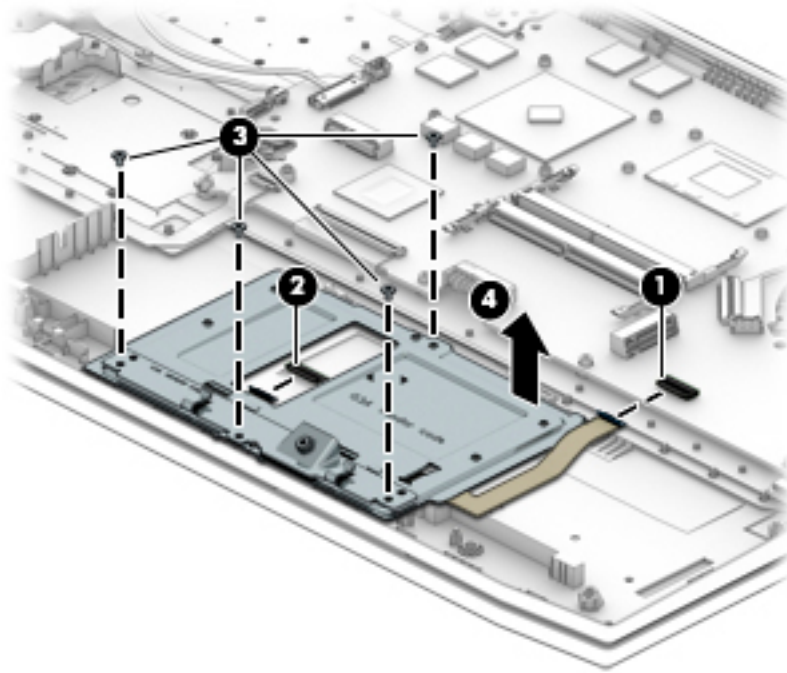


Reverse this procedure to install the TouchPad.

Hinge covers

 **NOTE:** The hinge covers are spared separately for the left and right sides.

Description	Spare part number
Left hinge cover	929474-001
Right hinge cover	929475-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the hinge covers, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)).


Remove the hinge covers:


1. Remove the four black Phillips PM2.0×3.0 screws and the four Phillips PM2.0×5.7 screws **(1)** that secure the hinge covers to the computer.
2. Remove the hinge covers using a rotating motion toward the rear of the computer **(2)**.

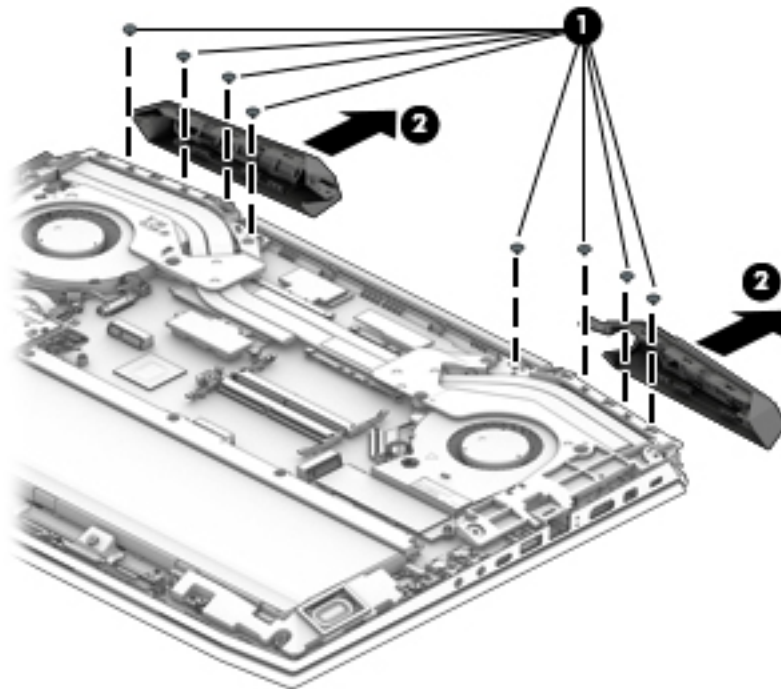

Reverse this procedure to install the hinge covers.

System support brackets

 **NOTE:** The system support brackets are not spared.


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the system support brackets, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - ▲ Hinge covers (see [Hinge covers on page 48](#)).


Remove the system support brackets:


1. Disconnect the power connector cable from the system board **(1)**.
2. Remove the power connector cable from the routing path and clips **(2)**.

 **NOTE:** The power connector cable is routed through the left side system support bracket.

3. Remove the seven Phillips PM2.0×5.7 and two Phillips PM2.4×7.2 screws **(3)** that secure the brackets to the computer.

4. Remove the brackets from the computer (4).


 **IMPORTANT:** To avoid damaging the power connector cable, take care during the removal of the system support brackets.

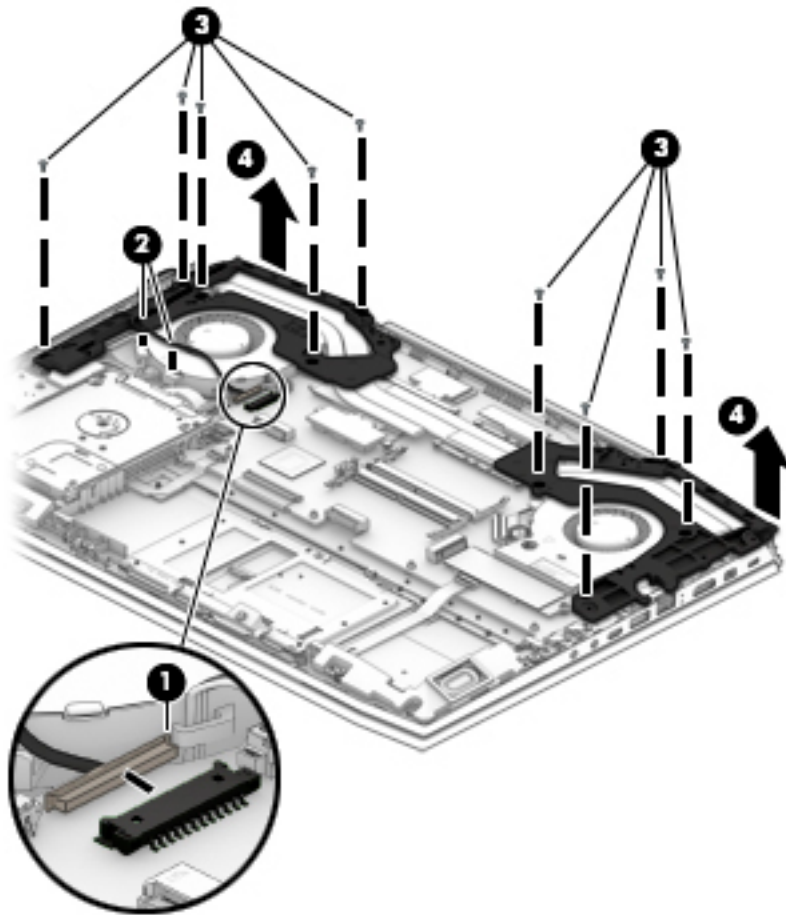

Reverse this procedure to install the system support brackets.

Power connector cable

Description	Spare part number
For use only on computer models equipped with the AMD R17M or Nvidia N17P GPUs	926204-001
For use only on computer models equipped with the Nvidia N17E GPU	938137-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the power connector cable, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).

Remove the power connector cable:

1. Disconnect the power connector cable from the system board **(1)**.
2. Remove the power connector cable **(2)**.

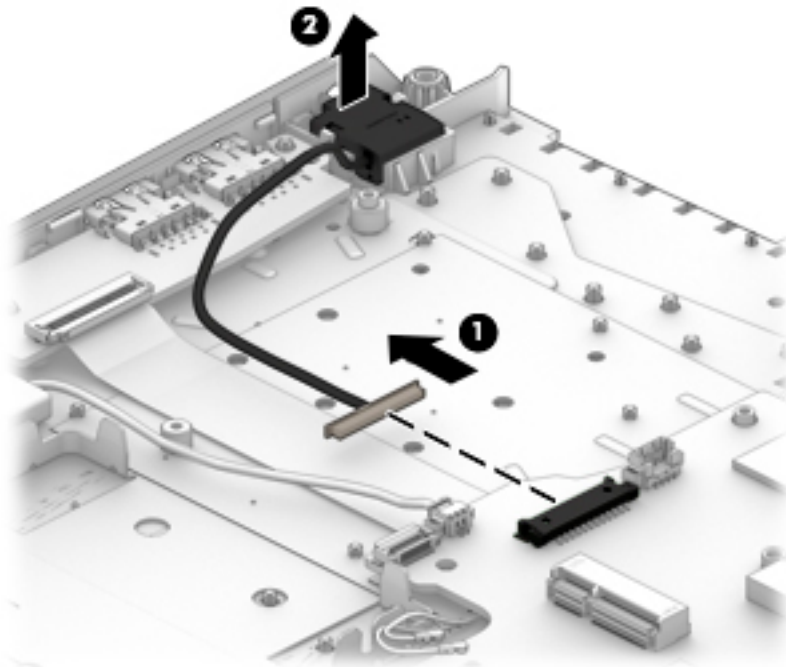

Reverse this procedure to install the power connector cable.

Fans



NOTE: The left and right fans are spared separately.

Description	Spare part number
Left fan	929455-001
Right fan	929456-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the fans, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Solid state drive (see [Solid state drive on page 37](#)).
 - b. Hinge covers (see [Hinge covers on page 48](#)).
 - c. System support brackets (see [System support brackets on page 49](#)).

Remove the fans:

1. Disconnect the fan cables from the system board **(1)**.
2. Remove the fan cables from the routing path clips **(2)**.
3. Remove the two Phillips PM2.0×5.7 screws **(3)** securing the fans to the computer.

4. Remove the fans from the computer (4).

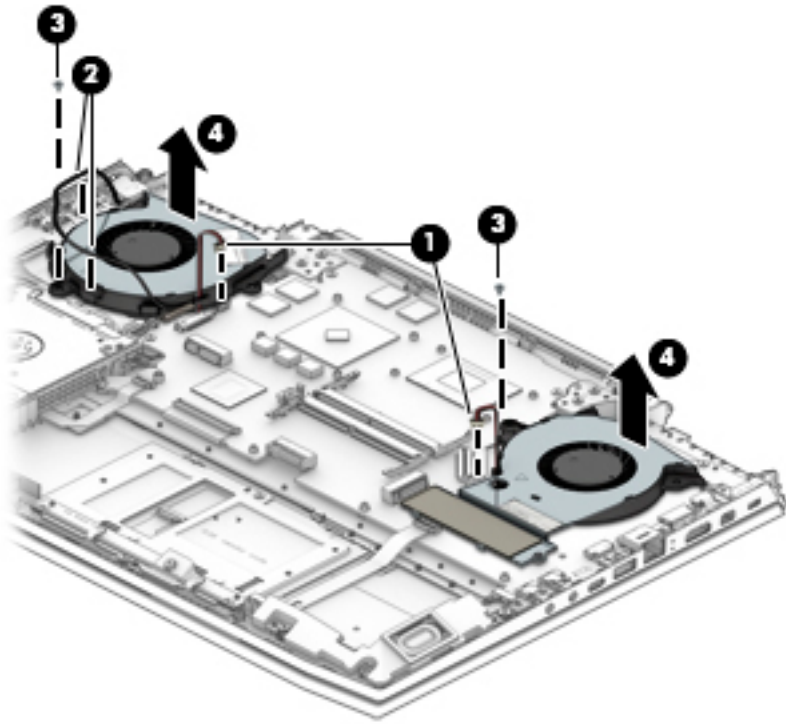

Reverse this procedure to install the fans.

USB board



NOTE: The USB board spare part kit does not include the connector cable.

Description	Spare part number
USB board (for use only on computer models equipped with an Nvidia N17E GPU)	929465-001
USB board (for use only on computer models equipped with an Nvidia N17P GPU)	929466-001
USB board (for use only on computer models equipped with an AMD R17M GPU)	929467-001
USB board connector cable	929447-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the USB board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Fans (see [Fans on page 52](#)).

Remove the USB board:

1. Disconnect the USB board connector cable from the USB board **(1)**.
2. Remove the Phillips PM2.0×5.7 screw **(2)**.

3. Remove the USB board from the computer **(3)**.

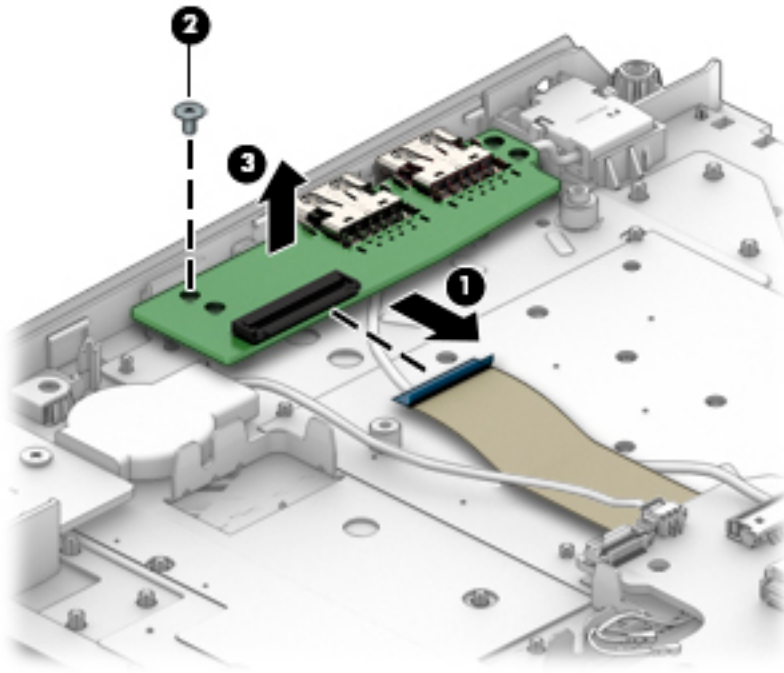

Reverse this procedure to install the USB board.

Heat sink



NOTE: The heat sink spare part kit includes replacement thermal material.

Description	Spare part number
Heat sink (for use only on computer models equipped with an Nvidia N17E GPU)	929559-001
Heat sink (for use only on computer models equipped with an Nvidia N17P Generation 1 GPU)	929457-001
Heat sink (for use only on computer models equipped with an Nvidia N17P Generation 0 GPU)	931246-001
Heat sink (for use only on computer models equipped with an AMD R17M GPU)	929560-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the heat sink, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Fans (see [Fans on page 52](#)).


Remove the heat sink:


1. Following the 1 through 8 sequence stamped into the heat sink, loosen the eight captive Phillips screws **(1)** that secure the heat sink to the system board.

2. Remove the heat sink (2).

 **NOTE:** Due to the adhesive quality of the thermal material located between the heat sink and the system board components, it may be necessary to move the heat sink from side to side to detach it.

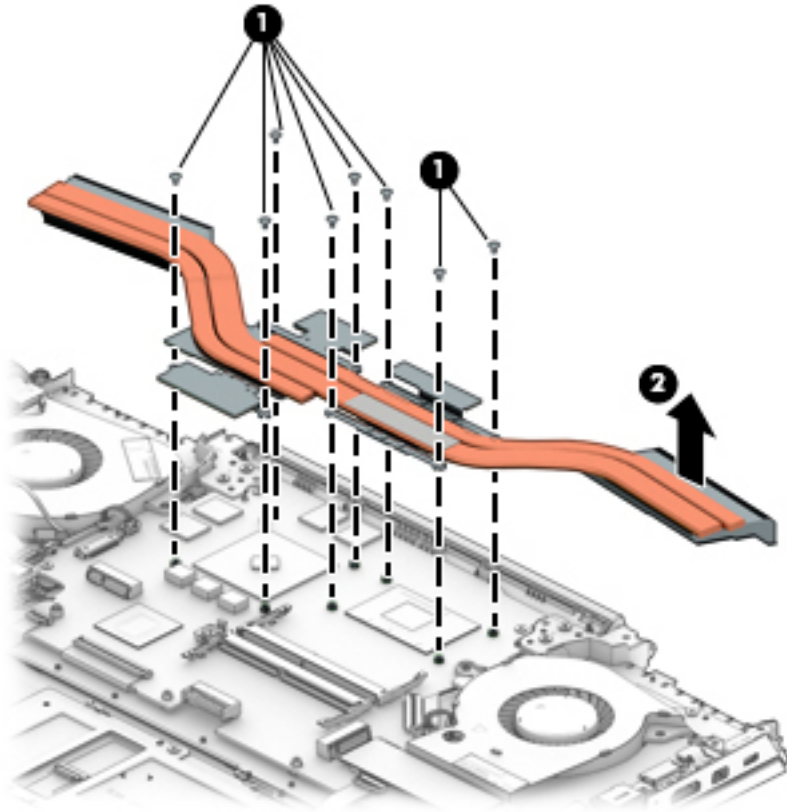

 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the heat sink and the system board components each time the heat sink is removed. Thermal paste is used on the processor (1), the graphics processor (3), and the heat sink sections (2 and 4) that service the processors.

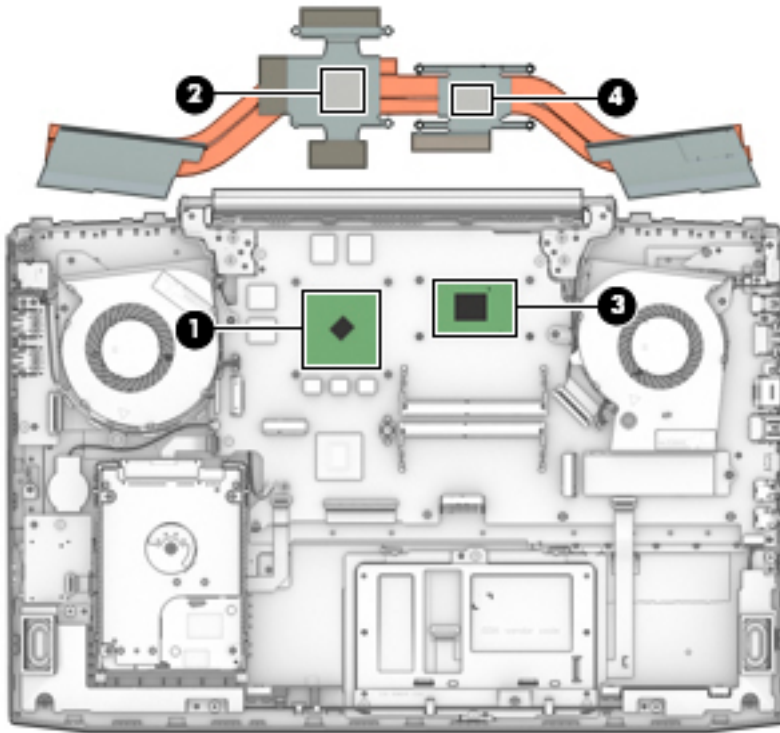

Reverse this procedure to install the heat sink.

Power button board



NOTE: The power button board does not include the power button board connector cable.

Description	Spare part number
Power button board	929468-001
Power button board connector cable	929448-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the power button board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Fans (see [Fans on page 52](#)).
 - d. Heat sink (see [Heat sink on page 56](#)).

Remove the power button board:

1. Disconnect the power button board cable from the system board **(1)**.
2. Remove the two Phillips PM2.0×3.5 screws **(2)** that secure the power button board to the computer.

3. Remove the power button board from the computer (3).

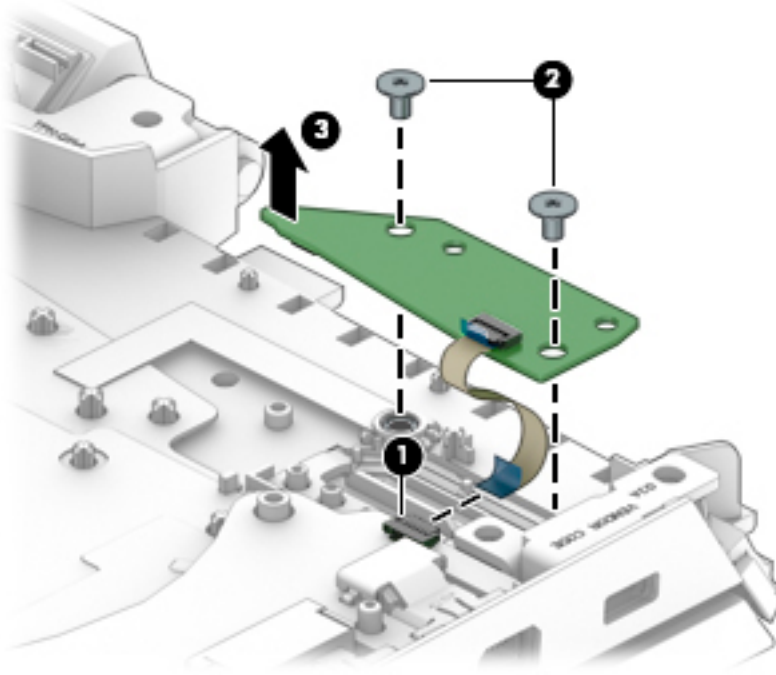

Reverse this procedure to install the power button board.

System board

Description	Spare part number
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17E 6 GB GPU (Generation 1), and the Windows 10 operating system	929486-601
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17E 6 GB GPU (Generation 1), and a non-Windows 10 operating system	929486-001
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 1), and the Windows 10 operating system	929481-601
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 1), and a non-Windows 10 operating system	929481-001
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 0), and the Windows 10 operating system	929483-601
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 0), and a non-Windows 10 operating system	929483-001
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 2 GB GPU (Generation 0), and the Windows 10 operating system	929482-601
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 2 GB GPU (Generation 0), and a non-Windows 10 operating system	929482-001
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an AMD R17M 2 GB GPU, and the Windows 10 operating system	929487-601
Equipped with an Intel Core i7-7700 2.80-GHz (SC turbo up to 3.8-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an AMD R17M 2 GB GPU, and a non-Windows 10 operating system	929487-001
Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17E 6 GB GPU (Generation 1), and the Windows 10 operating system	937751-601
Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17E 6 GB GPU (Generation 1), and a non-Windows 10 operating system	937751-001
Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 1), and the Windows 10 operating system	929480-601
Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 1), and a non-Windows 10 operating system	929480-001
Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 0), and the Windows 10 operating system	929485-601

Description	Spare part number
Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 4 GB GPU (Generation 0), and a non-Windows 10 operating system	929485-001
Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 2 GB GPU (Generation 0), and the Windows 10 operating system	929484-601
Equipped with an Intel Core i5-7300 2.50-GHz (SC turbo up to 3.5-GHz) processor (2400-MHz FSB, 6 MB L3 cache, quad core, 45W), a graphic subsystem with an Nvidia N17P 2 GB GPU (Generation 0), and a non-Windows 10 operating system	929484-001




IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the system board, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Fans (see [Fans on page 52](#)).
 - d. Heat sink (see [Heat sink on page 56](#)).

Disconnect the following cables from the system board:

1. **(1):** Hard drive connector cable
- (2):** Power connector cable
- (3):** WLAN antenna cables
- (4):** Memory card reader board connector cable
- (5):** Keyboard/top cover connector cable
- (6):** Display cable
- (7):** TouchPad cable
- (8):** Power button board cable
- (9):** Speaker cable

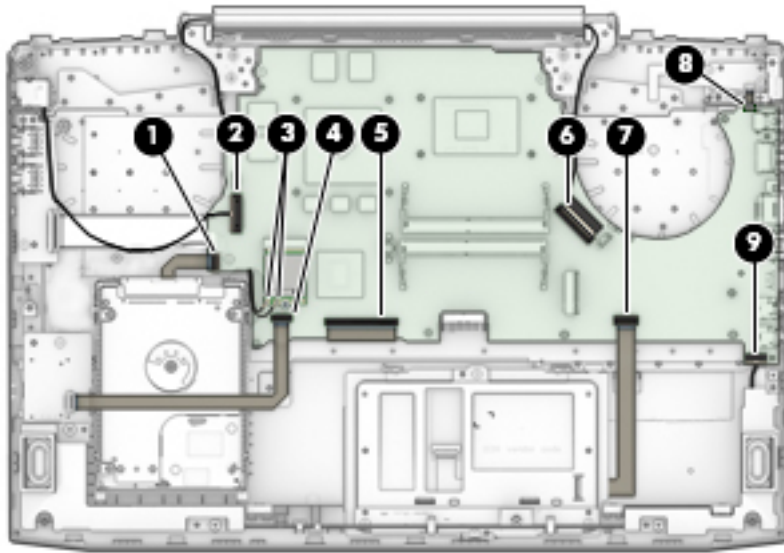


2. Remove the three Phillips PM2.0×3.4 screws and the Phillips PM1.9×5.7 screw **(1)**.
3. Remove the screw bracket **(2)**.

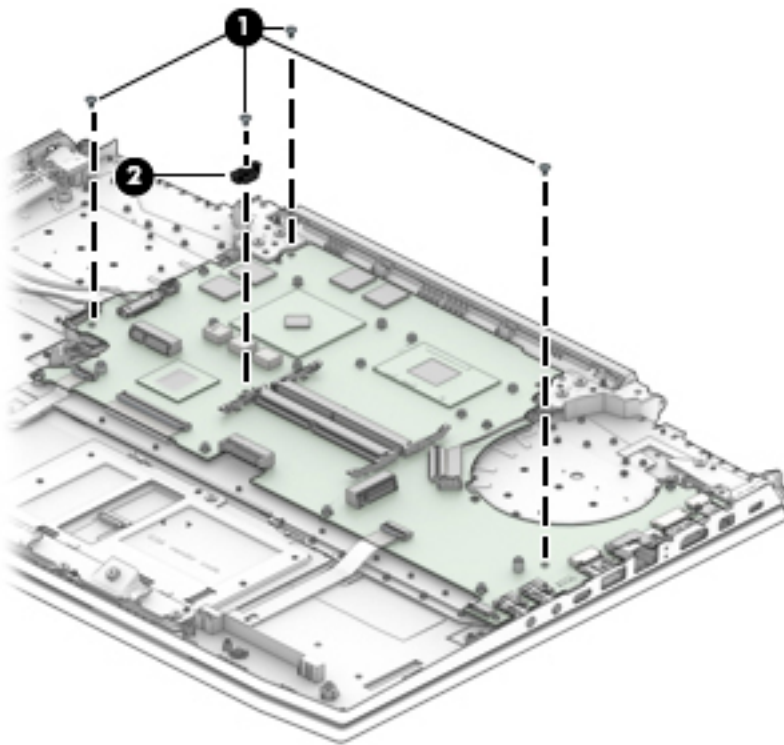


4. Lift the left edge of the system board at an angle **(1)** but do not remove the board.
5. Disconnect the USB board connector cable from the underside of the system board **(2)**.

6. Remove the system board from the computer at an angle **(3)**.

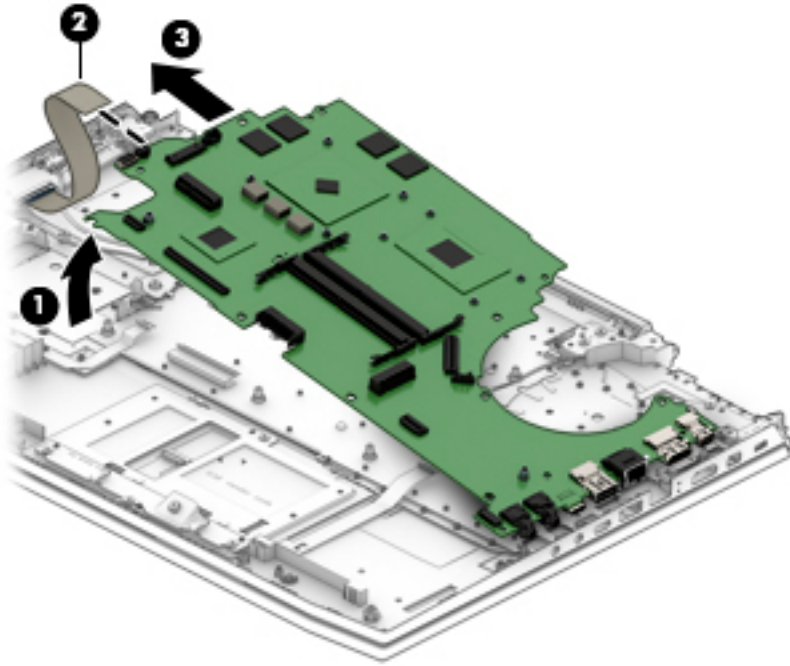

Reverse this procedure to install the system board.

Display assembly


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the display assembly, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Fans (see [Fans on page 52](#)).
 - d. Heat sink (see [Heat sink on page 56](#)).
 - e. System board (see [System board on page 61](#)).

Remove the display assembly:


1. Disconnect the display panel cable from the system board **(1)**.
2. Disconnect the WLAN antenna cable from the system board **(2)**.
3. Release the WLAN antenna cable from the clips securing it to the computer **(3)**.

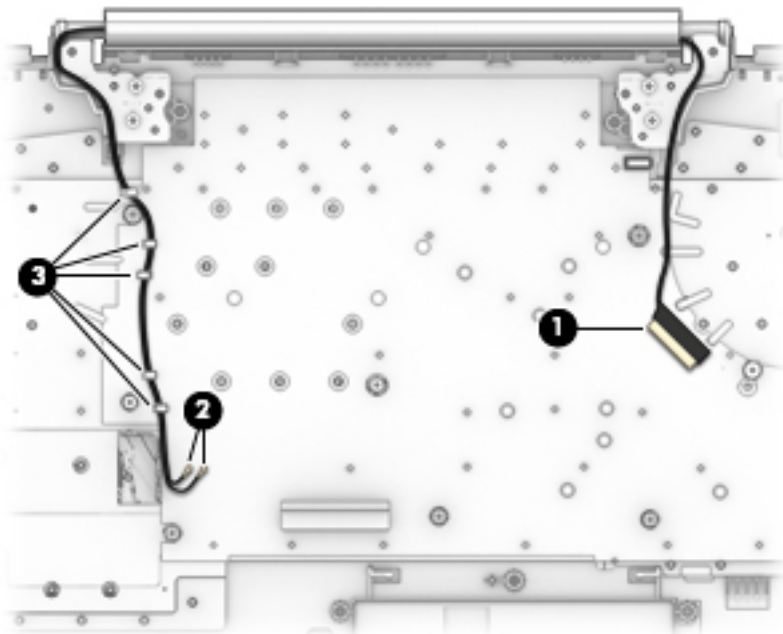

4. Open the computer with the bottom facing up **(1)**.
5. Remove the four Phillips PM2.5×5.7 screws **(2)** securing the display assembly to the computer.

 **IMPORTANT:** To avoid damaging the display assembly or display panel, ensure that the display assembly is supported before removing the hinges.

6. Remove the display assembly from the computer (3).

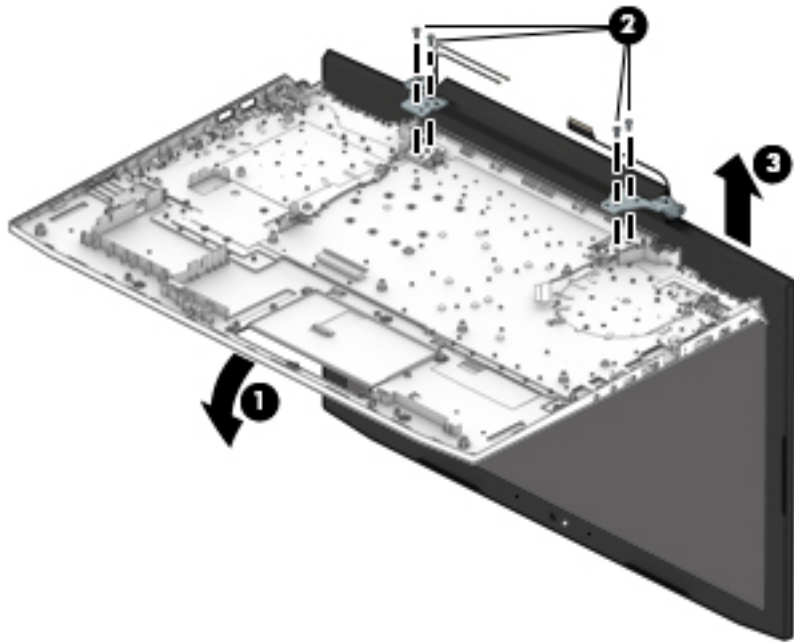


Reverse this procedure to install the display bezel.

Keyboard/top cover

Description	Spare part number
For use only on computer models equipped with a USB 3.x Thunderbolt port	
For use internationally	929479-B31
For use in Belgium	929479-A41
For use in Bulgaria	929479-261
For use in Canada	929479-DB1
For use in the Czech Republic and Slovakia	929479-FL1
For use in France	929479-051
For use in Germany	929479-041
For use in Greece	929479-151
For use in Hungary	929479-211
For use in Israel	929479-BB1
For use in Italy	929479-061
For use in Japan	929479-291
For use in Latin America	929479-161
For use in Norway	929479-DH1
For use in Portugal	929479-131
For use in Romania	929479-271
For use in Russia	929479-251
For use in Saudi Arabia	929479-171
For use in Slovenia	929479-BA1
For use in South Korea	929479-AD1
For use in Spain	929479-071
For use in Switzerland	929479-BG1
For use in Taiwan	929479-AB1
For use in Thailand	929479-281
For use in Turkey	929479-141
For use in the United Kingdom and Singapore	929479-031
For use in the United States	929479-001
For use only on computer models equipped with a standard USB 3.x port	
For use Internationally	929478-B31
For use in Belgium	929478-A41
For use in Bulgaria	929478-261
For use in Canada	929478-DB1

Description	Spare part number
For use in Czech Republic and Slovakia	929478-FL1
For use in France	929478-051
For use in Germany	929478-041
For use in Greece	929478-151
For use in Hungary	929478-211
For use in Israel	929478-BB1
For use in Italy	929478-061
For use in Japan	929478-291
For use in Latin America	929478-161
For use in Norway	929478-DH1
For use in Portugal	929478-131
For use in Romania	929478-271
For use in Russia	929478-251
For use in Saudi Arabia	929478-171
For use in Slovenia	929478-BA1
For use in South Korea	929478-AD1
For use in Spain	929478-071
For use in Switzerland	929478-BG1
For use in Taiwan	929478-AB1
For use in Thailand	929478-281
For use in Turkey	929478-141
For use in the United Kingdom and Singapore	929478-031
For use in the United States	929478-001

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement


Before removing the display bezel, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).

- c. Fans (see [Fans on page 52](#)).
- d. Heat sink (see [Heat sink on page 56](#)).
- e. System board (see [System board on page 61](#)).
- f. Display assembly (see [Display assembly on page 65](#)).

Display bezel

Description	Spare part number
For use only on computer models equipped with an infrared webcam	929446-001
For use only on computer models equipped with a standard webcam	929444-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the display bezel, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Fans (see [Fans on page 52](#)).
 - d. Heat sink (see [Heat sink on page 56](#)).
 - e. System board (see [System board on page 61](#)).
 - f. Display assembly (see [Display assembly on page 65](#)).

Remove the display bezel:

1. Using a case utility tool, carefully separate the bezel from the top of the display assembly **(1)**.
2. Separate the bezel from the sides of the display assembly **(2)**.
3. Separate the bezel from the bottom of the display assembly **(3)**.

 **IMPORTANT:** To avoid damaging the display panel, use care when separating the bezel from the bottom of the display panel assembly.

4. Remove the bezel from the display assembly (4).

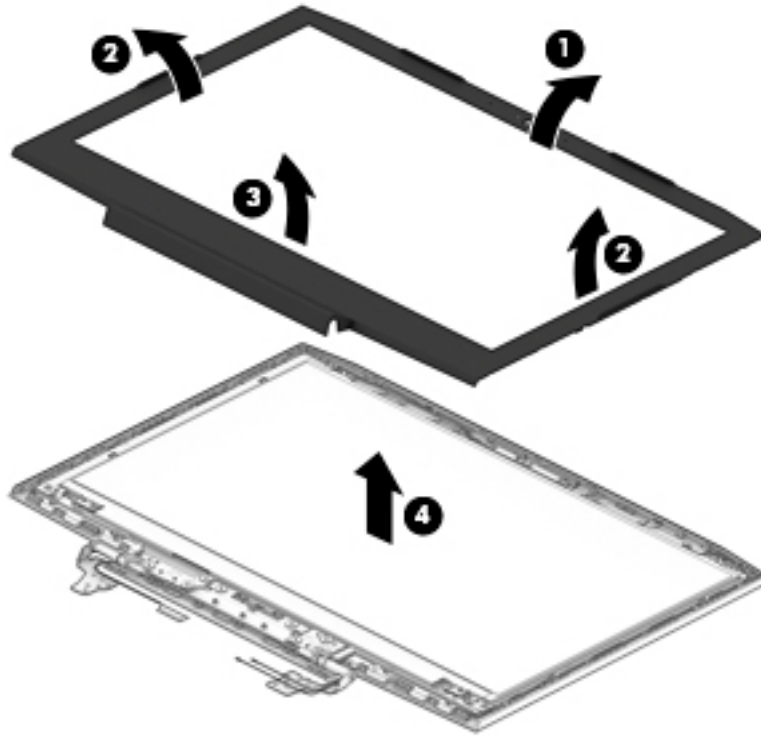

Reverse this procedure to install the display bezel.

Display hinges

Description	Spare part number
Display hinges	929464-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the display hinges, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Fans (see [Fans on page 52](#)).
 - d. Heat sink (see [Heat sink on page 56](#)).
 - e. System board (see [System board on page 61](#)).
 - f. Display assembly (see [Display assembly on page 65](#)).
 - g. Display bezel (see [Display bezel on page 70](#)).

Remove the display hinges:

1. Remove the six Phillips broadhead 2.4×3.2 screws **(1)** securing the hinges to the display assembly.

2. Remove the hinges from the display assembly (2).

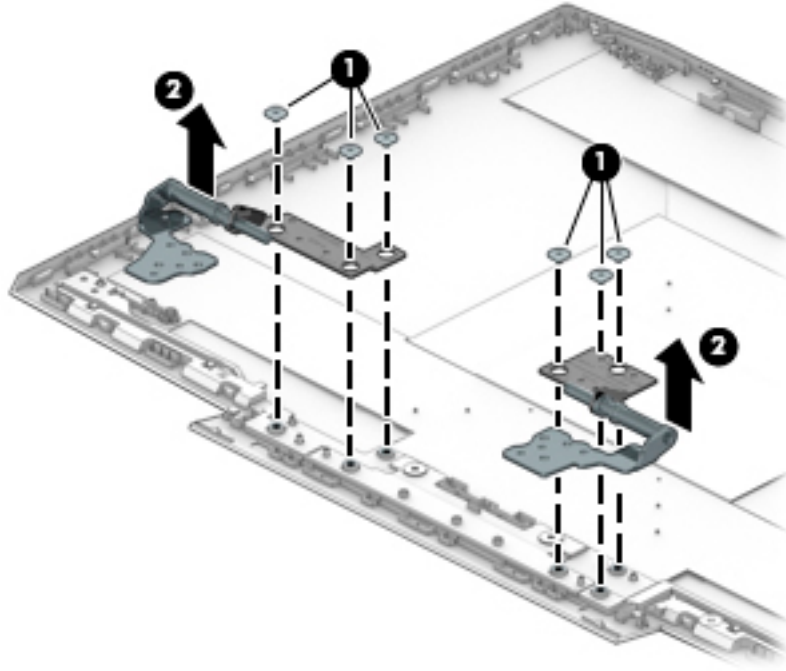

Reverse this procedure to install the display hinges.

Webcam



NOTE: The webcam spare part kit includes does not include the webcam cable.

Description	Spare part number
For computer models equipped with an infrared webcam	919579-007
For computer models equipped with a standard webcam	919573-009
Webcam and display cable for use only on models equipped with an infrared webcam and ultra high definition (UHD) panel	929454-001
Webcam and display cable for use only on models equipped with a standard webcam and ultra high definition (UHD) panel	929453-001
Webcam and display cable for use only on models equipped with an infrared webcam and full high definition (FHD) panel	929452-001
Webcam and display cable for use only on models equipped with a standard webcam and full high definition (FHD) panel	929451-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the webcam, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Heat sink (see [Heat sink on page 56](#)).
 - d. System board (see [System board on page 61](#)).
 - e. Display assembly (see [Display assembly on page 65](#)).
 - f. Display bezel (see [Display bezel on page 70](#)).

Remove the webcam:

1. Disconnect the webcam cable from the webcam board **(1)**.


2. Remove the webcam board (2) from the display assembly.

 **NOTE:** Due to the adhesive located between the webcam board and the back cover, it may be necessary to move the webcam board from side to side to detach it.

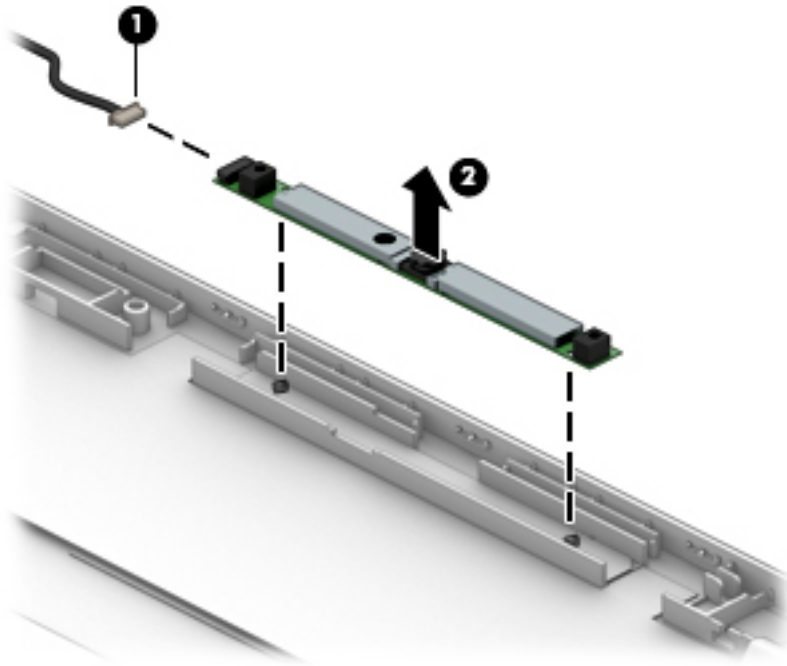


Reverse this procedure to install the webcam.

Display panel

 **NOTE:** The display panel spare part kit does not include the display cable or display panel brackets.

Description	Spare part number
15.6 in, WLED, FHD, UWVA, eDP display panel for use with AMD R17M GPU	752920-019
15.6 in, WLED, FHD, UWVA, eDP+NVSR display panel for use with N17E GPU	923006-001
15.6 in, WLED, FHD, UWVA, EDP+PSR display panel for use with N17P GPU	930619-001
15.6 in, WLED, UHD, UWVA, eDP+NVSR display panel for use with N17E GPU	920041-002
15.6 in, WLED, UHD, UWVA, EDP+PSR display panel for use with N17P GPU	929115-002
Display and webcam cable for use only on models equipped with an ultra high definition (UHD) panel and infrared webcam	929454-001
Display and webcam cable for use only on models equipped with an ultra high definition (UHD) panel and standard webcam	929453-001
Display and webcam cable for use only on models equipped with a full high definition (FHD) panel and infrared webcam	929452-001
Display and webcam cable for use only on models equipped with a full high definition (FHD) panel and standard webcam	929451-001
Display panel bracket, left	929461-001
Display panel bracket, right	929460-001

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement


Before removing the display panel, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Heat sink (see [Heat sink on page 56](#)).
 - d. System board (see [System board on page 61](#)).
 - e. Display assembly (see [Display assembly on page 65](#)).
 - f. Display bezel (see [Display bezel on page 70](#)).


Remove the display panel:


1. Remove the six Phillips PM1.9×3.5 screws (**1**) that secure the brackets to the display assembly.

2. Remove the brackets from the display assembly **(2)**.

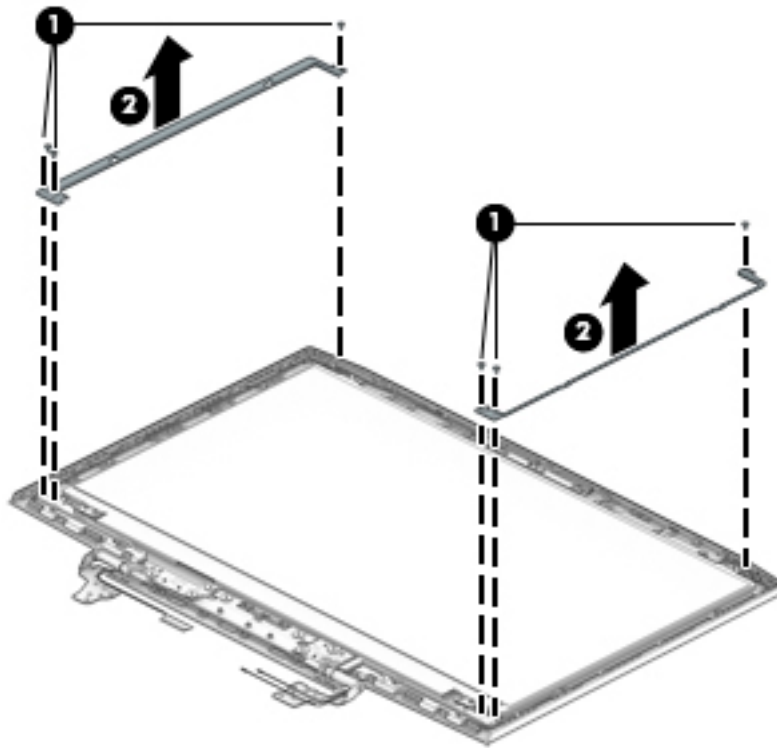


3. Remove the four Phillips PM1.9×3.5 screws **(1)** that secure the display panel to the display assembly.
4. Turn the display panel over face down **(2)**.

 **IMPORTANT:** To avoid damaging the display panel or display panel cable, do not remove the display panel from the display assembly at this time.

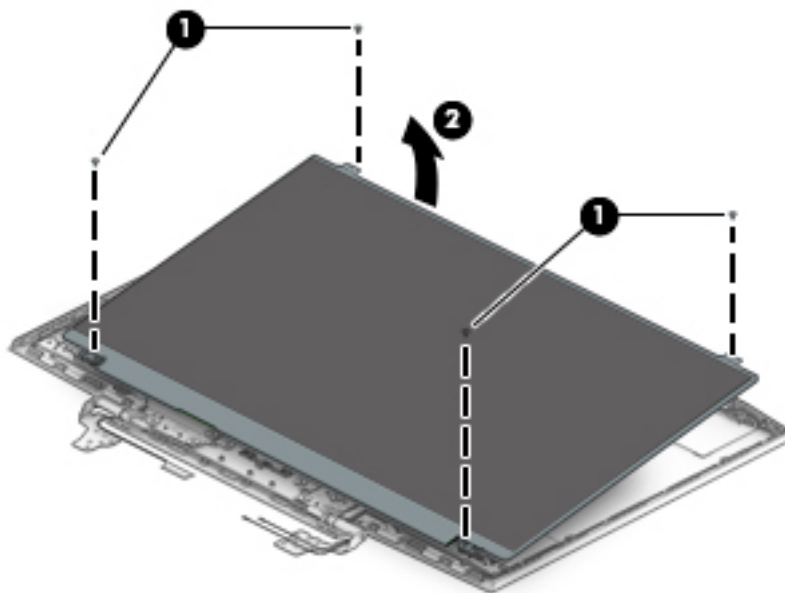

5. Remove the adhesive tape from the display panel connector **(1)**.

6. Disconnect the display panel cable from the display panel **(2)** that secure the brackets to the display assembly.
7. Remove the display panel from the display panel assembly **(3)**.

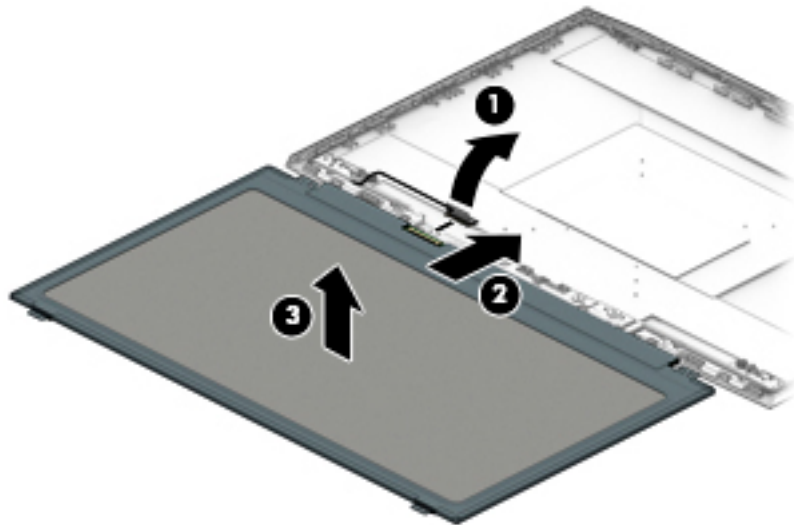

Reverse this procedure to install the display panel.

Display cable and webcam cable



NOTE: The display cable and webcam cable are spared together in a kit.

Description	Spare part number
Display and webcam cable for use only on models equipped with an ultra high definition (UHD) panel and infrared webcam	929454-001
Display and webcam cable for use only on models equipped with an ultra high definition (UHD) panel and standard webcam	929453-001
Display and webcam cable for use only on models equipped with an full high definition (FHD) panel and infrared webcam	929452-001
Display and webcam cable for use only on models equipped with an full high definition (FHD) panel and standard webcam	929451-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the display cable and webcam cable, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Heat sink (see [Heat sink on page 56](#)).
 - d. System board (see [System board on page 61](#)).
 - e. Display assembly (see [Display assembly on page 65](#)).
 - f. Display bezel (see [Display bezel on page 70](#)).
 - g. Display panel (see [Display panel on page 76](#)).

Remove the display cable and webcam cable:

1. Release the webcam cable from the clips securing it to the back cover **(1)**.

2. Remove the cable from the back cover (2).

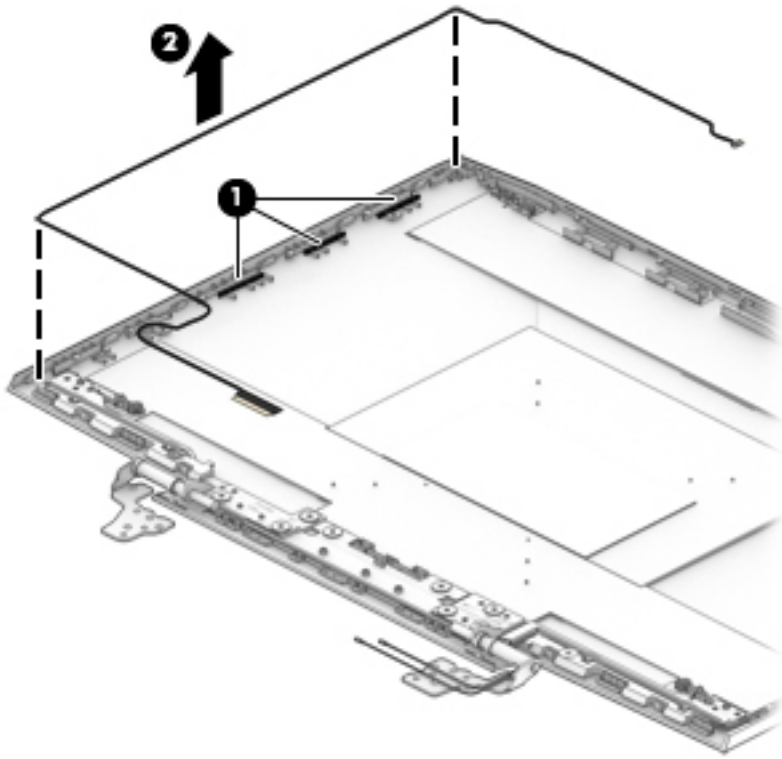

Reverse this procedure to install the display cable and webcam cable.

WLAN antennas



NOTE: The WLAN antennas spare part kit includes the cable and antennas.

Description	Spare part number
WLAN cable and antennas	929441-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the WLAN antennas, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Heat sink (see [Heat sink on page 56](#)).
 - d. System board (see [System board on page 61](#)).
 - e. Display assembly (see [Display assembly on page 65](#)).
 - f. Display bezel (see [Display bezel on page 70](#)).
 - g. Display panel (see [Display panel on page 76](#)).

Remove the WLAN antennas:

1. Release the WLAN antenna cable from the clips securing it to the back cover **(1)**.


2. Remove the WLAN antenna cable from the back cover (2).

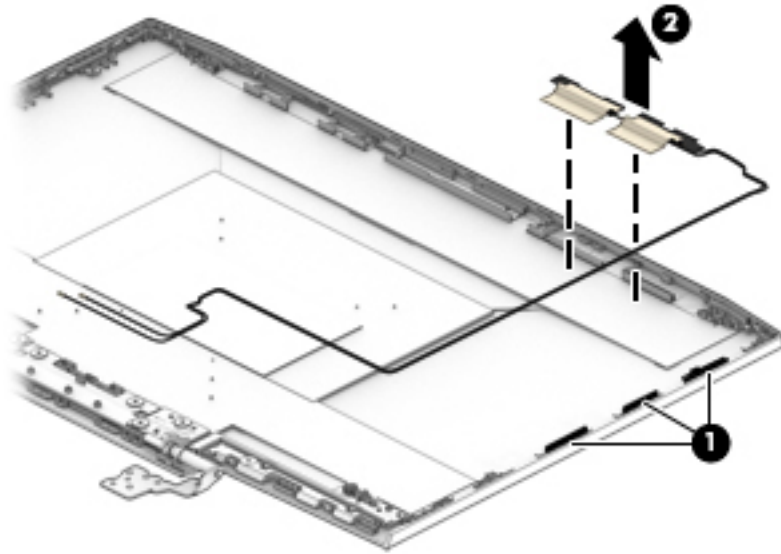

Reverse this procedure to install the WLAN antennas.

Back cover

Description	Spare part number
Back cover (for use only on computer models equipped with an infrared webcam)	938038-001
Back cover (for use only on computer models equipped with a standard webcam)	929442-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

To remove the back cover, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
 - a. Hinge covers (see [Hinge covers on page 48](#)).
 - b. System support brackets (see [System support brackets on page 49](#)).
 - c. Heat sink (see [Heat sink on page 56](#)).
 - d. System board (see [System board on page 61](#)).
 - e. Display assembly (see [Display assembly on page 65](#)).
 - f. Display bezel (see [Display bezel on page 70](#)).
 - g. Webcam (see [Webcam on page 74](#)).
 - h. Display panel (see [Display panel on page 76](#)).
 - i. Display cable and webcam cable (see [Display cable and webcam cable on page 79](#)).
 - j. WLAN antennas (see [Display panel on page 76](#)).
 - k. Display hinges (see [Display hinges on page 72](#)).

7 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

 **CAUTION:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- ▲ Turn on or restart the computer, quickly press `esc`, and then press `f10`.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named `Readme.txt`, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version


To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.


- HP Support Assistant
 1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Click the question mark icon in the taskbar.
 2. Select **My PC**, and then select **Specifications**.
- Setup Utility (BIOS)
 1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 84](#)).
 2. Select **Main**, select **System Information**, and then make note of the BIOS version.
 3. Select **Exit**, select **No**, and then follow the on-screen instructions.

To check for later BIOS versions, see [Downloading a BIOS update on page 85](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.


1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Click the question mark icon in the taskbar.
2. Click **Updates**, and then click **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps:

1. Type `file` in the taskbar search box, and then select **File Explorer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).


The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

8 Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

When HP PC Hardware Diagnostics (UEFI) detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. This ID code can then be provided to support to help determine how to correct the problem.


 **NOTE:** To start diagnostics on a convertible computer, your computer must be in notebook mode and you must use the keyboard attached.

To start HP PC Hardware Diagnostics (UEFI), follow these steps:

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.


The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive

 **NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 87](#).

- b. Hard drive
- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test, press **esc**.

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device



NOTE: The HP PC Hardware Diagnostics (UEFI) download instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are offered.

There are two options to download HP PC Hardware Diagnostics to a USB device.

Download the latest UEFI version

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. In the HP PC Hardware Diagnostics section, select the **Download** link, and then select **Run**.

Download any version of UEFI for a specific product

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**.
3. Enter the product name or number.
4. Select your computer, and then select your operating system.
5. In the **Diagnostic** section, follow the on-screen instructions to select and download the UEFI version you want.

9 Backing up, restoring, and recovering

This chapter provides information about the following processes. The information in the chapter is standard procedure for most products.

- Creating recovery media and backups
- Restoring and recovering your system

For additional information, refer to the HP Support Assistant app.

- ▲ Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.



IMPORTANT: If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Creating recovery media and backups

The following methods of creating recovery media and backups are available on select products only. Choose the available method according to your computer model.

- Use HP Recovery Manager to create HP Recovery media after you successfully set up the computer. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced. For information on creating recovery media, see [Creating HP Recovery media \(select products only\) on page 88](#). For information on the recovery options that are available using the recovery media, see [Using Windows tools on page 89](#).

- Use Windows tools to create system restore points and create backups of personal information.

For more information, see [Recovering using HP Recovery Manager on page 90](#).



NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

- On select products, use the HP Cloud Recovery Download Tool to create a bootable USB drive for your HP recovery media. Go to <https://support.hp.com/us-en/document/c05115630?openCLC=true>, select your country or region, and follow the on-screen instructions.

Creating HP Recovery media (select products only)


If possible, check for the presence of the Recovery partition and the Windows partition. Right-click the **Start** menu, select **File Explorer**, and then select **This PC**.

- If your computer does not list the Windows partition and the Recovery partition, you can obtain recovery media for your system from support. You can find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

You can use Windows tools to create system restore points and create backups of personal information, see [Using Windows tools on page 89](#).

- If your computer does list the Recovery partition and the Windows partition, you can use HP Recovery Manager to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and software programs that were installed at the factory and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.
 - Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
 - HP Recovery Manager examines the computer and determines the required storage capacity for the media that will be required.
 - To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or, instead, you can use a high-quality blank USB flash drive.
 - If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub. If you cannot create DVD media yourself, you can obtain recovery discs for your computer from HP. You can find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.
 - Be sure that the computer is connected to AC power before you begin creating the recovery media.
 - The creation process can take an hour or more. Do not interrupt the creation process.
 - If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue.

To create HP Recovery media:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Type `recovery` in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Create recovery media**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 90](#).

Using Windows tools

You can create recovery media, system restore points, and backups of personal information using Windows tools.

 **NOTE:** If storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get help app.

- ▲ Select the **Start** button, and then select the **Get Help** app.



NOTE: You must be connected to the Internet to access the Get help app.

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:



IMPORTANT: Not all methods are available on all products.

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information see the Get help app.
 - ▲ Select the **Start** button, and then select the **Get Help** app.



NOTE: You must be connected to the Internet to access the Get help app.

- If you need to correct a problem with a preinstalled application or driver, use the Reinstall drivers and/or applications option (select products only) of HP Recovery Manager to reinstall the individual application or driver.
 - ▲ Type `recovery` in the taskbar search box, select **HP Recovery Manager**, select **Reinstall drivers and/or applications**, and then follow the on-screen instructions.
- If you want to recover the Windows partition to original factory content, you can choose the System Recovery option from the HP Recovery partition (select products only) or use the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 90](#). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 88](#).
- On select products, if you want to recover the computer's original factory partition and content, or if you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 90](#).
- On select products, if you want to remove the Recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Removing the HP Recovery partition \(select products only\) on page 92](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you either created or that you obtained from HP, or by using the HP Recovery partition (select products only). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 88](#).

What you need to know before you get started


- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.




IMPORTANT: Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.

- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 88](#).

- To use the Factory Reset option (select products only), you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 88](#).
- If your computer does not allow the creation of HP Recovery media or if the HP Recovery media does not work, you can obtain recovery media for your system from support. You can find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

 **IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you want to retain.

Using HP Recovery media, you can choose from one of the following recovery options:

 **NOTE:** Only the options available for your computer display when you start the recovery process.


- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select products only) allows System Recovery only.

Using the HP Recovery partition (select products only)

The HP Recovery partition allows you to perform a system recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can be used only if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps (select products only).

1. Type `recovery` in the taskbar search box, select **HP Recovery Manager**, and then select **Windows Recovery Environment**.

– or –

For computers or tablets with keyboards attached, press **f11** while the computer boots, or press and hold **f11** as you press the power button.

For tablets without keyboards:

- Turn on or restart the tablet, and then quickly hold down the volume up button; then select **f11**.

– or –

- Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f11**.

2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media, and then restart the computer.



NOTE: If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 92](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If your computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive.

To change the boot order:



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.

For computers or tablets with keyboards attached:

- ▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

- ▲ Turn on or restart the tablet, and then quickly hold down the volume up button; then select **f9**.

– or –

Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot.
4. Follow the on-screen instructions.

Removing the HP Recovery partition (select products only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.



IMPORTANT: After you remove the HP Recovery partition, you will not be able to perform System Recovery or create HP Recovery media from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media \(select products only\) on page 88](#).



NOTE: The Remove Recovery Partition option is only available on products that support this function.

Follow these steps to remove the HP Recovery partition:

1. Type `recovery` in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

10 Specifications

Computer specifications

	Metric	U.S.
Dimensions		
Width	38.85 cm	15.6 in
Depth	27.55 cm	10.8 in
Height (front to back)	2.48 cm	.98 in
Weight		
	2.57 kg	5.66 lb
Input power		
Operating voltage and current	19.5 V dc @ 7.70 A – 150 W 19.5 V dc @ 10.3 A – 200 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

39.6 cm (15.6-in) display specifications

	Metric	U.S.
Dimensions		
Height	20.77 cm	8.175 in
Width	37.78 cm	14.875 in
Diagonal	39.62 cm	15.6 in
Number of colors	Up to 16.8 million	
Contrast ratio	500:1 (typical)	
Brightness	200 nits	
Pixel resolution		
Pitch	0.252mm x 0.252mm	
Format	1366x768	
Configuration	RGB vertical stripe	
Backlight	LED	
Character display	80 × 25	
Total power consumption	2.0 W	
Viewing angle	±65° horizontal, ±50° vertical (typical)	

Hard drive specifications

	2 TB hybrid	1 TB
Dimensions		
Height	7.0 mm	9.5 mm
Width	70 mm	70 mm
Weight	107 g max	102 g max
Interface type	SATA	SATA
Transfer rate	300 MB/sec	300 MB/sec
Security	ATA security	ATA security
Seek times (typical read, including setting)		
Single track	1.5 ms	1.1 ms
Average	12.0 ms	12.0 ms
Maximum	22.0 ms	21.0 ms
Logical blocks	976,752,240	1,465,149,168
Disk rotational speed	5400 rpm	5400 rpm
Operating temperature	0°C to 60°C (0°F to 140°F)	0°C to 60°C (0°F to 140°F)

2 TB hybrid

1 TB

*Size refers to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.

NOTE: Certain restrictions and exclusions apply. Contact support for details.

11 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 V ac, or from 220 to 240 V ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	ISI	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.

Country/region	Accredited agency	Applicable note number
3.	The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm ² or 1.25 mm ² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.	
4.	The flexible cord must be Type RVV, 3-conductor, 0.75 mm ² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.	
5.	The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm ² conductor size. KTL logo and individual approval number must be on each element. Corset approval number and logo must be printed on a flag label.	
6.	The flexible cord must be Type HVCTF 3-conductor, 1.25 mm ² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.	
7.	For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm ² or 1.00 mm ² conductor size, with plug BS 1363/A with BSI or ASTA marks.	

12 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

- A**
 - AC adapter
 - spare part number 25
 - AC adapter and battery light, identifying 4
 - action keys
 - identifying 13
 - using 14
 - airplane mode key 13
 - audio, product description 2
 - audio-in (microphone) jack 7, 8
 - audio-out (headphone)/audio-in (microphone) jack, identifying 6, 8
- B**
 - Back cover
 - removal 83
 - spare part numbers 83
 - backups 88
 - Battery
 - spare part number 22
 - battery
 - removal 33
 - spare part number 33
 - Bezel
 - spare part number 23
 - BIOS
 - determining version 84
 - downloading an update 85
 - starting the Setup Utility 84
 - updating 84
 - boot order
 - changing 92
 - Bottom cover
 - spare part number 22
 - buttons
 - left TouchPad 10
 - optical drive eject 4
 - power 12
 - right TouchPad 10
- C**
 - camera light, identifying 9
 - caps lock light, identifying 11
 - components
 - bottom 15
 - display 9
 - left side 6
 - right side 4
 - computer major components 16
 - computer specifications 93
 - connector, power 5, 8
- D**
 - display
 - specifications 94
 - Display assembly
 - removal 65
 - display assembly
 - subcomponents 23
 - Display bezel
 - removal 70
 - spare part numbers 70
 - Display bracket
 - spare part number 23
 - Display cable and webcam cable
 - removal 79
 - spare part numbers 79
 - Display enclosure
 - spare part number 24
 - Display hinges
 - removal 72
 - spare part number 24
 - spare part numbers 72
 - Display panel
 - removal 76
 - spare part number 23
 - spare part numbers 76
 - display panel
 - product description 1
 - Display panel cable
 - spare part number 24
 - drive light 4
- E**
 - END key 13
 - esc key, identifying 13
 - Ethernet, product description 2
- F**
 - Fan
 - spare part number 21
 - Fans
 - removal 52
 - spare part numbers 52
 - fn key, identifying 13
- G**
 - graphics, product description 1
- H**
 - Hard drive
 - removal 35
 - spare part number 21
 - spare part numbers 35
 - hard drive
 - product description 1
 - specifications 94
 - HDMI port
 - identifying 6, 7
 - HDMI to VGA adapter
 - spare part numbers 25
 - Heat sink
 - removal 56
 - spare part numbers 56
 - Heatsink
 - spare part number 21
 - Hinge covers
 - removal 48
 - spare part number 21
 - spare part numbers 48
 - HP PC Hardware Diagnostics (UEFI)
 - using 86
 - HP Recovery Manager
 - correcting boot problems 92
 - starting 91
 - HP Recovery media
 - creating 88
 - recovery 91
 - HP Recovery partition
 - recovery 91
 - removing 92

- I**
- infrared camera
 - identifying 9
- infrared camera light, identifying 9
- insert key 13
- internal microphones, identifying 9
- J**
- jacks
 - audio-in (microphone) 7, 8
 - audio-out (headphone)/audio-in (microphone) 6, 8
 - network 6, 7
 - RJ-45 (network) 6, 7
- K**
- keyboard
 - product description 2
- Keyboard/top cover
 - removal 67
 - spare part numbers 18, 67
- keys
 - action 13
 - airplane mode 13
 - END key 13
 - esc 13
 - fn 13
 - insert key 13
 - OMEN key 13
 - PRT SC 13
 - Windows 13
- L**
- labels
 - serial number 15
- lights
 - AC adapter and battery light 4
 - caps lock 11
 - drive 4
 - mute 11
 - power 11
 - RJ-45 (network) status 6, 7
 - TouchPad 11
- M**
- Memory card reader board
 - removal 44
 - spare part number 19
 - spare part numbers 44
- memory card reader, identifying 4, 7, 8
- memory card, identifying 4, 7, 8
- Memory module
 - spare part numbers 21
- memory module
 - product description 1
 - removal 38
 - spare part number 38
- microphone
 - product description 2
- Mini DisplayPort
 - identifying 6, 7
- minimized image recovery 91
- minimized image, creating 90
- model name 1
- mute light, identifying 11
- N**
- network jack, identifying 6, 7
- O**
- OMEN key 13
- operating system, product description 3
- optical drive
 - product description 2
- optical drive eject button, identifying 4
- optical drive, identifying 4
- original system recovery 90
- P**
- Plastics kit
 - spare part numbers 25
- pointing device, product description 2
- ports
 - HDMI 6, 7
 - Mini DisplayPort 6, 7
 - product description 2
 - USB 3.x SuperSpeed 4
 - USB 3.x SuperSpeed port with HP Sleep and Charge 6, 8
 - USB Type-C power connector and Thunderbolt port with HP Sleep and Charge 8
 - USB Type-C with HP Sleep and Charge 6
- Power button board
 - removal 59
 - spare part number 19
 - spare part numbers 59
- power button, identifying 12
- Power connector cable
 - removal 51
 - spare part numbers 51
- power connector, identifying 5, 8
- power cord
 - requirements for all countries 96
 - requirements for specific countries and regions 97
 - set requirements 96
- power lights, identifying 11
- power requirements, product description 2
- processor
 - product description 1
- product description
 - audio 2
 - display panel 1
 - Ethernet 2
 - external media cards 2
 - graphics 1
 - hard drive 1
 - keyboard 2
 - memory module 1
 - microphone 2
 - operating system 3
 - optical drive 2
 - pointing device 2
 - ports 2
 - power requirements 2
 - processors 1
 - product name 1
 - security 3
 - serviceability 3
 - video 2
 - wireless 2
- product name 1
- product name and number, computer 15
- PRT SC key 13
- R**
- recover
 - options 90
- recovery
 - discs 89, 91
 - HP Recovery Manager 90
 - media 91
 - starting 91

- supported discs 89
- system 90
- USB flash drive 91
- using HP Recovery media 89
- recovery media
 - creating 88
 - creating using HP Recovery Manager 89
- recovery partition
 - removing 92
- regulatory information 15
- removal/replacement
 - procedures 32, 39
- RJ-45 (network) jack, identifying 6, 7
- RJ-45 (network) status lights, identifying 6, 7
- Rubber kit
 - spare part numbers 26
- S**
- Screw kit
 - spare part numbers 26
- security cable slot, identifying 6, 7
- security, product description 3
- serial number 15
- serial number, computer 15
- serviceability, product description 3
- slots
 - memory card reader 4, 7, 8
 - security cable 6, 7
- Solid state drive
 - removal 37
 - spare part numbers 21, 37
- Speakers
 - removal 42
 - spare part number 19
 - spare part numbers 42
- speakers
 - identifying 15
- special keys
 - using 13
- specifications
 - computer 93
 - display 94
 - hard drive 94
- supported discs, recovery 89
- System board
 - removal 61

- spare part number 20
- spare part numbers 61
- system information
 - locating 15
- system recovery 90
- system restore point
 - creating 89
- system restore point, creating 88
- System support brackets
 - removal 49
 - spare part numbers 21, 49

T

- Thunderbolt port with HP Sleep and Charge
 - identifying USB Type-C 8
- TouchPad
 - buttons 10
 - removal 46
 - spare part numbers 46
- Touchpad
 - spare part numbers 19
- TouchPad light 11
- TouchPad zone, identifying 10

U

- USB 3.x SuperSpeed port with HP Sleep and Charge, identifying 6, 8
- USB 3.x SuperSpeed port, identifying 4
- USB board
 - removal 54
 - spare part number 19
 - spare part numbers 54
- USB dongle
 - spare part numbers 25, 26
- USB Type-C port with HP Sleep and Charge, identifying 6
- USB Type-C power connector and Thunderbolt port with HP Sleep and Charge, identifying 8

V

- vents, identifying 15
- video, product description 2

W

- warranty period 15
- Webcam
 - removal 74

- spare part number 23
- spare part numbers 74
- Windows
 - system restore point 88, 89
- Windows key, identifying 13
- Windows tools
 - using 89
- wireless, product description 2
- WLAN antenna
 - spare part number 24
- WLAN antennas
 - removal 81
 - spare part numbers 81
- WLAN antennas, identifying 9
- WLAN module
 - removal 40
 - spare part number 21
 - spare part numbers 40