



ENGLISH  
हिन्दी

USER GUIDE  
LG-S310



**CE0168**

P/NO : MFL67003301(1.0)

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B016935

# LG-S310 User Guide - English

This manual may differ from the phone depending on the phone software version and service provider used.



# Contents

<b>Guidelines for safe and efficient use</b> .....	4
<b>Installing the SIM card and the handset battery</b> .....	9
Installing the SIM Card.....	9
Illustrations .....	9
<b>Installing a Memory Card</b> .....	10
<b>Phone Components</b> .....	11
Turning Your Phone On and Off .....	13
Making a call .....	13
Making an international call .....	13
Answering a call .....	13
<b>Selecting functions and options</b> .....	14
<b>Entering Text</b> .....	15
T9 Mode .....	15
123 Mode .....	15
(Numbers Mode) .....	15
Symbol Mode .....	15
<b>Anti Theft Mobile Tracker (ATMT)</b> .....	16
<b>Social network</b> .....	17
Facebook and Twitter .....	17
<b>Menu Tree</b> .....	18
<b>Messaging</b> .....	19
Create message .....	19
Inbox .....	19
My mailbox.....	19
Create new e-mail address .....	19
Drafts .....	20
Outbox .....	20
Sent items.....	20
Saved items.....	20
Emoticons .....	20
SOS message.....	20
Message settings.....	20
<b>Contacts</b> .....	21
Names .....	21
Settings .....	21
Groups .....	21
Speed dials .....	21
Service dial numbers .....	21
Own number .....	21
My business card .....	21
<b>Log</b> .....	22
Call log.....	22
Missed calls .....	22
Received calls.....	22
Dialled numbers.....	22
Call duration .....	22
Packet data counter.....	22
Call costs .....	22
<b>Settings</b> .....	22
Profiles .....	22
Display .....	22
Date & time.....	22
Connectivity.....	23

Call .....	23	Stopwatch .....	30
Phone .....	25	Date finder .....	30
Network.....	25	Converter .....	<b>30</b>
Internet profiles.....	25	World time .....	30
Access points .....	26	Go to.....	30
Packet data conn.....	26	<b>Applications.....</b>	<b>30</b>
Security.....	26	Data Wallet .....	31
Memory info .....	27	LG Zap Box .....	31
Restore factory settings.....	27	Messenger .....	31
<b>Gallery .....</b>	<b>27</b>	News Hunt.....	31
My memory card .....	27	RockeTalk.....	31
My images .....	27	<b>Web .....</b>	<b>32</b>
My sounds.....	27	Home .....	32
My videos.....	27	Bookmarks .....	32
My games & apps .....	27	Go to address .....	32
Others .....	27	Orkut .....	32
<b>Media.....</b>	<b>27</b>	MySpace .....	32
Camera .....	27	Flickr .....	32
Video.....	27	Picasa .....	32
Music.....	28	LG Applications.....	33
FM radio.....	28	Saved pages.....	33
Voice recorder .....	29	Last web address .....	33
Ringtone creator .....	29	Settings.....	33
<b>Organiser.....</b>	<b>29</b>	<b>PC Sync .....</b>	<b>34</b>
Dictionary .....	29	Phone Software update .....	34
Alarm clock .....	29	<b>Accessories .....</b>	<b>35</b>
Calendar.....	29	<b>Technical data.....</b>	<b>36</b>
To-do list .....	29	<b>Troubleshooting.....</b>	<b>37</b>
Notes .....	29		
Secret notes .....	29		
Calculator .....	30		


## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

### Warning

- For your safety, use **ONLY** specified **ORIGINAL** batteries and chargers.
- Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- Batteries should be disposed off in accordance with relevant legislation.

### Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.

- The unit should be kept away from heat sources such as radiators or cookers.
- Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

### **Electronic devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

### **Road safety**

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

### **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### **Potentially explosive atmospheres**

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

## **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.

## **Children**

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

## **Emergency calls**

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## **Battery information and care**

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.



- Risk of explosion if battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions.

## **Exposure to radio frequency energy**

### **Radio wave exposure and Specific Absorption Rate (SAR) information**

This mobile phone model LG-S310 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.

- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.10W/kg (10g) and when worn on the body is 0.988W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

## Installing the SIM card and the handset battery

### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

#### **Important!**

The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

### Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery.
- 5 Attach the back cover.
- 6 Charge the battery.

**Note:** Fully charge the battery before using it for the first time.




## Installing a Memory Card


Remove the battery cover. Push the memory card inside with the gold contact facing upward.



To remove the memory card, gently push it as shown in the diagram.

**Note:** A memory card is an optional accessory.

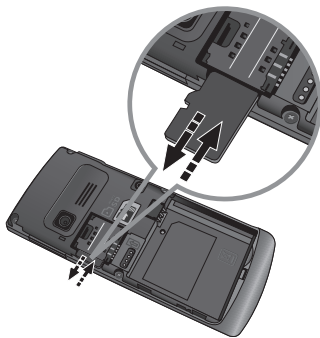

# Phone Components

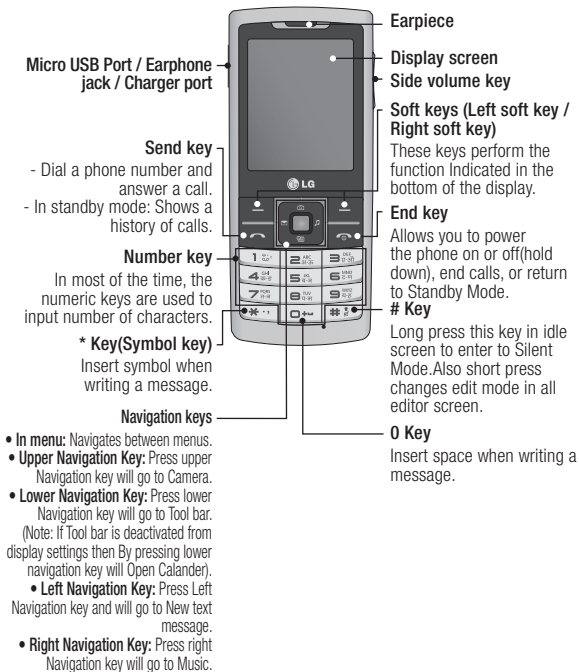

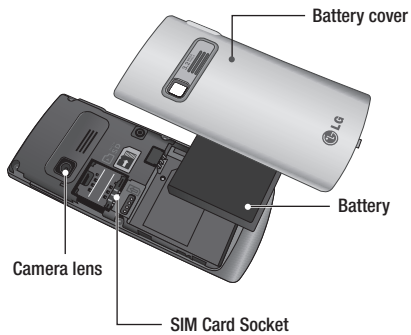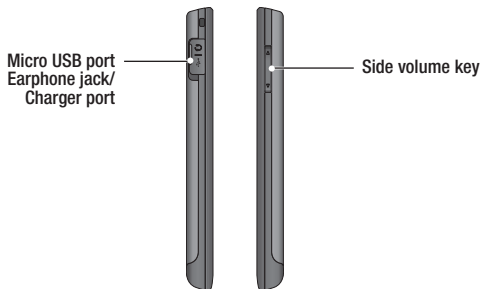




## Turning Your Phone On and Off

1. Press and hold the End key until the power comes on.
2. Press and hold the End key until the power goes off.

## Making a call



1. Enter a phone number including the area code.
2. Press the  key to call the number.
3. To end the call, press the  key.



## Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.



2. Enter the country code, area code, and the phone number.
3. Press  [Send] key to call the number.

## Answering a call


1. When you receive a call, the phone rings.
2. If the **Press any key** has been set as the **Answer mode** (Settings > Call > Answer mode), any key press will answer a call except for the  key.
3. To end the call, press the  key.

**SMS On Call Reject:** During Incoming call alert press RSK  silent then press LSK  message.

## Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

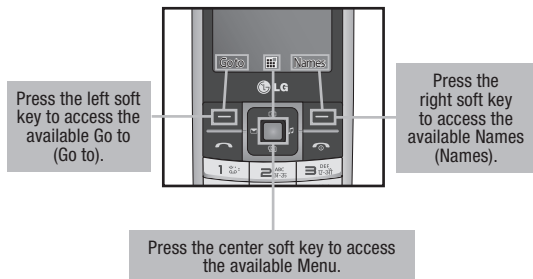



## Entering Text

You can enter alphanumeric characters by using the phone's keypad.

### T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

### 123 Mode (Numbers Mode)

Type numbers using pressing and holding the button keys.

### Symbol Mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert Symbol**. Use the navigation keys to select the desired symbol and press the OK key.

## Anti Theft Mobile Tracker (ATMT)

Anti-theft mobile tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be activated.

You are reminded by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate Anti-theft mobile tracker

1. From the main menu, select **Settings > Security > Anti-theft mobile tracker** and press **Select**.
2. Select **Set Anti-theft** and press **Select**.
3. Switch **On** or **Off** and press **Select**.
4. Input the security code to enable or disable this function.
5. Select **Sending number list** option then press **NEW** to configure the ATMT settings with name, primary phone number, secondary number. ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.

**Note:** The default ATMT code is "0000". You have to enter the code before configuring the ATMT settings.

**Note:** Application lock - To prevent unauthorized use of phone applications, you can enable application lock which requires user to enter a password when accessing applications. Password is the same as the security code (Default password is 0000).

## Social network

Your LG-S310 has SNS (Social Networking Services) that lets you enjoy and manage your social network. From Web menu select Social network menu and select the site as below: Facebook and Twitter

### Facebook:

**Home:** Log in and you will see your friend's updated status. Input your comment about new status or check others.

**Profile:** You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by selecting Album > Upload Photo.

**Twitter:** Twitter is a social networking service which enables its users to send and read other users' messages called tweets.

**Note:** SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

# Menu Tree

## 1. Messaging

- Create message
- Inbox
- My mailbox
- Create new e-mail address
- Drafts
- Outbox
- Sent items
- Saved items
- Emoticons
- SOS message
- Message settings

## 2. Contacts

- Names
- Settings
- Groups
- Speed dials
- Service dial numbers
- Own number
- My business card

## 3. Log

- Call log
- Missed calls
- Received calls
- Dialled numbers
- Call duration
- Packet data counter
- Call costs

## 4. Settings

- Profiles
- Display
- Date & time
- Connectivity
- Call
- Phone
- Network
- Internet profiles
- Access points
- Packet data conn.
- Security
- Memory info
- Restore factory settings

## 5. Gallery

- My memory card
- My images
- My sounds
- My videos
- My games & apps
- Others

## 6. Media

- Camera
- Video
- Music
- FM radio
- Voice recorder
- Ringtone creator

## 7. Organiser

- Dictionary
- Alarm clock
- Calendar
- To-do list
- Notes
- Secret notes
- Calculator
- Stopwatch
- Date finder
- Converter
- World time
- Go to
- SIM Services
- Settings.

## 8. Applications

- My game & apps
- Settings

## 9. Web

- Home
- Bookmarks
- Go to address
- Social network
- Orkut
- MySpace
- Flickr
- Picasa
- LG Applications
- Saved pages
- Last web address
- Settings

This section provides brief explanations of features on your phone.

## Messaging

### Create message

This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service).

**Tips:** You can send SMS to many contacts at a time. From Options select "Send", it will open the contacts list, from where user can mark/unmark contacts for sending the message. Only 20 contacts can be marked and if user select Mark all only first 20 contacts will be marked. To send the SMS to a particular group of contacts select 'Contact groups' Option from Send option.

## Inbox

You will be alerted when you have received messages. They will be stored in Inbox.

**Tips:** Messages can be sorted with the given sorting options for an easy access of messages (subject, Date, and sender).

## My mailbox

My Email lets you get your favourite emails on your mobile for a fixed price each month.

## Create new e-mail address

By selecting this menu, you will be directed to Hotmail portal, where you will be able to create Hotmail account.

Once you have created the account, you can set it up in the email setup wizard to receive Hotmail emails.

## Drafts

You can save the message temporarily in Drafts.

## Outbox

This is a temporary storage folder for the unsent messages or messages that you have sent but fail to deliver.

## Sent items

After sending out the message, the text message or multimedia message is saved in the Sent folder.

## Saved items

You can access your saved messages, text templates and multimedia templates.

## Emoticons

A list of useful Emoticons, already written for a quick reply.

## SOS message

An emergency message can be sent to the predefined number's (3 maximum) by long press of 9 Key in the idle screen also it can be set from message storage menu using SOS sub menu. On long press of 9 key in the idle screen, a popup comes, 'Set SOS message?'. Press 'Yes' then set SOS message ON , then type the required message and input maximum 3 numbers in the recipient list for which you want to send the message in emergency mode and press Done.

## Message settings

This menu allows you to set features of your network service provider.

## Contacts

### Names

Select Search from Options and enter the name that you want to search from the contact list.

You can register a new contact address by selecting Add new contact from Options. You can enter the name, different phone numbers, email addresses, groups, image etc using add details option of a new contact.

### Settings

You can set the contact list display,copy,move,send contacts via bluetooth,if SD card is inserted then backup and restore contacts also can clear contacts and check memory info.

### Groups

You can add your contacts to any of the available groups.

## Speed dials

You can assign any of the keys from 2 to 8 with a name and number list entry. You can call directly by pressing this key when you are in idle screen.

### Service dial numbers

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

### Own number

You can save and check your own number in SIM card.

### My business card

This option allows you to create your own business card featuring name and any numbers.

## **Log**

### **Call log**

You can view lists of all outgoing or incoming calls.

### **Missed calls**

You can view the unanswered calls.

### **Received calls**

You can view the Received calls.

### **Dialled numbers**

You can view the outgoing or attempted call numbers.

### **Call duration**

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

## **Packet data counter**

You can check the amount of data transferred over the network.

### **Call costs**

View the charges applied to your Last call , All calls numbers and can set the limit of calls. Also you can do Cost Settings.

## **Settings**

### **Profiles**

You can adjust and customize the phone tones for different events, or environments.

### **Display**

You can change settings for the phone display.

### **Date & time**

You can set functions relating to the date and time.



## Connectivity

**Bluetooth** - You can adjust setting on BT connection.

**USB Connection Mode** - You can transfer files from/to a compatible PC to the memory in your phone using the Mass Storage Mode.

## Call

You can set the menu relevant to a call.

**Call divert** - The Call divert service allows you to divert incoming voice calls to another number. For details, contact your service provider.

**All voice calls:** Diverts voice calls unconditionally.

**When busy:** Diverts voice calls when the User is in another call.

**No answer:** Diverts voice calls when you do not answer.

**Not reachable:** Diverts voice calls when the phone is switched off or out of coverage.

**Call barring** - The call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password.

**Fixed dial numbers** - You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

**Turn On:** You can restrict your outgoing calls to selected phone numbers.

## Call waiting

**Activate:** If you select Activate, you can accept a waiting (receiving) call.

**Deactivate:** If you select Cancel, you cannot recognize the waiting (receiving) call.

**View status:** Shows the status of Call waiting.

## Call reject

**Call Reject On/Off:** You can set whether to reject incoming calls.

- **Off:** Disables Automatic call reject.
- **Reject on List:** Only rejects target numbers in the list you set. You can set the reject list using Reject List menu.
- **Reject All Calls:** Rejects all calls on list.  
Or Else User can set Reject list by selecting Contacts, Groups, Unregistered & No caller ID.

## Send my number

### Set by network:

**On:** You can send your phone number to another party. Your phone number will be shown on the receiver's phone.


**Off:** Your phone number will not be shown.

## Auto redial

**On:** When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

**Off:** Your phone will not make any attempts to redial when the original call has not connected.

## Answer mode

**Press send key:** If you select this menu, you can receive a call by only pressing the  key.

**Press any key:** If you select this menu, you can receive a call by pressing any key except the end key and the right soft key.

**Free call timer** - This menu allows keep track of free call minutes. Once you enter the minutes available, the device will keep track of free minutes. The device will automatically start subtracting minutes that you've used when you're in a phone call.

**Minute minder** - Determines whether to sound when you are on the call for every selected minute.

**BT answer mode** - Select Hands-free to be able to answer a call using a Bluetooth headset, or select Handset to press a key on the handset to answer a call.

**Save new number** - Select Yes to save a new number.

**Voice clarity** - Minimizes surrounding noise when you're in a phone call. Select On or Off.

## Phone

Allows you to set the phone.

**Auto key lock** - You can make the key pad locked automatically after some time.

**Language** - You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

**Power save** - Choose among the followings, Off/Auto/Always On, to change the factory set power saving settings.

**Handset information** - Shows your phone number, model number and S/W version.

## Network

You can set select network and network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

## Internet profiles

This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu. However, you cannot delete or edit default configurations.

## Access points

This menu shows the access points list. You can create new profiles, delete or edit them by using the options menu. However, you cannot delete or edit default configurations.

## Packet data conn.

If you select the 'When available' option, your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

## Security

This menu allows you to set the phone's safety.

**PIN code request** - You can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

**Handset lock** - You can use a security code to avoid unauthorized use of the phone.

**Lock if SIM in changed** - Set the lock function if SIM changed.

**Anti-theft mobile tracker** - The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.

**Change codes** - PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons. You can change the access codes: Security code, PIN code, PIN2 code, Anti-theft code.

**Application lock** - To prevent unauthorized use of phone applications, you can enable application lock which requires user to enter a password when accessing applications. Password is the same as the security code (Default password is 0000).

## Memory info

You can check free space and memory usage of phone, SIM card and external memory (if inserted).

## Restore factory settings

You can initialize all factory defaults. You need Security code to activate this function.

## Gallery

### My memory card

If your phone has a memory card in the card slot, you can save images, sounds, and videos onto it.

### My images

Shows the list of image files.

### My sounds

Saved audio files are displayed in the list.

## My videos

Displays the list of video files.

## My games & apps

You can access a great selection of games and applications on your phone.

## Others

When you receive files of an undefined format via email, the files are saved in this folder.

## Media

### Camera

You can take photos with the built in camera and adjust its settings to suit your needs.

### Video

You can record a video clip through the built-in camera.

## Music

Using the songs in your phone, you can easily enjoy various music.

## FM radio

You can listen to FM radio with your external earphone so you can tune into your favourite stations to listen on the move.

### Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

1. Select Auto scan from Options. A confirmation message appears. Select Yes, then the stations will be automatically found and allocated to a channel in your phone.

**Note:** You can also manually tune into a station by using the navigation key.

### Recording the Radio

1. Select Record by pressing  [Record] while listening to the radio.
2. The recording time is displayed on your phone. If you want to stop the recording, press Stop. If recording is done, the recorded contents will be saved in Gallery as mp3 file.

## Voice recorder

You can record voice memo.

## Ringtone creator

This function allows you to create your own personal ringtones by using this tool.

## Organiser

### Dictionary


Allow to search the dictionary in English to Hindi, Hindi to English and also the English dictionary. It also remembers the recent searches.

### Alarm clock

You can set five alarm clocks to go on at a specified time.

### Calendar

You can see the calendar and add hundred events here in selected date.

**Tips:** User can schedule an SMS, so that it can be sent to the pre define number/contact on Set date and Set time from Left soft key  option list.

### To-do list

You can view, edit and add hundred tasks to do.

### Notes

You can add fifty new notes, view and manage saved notes.

### Secret notes

You can add fifty secret notes. You need to enter the security code to use this menu to protect your secret notes privacy.

## Calculator

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

You can also use the available functions like Sin, Cos, tan, log, ln, exp, %,  $x^2$ ,  $x^y$ , sqrt, +/-, deg and rad.

## Stopwatch

This option allows you to use the function of a stopwatch.

## Date finder

You can count the target date by adding(After) days.

## Converter

This converts any measurement into a unit you want. There are many types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume, Velocity.

## World time

The World time function provides time information on major cities worldwide.

## Go to

It helps you to go to the menu you search for. You can set the item as Go to.

## Applications

Your LG-S310 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press Menu and select Applications. Choose My games & apps.

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with your network provider.



Your LG-S310 also comes with preloaded applications.

### **Data Wallet**

This application is used to keep personal informations. (Bank Account /Credit Card / Loan / Email ID details)

### **LG Zap Box**

It is an interactive application where user can download MP3 / Image files from the connected site, also playlist can be created.

### **Messenger**

It is an chatting application through which user can get connected with friends.

### **News Hunt**

News Hunt is a unique mobile application designed to enable viewing and reading newspapers in the regional languages on the go.

### **RockeTalk**

RockeTalk is a social networking application to enable you to search and make new friends and stay connected with them.

**Note:** RockeTalk is free to use. RockeTalk uses a data (internet) connection, and operator data costs will apply. We recommend that you use an unlimited (flat rate) data plan, which you can get from your operator.

## Web


### Home

Connects to a homepage.  
The homepage will be the site which is defined in the activated profile.

### Bookmarks

This menu allows you to store the URL of favorite web pages for easy access at a later time.

### Go to address

You can connect directly to the site you want. After entering a specific URL, press  key to make the connection done to connect to the site.

**Social network:** Connect to social network site.

## Orkut

Orkut is an online community designed to make your social life more active and stimulating.

## MySpace

It is a social networking service enables user to find friends & classmates, meet new people, share photos, watch videos..etc

## Flickr

Flickr is almost certainly the best online photo management and sharing application in the world.

## Picasa

Fast and easy photo sharing from Google. Share with friends and family, or explore public photos.

## LG Applications

User can search and download top rated applications from site.

**Note:** SNS , LG Application features are data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

## Saved pages

Allows you to view your saved web pages.

## Last web address

This menu shows the history of recently browsed pages.

## Settings

You can set the profile, appearance settings cache and security related to internet service.

## PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

For this User have to connect Mobile with PC through USB cable and Select the option “Data Service”.

**Note:** Install PC Suite using CD provided and follow the Installation Guide.

## Phone Software update

### LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> ----> select country.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

**Standard Battery**



**Travel Adapter**



**Headset**



**Data cable & CD**



### **NOTE**



- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

# Technical data

## Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity		 LG Electronics
<b>Suppliers Details</b>		
Name	LG Electronics Inc	
Address	: LG Twin Tower 20,Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
<b>Product Details</b>		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment	
Model Name	LG-S310	
Trade Name	LG	
		<b>CE 0168</b>
<b>Applicable Standards Details</b>		
R&TTE Directive 1999/5/EC		
EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1 EN 300 328 v1.7.1 EN 60950-1 : 2001 EN 50360 : 2001 / EN62209-1 : 2006 EN 301 511 v9.0.2		
<b>Supplementary Information</b>		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Wallon-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0168		
<b>Declaration</b>		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date
	Seung Hyoum, Ji / Director	31. August. 2010
LG Electronics Inc. - EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands		
	Signature of representative	

## Troubleshooting

Problem	Possible Solution
Telephone cannot be switched on	Please take out battery and insert again. Then press <b>Power on key</b> to power on the phone.
Battery empty	Charge battery. Check charging indicator on display.
The battery doesn't charge properly or the phone sometimes turns itself off	Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth.
Usage time of battery becomes shorter	If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals.
Charging error— Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
Charging error— Wrong charger	Only use original LG accessories.
Charging error— Battery defective	Replace battery.
Charging error—No battery icon appears when charging	The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen.

## Troubleshooting

Problem	Possible Solution
Forgot the phone code or password	The default phone code is "0000".
Enter PUK	The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.
Loss of Network	You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.
You have entered a number but it was not dialed	Be sure that you have pressed <b>Talk/Yes key</b> . Be sure that you have accessed the right network service. Be sure that you have not set an outgoing call barring option. Be sure that you have entered the area code.
Your correspondent cannot reach you	Be sure that your phone is switched on. Press <b>Talk/Yes key</b> for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option.



<b>Problem</b>	<b>Possible Solution</b>
Your correspondent cannot hear you speaking	Be sure that you have switched off the loudspeaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.
The voice quality of the call is poor	Check the signal strength indicator on the display. The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building.
No number is dialed when you recall a contact	Use the Phonebook Search feature to ensure the number has been stored correctly. Resave the number, if necessary.
Cannot use the Browser	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
If the above guidelines do not help you to solve the problem	Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help.



# LG-S310 उपयोगकर्ता मार्गदर्शिका

— हिन्दी

यह मैन्युअल उपयोग किए गए फ़ोन सॉफ़्टवेयर संस्करण और सेवा प्रदाता के आधार पर फ़ोन से भिन्न हो सकता है।



## सामग्री

सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश.....	4
सिम कार्ड और हैंडसेट बैटरी स्थापित करना.....	9
सिम कार्ड स्थापित करना.....	9
उदाहरण.....	9
मेमोरी कार्ड स्थापित करना.....	10
फोन घटक.....	11
अपने फोन को चालू या बंद करना.....	13
कॉल करना.....	13
अंतरराष्ट्रीय कॉल करना.....	13
कॉल का उत्तर देना.....	13
फंक्शंस और विकल्पों का चयन करना.....	14
पाठ दर्ज करना.....	15
T9 मोड.....	15
123 मोड (नंबरर्स मोड).....	15
प्रतीक मोड.....	15
अक्षर व अंक प्रविष्ट करने की तालिका.....	16
हिन्दी शब्द लिखने के उदाहरण.....	17
एंटी-थेफ्ट मोबाइल ट्रैकर (ATMT).....	18
सामाजिक नेटवर्क.....	19
मेनू ड्री.....	20
संदेश.....	21
संदेश लिखें.....	21

इनबॉक्स.....	21
मेरा मेलबॉक्स.....	21
नया ईमेल पता बनाएँ.....	21
प्रारूप.....	22
आउटबॉक्स.....	22
प्रेषण आइटम्स.....	22
सहेजे गए आइटम्स.....	22
भावनाएँ.....	22
SOS संदेश.....	22
संदेश अनुकूलन.....	22
<b>संपर्क.....</b>	<b>23</b>
नाम.....	23
सेटिंग्स.....	23
समूह.....	23
शीघ्र डायल्स.....	23
सेवा डायल नंबरर्स.....	23
स्वयं का नंबर.....	23
मेरा व्यवसाय कार्ड.....	24
<b>लॉग.....</b>	<b>24</b>
कॉल लॉग.....	24
छुटे कॉल्स.....	24
प्राप्त कॉल्स.....	24
डायल किए गए नंबर.....	24
कॉल अवधि.....	24
पैकेट डेटा काउंटर.....	24
कॉल कीमत.....	24
<b>सेटिंग्स.....</b>	<b>24</b>
प्रोफाइल्स.....	24
प्रदर्शित करें.....	24

दिनांक और समय .....	25	नोट्स .....	32
संयोजकता .....	25	गुप्त नोट्स .....	32
कॉल .....	25	कैलकुलेटर.....	32
फोन.....	27	स्टॉपवॉच.....	32
नेटवर्क .....	28	तिथि खोजक .....	32
इंटरनेट प्रोफाइल्स .....	28	परिवर्तक .....	33
एक्सेस पॉइंट्स .....	28	विश्व समय .....	33
पैकेट डेटा कनेक्शन .....	28	के पास जाओ.....	33
सुरक्षा.....	28	<b>सुविधायें.....</b>	<b>33</b>
स्मृति की जानकारी .....	29	DataWallet .....	33
फैक्ट्री सेटिंग्स पुनर्स्थापित कर	29	LG Zap Box .....	34
<b>गैलेरी.....</b>	<b>29</b>	Messenger.....	34
मेरा मेमोरी कार्ड .....	29	NewsHunt .....	34
मेरे छवियाँ .....	29	RockeTalk.....	34
मेरी ध्वनि.....	29	<b>वेब .....</b>	<b>34</b>
मेरे वीडियो.....	30	होम.....	34
मेरे खेल एवं अनुप्रयोग.....	30	बुकमार्क .....	34
अन्य .....	30	पते पर जाएँ .....	35
<b>मीडिया.....</b>	<b>30</b>	सामाजिक नेटवर्क .....	35
कैमरा.....	30	Orkut .....	35
वीडियो.....	30	MySpace .....	35
संगीत .....	30	Flickr .....	35
FM रेडियो.....	30	Picasa .....	35
वॉइस रिकॉर्डर .....	31	LG Applications .....	35
रिंगटोन बनाने वाला .....	31	<b>PC सुइट.....</b>	<b>36</b>
<b>आयोजक.....</b>	<b>31</b>	सॉफ्टवेयर नवीनीकरण.....	36
शब्दकोश.....	31	<b>सहायक उपकरण.....</b>	<b>37</b>
अलार्म घड़ी.....	31	तकनीकी डेटा.....	38
कैलेंडर.....	31	<b>समस्या निवारण .....</b>	<b>39</b>
टू-डू सूची .....	32		

## सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश

कृपया, इन सरल दिशानिर्देशों को पढ़ें. इन दिशानिर्देशों का पालन न करना खतरनाक या गैरकानूनी हो सकता है. अन्य विस्तृत जानकारी इस मैन्युअल में दी गई है.

### चेतावनी

- अपनी सुरक्षा के लिए, केवल निर्दिष्ट वास्तविक बैटरियां और चार्जर्स ही उपयोग करें.
- जहां कहीं भी विशेष विनियमों के अनुसार आवश्यक हो, वहां फोन बंद कर दें, जैसे किसी अस्पताल में, जहां ये मेडिकल उपकरणों को प्रभावित कर सकता है.
- बैटरियां संगत कानून के अनुसार नष्ट की जानी चाहिए.

### उत्पाद की देखभाल और रखरखाव



**चेतावनी:** इस विशेष फोन मॉडल के लिए स्वीकृत बैटरियों, चार्जर्स और सहायक उपकरणों का ही उपयोग करें. किसी भी दूसरे प्रकार का उपयोग करने पर फोन पर लागू होने वाले अनुमोदन या वॉरंटी अमान्य हो सकते हैं और यह खतरनाक हो सकता है.

- इस यूनिट को डिसअसेंबल न करें. सुधारने की आवश्यकता होने पर इसे योग्य सेवा तकनीशियन के पास ले जाएँ.  
LG के विकल्प पर वॉरंटी के अंतर्गत किए जाने वाले सुधारों में, नए या सुधार किए गए पुर्जों या बोर्ड्स का प्रतिस्थापन शामिल है, बशर्ते उनकी क्रियात्मकता प्रतिस्थापित किए जाने वाले पुर्जों के बराबर हो.

- यूनिट को गर्मी के स्रोतों जैसे रेडिएटर्स या कुकर से दूर रखना चाहिए।
- यूनिट के बाहरी हिस्से को साफ करने के लिए सूखे कपड़े का उपयोग करें। (किसी घोल का उपयोग न करें।)
- फोन को क्रेडिट कार्ड्स या ट्रांसपोर्ट टिकटों के पास न रखें यह चुंबकीय पट्टियों पर अंकित जानकारी को प्रभावित कर सकता है।

### **इलेक्ट्रॉनिक डिवाइसेज़**

सभी मोबाइल फ़ोनों में व्यवधान आ सकता है, जो कार्यक्षमता को प्रभावित कर सकता है।

- बिना अनुमति लिए अपने मोबाइल फ़ोन का उपयोग मेडिकल उपकरण के पास न करें। फ़ोन को किसी पेसमेकर, जैसे दिल के पास वाले पॉकेट में रखने से बचें।

### **सड़क सुरक्षा**

जिन क्षेत्रों में आप गाड़ी चलाते हैं, वहां मोबाइल फ़ोन के उपयोग से संबंधित कानूनों और विनियमों की जानकारी ले लें।

- वाहन चलाते समय हैंड-हेल्ड फ़ोन का उपयोग न करें।
- यदि उपलब्ध हो, तो हैंड्स-फ्री किट का उपयोग करें।
- यदि वाहन चलाते समय आवश्यक हो, तो कॉल करने या उत्तर देने से पहले वाहन को सड़क के किनारे लगाएँ।

### **विस्फोटन क्षेत्र**

फ़ोन का उपयोग ऐसे स्थान पर न करें, जहां विस्फोट हो रहे हों। प्रतिबंधों पर ध्यान दें, और विनियमों या नियमों का पालन करें।

### **संभावित रूप से विस्फोट वाले वातावरण**

फ़ोन का उपयोग ईंधन भरने के स्थान पर न करें। ईंधन या रसायनों के पास उपयोग न करें।

## विमान में

वायरलेस डिवाइसेज से एयरक्रॉफ़्ट में व्यवधान उत्पन्न हो सकता है.

- किसी एयरक्रॉफ़्ट में जाने से पहले अपना मोबाइल फोन बंद कर दें.

## बच्चे

फोन को बच्चों की पहुंच से दूर सुरक्षित स्थान पर रखें. इसमें ऐसे कई भाग होते हैं, जिन्हें हटाने पर चोक होने का खतरा हो सकता है.

## आपातकालीन कॉल्स

सभी सेल्युलर नेटवर्क्स के अंतर्गत हो सकता है की आपातकालीन कॉल्स उपलब्ध न हों. इसलिए, आपको आपातकालीन कॉल्स के लिए केवल फोन पर ही निर्भर नहीं रहना चाहिए. अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें.

## बैटरी जानकारी और देखभाल

- बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है. अन्य बैटरी सिस्टम्स के विपरीत, ऐसा कोई मेमोरी प्रभाव नहीं है जिससे बैटरी के प्रदर्शन पर असर पड़ता है.
- केवल LG बैटरियों और चार्जर्स का उपयोग करें. LG के चार्जर्स बैटरी का जीवन बढ़ाने के लिए होते हैं.
- बैटरी पैक को डिसअसेंबल न करें या उसे शॉर्ट-सर्किट से बचाएँ.
- बैटरी का प्रदर्शन अपेक्षानुसार न रहने पर उसे बदल दें. बैटरी को प्रतिस्थापित करने की आवश्यकता हो, इसके पूर्व बैटरी पैक को सैकड़ों बार रिचार्ज किया गया हो सकता है.
- बैटरी चार्जर को सीधे धूप में न रखें या अधिक नमी वाली जगहों पर जैसे कि बाथरूम में इसका उपयोग न करें.



- यदि बैटरी को एक गलत प्रकार से प्रतिस्थापित किया जाए, तो विस्फोट होने का खतरा हो सकता है।
- उपयोग की गई बैटरियों का निपटान, निर्माता के निर्देशों के अनुसार ही करें।
- रेडियो तरंग एक्सपोजर दिशानिर्देश, स्पेसिफिक अब्सॉर्प्शन रेट या SAR कहलाने वाली एक मापन इकाई का उपयोग करते हैं। फोन पर SAR के परीक्षण मानक विधियों के उपयोग से किए जाते हैं, इसके लिए उपयोग होने वाले सभी फ्रीक्वेंसी बैंड्स में फोन के उच्चतम प्रमाणित पॉवर स्तर पर संप्रेषण किया जाता है।

## रेडियो फ्रीक्वेंसी ऊर्जा के संपर्क में आना

### रेडियो तरंग एक्सपोजर और स्पेसिफिक अब्सॉर्प्शन रेट (SAR) की जानकारी

यह मोबाइल फोन मॉडल LG-S310 रेडियो तरंगों के प्रति एक्सपोजर के लिए उपयुक्त सुरक्षा आवश्यकता के संगत डिज़ाइन किया गया है। यहां आवश्यकता वैज्ञानिक दिशानिर्देशों पर आधारित है, जिसमें आयु और स्वास्थ्य पर ध्यान दिए बिना, सभी लोगों की सुरक्षा को सुनिश्चित करने के लिए डिज़ाइन किए गए सुरक्षा उपाय शामिल हैं।

- वैसे तो विभिन्न LG फोन मॉडल के SAR स्तर में भिन्नता हो सकती है, किंतु उन सभी को रेडियो तरंगों के प्रति एक्सपोजर के लिए संबद्ध दिशानिर्देशों को पूरा करने के लिए बनाया गया है।
- गैर-आयोजनाइजिंग रेडिएशन सुरक्षा पर अंतर्राष्ट्रीय आयोग (ICNIRP) द्वारा अनुशासित SAR सीमा दस (10) ग्राम टिशू पर औसतन 2वॉट/किग्रा है।
- कान के पास उपयोग के लिए, इस मॉडल फोन का DASY4 द्वारा परीक्षित उच्चतम SAR मान 1.10 वॉट/किग्रा (10ग्राम) है और जब शरीर पर पहना जाए तो 0.988 वॉट/किग्रा (10ग्राम) है।

- इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजिनियर्स संस्थान (IEEE) द्वारा अनुशंसित SAR सीमा को अपनाने वाले देशों/क्षेत्रों के निवासियों के लिए SAR डेटा जानकारी एक (1) ग्राम टिशू पर औसतन 1.6 वॉट/किग्रा.

## सिम कार्ड और हैंडसेट बैटरी स्थापित करना

### सिम कार्ड स्थापित करना

जब आप किसी सेल्युलर नेटवर्क की सदस्यता लेते हैं, तो आपको आपकी सदस्यता विवरणों से लोड किया गया ऍक प्लग-इन सिम कार्ड प्रदान किया जाता है, जिसे आपका PIN और उपलब्ध वैकल्पिक सेवाएँ और कोई इस्तमाल ना कर सके.

#### महत्वपूर्ण!


प्लग-इन सिम कार्ड और उसके संपर्क, खरोंचों या मुड़ने से आसानी से खराब हो सकते हैं, इसलिए कार्ड को हैंडल करते समय, डालते या निकालते समय सावधानी रखें. सभी सिम कार्ड छोटे बच्चों की पहुंच से दूर रखें.

### उदाहरण

बैटरी निकालने से पहले डिवाइस हमेशा बंद करें और चार्जर डिस्कनेक्ट कर दें.

- 1 बैटरी कवर निकालें.
- 2 बैटरी बाहर निकालें.
- 3 सिम कार्ड डालें.
- 4 बैटरी डालें.
- 5 बैक कवर लगाएँ.
- 6 बैटरी चार्ज करें.

**नोट:** बैटरी को पहली बार प्रयोग करने से पहले पूर्ण चार्ज करें.

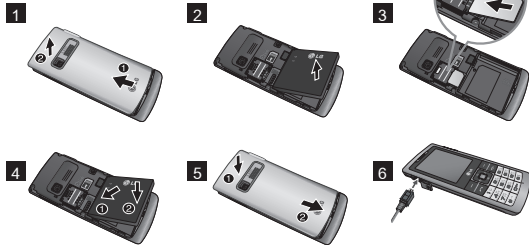


## मेमोरी कार्ड स्थापित करना


बैटरी कवर निकालें। मेमोरी कार्ड का गोल्ड संपर्क भाग ऊपर की तरफ कर उसे अंदर पुश करें।



मेमोरी कार्ड निकालने के लिए, उसे चित्र में दिखाए गए के अनुसार धीरे से धकेलें।

**नोट:** मेमोरी कार्ड एक वैकल्पिक सहायक उपकरण है।

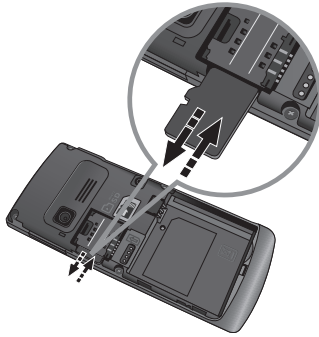

# फ़ोन घटक

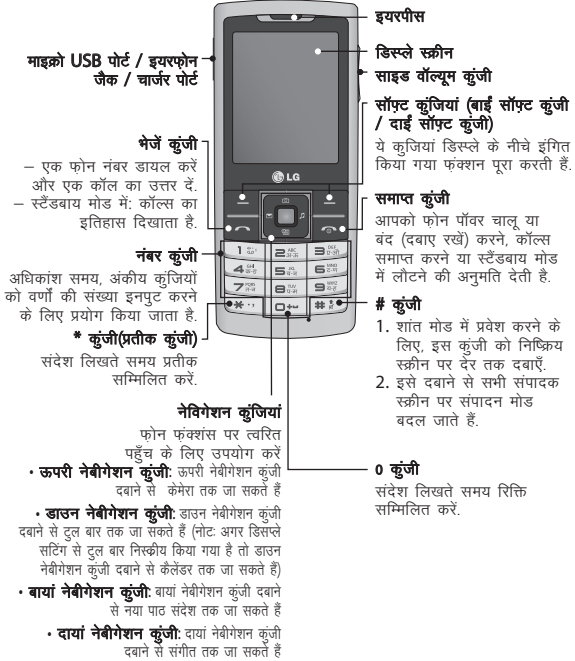

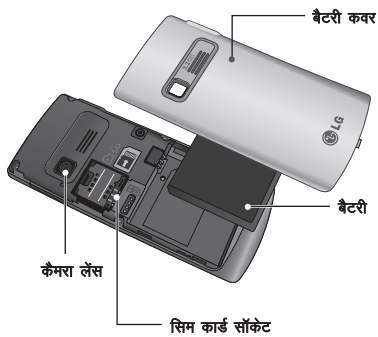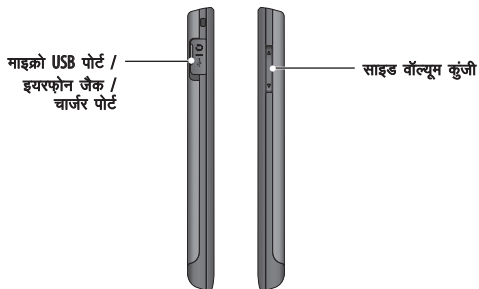





## अपने फ़ोन को चालू या बंद करना

1. पॉवर के आ जाने तक समाप्त कुंजी दबा कर रखें.
2. पॉवर बंद हो जाने तक समाप्त कुंजी दबा कर रखें.



## कॉल करना



1. क्षेत्र कोड के साथ एक फ़ोन नंबर दर्ज करें.
2. नंबर पर कॉल करने के लिए  भेजें कुंजी दबाएँ.
3. कॉल को समाप्त करने के लिए,  कुंजी दबाएँ.

## अंतरराष्ट्रीय कॉल करना



1. अंतरराष्ट्रीय उपसर्ग वर्ण के लिए  कुंजी को दबाकर रखें. '+' वर्ण स्वचालित रूप से अंतरराष्ट्रीय पहुंच कोड का चयन करता है.
2. देश का कोड, क्षेत्र कोड और फ़ोन नंबर दर्ज करें.
3. नंबर पर कॉल करने के लिए  [भेजें] कुंजी दबाएँ.

## कॉल का उत्तर देना

1. जब आप कोई कॉल प्राप्त करते हैं, तो फ़ोन रिंग होता है.
2. यदि उत्तर मोड से कोई कुंजी दबाएँ, (सेटिंग्स > कॉल > उत्तर मोड) सेट किया गया है, तो  समाप्त कुंजी को छोड़कर, कोई भी कुंजी दबाने से कॉल का उत्तर दिया जाएगा.
3. कॉल को समाप्त करने के लिए,  समाप्त कुंजी दबाएँ.


**कॉल निष्क्रिय पर एसएमएस:** प्राप्त कॉल आर्लट आते बक्त  [मौन] चयन करें एवं संदेश भेजने के लिए  [संदेश] दबाएँ

## फंक्शंस और विकल्पों का चयन करना

आपका फोन आपको फंक्शंस का ऐसा सेट प्रदान करता है, जो आपको फोन को अनुकूलित करने की अनुमति देता है। ये फंक्शंस मेनूज़ और सबमेनूज़ में व्यवस्थित होते हैं,  और  से चिह्नित दो सॉफ्ट कुंजियों द्वारा इन तक पहुंच की जाती है। प्रत्येक मेनू और सबमेनू आपको किसी विशेष फंक्शन को देखने और उसकी सेटिंग्स परिवर्तित करने देता है।

सॉफ्ट कुंजियों के कार्य वर्तमान संदर्भ के अनुसार भिन्न होते हैं। प्रत्येक कुंजी के ठीक ऊपर स्क्रीन की निचली पंक्ति पर एक लेबल इसके वर्तमान कार्य को इंगित करता है।

उपलब्ध इस पर जाएं  
(के पास जाओ) तक  
पहुंच करने के लिए  
बाई सॉफ्ट कुंजी  
दबाएँ.

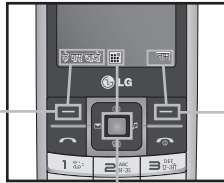

उपलब्ध नाम (नामों)  
तक पहुंच प्राप्त  
करने के लिए दाई  
सॉफ्ट कुंजी दबाएँ.

उपलब्ध मेनू तक पहुंच करने के लिए बीच  
की सॉफ्ट कुंजी दबाएँ.



## पाठ दर्ज करना

आप फ़ोन के कीपैड का उपयोग करके अल्फ़ान्यूमेरिक वर्ण दर्ज कर सकते हैं।

### T9 मोड

T9 प्रीडिक्टिव पाठ इनपुट मोड आपको कम से कम कुंजियां दबाकर आसानी से शब्दों को दर्ज करने देता है। जैसे ही आप प्रत्येक कुंजी दबाते हैं, तो फ़ोन अक्षरों को प्रदर्शित करने लगता है जो यह सोचता है कि आप अंतर्निहित शब्दकोश के आधार पर टाइप कर रहे हैं।

### 123 मोड (नंबर्स मोड)

बटन कुंजियों को दबाएँ रखकर नंबर्स टाइप करें।

### प्रतीक मोड

प्रतीक मोड आपको विभिन्न प्रतीकों या विशेष अक्षरों को दर्ज करने में सक्षम बनाता है। प्रतीक दर्ज करने के लिए विकल्प → त्रिंह डालिय का चयन करें। इच्छित प्रतीक का चयन करने के लिए नेविगेशन कुंजियों का उपयोग करें और ठीक कुंजी दबाएँ।

## अक्षर व अंक प्रविष्ट करने की तालिका

कुंजी	अक्षर / अंक (कुन्जियों को इतनी बार दर्शाएं)													
	1 बार	2 बार	3 बार	4 बार	5 बार	6 बार	7 बार	8 बार	9 बार	10 बार	11 बार	12 बार	13 बार	14 बार
1	ँ	ं	ः	र्	1									
2	ा	ि	ी	ु	ू	ृ	अ	आ	इ	ई	उ	ऊ	ऋ	ॠ
3	े	ै	ो	ौ	ॉ	ए	ऐ	ऐं	ओ	औ	ऑ			
4	क	ख	ग	घ	ङ	4	क	ख	ग					
5	च	छ	ज	झ	ञ	5	ज							
6	ट	ठ	ड	ढ	ण	6	इ	ड						
7	त	थ	द	ध	न	7	न							
8	प	फ	ब	भ	म	8	फ							
9	व	र	ल	व	श	ष	स	ह	७	ळ	र	ळ	य	
0	—	0												

## हिन्दी शब्द लिखने के उदाहरण

### 1) किताब

- क :- कुंजी 4 को 1 बार दबाएं ।  
ि :- कुंजी 2 को 2 बार दबाएं ।  
त :- कुंजी 7 को 1 बार दबाएं ।  
ा :- कुंजी 2 को 1 बार दबाएं ।  
व :- कुंजी 8 को 3 बार दबाएं ।

### 3) ज्ञानी

- ज :- कुंजी 5 को 3 बार दबाएं ।  
् :- कुंजी 1 को 4 बार दबाएं ।  
त्र :- कुंजी 5 को 5 बार दबाएं ।  
ा :- कुंजी 2 को 1 बार दबाएं ।  
न :- कुंजी 7 को 5 बार दबाएं ।  
ी :- कुंजी 2 को 3 बार दबाएं ।


### 2) क्षत्रिय

- क :- कुंजी 4 को 1 बार दबाएं ।  
् :- कुंजी 1 को 4 बार दबाएं ।  
ष :- कुंजी 9 को 6 बार दबाएं ।  
त :- कुंजी 7 को 1 बार दबाएं ।  
् :- कुंजी 1 को 4 बार दबाएं ।  
र :- कुंजी 9 को 2 बार दबाएं ।  
ि :- कुंजी 2 को 2 बार दबाएं ।  
य :- कुंजी 9 को 1 बार दबाएं ।

## एंटी-थेफ्ट मोबाइल ट्रैकर (ATMT)

एंटी-थेफ्ट मोबाइल ट्रैकर (ATMT) आपको आपके खोए हुए फोन को ट्रैक करने की अनुमति देता है। जब कोई आपकी अनुमति के बिना आपके फोन का उपयोग करता है, तो ट्रैकिंग सुविधा सक्रिय हो जाएगी। आपको, अनाधिकृत उपयोगकर्ता को बताए बिना आपने जो डिफॉल्ट फोन नंबर सेट किया है, उसपर पाठ संदेश भेजकर याद दिलाया जाता है। आप हमेशा ATMT को सक्रिय कर सकते हैं और अपनी व्यक्तिगत सेटिंग्स कॉन्फिगर कर सकते हैं। एंटी-थेफ्ट मोबाइल ट्रैकर सक्रिय करने के लिए

1. मुख्य मेनू से सेटिंग्स > सुरक्षा > एंटी-थेफ्ट मोबाइल ट्रैकर चयन करें दबाएँ।
2. एंटी-थेफ्ट सेट करें का चयन करें।
3. स्विच चालू या बंद करें और चयन करें दबाएँ।
4. इस फंक्शन को सक्षम या असक्षम करने के लिए सुरक्षा कोड इनपुट करें।

5. नंबर सुची भेज रहा हूँ का चयन करें,  फिर नाम, प्राथमिक फोन नंबर, द्वितीयक फोन नंबर के साथ ATMT सेटिंग्स कॉन्फिगर करने के लिए नया दबाएँ। ATMT SMS में चोरी हुए फोन IMEI के बारे में जानकारी, वर्तमान स्थान और उस व्यक्ति का नंबर होगा, जो उस हैंडसेट का उपयोग कर रहा है।

**नोट:** डिफॉल्ट ATMT कोड "0000" है। आपको ATMT सेटिंग्स कॉन्फिगर करने से पहले कोड डालना होगा।

**नोट:** अनुप्रयोग लॉक – फोन अनुप्रयोगों का अनाधिकृत प्रयोग रोकने के लिए, आप अनुप्रयोग लॉक को सक्षम कर सकते हैं, जिसके लिए उपयोगकर्ता को अनुप्रयोगों तक पहुंच करते समय पासवर्ड दर्ज करने की आवश्यकता होती है। पासवर्ड, सुरक्षा कोड के समान है (डिफॉल्ट पासवर्ड 0000 है)।

## सामाजिक नेटवर्क

आपके LG-S310 में (SNS) है, जो आपको, आपके सामाजिक नेटवर्क का आनंद लेने और प्रबंधित करने देता है

वेब मेनु से सामाजिक नेटवर्क मेनु का चयन करें और नीचे की साइट का चयन करें : Facebook एवं

Twitter

Facebook

**होम:** लॉग इन करें और आप अपने मित्र की अपडेट की गई स्थिति देखेंगे. नई स्थिति के बारे में अपनी टिप्पणी इनपुट करें या अन्य की जांच करें

**प्रोफाइल:** आप वॉल > स्थिति अपडेट्स का चयन कर सकते हैं और वर्तमान स्थिति लिख सकते हैं. अपना जानकारी विवरण देखें ।

**Twitter:** एक समाजिक नेटवर्किंग सेवा है जो उपयोगकर्ताओं को अन्य उपयोगकर्ताओं के संदेश भेजने और पढ़ने के लिए उपयोग होता है इसे tweets कहते हैं ।

**नोट:** SNS सुविधा एक डेटा प्रधान अनुप्रयोग है. ऑनलाइन सेवाएं कनेक्ट और उपयोग करते समय, अतिरिक्त शुल्क लग सकता है. अपने नेटवर्क प्रदाता से अपना डेटा शुल्क जांचें ।

# मेनु ट्री

## 1. संदेश

संदेश लिखें  
इनबॉक्स  
मेरा मेलबॉक्स  
नया ईमेल पता बनाएँ  
प्रारूप  
आउटबॉक्स  
प्रेषण आइटम्स  
सहेजे गए आइटम्स  
भावनाएं  
SOS संदेश  
संदेश अनुकूलन

## 2. संपर्क

नाम  
सेटिंग्स  
समूह  
शीघ्र डायल्स  
सेवा डायल नंबरर्स  
स्वयं का नंबर  
मेरा व्यवसाय कार्ड

## 3. लॉग

कॉल लॉग  
छूटे कॉल्स  
प्राप्त कॉल्स  
डायल किए गए नंबर  
कॉल अवधि  
पैकेट डेटा काउंटर  
कॉल कीमत

## 4. सेटिंग्स

प्रोफाइल्स  
प्रदर्शित करें  
दिनांक और समय  
संयोजकता  
कॉल  
फोन  
नेटवर्क  
इंटरनेट प्रोफाइल्स  
एक्सेस पॉइंट्स  
पैकेट डेटा कनेक्शन.  
सुरक्षा  
स्मृति की जानकारी  
फ़ैक्ट्री सेटिंग्स  
पुनर्संस्थापित कर

## 5. गैलेरी

मेरा मेमोरी कार्ड  
मेरे छवियाँ  
मेरी ध्वनि  
मेरे वीडियो  
मेरे खेल एवं अनुप्रयोग  
अन्य

## 6. मीडिया

कैमरा  
वीडियो  
संगीत  
FM रेडियो  
वॉइस रिकॉर्डर  
रिंगटोन बनाने वाला

## 7. आयोजक

शब्दकोश  
अलार्म घड़ी  
कैलेंडर  
टू-टू सूची  
नोट्स  
गुप्त नोट्स  
कैलकुलेटर  
स्टॉपवॉच  
तिथि खोजक  
परिवर्तक  
विश्व समय  
के पास जाओ  
SIM Services  
सेटिंग्स

## 8. सुविधायें

मेरे खेल एवं अनुप्रयोग  
सेटिंग्स

## 9. वेब

होम  
बुकमार्क  
पते पर जाएँ  
सामाजिक नेटवर्क  
Orkut  
MySpace  
Flickr  
Picasa  
LG Applications  
सुरक्षित पृष्ठ  
पिछला वेब पता  
सेटिंग्स

यह अनुभाग आपके फोन पर उपलब्ध सुविधाओं की संक्षिप्त जानकारी देता है.

## संदेश

### संदेश लिखें

यह मेनू SMS (शार्ट मैसेज सर्विस) और MMS (मल्टीमीडिया मैसेज सर्विस) से संबंधित फंक्शंस को शामिल करता है.

**सुझाव:** कई को भेजें/समुह को भेजें (संदेश लिखें – विकल्प) आप एक समय में कई संपर्कों को एसएमएस भेज सकते हैं । भेजें विकल्प चुनने से संपर्कों की सुची खुल जाएगी , जँहा से संपर्कों को चयन/अचयन कर के संदेश भेज सकते हैं । केबल 20 संपर्क चयन कर सकते हैं , अगर उपयोगकर्ता सभी को चिन्हित करें चयन करते हैं तो केबल पहले 20 संपर्क चिन्हित होगा ।

किसी विशेष समुह को एसएमएस भेजने के लिये भेजें विकल्प से 'संपर्क समुह ' विकल्प चुने और ठीक दबाएँ

### इनबॉक्स

जब आप संदेश प्राप्त करेंगे तो आपको सूचित किया जाएगा. प्राप्त संदेश इनबॉक्स में संग्रहित होता हैं.

**सुझाव:** संदेश, संदेशा (विषय, दिनांक और प्रेषक) तक आसानी से पहुंचने के लिए, दिए गए सॉर्टिंग विकल्पों (से कमबद्ध करें) के साथ सॉर्ट किए जा सकते हैं.

### मेरा मेलबॉक्स

मेरा ईमेल आपको, प्रत्येक महीने के लिए निश्चित कीमत पर आपके मोबाइल में पसंदीदा ईमेल प्राप्त करने देता है.

### नया ईमेल पता बनाएँ

इस मेनू का चयन करना, आपको सीधे Hotmail पोर्टल पर ले जाया जाएगा, जहां आप Hotmail खाता बनाने में सक्षम होंगे.

एकबार आपके द्वारा खाता बनाए जाने पर, आप Hotmail प्राप्त करने के लिए, उसे सेटअप विजार्ड में सेट कर सकते हैं.

## प्रारूप

आप अस्थाई रूप से संदेश को प्रारूप में सहेज सकते हैं।

## आउटबॉक्स

यह न भेजे गए संदेशों या उन संदेशों हेतु जिन्हें आपने भेजा है, लेकिन उनका वितरण विफल हो गया है, का एक अस्थायी संग्रहण फ़ोल्डर है।

## प्रेषण आइटम्स

संदेश भेजे जाने के बाद, पाठ संदेश या मल्टीमीडिया संदेश भेजे गए फ़ोल्डर में सहेजा जाता है।

## सहेजे गए आइटम्स

आप अपने सहेजे गए संदेश, पाठ टेम्पलेट्स और मल्टीमीडिया टेम्पलेट्स तक पहुंच कर सकते हैं।

## भावनाएं

उपयोगी भावनाएं की एक सूची, त्वरित उत्तर के लिए पहले ही से लिखी है।

## SOS संदेश

यह एक आपातकालीन संदेश है, निष्क्रिय स्क्रीन में 9 कुंजी को देर तक दबाकर, पहले से निर्धारित नंबरों (अधिकतम 3) पर भेजा जा सकता है, निष्क्रिय स्क्रीन में 9 कुंजी को देर तक दबाने से एक 'SOS' संदेश सेट करें?' पॉप अप प्रकट होता है।

'हाँ' दबाएँ फिर SOS संदेश चालू पर सेट करें, फिर आवश्यक संदेश टाइप करें और उस प्राप्तकर्ता सूची में अधिकतम 3 नंबरर्स इनपुट करें, जिसके लिए आप आपातकालीन मोड में संदेश भेजना चाहते हैं, और पूर्ण दबाएँ ओर यह SOS संदेश सब मेनू का प्रयोग कर, संदेश मेनू से भी सेट कर सकते है।

## संदेश अनुकूलन

यह मेनू आपको नेटवर्क सेवा प्रदाता की सुविधाओं को सेट करने की अनुमति देता है।



## संपर्क

### नाम

नामों का चयन करें और देखें। विकल्प से खोजें का चयन करें और वह नाम दर्ज करें, जिसे आप संपर्क सूची में खोजना चाहते हैं।

आप विकल्प से नया संपर्क जोड़ें चयन करके एक नया संपर्क रेजीस्टर कर सकते हैं। आप विवरण जोड़ें विकल्प का प्रयोग कर किसी नए संपर्क का नाम, भिन्न फ़ोन नंबर, ईमेल पते, समूह, छवि इत्यादि दर्ज कर सकते हैं।

### सेटिंग्स

आप संपर्क सूची सेटिंग्स कॉपी, स्थानांतरण, ब्लूटूथ से संपर्कों को भेजें सेट कर सकते हैं, यदि SD कार्ड डाला जाता है, तो फिर संपर्कों का बैकअप लेना और उन्हें पुनर्सथापित करना संपर्कों को हटा भी सकता है और मेमोरी जानकारी भी चेक कर सकता है।

### समूह

आप अपने संपर्क किसी भी उपलब्ध समूह में जोड़ सकते हैं।

### शीघ्र डायल

आप 2 से 8 तक में से किसी भी कुंजी को एक नाम और नंबर सूची प्रविष्टि असाइन कर सकते हैं। जब आप निष्क्रिय स्क्रीन में हों, तो आप इस कुंजी को दबा कर सीधे कॉल कर सकते हैं।

### सेवा डायल नंबर

अपने नेटवर्क ऑपरेटर (यदि सिम कार्ड द्वारा समर्थित हो) द्वारा प्रदत्त सेवाओं की विशेष सूची पर पहुंच करने के लिए इस फंक्शन का प्रयोग करें।

### स्वयं का नंबर

आप सिम कार्ड में अपने स्वयं का नंबर सहेज सकते हैं।

## मेरा व्यवसाय कार्ड

यह विकल्प आपको नाम और कोई भी नंबरस दर्शाता हुआ आपके स्वयं का व्यवसाय कार्ड बनाने की अनुमति देता है।

## लॉग

### कॉल लॉग

आप सभी आउटगोइंग या इनकमिंग कॉल्स की सूचियां देख सकते हैं।

### छुटे कॉल्स

आप अनुत्तरित कॉल्स देख सकते हैं।

### प्राप्त कॉल्स

आप प्राप्त की गई कॉल्स देख सकते हैं।

### डायल किए गए नंबर

आप आउटगोइंग या कॉल करने का प्रयास किए गए नंबरस देख सकते हैं।

## कॉल अवधि

आपको प्राप्त और डायल किए गए कॉल्स की अवधि देखने की अनुमति देता है। आप कॉल टाइमर्स को भी रीसेट कर सकते हैं।

## पैकेट डेटा काउंटर

आप नेटवर्क पर स्थानांतरित डेटा की मात्रा को चेक कर सकते हैं।

## कॉल कीमत

अपनी अंतिम कॉल, सभी कॉल्स पर लागू किया शुल्क देखें, और कॉल्स की सीमा सेट कर सकते हैं। आप लागत सेटिंग्स भी कर सकते हैं।

## सेटिंग्स

### प्रोफाइल्स

आप भिन्न ईवेंट्स, या वातावरणों के लिए फोन टोन्स को समायोजित या अनुकूलित कर सकते हैं।

### प्रदर्शित करें

आप फोन प्रदर्शन के लिए सेटिंग्स बदल सकते हैं।

## दिनांक और समय

आप दिनांक और समय से संबंधित फ़ंक्शन सेट कर सकते हैं।

## संयोजकता

**ब्ल्यूटूथ** - आप बीटी पर सेटिंग समायोजित कर सकते हैं।

**USB संयोग मोड** - आप संयोग मोड उपयोग करके फाइल्स को एक संगत पिसी में/से आपके फोन मेमोरी को स्थानांतरण कर सकते हैं।

## कॉल

आप किसी कॉल के संगत मेनू सेट कर सकते हैं।

**कॉल अंतरण** – कॉल अंतरण सेवा आपको, इनकमिंग वॉइस कॉल्स को अन्य नंबर पर डायवर्ट करने देती है। विवरणों के लिए अपने सेवा प्रदाता से संपर्क करें।

**सभी वॉइस कॉल्स:** वॉइस कॉल्स को बिना किसी शर्त के डायवर्ट करता है।

**व्यस्त:** जब उपयोगकर्ता और एक कॉल में हो तो प्राप्त वाइस कॉल को डायवर्ट करता है।

**अनुत्तरित:** जब आप उत्तर नहीं देते हैं, वॉइस कॉल्स को डायवर्ट करता है।

**पहुँचा नहीं जा सकता:** फोन बंद होने या कवरेज से बाहर होने पर, वॉइस कॉल्स को डायवर्ट करता है।

**कॉल रोधन** – कॉल रोधन सेवा आपके फोन को कुछ श्रेणी के कॉल्स करना और प्राप्त करने से रोकती है। इस फ़ंक्शन को कॉल रोधन पासवर्ड की आवश्यकता है।

**सीमित डायल नम्बर** – आप अपने आउटगोइंग कॉल्स को चयनित नंबर पर प्रतिबंधित कर सकते हैं। नंबर आपके PIN2 कोड द्वारा सुरक्षित हैं।

**चालू करें:** आप अपने आउटगोइंग कॉल्स को चयनित नंबर पर प्रतिबंधित कर सकते हैं।

## कॉल प्रतीक्षा

**सक्रिय करें:** यदि आप सक्रिय करें का चयन करते हैं, तो एक प्रतीक्षा (प्राप्त करना) कॉल स्वीकार कर सकते हैं।

**निष्क्रिय करें:** यदि आप निष्क्रिय करें का चयन करते हैं, तो आप प्रतीक्षा (प्राप्त करना) कॉल नहीं पहचान सकते हैं।

**स्थिति देखें:** कॉल प्रतीक्षा की स्थिति दिखाता है।

### कॉल छोड़ें

**कॉल अस्वीकारें चालू/बंद:** आप सेट कर सकते हैं यदि इनकमिंग कॉल्स अस्वीकार करनी है।

- **बंद करें:** स्वचालित कॉल अस्वीकारों को अक्षम करता है।

- **सूची अस्वीकार करें:** केवल उन लिखित नंबरों को अस्वीकार करता है जिन्हें आपने सूची में सेट किया है। आप कॉल अस्वीकारें सूची में का उपयोग कर, अस्वीकार करें सूची सेट कर सकते हैं।

- **सभी कॉल्स अस्वीकारें:** सूची पर सभी कॉल्स अस्वीकार करता है। उपयोगकर्ता सभी कॉल्स, संपर्क, समूह, अपंजीकृत आदि चयन करके अस्वीकार सूची बना सकते हैं ।

### मेरा नंबर भेजें

नेटवर्क द्वारा चालू या बंद सेट करें

**चालू:** आप अपना फोन नंबर अन्य पक्ष को भेज सकते हैं। आपका फोन नंबर, प्राप्तकर्ता के फोन पर दिखाया जाएगा।

**बंद:** आपका फोन नंबर नहीं दिखाया जाएगा।


### स्वतः रीडायल

**चालू:** जब यह फंक्शन सक्रिय किया जाता है, तो कॉल कनेक्ट करने में विफल होने की स्थिति में फोन स्वचालित रूप से रीडायल करेगा।

**बंद:** वास्तविक कॉल से कनेक्ट नहीं होने पर, आपका फोन रीडायल करने का कोई प्रयास नहीं करेगा।

### उत्तर मोड

**भेजें कुंजी दबाएँ:** यदि आप इस मेनू का चयन करते हैं, तो आप केवल

 कुंजी दबाकर कॉल प्राप्त कर सकते हैं

**कोई कुंजी दबाएँ:** यदि आप इस मेनू का चयन करते हैं, तो आप समाप्त कुंजी और दाईं सॉफ़्ट कुंजी को छोड़कर, किसी भी कुंजी को दबाकर कॉल स्वीकर कर सकते हैं।

**निशुल्क कॉल टाइमर** – यह मेनू फ़्री कॉल मिनट्स का ट्रैक रखने की अनुमति देता है। एकबार आपके द्वारा उपलब्ध मिनट्स दर्ज करने के बाद, डिवाइस फ़्री मिनट्स का ट्रैक रखेगा।

जब आप फ़ोन कॉल कर रहे होते हैं, तो डिवाइस स्वचालित रूप से आपके द्वारा उपयोग किए गए मिनट्स घटाना प्रारंभ करेगा।

**मिनट माइंडर** – आपके कॉल पर होने के समय, निर्धारित करता है कि प्रत्येक सेट किये मिनट पर टोन की आवाज करे।

**BT उत्तर मोड** – ब्लूटूथ हेडसेट के उपयोग से कॉल का उत्तर देने में सक्षम होने के लिए हैंड्स-फ़्री का चयन करें या कॉल का उत्तर देने हेतु हैंडसेट पर एक कुंजी दबाने के लिए हैंडसेट का चयन करें।

**नया नंबर सहेजें** – नया नंबर सहेजने के लिए 'हाँ' का चयन करें।

**आवाज की स्पष्टता** – आपके फ़ोन पर होते समय, आस-पास के शोरगुल को कम करती है। चालू/बंद का चयन करें

## फ़ोन

आपको फ़ोन सेट करने की अनुमति देता है।

**स्वतः की लॉक** – आप कुछ समय बाद स्वचालित रूप से कीपैड को लॉक कर सकते हैं।

**भाषा** – आप अपने फ़ोन के प्रारूप पाठों के लिए भाषा बदल सकते हैं। यह बदलाव भाषा इनपुट मोड को भी प्रभावित करेगा।

**ऊर्जा बचत** – फ़ैक्ट्री द्वारा सेट की गई ऊर्जा बचत सेटिंग्स बदलने के लिए, निम्न बंद/ऑटो/हमेशा चालू में से चुनें।

**हैंडसेट जानकारी** – आपका फ़ोन नंबर, मॉडल नंबर और S/W संस्करण दिखाता है।

## नेटवर्क

आप इस मेनू का उपयोग करके स्वचालित, मैन्युअल और पसंदीदा सुचियाँ का चयन करके नेटवर्क सेट कर सकते हैं

## इंटरनेट प्रोफाइल्स

यह मेनू इंटरनेट प्रोफाइल्स दिखाता है। आप जोड़ें मेनू का उपयोग करके नए प्रोफाइल्स बना सकते हैं, उन्हें हटा सकते हैं या संपादित कर सकते हैं। हालांकि, आप डिफॉल्ट कॉन्फिगरेशन्स को हटा या संपादित नहीं कर सकते हैं।

## एक्सेस पॉइंट्स

यह मेनू एक्सेस पॉइंट्स सूची दिखाता है। आप नए प्रोफाइल्स बना सकते हैं, जोड़ें मेनू का उपयोग करके उन्हें हटा या संपादित कर सकते हैं। हालांकि, आप डिफॉल्ट कॉन्फिगरेशन्स को हटा या संपादित नहीं कर सकते हैं।

## पैकेट डेटा कनेक्शन.

यदि आप "जब उपलब्ध हो" विकल्प का चयन करते हैं, तो आपके द्वारा फोन चालू करते ही, आपका फोन स्वचालित रूप से GPRS नेटवर्क से पंजीकृत हो जाता है। यदि आप "आवश्यकता पड़ने पर" का चयन करते हैं, तो GPRS कनेक्शन, WAP या अनुप्रयोग कनेक्शन की अवधि के लिए स्थापित होता है।

## सुरक्षा

यह मेनू आपको फोन की सुरक्षा सेट करने की अनुमति देता है।

**PIN कोड अनुरोध** – फोन चालू किए जाने पर, आप फोन को अपने सिम कार्ड का पिन कोड पूछने पर सेट कर सकते हैं।

**हैंडसेट अवरोधित** – आप फोन के अनाधिकृत प्रयोग से बचने के लिए सुरक्षा कोड का उपयोग कर सकते हैं।

**एंटी-थेफ्ट मोबाइल ट्रैकर** – इस फोन की ATMT सुविधा आपको आपके फोन के खो जाने पर आपके मोबाइल के लिए एक ट्रैकिंग सिस्टम क्षमता प्रदान करता है।

**यदि SIM परिवर्तित किया गया**

**है तो लॉक कर** – यदि सिम बदला गया है, तो लॉक फंक्शन सेट करें।

**कोड बदलें** – PIN, अनाधिकृत व्यक्तियों द्वारा उपयोग किए जाने से रोकने के लिए, व्यक्तिगत पहचान नंबर का संक्षिप्त नाम है। आप PIN कोड, PIN 2 कोड, सुरक्षा कोड, चोरी-रोधी कोड बदल सकते हैं।

**अनुप्रयोग लॉक** – फोन अनुप्रयोगों का अनाधिकृत प्रयोग रोकने के लिए, आप अनुप्रयोग लॉक को सक्षम कर सकते हैं, जिसके लिए उपयोगकर्ता को अनुप्रयोगों तक पहुंच करते समय पासवर्ड दर्ज करने की आवश्यकता होती है। पासवर्ड, सुरक्षा कोड के समान है (डिफॉल्ट पासवर्ड 0000 है)।

**स्मृति की जानकारी**

आप फोन, सिम कार्ड और बाह्य मेमोरी (यदि डाली गई हो तो) के खाली स्थान और मेमोरी उपयोग की जांच कर सकते हैं।

**फ़ैक्ट्री सेटिंग्स पुनर्स्थापित कर**

आप सभी फ़ैक्ट्री डिफॉल्ट्स प्रारंभ कर सकते हैं। इस फंक्शन को सक्रिय करने के लिए आपको सुरक्षा कोड की आवश्यकता होती है।

**गैलेरी**

**मेरा मेमोरी कार्ड**

यदि आपके फोन में कार्ड स्लॉट पर मेमोरी कार्ड है, तो आप उसमें छवि, ध्वनि और वीडियोज़ बदल सकते हैं।

**मेरे छवियाँ**

छवि फाइलों की सूची दिखाता है।

**मेरी ध्वनि**

सहेजी गई ऑडियो फाइलें सूची में प्रदर्शित की जाती हैं।

## मेरे वीडियो

वीडियो फाइलों की सूची को प्रदर्शित करता है।

## मेरे खेल एवं अनुप्रयोग

आप अपने फ़ोन पर गेम्स और अनुप्रयोगों के शानदार संग्रह तक पहुंच प्राप्त कर सकते हैं।

## अन्य

जब आप ईमेल के माध्यम से किसी अनिर्धारित स्वरूप की फ़ाइलें प्राप्त करते हैं, तो फ़ाइलें इस फ़ोल्डर में सहेजी जाती हैं।

## मीडिया

### कैमरा

आप अंतर्निहित कैमरा से फोटोज़ ले सकते हैं और अपनी आवश्यकताओं के अनुसार इसकी सेटिंग्स को समायोजित कर सकते हैं।

## वीडियो

आप अंतर्निहित कैमरा के द्वारा कोई वीडियो क्लिप रिकॉर्ड कर सकते हैं।

## संगीत

अपने फ़ोन में गीतों के उपयोग से, आप आसानी से विभिन्न संगीत का आनंद ले सकते हैं।

## FM रेडियो

आपके LG-S310 में FM रेडियो सुविधा है, ताकि आप अपने पसंदीदा स्टेशन ट्यून कर सकें और चलते चलते उन्हें सुन सकें

**नोट:** रेडियो सुनने के लिए आपको अपना हैडसेट जोड़ने की आवश्यकता होगी रेडियो सुनने और रेडियो को अच्छा ग्रहण करने के लिए, हैडसेट को हैडसेट कनेक्टर में सममिलित करें।

मेनू दबाएँ और मीडिया का चयन करें, फिर FM रेडियो चुनें। आपका फ़ोन FM रेडियो के लिए निम्न विकल्प उपलब्ध कराता है:





**1 स्वतः:** स्कैन: विकल्प चुनें और स्वतः: स्कैन चुनें फिर हाँ का चयन करें. स्टेशन खोजने के लिए, आप बाएँ और दाएँ नेविगेशन कुँजियों का भी उपयोग कर सकते हैं

**2 चैनल सुची:** चैनल सुची संपादित करने के लिए विकल्प दबाएँ. आप 9 स्टेशनों को प्री-सेट कर सकते हैं

**3 स्पीकर से सुनें:** आप अंतर्निहित स्पीकर द्वारा रेडियो सुन सकते हैं.

**4 रेडियो से रिकॉर्ड करना**

- रेडियो सुनते समय  [रिकॉर्ड] कुँजी दबाएँ.

- रिकॉर्डिंग समय आपके फोन पर प्रदर्शित होता है. यदि आप रिकॉर्डिंग रोकना चाहते हैं, तो  [रोक] कुँजी दबाएँ. रिकॉर्डिंग पूरी होने पर, रिकॉर्ड की गई सामग्री गैलेरी में mp3 फाइल के रूप में सहेजी जाएगी

## वॉइस रिकॉर्डर

आप वॉइस मेमो रिकॉर्ड कर सकते हैं.

## रिगटोन बनाने वाला

यह फंक्शन आपको, इस उपकरण के उपयोग से आपकी व्यक्तिगत रिगटोन्स बनाने की अनुमति देता है.

## आयोजक

### शब्दकोश

अंग्रेजी से हिंदी शब्दकोश, हिंदी से अंग्रेजी शब्दकोश और अंग्रेजी शब्दकोश भी खोजने की अनुमति देता है. यह नवीनतम खोजों को भी याद रखता है

### अलार्म घडी

आप एक निर्दिष्ट समय पर आगे बढ़ने के लिए पांच अलार्म सेट कर सकते हैं.

### कैलेंडर

आप कैलेंडर देख सकते हैं और यहां चयनित दिनांक में सौ ईवेंट्स जोड़ सकते हैं.

**सुझाव:** उपयोगकर्ता कोई SMS शोड्यूल कर सकता है, ताकि विकल्प सूची से यह सेट की गई दिनांक और सेट किए गए समय पर पहले से निर्धारित नंबर/संपर्क को भेजा जा सके.

## टू-डू सूची

आप देखें, और संपादित करने के लिए सौ कार्य जोड़ सकते हैं.

## नोट्स

आप पचास नए नोट्स जोड़ सकते हैं, सहेजे गए नोट्स देखें और प्रबंधित कर सकते हैं.

## गुप्त नोट्स

आप गुप्त नोट्स जोड़ सकते हैं. आपको अपनी गुप्त नोट्स गोपनीयता सुरक्षित करने हेतु यह मेनू उपयोग करने के लिए सुरक्षा कोड दर्ज करने की आवश्यकता है.

## कैलकुलेटर

कैलकुलेटर मूल अंकगणितीय फंक्शंस प्रदान करता है: जोड़ना, घटाना, गुणा और विभाजन. आप उपलब्ध फंक्शंस, जैसे Sin, Cos, tan, log, ln, exp, %,  $x^2$ ,  $x^y$ , sqrt, +/-, deg और rad का भी उपयोग कर सकते हैं.

## स्टॉपवॉच

यह विकल्प आपको स्टॉपवॉच फंक्शन के उपयोग की अनुमति देता है.

## तिथि खोजक

आप (पश्चात) दिन जोड़कर, लक्ष्य दिनांक गिन सकते हैं.

## परिवर्तक

यह किसी भी माप को इच्छित इकाई में परिवर्तित कर देता है। ऐसे कई प्रकार हैं, जो इकाईयों में परिवर्तित किए जा सकते हैं: मुद्रा, क्षेत्र, लंबाई, भार, तापमान, वॉल्यूम, वेग।

## विश्व समय

विश्व समय फंक्शन दुनियाभर के मुख्य शहरों की समय जानकारी प्रदान करता है।

## के पास जाओ

आप जिस मेनू को खोज रहे हैं, वहां तक जाने में यह आपकी मदद करता है। आप आइटम को यहां जाएं के रूप में सेट कर सकते हैं।

## सुविधायें

आपका आपके खाली समय में मनोरंजन करने के लिए, आपके LG-S310 में पहले से लोड किए गए गेम्स हैं। यदि आप कोई भी अतिरिक्त गेम या सुविधायें डाउनलोड करना चुनते हैं, तो वे इस फोल्डर में सहेजे जाएंगे। मेनू दबाएँ और सुविधायों का चयन करें। मेरे खेल एवं अनुप्रयोग चुनें।

**नोट:** इस सेवा से कनेक्ट होने पर अतिरिक्त शुल्क लगाया जाता है। अपने नेटवर्क प्रदाता से अपना डेटा शुल्क जांचें।

आपका आपके खाली समय में मनोरंजन करने के लिए, आपके LG-S310 में पहले से लोड किए गए सुविधायें हैं।

## DataWallet

यह अनुप्रयोग व्यक्तिगत जानकारीयों रखने के लिए उपयोग किया जाता है। (बैंक खाता / क्रेडिट कार्ड / लोन / ईमेल ID विवरण)

## LG Zap Box

यह इंटरैक्टिव अनुप्रयोग है, जिसमें उपयोगकर्ता MP3 / कनेक्ट की गई साइट से छवि फ़ाइलें डाउनलोड कर सकता है, प्लेलिस्ट भी बनाई जा सकती है.

## Messenger

यह एक चार्टिंग सुविधा है जिस से उपभोक्ता आपने दोस्तों के साथ जुड़ा हो सकता है ।

## NewsHunt

राह में होने पर भी क्षेत्रीय भाषाओं में न्यूजपेपर्स देखने और पढ़ने हेतु सक्षम किए जाने के लिए डिज़ाइन किया गया एक विशिष्ट मोबाइल अनुप्रयोग है.

## RockeTalk

RockeTalk, आपको खोजने और नए मित्र बनाने और, उपयोग करते हुए उनसे कनेक्ट रहने हेतु आपको सक्षम करने के लिए एक सामाजिक नेटवर्किंग अनुप्रयोग है ।

**नोट:** RockeTalk उपयोग करने के लिए फ़्री है. RockeTalk एक डेटा (इंटरनेट) कनेक्शन का उपयोग करता है और उस पर ऑपरेटर डेटा लागत लागू होगी. हम अनुशंसित करते हैं कि आप एक असीमित (समान दर) डेटा प्लान, का उपयोग करें, जिसे आप अपने ऑपरेटर से प्राप्त कर सकते हैं.

## वेब


### होम

मुखपृष्ठ से कनेक्ट करता है. मुख पृष्ठ वह स्थल होगा जो सक्रिय किए गए प्रोफ़ाइल में परिभाषित किया गया है.

### बुकमार्क

बाद में आसान पहुंच के लिए यह मेनू आपको पसंदीदा वेब पृष्ठों के URL को संग्रहीत करने की अनुमति देता है.

## पते पर जाएँ

आप इच्छित साइट से सीधे कनेक्ट हो सकते हैं। कोई निर्दिष्ट URL दर्ज करने के बाद, साइट से कनेक्ट करने हेतु कनेक्शन को पूर्ण करने के लिए  कुंजी दबाएँ।

## सामाजिक नेटवर्क

आपके LG-S310 में (SNS) है, जो आपको, आपके सामाजिक नेटवर्क का आनंद लेने और प्रबंधित करने देता है

## Orkut

**orkut** यह एक ऑनलाइन समुदाय है जो अपने सामाजिक जीवन को अधिक सक्रिय और दोस्ताना बनाने के लिए बनाया गया है ।

## MySpace

यह एक समाजिक नेटवर्किंग सेवा है जो उपयोगकर्ताओं को नए दोस्तों और सहपाठियों, नए लोगों को मिलना, शेयर फोटो, वीडियो देखना आदि को सक्षम बनाता है ।

## Flickr

**Flickr** यह एक लगभग निश्चित रूप से सबसे अच्छा ऑनलाइन तस्वीर प्रबंधन और दुनिया में सुविधाय शेयरींग उपलब्ध कराता हैं।

## Picasa

गुगल का ये सुविधा तेजी और आसान तस्वीर शेयरींग सक्षम बनाता है, मित्रों और परिवार के साथ शेयरींग या सार्वजनिक फोटो का पता लगाता है ।

## LG Applications

उपयोगकर्ता साइट से खोज और टॉप रेटेड आवेदन पत्र डाउनलोड कर सकते है ।

**सहेजे गए पृष्ठ** – आपको, आपके द्वारा सहेजे गए वेब पृष्ठ देखने की अनुमति देता है.

**पिछला वेब पता** – यह मेनू नवीनतम ब्राउज किए गए पृष्ठों का इतिहास दिखाता है.

**सेटिंग्स** – आप प्रोफाइल, प्रकटन सेटिंग्स कैश और इंटरनेट से संबंधित सुरक्षा सेट कर सकते हैं.

## PC सुइट

आप अपने PC को अपने फोन के साथ सिंक्रनाइज कर सकते हैं। यह आपके सभी महत्वपूर्ण विवरण और दिनांक का मिलान सुनिश्चित करेगा और एक बैकअप के रूप में भी कार्य करेगा ताकि आप निश्चित रह सकें।

इसके लिए उपयोगकर्ता युएसबी केबल के माध्यम से पीसी को फोन के साथ कनेक्ट करें और डेटा सेवा का चयन करें ।

**नोट:** प्रदान किए गए CD उपयोग करके PC सुइट इंस्टाल करें एवं इंस्टालेशन गाइड का पालन करें.

## सॉफ्टवेयर नवीनीकरण

### LG मोबाइल फोन सॉफ्टवेयर नवीनीकरण प्रोग्राम

इस प्रोग्राम को स्थापित और उपयोग करने की अधिक जानकारी के लिए, कृपया <http://update.lgmobile.com>. और <http://www.lg.com/common/index.jsp> पर जाएँ ---> देश चयन करें . यह सुविधा आपको हमारे सेवा केंद्र पर जाए बिना आपके सॉफ्टवेयर को इंटरनेट पर जल्दी और आसानी से नवीनतम संस्करण में नवीनीकृत करने की अनुमति देता है ।

## सहायक उपकरण

आपके मोबाइल फोन के लिए विभिन्न सहायक उपकरण हैं। आप अपनी व्यक्तिगत संचार आवश्यकताओं के अनुसार इन विकल्पों का चयन कर सकते हैं।

मानक  
बैटरी



ट्रैवल  
अडैप्टर



हेडसेट



डेटा केबल  
और CD



### नोट



- हमेशा प्रामाणिक LG सहायक उपकरणों का उपयोग करें। ऐसा नहीं करने पर आपकी वॉरंटी अमान्य हो सकती है।
- सहायक उपकरण भिन्न क्षेत्रों में भिन्न हो सकते हैं। कृपया अधिक पूछताछ के लिए हमारे क्षेत्रीय सेवा कंपनी एजेंट से संपर्क करें।

तकनीकी डेटा

परिवेश के तापमान

अधिकतम: +55°C (डिसचार्जिंग) +45°C (चार्जिंग)

न्यूनतम: -10°C

Declaration of Conformity		 LG Electronics
<b>Suppliers Details</b>		
Name	LG Electronics Inc	
Address	: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
<b>Product Details</b>		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment	
Model Name	LG-S310	
Trade Name	LG	
		<b>CE 0168</b>
<b>Applicable Standards Details</b>		
R&TTE Directive	1999/5/EC	
EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1		
EN 300 328 v1.7.1		
EN 60950-1 : 2001		
EN 50360 : 2001 / EN62209-1 : 2006		
EN 301 511 v9.0.2		
<b>Supplementary Information</b>		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom		
Notified Body Identification Number : 0168		
<b>Declaration</b>		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date
	Seung Hyoun, Ji / Director	31. August. 2010
LG Electronics Inc. - EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands		
	Signature of representative	



## समस्या निवारण

समस्या	संभावित हल
टेलीफ़ोन चालू नहीं किया जा सकता	कृपया बैटरी निकालकर फिर से लगाएँ. उसके बाद फ़ोन की पावर चालू करने के लिए पावर चालू कुंजी दबाएं.
बैटरी खाली	बैटरी चार्ज करें. प्रदर्शन पर चार्जिंग संकेतक जाँचें.
बैटरी ठीक से चार्ज नहीं होती है या कभी-कभी फ़ोन स्वयं बंद हो जाता है	फ़ोन और बैटरी पर चार्जिंग की सतहों को साफ़ नर्म कपड़े से पोछें.
बैटरी का उपयोग समय कम हो जाता है	यदि बैटरी का समय कम है, तो ऐसा उपयोगकर्ता वातावरण, अधिक कॉल्स या कमजोर सिग्नल्स के कारण हो सकता है.
चार्जिंग त्रुटिकृतापमान सीमा से अधिक है	सुनिश्चित करें कि परिवेशी तापमान ठीक है, कुछ देर प्रतीक्षा करें, और तब पुनः चार्ज करें.
चार्जिंग त्रुटि—गलत चार्ज	केवल मूल LG सहायक सामग्री का उपयोग करें.
चार्जिंग त्रुटि—बैटरी खराब है	बैटरी बदलें.
चार्जिंग त्रुटि—चार्जिंग के समय कोई बैटरी चिह्न नहीं दिखाई देता	बैटरी खाली है या बहुत समय से उपयोग नहीं की गई है. स्क्रीन पर बैटरी चिह्न दिखाई देने में कुछ समय लग सकता है.
फ़ोन कोड या पासवर्ड भूल गए हैं	डिफ़ॉल्ट फ़ोन कोड "0000" है.

समस्या	संभावित हल
PUK दर्ज करें	पिन कोड लगातार तीन बार गलत दर्ज किया गया है, और फोन अब अवरोधित हो गया है. आपके सेवा प्रदाता द्वारा दिया गया PUK दर्ज करें.
नेटवर्क गुम	हो सकता है कि आप कमजोर सिग्नल क्षेत्र में हों. वहाँ से हटें और फिर से प्रयास करें. आप ऐसे विकल्प का उपयोग करने का प्रयास कर रहे हैं जिसके लिए आपने अपने सेवा प्रदाता से सदस्यता नहीं ली है. आगे की जानकारी के लिए अपने सेवा प्रदाता से संपर्क करें.
आपने एक नंबर दर्ज किया है किंतु उसे डायल नहीं किया गया था	सुनिश्चित करें कि आपने टॉक/हाँ कुंजी दबाई है. सुनिश्चित करें कि आप सही नेटवर्क सेवा तक पहुँचे हैं. सुनिश्चित करें कि आपने कोई जावक कॉल रोधन विकल्प नहीं सेट किया है. सुनिश्चित करें कि आपने क्षेत्र कोड दर्ज कर दिया है.
आपका संवाददाता आप तक नहीं पहुँच सकता	सुनिश्चित करें कि आपका फोन चालू है. टॉक/हाँ कुंजी को एक सेकंड से अधिक देर तक दबाएँ. सुनिश्चित करें कि आप नेटवर्क सेवा का उपयोग कर रहे हैं. सुनिश्चित करें कि आपने कोई आवक कॉल रोधन विकल्प नहीं सेट किया है.

समस्या	संभावित हल
आपका संवाददाता आपकी आवाज नहीं सुन सकता	सुनिश्चित करें कि आपने लाउडस्पीकर बंद कर दिया है. सुनिश्चित करें कि आपने अपना फोन मुँह के पास रखा है. माइक्रोफ़ोन, फ़ोन के नीचे स्थित है.
कॉल की वॉइस क्वालिटी बहुत खराब है	डिसप्ले पर सिग्नल शक्ति संकेतक को जाँचें. पट्टियों की संख्या सिग्नल क्षमता दर्शाती है. यदि आप किसी बिल्डिंग में हैं तो फ़ोन को थोड़ा घुमाकर या खिड़की के पास ले जाकर प्रयास करें.
जब आप किसी संपर्क को रीकॉल करते हैं, तो कोई नंबर डायल नहीं किया जाता	नंबर सही तरह से संग्रहीत किया गया है, यह सुनिश्चित करने के लिए फ़ोनबुक खोज सुविधा का उपयोग करें. यदि आवश्यकता हो, तो नंबर फिर से सहेजें.
ब्राउजर का उपयोग नहीं कर सकता	आपकी सदस्यता में डेटा क्षमता शामिल नहीं है. आपको सेवा सक्षम करने के लिए अपने सेवा प्रदाता से संपर्क करना होगा.
यदि उपरोक्त दिशानिर्देशों से आपकी समस्या हल करने में मदद नहीं मिलती है	आपके मोबाइल फ़ोन का मॉडल नंबर और समस्या का स्पष्ट वर्णन नोट कर लें. मदद के लिए अपने फ़ोन डीलर या LG सेवा केंद्र से संपर्क करें.



**CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.**  
**2nd Floor, 9B, DLF Cyber City, Phase-III,**  
**Gurgaon - 122002**

TO

CHOLAMANDALAM MS GENERAL  
 INSURANCE CO. LTD.

DATE...../...../.....

2nd Floor, 9B, DLF Cyber City,  
 Phase-III, Gurgaon - 122002.  
 Haryana

Dear Sir,

RE: Loss of mobile phone no.: .....

MAKE .....MODEL .....

This is to inform that my mobile phone has been lost due to theft on  
 .....at.....FIR/DD entry has been lodged  
 with ..... Police Station. I am enclosing the Claim  
 Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name

**CLAIM FORM CUM CLAIM BILL**

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No.  Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft  Time

Place of Theft

Details of Theft

FIR No./DD No.  Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES  NO

DATE

PLACE

SIGNATURE OF CUSTOMER

**TERMS AND CONDITIONS:**

**POLICY COVERAGE**

- Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
- Offer applicable on all purchases made from 7th April 2010 to 6th April 2011 under Policy No. **PBG-00016391-000-00** Dated 07/04/2010
- Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
- Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:
 

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

## **CLAIM PROCESSING DOCUMENTS**

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
  - (i) Original Invoice & Cash Memo.
  - (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
  - (iii) Translation of vernacular documents in English/Hindi.
  - (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.

**Note:** In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. 2nd Floor, 9B, DLF Cyber City, Phase-III, Gurgaon - 122002. Tel. No. 1800-200-5544, Fax No. 0124-30051-99, e-mail id : [customercare@cholams.murugappa.com](mailto:customercare@cholams.murugappa.com)



---

### DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of ..... (in words) Rs.....

Signature of Insured /Customer  
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

## Customer Information Center

For any query related to the after sales service and customer support please contact us at below details



**24 x 7** CALL CENTER OPERATIONS

 <b>CALL</b>	<b>1800-180-9999</b> (Toll Free)	 <b>SMS</b>	<b>5757554</b> (Send SMS)
--	-------------------------------------	---	------------------------------

  
**CLICK**

**www.lgindia.com**  
**lgservice@lgindia.com**





