SAMSUNG
Galaxy A51

AT&T

Let's get started

AT&T 5-Star
Eco-Rating 2.0
att.com/ecospace

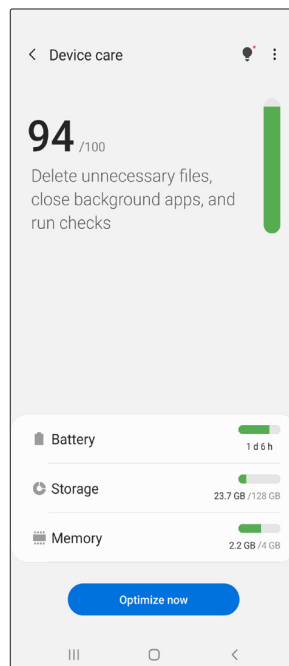WIRELESS
EMERGENCY
ALERTS
CAPABLE
™

AT&T Eco Rating 2.0 only applies to Galaxy A51. For limited factors evaluated visit att.com/EcoSpace. Wireless Emergency Alerts is a registered Trademark and Service Mark of CTIA.

Portions © 2020 Samsung Electronics America, Inc. Samsung and Galaxy A51 are both trademarks of Samsung Electronics Co., Ltd. Portion of memory occupied by existing content. LTE is a trademark of ETSI. 4G LTE is not available everywhere. Wi-Fi is a trademark of the Wi-Fi Alliance. Contains Lithium ion battery - recycle or dispose of properly. Portions © 2020 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property. All other marks are the property of their respective owners..

Printed in USA   GH68-52016A

Optimize the battery

From the home screen, swipe up for **Apps**, and then tap **Settings** ⚙ > **Device care** ↻.

Useful apps*

AT&T Call Protect
Tired of nuisance calls? Take more control with automatic fraud blocking and suspected spam warnings.

AT&T DriveMode
Help avoid distractions while driving. Silence incoming text alerts.

AT&T ProTech
Have a question, call or chat with a live AT&T ProTech support expert.

AT&T Smart Wi-Fi
Find and auto-connect to available hotspots.

AT&T Mobile Security
Helps protect against threats that can compromise your personal information.

*Compatible device and subscription may be required. Data and messaging rates may apply. Restrictions and limitations may apply. For more app information, go to **https://att.com/shop/apps**.

What's in the box

• Samsung Galaxy A51
• Pre-installed SIM
• Wall Charger
• SIM Ejector Pin
• USB Cable
• Inbox Guide
• Terms and Conditions

Find more information

Manage your account with myAT&T
• On your phone: Swipe up for **Apps**, and then tap the **AT&T** folder > **myAT&T**
• On the web: **att.com/myATT**

Compatible device and online account required. Data and messaging rates may apply for download and app usage.

Need more help?
• On your phone: Swipe up for **Apps**, and then tap **AT&T** folder > **Device Help**
• On the web: **att.com/DeviceHowTo**

Give us a call
• 611 from any AT&T wireless phone
• 800.331.0500

Device Protection
Remember to protect your device against loss, theft and damage. Learn more at **att.com/protectyourdevice**

Samsung Care
• To access user manuals, tips, videos, and more, visit **samsung.com/us/support**.
• For hardware or software support, call 800.726.7864 or visit **samsung.com/us/support/contact**.
• To find a repair center near you, visit **support-us.samsung.com/cyber/locator/asc_locator.jsp**.

Your new phone

Front camera

SIM/microSD tray

12:45
Fri, May 1

Volume

Side key
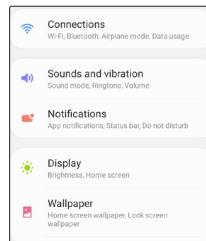
Headset jack

Charger port

Need more help?
Swipe up for **Apps** > **AT&T** folder > **Device Help**

Rear cover and battery are not removable.
Do not attempt to remove.

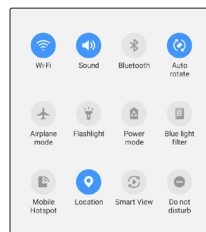# Easily adjust settings

Settings menu

From the home screen, swipe up for **Apps**, and then tap **Settings** ⚙.

Connections
Wi-Fi, Bluetooth, Airplane mode, Data usage

Sounds and vibration
Sound mode, Ringtone, Volume

Notifications
App notifications, Status bar, Do not disturb

Display
Brightness, Home screen

Wallpaper
Home screen wallpaper, Lock screen wallpaper

Quick settings

Drag the Status bar down to display the Notification panel.

In addition to notifications, the Notification panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

Wi-Fi   Sound   Bluetooth   Auto rotate

Airplane mode   Flashlight   Power mode   Blue light filter

Mobile Hotspot   Location   Smart View   Do not disturb

Manage camera settings

1. **Tool Panel**: Customize camera settings.
2. **Zoom**: Tap to select a zoom option.
3. **Camera modes**: Change shooting modes.
4. **MORE**: Tap to launch additional features and options like AR ZONE, BIXBY VISION and more.
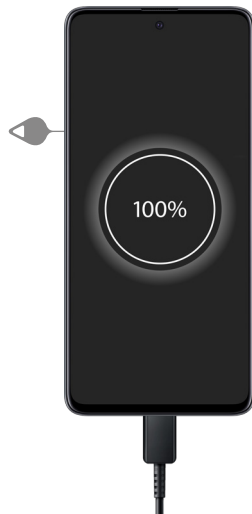
How to replace the SIM

Remove SIM/microSD tray

- Use the tool to open the SIM/microSD card tray.

Insert SIM/microSD card

- Place the SIM card and optional microSD card (sold separately) into the tray with the gold contacts facing down.

Turn on your new phone

- Press and hold the **Side key** until the device turns on.

100%

Call family & friends

Make a call

1. From the home screen, tap **Phone** 📞.
2. Place a call using one of the following:
   - **Keypad**: Displays the keypad, and enter a phone number.
   - **RECENTS**: Select from call history.
   - **CONTACTS**: Select from address book.

Check Voicemail

1. From the home screen, tap **Phone** 📞.
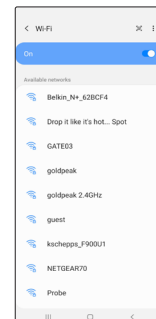2. Tap **Voicemail** 📧.

Visual Voicemail

1. From the home screen, swipe up for **Apps**, and then tap **Visual Voicemail** 📧.
2. Select a message to play.

Surf & stream in no time

Connect to Wi-Fi

1. From the home screen, swipe up for **Apps**, and then tap **Settings** ⚙ > **Connections** 📶 > **Wi-Fi**.
2. Tap the Wi-Fi slider to turn it on.
3. Tap a network, enter a password if required, then tap **Connect**.

Use Bluetooth

1. From the home screen, swipe up for **Apps**, and then tap **Settings** ⚙ > **Connections** 📶 > **Bluetooth**.
2. Tap the Bluetooth slider to turn it on.
3. Tap the field next to your device name to make it visible for pairing.
4. Tap a device from the list to initiate pairing.