CC30 HD Camera
Quick Installation Guide

Package Contents

Camera Unit	Wireless Microphone	Wireless Dongle	Mini Tripod

Power Adaptor	USB Cable	Battery	Quick Guide

Overview
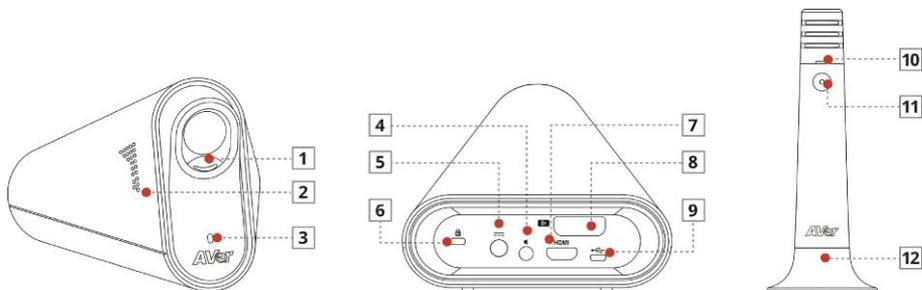
1	Mechanical Privacy Shutter	**Camera Indicator**	
2	Built-in Microphone	●	Wireless microphone connected
3	Camera Indicator	●(green blink)	Wireless microphone disconnected
4	Line Out	●(red blink)	Starting up
5	Power Jack	●	Power off
6	Kensington Lock Port	**MIC Battery Indicator**	
7	HDMI Output	●(red blink)	Battery Low
8	Wireless Dongle	●	Battery Normal
9	Micro USB	**MIC Power Switch (Indicator)**	
10	MIC Battery Indicator	●	Wireless microphone connected
11	MIC Power Switch (Indicator)	●(green blink)	Out of range
12	MIC Battery Cover (MIC Stand)	●	Power Off

Basic Installation Steps

1. Plug Dongle into Camera	**2.** Connect Power to Camera

Wireless Dongle

Wireless Dongle Slot
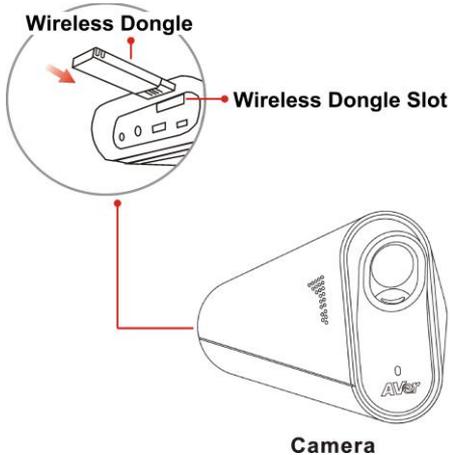
Camera

CAUTION:
Wireless Dongle for install on CC30 **ONLY**.
DO NOT connects to any powered USB cable.

Outlet

Power Adaptor

Camera Rear Panel
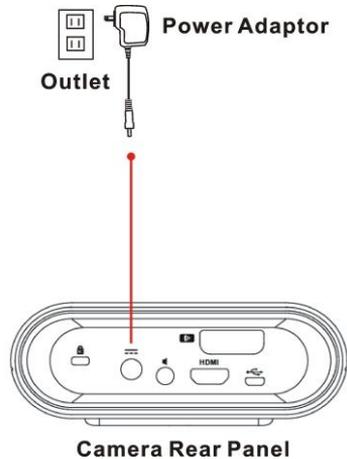
3. Prepare the Microphone	**4.** Open the Privacy Shutter

Press MIC
Power Switch to
Power MIC On

Privacy Shutter

Camera
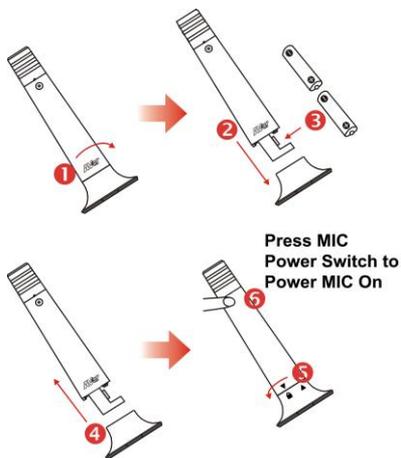
CAUTION:

1. Do not reverse the positive and negative terminals. If the battery inserted reversely is recharged, however, it may become hot, leak, or explode.
2. You can save battery life by powering off microphone when you're not using it.
3. To avoid battery leakage, please remove the batteries from the microphone that will not be used for a long time.

Connect as a Conference Camera

1. Connect Camera to PC
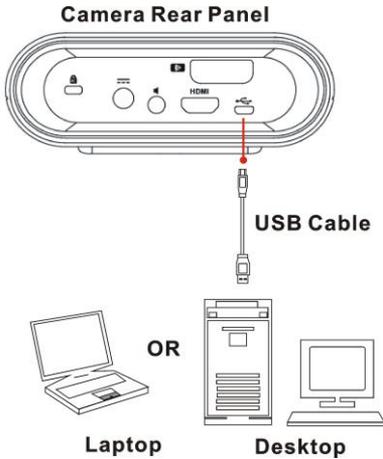
2. Connect Speaker to Camera
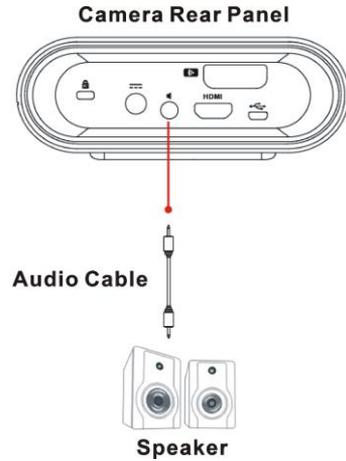
Connect as a Lecture Capture Camera

Connect HDMI to Lecture Recording System for video recording.
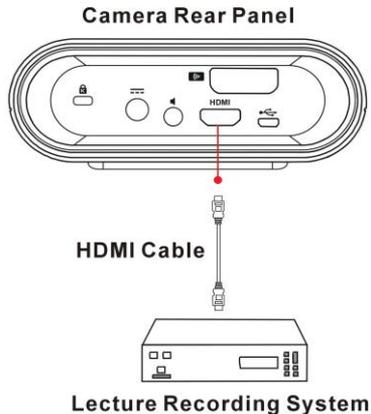
Set up Camera with Mini-Tripod

1. Unfold the Mini Tripod
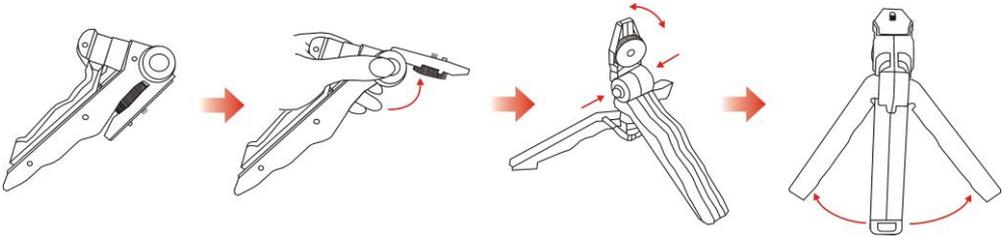
2. Attach Camera to the Mini Tripod
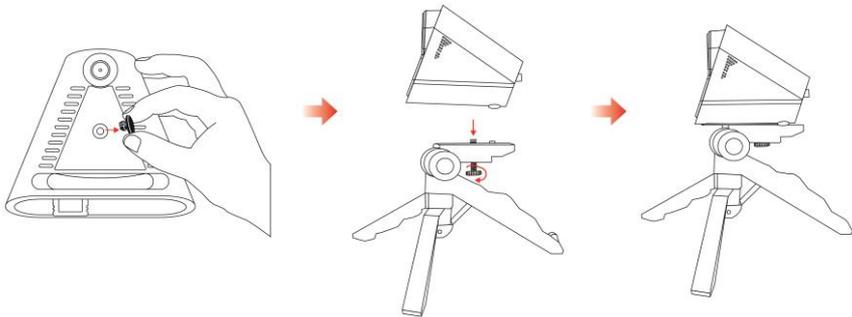
Making a Video Call

A computer is required to use this device.

Step 1: Open your video collaboration application such as Skype™, Skype for Business, Google Hangouts™, Zoom™, WebEx™, Adobe Connect™, WebRTC and others which supported UVC standard.

Step 2: Set the CC30 as your primary camera, microphone and speaker devices in your application (Please consult your application setup guide for details.).

Step 3: Ready to make a video call.

More Help

For FAQs, technical support, software and user manual download, please visit:

USA

http://averusa.com/classroom-technology/support/ (Look for CC30)

Global

http://www.aver.com