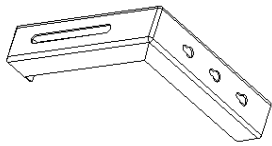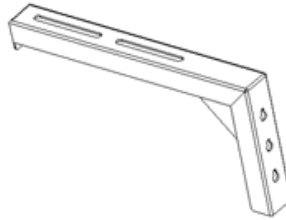# ELITE SCREENS

6", 12" (L) Bracket Pair

Installation Guide

1. Parts List

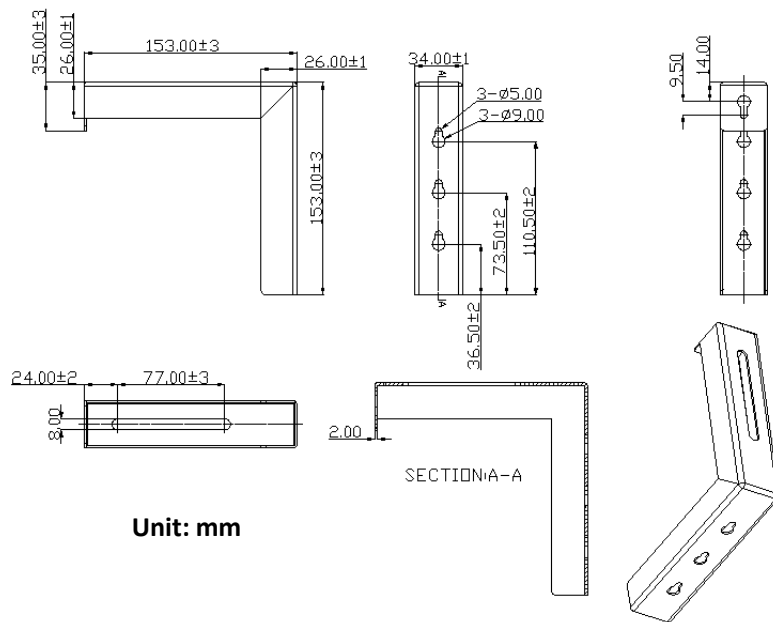| | 6 inch bracket Part Numbers:
ZVMAXLB6-W (white)
ZVMAXLB6-B (black) | | 12 inch bracket Part Numbers:
ZVMAXLB12-W (white)
ZVMAXLB12-B (black) |

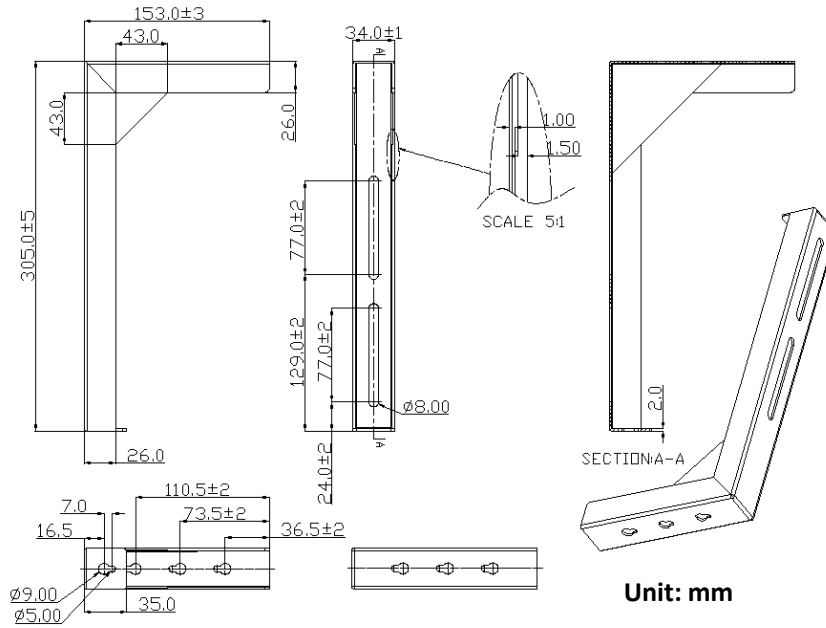**Only a pair of either 6 or 12 inch brackets is included. Drawings for reference only.**

L brackets hardware kit

A. Snap link x2	B. Eyebolt x2	C. Nut x4
D. Wing Nut x4	**E. Washer X4**	**F. Screw/Wall anchor set x6**

2. 6″ (L) bracket dimensions

SECTION A-A

Unit: mm

3. 12" (L) bracket dimensions

153.0±3
43.0
34.0±1
43.0
26.0
1.00
1.50
SCALE 5:1
305.0±5
77.0±2
129.0±2
77.0±2
∅8.00
24.0±2
26.0
2.0
SECTION A-A
7.0
110.5±2
16.5
73.5±2
36.5±2
∅9.00
∅5.00
35.0

Unit: mm

4. Installation on Drywall Wall/Ceiling Using Drywall Anchors if Studs are Not Located

① ② ③ ④
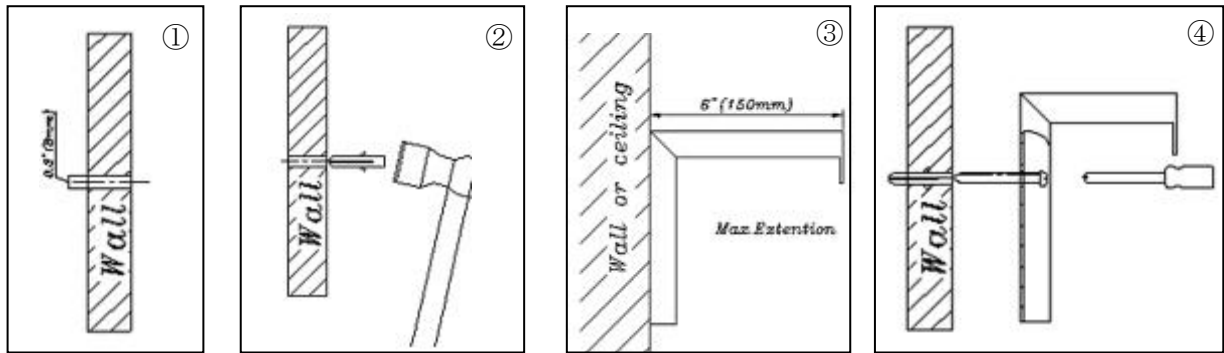
Instructions for mounting (L) bracket to the wall/ceiling.

①Drill hole.

②Insert flangeless anchor into predrilled hole.

③Place (L) bracket into predrilled hole.

④Insert pan head Phillips screw into pre-drilled hole for (L) bracket mounting.

## 5. Examples for Hanging your Elite Screen with the (L) Brackets on a Wall or Ceiling

1. Ceiling Installation

Wing nut (D) & Washer (E)

Nut (C) & Eyebolt (B)
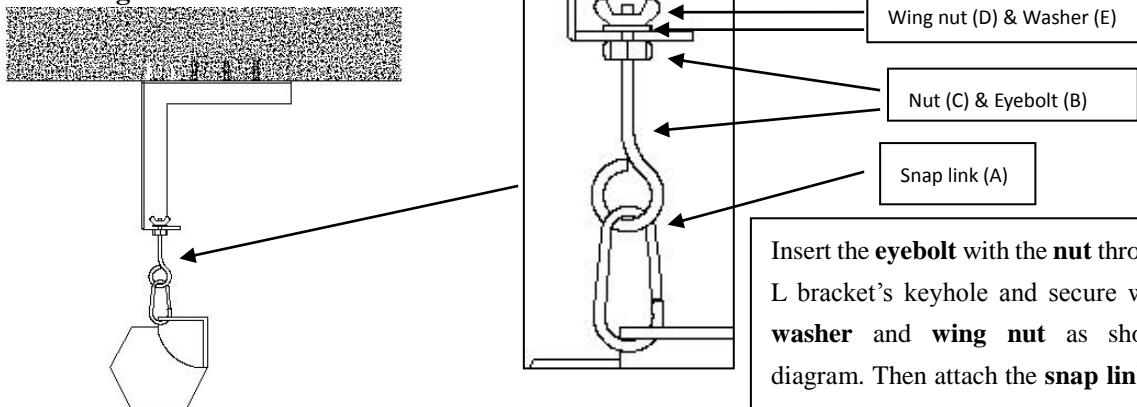
Snap link (A)

Insert the **eyebolt** with the **nut** through the L bracket's keyhole and secure with the **washer** and **wing nut** as shown in diagram. Then attach the **snap link** to the **eyebolt**. The snap link then attaches to the screen's end caps keyhole or d-ring.

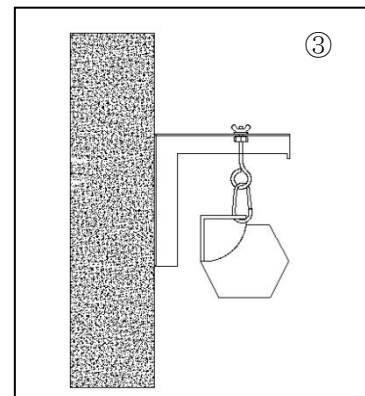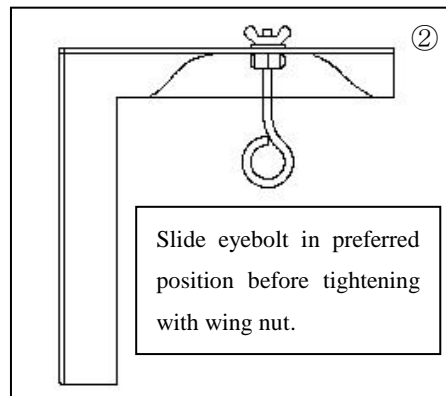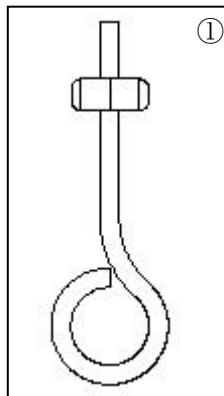**2. Wall Installation**

Method 1:
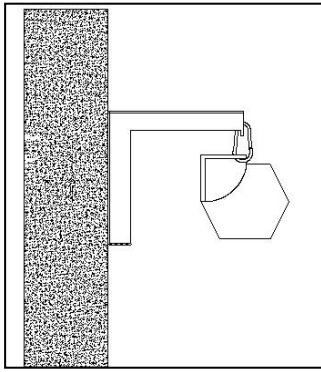
Hang the screen on the front of the bracket with the **snap link**.

Method 2:

    1. Insert the **nut** in the **eyebolt.**

    2. Put the eyebolt through the L bracket's top opening and secure it with the **washer** and **wing nut**.

    3. Hang the screen on the **eyebolt** with the **snap link**

①

②

Slide eyebolt in preferred position before tightening with wing nut.

③

For more information, technical support or your local Elite Screens contact, please visit www.elitescreens.com