


LED Indication and Keys

LED	Status		Indication
Printer status LED indicator	Off		Pinter is ready
	Green (blinking)		Printer is paused
	Red (solid)		Media cover is open
	Red (blinking)		Printer error
Battery status LED indicator	Green (blinking)		Recharge the battery
	Amber (solid)		Battery is charging
Battery charge level LED indicator	Green (solid)		Full charged
			2/3 charged level
			1/3 charged level
Wireless status LED indicator	Blue (solid)		Wireless device is ready
	Blue (blinking)		Wireless device is
			communicating

Keys	Function
<i>2</i> 05	Press and hold for 2-3 seconds to turn on the printer.
	2. Press and hold for 2-3 seconds to turn off the printer.
	Feed one label when printer is ready.
	2. Pause the print gob while printing.

Note: Wireless devices are optional.

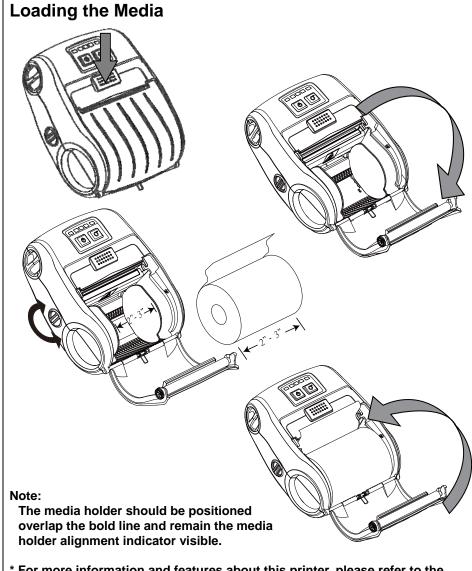

- * For more information and features about this printer, please refer to the user's manual on the CD disk.
- * Specifications, accessories, parts and programs are subject to change without notice.

