



Basic Router Configuration

This chapter provides procedures for configuring the basic parameters of your Cisco router, including global parameter settings, routing protocols, interfaces, and command-line access. It also describes the default configuration on startup.



Note

Individual router models may not support every feature described in this guide. Features that are not supported by a particular router are indicated whenever possible.

This chapter includes configuration examples and verification steps, as available.

For complete information on how to access global configuration mode, see the [Entering Global Configuration Mode](#) section.

- [Basic Router Configuration, page 1](#)

Basic Router Configuration

This chapter provides procedures for configuring the basic parameters of your Cisco router, including global parameter settings, routing protocols, interfaces, and command-line access. It also describes the default configuration on startup.



Note

Individual router models may not support every feature described in this guide. Features that are not supported by a particular router are indicated whenever possible.

This chapter includes configuration examples and verification steps, as available.

For complete information on how to access global configuration mode see [Entering Global Configuration Mode, page A-5](#).

Interface Ports

[Table 1: Supported Interfaces and Associated Port Labels for Cisco 860, 880 and 890 Series Router](#), on page 2 lists the interfaces that are supported for Cisco 860, 880 and 890 series routers and their associated port labels on the equipment.

Table 1: Supported Interfaces and Associated Port Labels for Cisco 860, 880 and 890 Series Router

Router	Interface	Port Label
LAN Ports		
Cisco 860, Cisco 880, and Cisco 890 series	Fast Ethernet LAN	LAN, FE0–FE3
	Wireless LAN	(no label)
Cisco 866VAE, 867VAE	Ethernet LAN	LAN, FE0-FE3
Cisco 866VAE-K9, 867VAE-K9	Ethernet LAN	LAN, GE0, FE0-FE3
WAN Ports		
Cisco 861, 861W, 881, 881W, 881G, 881GW, 881-V	Fast Ethernet WAN	WAN, FE4
Cisco 867, 867W	ADSL2oPOTS WAN	ADSLoPOTS
Cisco 886, 886W, 886G, 886GW	ADSL2oISDN WAN	ADSLoPOTS
Cisco 887, 887W	ADSL2oPOTS WAN	ADSLoPOTS
Cisco 887V, Cisco887VW, 887VG, 887VGW	VDSL2oPOTS WAN	VDSL0POTS
Cisco 867VA, 887VA, 887VA-M, 887VA-V, 887VA-V-W	VDSL/ADSL0POTS WAN	VDSL/ADSL0POTS
Cisco 888, 888W	G.SHDSL WAN	G.SHDSL
Cisco 891, 892	Fast Ethernet WAN	FE8
	Gigabit Ethernet WAN	WAN GE 0
Cisco 866VAE, 867VAE	Gigabit Ethernet WAN	WAN GE0
Cisco 866VAE-K9, 867VAE-K9	Gigabit Ethernet WAN	WAN GE1
Cisco 866VAE, 866VAE-K9	VDSL/ADSL0ISDN WAN	VDSL/ADSL OVER ISDN
Cisco 867VAE, 867VAE-K9	VDSL/ADSL0POTS WAN	VDSL/ADSL OVER POTS

Table 2: Supported Interfaces and Port Labels for Cisco 810 Series ISR

Router	Interface	Port Label
Cisco 819 Series Router	4-port Fast Ethernet LAN	LAN, FE0–FE3
	Gigabit Ethernet WAN	GE WAN 0
	Serial	Serial
	Mini USB for 3G port Provisioning	3G RSVD
	Console/Aux port	CON/AUX
Cisco 812 Series Router	Gigabit Ethernet WAN	GE WAN 0
	Mini USB for 3G port Provisioning	3G RSVD
	Console/Aux port	CON/AUX

Default Configuration

When you first boot up your Cisco router, some basic configuration has already been performed. All of the LAN and WAN interfaces have been created, console and vty ports are configured, and the inside interface for Network Address Translation (NAT) has been assigned. Use the **show running-config** command to view the initial configuration, as shown in the following example, for a Cisco 881W.

```
Router# show running-config
User Access Verification
Password:
Router> en
Password:
Router# show running-config
Building configuration...
Current configuration : 986 bytes
!
version 12.4
no service pad
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
!
hostname Router
!
boot-start-marker
boot-end-marker
!
enable secret 5 $1$g4y5$NxDm.0hON6YA51bcfGvN1
enable password ciscocisco
!
no aaa new-model
!
!
!
!
no ip routing
no ip cef
!
```

```
!  
!  
!  
!  
multilink bundle-name authe  
!  
!  
archive  
  log config  
  hidekeys  
!  
!  
!  
!  
interface FastEthernet0  
!  
interface FastEthernet1  
  shutdown  
!  
interface FastEthernet2  
  shutdown  
!  
interface FastEthernet3  
  shutdown  
!  
interface FastEthernet4  
  ip address 10.1.1.1 255.255.255.0  
  no ip route-cache  
  duplex auto  
  speed auto  
!  
interface Vlan1  
  no ip address  
  no ip route-cache  
  shutdown  
!  
interface wlan-ap0  
  description Service Module interface to manage the embedded AP  
  ip unnumbered Vlan1  
  no cdp enable  
  arp timeout 0  
!  
ip route 0.0.0.0 0.0.0.0 10.1.1.1  
!  
!  
no ip http server  
no ip http secure-server  
!  
!  
!  
!  
control-plane  
!  
!  
line con 0  
  no modem enable  
line aux 0  
line vty 0 4  
  password cisco  
  login  
  transport input telnet ssh  
!  
scheduler max-task-time 5000  
!  
webvpn cef  
end  
Router#
```

Information Needed for Configuration

Gather the following information, depending on your planned network scenario, before configuring your network:

- If you are setting up an Internet connection, gather the following information:
 - PPP client name that is assigned as your login name
 - PPP authentication type: Challenge Handshake Authentication Protocol (CHAP) or Password Authentication Protocol (PAP)
 - PPP password to access your ISP account
 - DNS server IP address and default gateways
- If you are setting up a connection to a corporate network, you and the network administrator must generate and share the following information for the WAN interfaces of the routers:
 - PPP authentication type: CHAP or PAP
 - PPP client name to access the router
 - PPP password to access the router
- If you are setting up IP routing:
 - Generate the addressing scheme for your IP network.
 - Determine the IP routing parameter information, including IP address and ATM permanent virtual circuits (PVCs). These PVC parameters are typically virtual path identifier (VPI), virtual circuit identifier (VCI), and traffic-shaping parameters.
 - Determine the number of PVCs that your service provider has given you, along with their VPIs and VCIs.
 - For each PVC, determine the type of AAL5 encapsulation supported. It can be one of the following:

AAL5SNAP—This can be either routed RFC 1483 or bridged RFC 1483. For routed RFC 1483, the service provider must provide you with a static IP address. For bridged RFC 1483, you may use DHCP to obtain your IP address, or you may obtain a static IP address from your service provider.

AAL5MUX PPP—With this type of encapsulation, you need to determine the PPP-related configuration items.

- If you plan to connect over an ADSL or G.SHDSL line:
 - Order the appropriate line from your public telephone service provider.

For ADSL lines—Ensure that the ADSL signaling type is DMT (also known as ANSI T1.413) or DMT Issue 2.

For G.SHDSL lines—Verify that the G.SHDSL line conforms to the ITU G.991.2 standard and supports Annex A (North America) or Annex B (Europe).

- If you are setting up 3G:

- You must have service availability on the Cisco 819 ISR from a carrier, and you must have network coverage where your router will be physically placed. For a complete list of supported carriers, see the data sheet at [Cisco 3G Wireless Connectivity Solutions](#).
- You must subscribe to a service plan with a wireless service provider and obtain a SIM card.
- You must install the SIM card before configuring the 3G Cisco 819 ISR. For instructions on how to install the SIM card, see Cisco 800 Series see [Configuring Cisco EHWIC and 880G for 3.7G \(HSPA+\)/3.5G \(HSPA\)](#)
- You must install the required antennas before you configure the 3G for Cisco 819 ISR. See [Table 3: Instructions for Installing Antenna](#), on page 6 for instructions on how to install the antennas:

Table 3: Instructions for Installing Antenna

Antenna	Instructions for Installig Antenna
3G-ANTM1919D	See Cisco Multiband Swivel-Mount Dipole Antenna (3G-ANTM1919D) .
3G-ANTM1916-CM	See Cisco Multiband Omnidirectional Ceiling Mount Antenna (3G-ANTM1916-CM)
3G-AE015-R (Antenna Extension)	See Cisco Single-Port Antenna Stand for Multiband TNC Male-Terminated Portable Antenna (Cisco 3G-AE015-R) .
3G-AE010-R (Antenna Extension)	See Cisco Single-Port Antenna Stand for Multiband TNC Male-Terminated Portable Antenna (Cisco 3G-AE015-R) . This document applies to both 3G-AE015-R and 3G-AE010-R. The only difference between these two products is the length of the cable.
3G-ANTM-OUT-OM	See Cisco 3G Omnidirectional Outdoor Antenna (3G-ANTM-OUT-OM) .
3G-ANTM-OUT-LP	See Cisco Multiband Omnidirectional Panel-Mount Antenna (3G-ANTM-OUT-LP) .
3G-ACC-OUT-LA	See Cisco 3G Lightning Arrestor (3G-ACC-OUT-LA) .
4G-ANTM-OM-CM	See Cisco 4G Indoor Ceiling-Mount Omnidirectional Antenna (4G-ANTM-OM-CM)

- ◦ You must check your LEDs for signal reception as described in [Table 2-1](#) .
- You should be familiar with the Cisco IOS software. See the Cisco IOS documentation beginning with Release 12.4(15)T or later for Cisco 3G support .

- To configure your 3G data profile, you will need the username, password, and access point name (APN) from your service provider:

After collecting the appropriate information, perform a full configuration on your router beginning with the tasks in [Configuring Command-Line Access](#), on page 7.

- If you plan to connect voice equipment, see [Cisco IOS Voice Port Configuration Guide](#) .
- If you need to obtain or change software licenses, see [Software Activation on Cisco Integrated Services Routers and Cisco Integrated Service Routers G2](#) .

Configuring Command-Line Access

To configure parameters to control access to the router, perform the following steps, beginning in global configuration mode:

SUMMARY STEPS

1. **line** [**aux** | **console** | **tty** | **vty**] *line-number*
2. **password** *password*
3. **login**
4. **exec-timeout** *minutes* [*seconds*]
5. **line** [**aux** | **console** | **tty** | **vty**] *line-number*
6. **password** *password*
7. **login**
8. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	line [aux console tty vty] <i>line-number</i> Example: Router(config)# line console 0	Enters line configuration mode and specifies the type of line. This example specifies a console terminal for access.
Step 2	password <i>password</i> Example: Router(config-line)# password 5dr4Hepw3	Specifies a unique password for the console terminal line.
Step 3	login Example: Router(config-line)# login	Enables password checking at terminal session login.

	Command or Action	Purpose
Step 4	exec-timeout <i>minutes</i> [<i>seconds</i>] Example: Router(config-line)# exec-timeout 5 30	Sets the time interval that the EXEC command interpreter waits until user input is detected. The default is 10 minutes. Optionally, add seconds to the interval value. This example shows a timeout of 5 minutes and 30 seconds. Entering a timeout of 0 0 specifies never to time out.
Step 5	line [aux console tty vty] <i>line-number</i> Example: Router(config-line)# line vty 0 4	Specifies a virtual terminal for remote console access.
Step 6	password <i>password</i> Example: Router(config-line)# password aldf2ad1	Specifies a unique password for the virtual terminal line.
Step 7	login Example: Router(config-line)# login	Enables password checking at the virtual terminal session login.
Step 8	end Example: Router(config-line)# end	Exits line configuration mode, and returns to privileged EXEC mode.

Configuring Global Parameters

To configure selected global parameters for your router, perform these steps:

SUMMARY STEPS

1. **configure terminal**
2. **hostname** *name*
3. **enable secret** *password*
4. **no ip domain-lookup**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode when using the console port.

	Command or Action	Purpose
	<p>Example:</p> <pre> </pre> <p>Example:</p> <pre>Router# configure terminal</pre>	<p>If you are connecting to the router using a remote terminal, use the following:</p> <pre>telnet router name or address Login: login id Password: ***** Router> enable</pre>
Step 2	<p>hostname <i>name</i></p> <p>Example:</p> <pre> </pre> <p>Example:</p> <pre>Router(config)# hostname Router</pre>	Specifies the name for the router.
Step 3	<p>enable secret <i>password</i></p> <p>Example:</p> <pre> </pre> <p>Example:</p> <pre>Router(config)# enable secret c1ny5ho</pre>	Specifies an encrypted password to prevent unauthorized access to the router.
Step 4	<p>no ip domain-lookup</p> <p>Example:</p> <pre> </pre> <p>Example:</p> <pre>Router(config)# no ip domain-lookup</pre>	Disables the router from translating unfamiliar words (typos) into IP addresses.

Configuring WAN Interfaces

Configure the WAN interface for your router using one of the following as appropriate:

Configuring a Fast Ethernet WAN Interface

To configure the Fast Ethernet interface on a Cisco 861 or 881 ISR, perform these steps, beginning in global configuration mode:

SUMMARY STEPS

1. **interface** type number
2. **ip address** ip-address mask
3. **no shutdown**
4. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	interface type number Example: <pre>Router(config)# interface fastethernet 4</pre>	Enters the configuration mode for a Fast Ethernet WAN interface on the router.
Step 2	ip address ip-address mask Example: <pre>Router(config-if)# ip address 192.168.12.2 255.255.255.0</pre>	Sets the IP address and subnet mask for the specified Fast Ethernet interface.
Step 3	no shutdown Example: <pre>Router(config-if)# no shutdown</pre>	Enables the Ethernet interface, changing its state from administratively down to administratively up.
Step 4	exit Example: <pre>Router(config-if)# exit</pre>	Exits configuration mode for the Fast Ethernet interface and returns to global configuration mode.

What to Do Next**Note**

Cisco IOS Release 15.1 (3) T introduces the batch command under the interface mode. You may notice a reduced CPU utilization when interface batching is enabled because packets are processed in batches resulting in more efficient cache usage.

Configuring the Media Type

Before configuring the Gigabit Ethernet interface on the Cisco 892F ISRs, you must first select the media type as either SFP or RJ45.

To configure the media type, perform the following steps, beginning in global configuration mode:

SUMMARY STEPS

1. **interface** type number
2. **media-type** {sfp | rj45}
3. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	interface type number Example: <pre>Router(config)# interface gigabitethernet 0</pre>	Enters the configuration mode for a Gigabit Ethernet WAN interface on the router.
Step 2	media-type {sfp rj45} Example: <pre>Router(config-if)# media-type sfp</pre> Example: OR Example: <pre>Router(config-if)# media-type rj45</pre>	Specifies an SFP physical connection. OR Specifies an RJ-45 physical connection.
Step 3	exit Example: <pre>Router(config-if)# exit</pre>	Exits configuration mode for the Gigabit Ethernet interface and returns to global configuration mode.

Configuring a Gigabit Ethernet WAN Interface

To configure the Gigabit Ethernet (GE) WAN interface on a Cisco 891, 892, or 860VAE ISR, perform these steps, beginning in global configuration mode:

SUMMARY STEPS

1. **interface** type number
2. **ip address** ip-address mask
3. **no shutdown**
4. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	interface type number Example: Router(config)# interface gigabitethernet 1	Enters the configuration mode for a Gigabit Ethernet WAN interface on the router.
Step 2	ip address ip-address mask Example: Router(config-if)# ip address 192.168.12.2 255.255.255.0	Sets the IP address and subnet mask for the specified Gigabit Ethernet interface.
Step 3	no shutdown Example: Router(config-if)# no shutdown	Enables the Ethernet interface, changing its state from administratively down to administratively up.
Step 4	exit Example: Router(config-if)# exit Example: Router(config)#	Exits configuration mode for the Gigabit Ethernet interface and returns to global configuration mode.

Configuring a V.92 Modem Interface

The Cisco 891 ISR has a V.92 modem backup interface. To configure this interface, perform these steps, beginning in global configuration mode:

SUMMARY STEPS

1. **interface** type number
2. **ip address ip-address mask**
3. **encapsulation** *ppp*
4. **dialer in-band**
5. **dialer string** *dial-string*
6. **dialer-group** *group-number*
7. **async mode dedicated**
8. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p>interface type number</p> <p>Example: </p> <p>Example: Router(config)# interface async 1</p>	Enters the configuration mode for a V.92 WAN interface (serial interface) on the router.
Step 2	<p>ip address ip-address mask</p> <p>Example: </p> <p>Example: Router(config-if)# ip address 192.168.12.2 255.255.255.0</p>	Sets the IP address and subnet mask for the specified V.92 interface.
Step 3	<p>encapsulation ppp</p> <p>Example: </p> <p>Example: Router(config-if)# encapsulation ppp</p>	Sets the encapsulation method to point-to-point protocol (PPP) for the serial interface.
Step 4	<p>dialer in-band</p> <p>Example: </p> <p>Example: Router(config-if)# dialer in-band</p>	Specifies that dial-on-demand routing (DDR) is supported.
Step 5	<p>dialer string dial-string</p> <p>Example: </p> <p>Example: Router(config-if)# dialer string 102</p>	Specifies the string (telephone number) to be used when placing a call from the interface.
Step 6	<p>dialer-group group-number</p> <p>Example: </p>	Configures the interface to belong to a specific dialing access group.

	Command or Action	Purpose
	Example: <pre>Router(config-if)# dialer-group 1</pre>	
Step 7	async mode dedicated Example: <pre> </pre> Example: <pre>Router(config-if)# async mode dedicated</pre>	Places the line into dedicated asynchronous mode using Serial Line Internet Protocol (SLIP) or PPP encapsulation.
Step 8	exit Example: <pre> </pre> Example: <pre>Router(config-if)# exit</pre> Example: <pre>Router(config)#</pre>	Exits configuration mode for the V.92 interface and returns to global configuration mode.

Configuring a VDSL2 WAN Interface

The VDSL2 WAN interface is used on the Cisco 887V ISR platforms. Note that the VDSL2 WAN interface uses Ethernet as the Layer 2 transport mechanism.

To configure VDSL2 on the Cisco 887V ISR, perform these steps, beginning in global configuration mode:

SUMMARY STEPS

1. **controller** *vdsl 0*
2. **interface** type number
3. **ip address** ip-address mask
4. **shutdown**
5. **no shutdown**
6. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p>controller <i>vdsl 0</i></p> <p>Example: </p> <p>Example: Router(config)# controller vdsl 0</p>	<p>Enters controller configuration mode and the controller number.</p> <p>Note There is no need to configure any VDSL2 parameters from CPE side. Any specific VDSL2 settings should be set on the DSLAM side.</p>
Step 2	<p>interface type number</p> <p>Example: </p> <p>Example: Router(config)# interface ethernet 0</p>	<p>Enters the configuration mode for Ethernet Layer 2 transport on the VDSL WAN interface on the router.</p>
Step 3	<p>ip address ip-address mask</p> <p>Example: </p> <p>Example: Router(config-if)# ip address 192.168.12.2 255.255.255.0</p>	<p>Sets the IP address and subnet mask for the interface.</p>
Step 4	<p>shutdown</p> <p>Example: </p> <p>Example: Router(config-if)# shutdown</p>	<p>Disables the interface, changing its state from administratively up to administratively down.</p>
Step 5	<p>no shutdown</p> <p>Example: </p> <p>Example: Router(config-if)# no shutdown</p>	<p>Enables the interface, changing its state from administratively down to administratively up.</p>
Step 6	<p>exit</p> <p>Example: </p>	<p>Exits configuration mode and returns to global configuration mode.</p>

	Command or Action	Purpose
	Example: Router(config-if)# exit	

Configuring ADSL or VDSL on Cisco 860VAE and 880VA Multimode ISRs

This section contains the following topics:

Overview of Cisco 860VAE, 886VA, and 887VA Multimode ISRs

The Cisco customer premise equipment (CPE) Cisco 866VAE, 867VAE, 866VAE-K9, 867VAE-K9, 886VA and 887VA integrated services routers (ISRs) support asymmetric digital subscriber line (ADSL) 1/2/2+ and very high speed digital subscriber line 2 (VDSL2) transmission modes, also called multimode.



Note


The 866VAE and 886VA support xDSL over ISDN. The 867VAE and 887VA support xDSL over a plain old telephone system (POTS).

The default CPE operating mode is auto. Auto mode means that the CPE trains up to the mode configured on the digital subscriber line access multiplexer (DSLAM), ADSL1/2/2+, or VDSL2.

The following examples assume the DSLAM is configured in either ADSL2+ mode or VDSL2 mode, and the CPE is configured in auto mode.

Figure 1: Example Topology, on page 16 shows an ATM WAN or Ethernet WAN network topography.

Figure 1: Example Topology

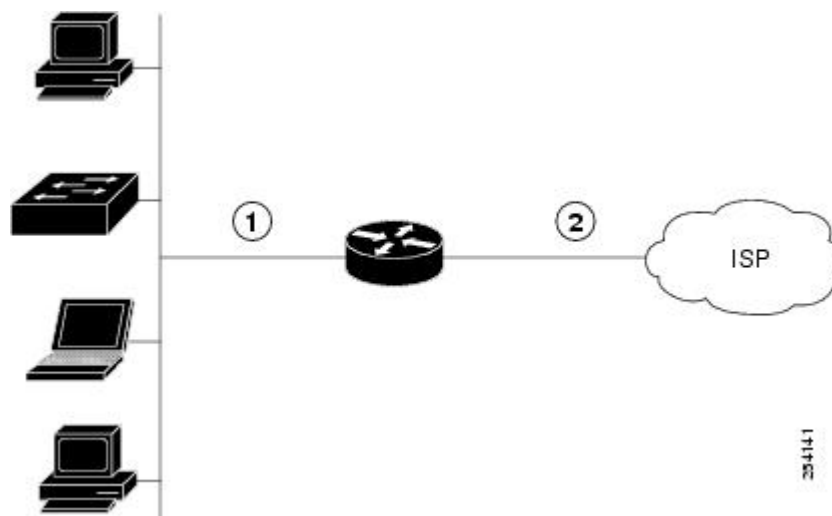

1	Fast Ethernet LAN interface or Gigabit Ethernet LAN interface	2	ATM WAN interface—ADSL 1/2/2+ mode or Ethernet WAN Interface—VDSL2 mode
---	--	---	--



Note A DSLAM in Layer 1 mode may be configured for auto mode. A DSLAM in Layer 2 mode must be configured for ATM mode or packet transfer mode (PTM).



Note Cisco 886VA and 887VA allow a maximum of four permanent virtual circuits (PVCs).



Note Cisco 866VAE, Cisco 867VAE, Cisco 866VAE-K9, and Cisco 867VAE-K9 ISRs allow a maximum of two PVCs.

ADSL2/2+ Annex M Mode on Over POTS VDSL2/ADSL Multimode Annex A SKUs

Annex M is an enhancement of the G.992.3 standard that doubles the upstream bandwidth by "borrowing" 32 additional tones from the downstream frequency range. This feature enables service providers to provision symmetric data rates for ADSL2 and ADSL2+ services with data rates up to 2 Mbps.

Cisco IOS Release 15.2(1)T adds support for enabling Annex M data structures on Cisco 887VA platforms and Annex A data structures on Cisco 887VA-M platforms. This feature allows both Annex A and Annex M structures to be run on the same platform with a performance tradeoff for the annex that is not optimized for the device. With this feature implementation, the modes supported on Annex A platforms are the same as the modes supported on Annex M platforms (887VA-M and EHWIC-1DSL-VA-M). When digital subscriber line access multiplexer (DSLAM) supports Annex M, Annex M mode takes precedence over Annex A mode.



Note Cisco 867VAE and 867VAE-K9 require Cisco IOS Release 15.1(4)M2 or 15.2(2)T or later to use this feature.

For information on configuring Annex M data structures on Annex A platforms, see the, [Enabling ADSL2/2+ Annex M Mode on Over POTS VDSL2/ADSL Multimode Annex A SKUs](#), on page 30.

Configuring Seamless Rate Adaption

ADSL connections can be dropped due to a number of reasons, such as crosstalk, changes in noise margin, temperature changes, or interference. ADSL2 addresses these problems by adapting the data rate in real-time. Seamless rate adaptation (SRA) enables the ADSL2 system to change the data rate of the connection during operation without any service interruption or bit errors.

**Note**

These features are not currently available on the 866VAE, 867VAE, 866VAE-K9, and 867VAE-K9.

For information on configuring SRA, see the [Enabling Seamless Rate Adaption](#), on page 31.

Configuring UBR+

UBR is typically used for data communications applications, such as file transfer and email. UBR is a best effort service and is the lowest class of service in the hierarchy. There are no guarantees to the actual bandwidth allowed. Therefore, UBR virtual circuits (VCs) are susceptible to a large number of cell drops or a high cell transfer delay as cells move from the source to the destination. UBR has no bounds on Cell Delay Variation Tolerance (CDVT) and is only a best effort service.

UBR+ is a special ATM service class developed by Cisco. UBR defines only peak cell rate (PCR); however, UBR+ defines a minimum guaranteed cell rate (MCR) and (on the switch) a cell delay variation tolerance (CDVT).

**Note**

On Cisco IOS versions 15.2(1)T and later, UBR+ is compatible with Cisco Multimode 886VA and 887VA routers.

**Note**

These features are not currently available on the 866VAE, 867VAE, 866VAE-K9, and 867VAE-K9.

For information on configuring UBR+, see the [Configuring UBR+](#), on page 33.

Configuring ADSL Mode

Configuration tasks

Perform the following tasks to configure ADSL mode:

Configuring ADSL Auto Mode

Perform these steps to configure the DSL controller to auto mode, starting in global configuration mode.

**Note**

Configure the DSLAM in ADSL 1/2/2+ mode prior to configuring the router.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. controller vdsl slot
4. operating mode {**auto** | **adsl1** | **adsl2** | **adsl2+** | **vdsl2** | **ansi**}
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: <pre>Router> enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: <pre>Router# configure terminal</pre>	Enters global configuration mode.
Step 3	controller vdsl slot Example: <pre> </pre> Example: <pre>Router(config)# controller vdsl 0</pre>	Enters config mode for the VDSL controller.
Step 4	operating mode {auto adsl1 adsl2 adsl2+ vdsl2 ansi} Example: <pre> </pre> Example: <pre>Router(config-controller)# operating mode auto</pre>	Configures the operating mode. The default is auto and is recommended. Note When configured in auto, the operating mode does not appear in the show running command.
Step 5	end Example: <pre> </pre> Example: <pre>Router(config-controller)# end</pre> Example: <pre>Router#</pre>	Exits the configuration mode and enters EXEC mode. Note A reload is required after changing mode between adsl and vdsl for Cisco 866VAE, Cisco 867VAE, Cisco 866VAE-K9, and Cisco 867VAE-K9.

Configuring CPE and Peer for ADSL Mode

When configuring for ADSL, the ATM main interface or ATM sub-interface must be configured with a PVC and an IP address, perform a no shutdown command on the interface if needed.

Configuring the ATM CPE side

Perform the following steps to configure the ATM CPE side, starting in global configuration mode.

SUMMARY STEPS

1. interface type number
2. no shutdown
3. interface atm0.1 point-to-point
4. ip address ip-address mask
5. pvc [name] vpi/vci
6. protocol protocol {protocol-address [virtual-template] | inarp} [[no] broadcast | disable-check-subnet | [no] enable-check-subnet]
7. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	interface type number Example: Router(config)# interface atm0	Enters configuration mode for the ATM WAN interface (ATM0).
Step 2	no shutdown Example: Router(config-if)# no shutdown	Enables the configuration changes to the ATM interface.
Step 3	interface atm0.1 point-to-point Example: Router(config-if)# interface ATM0.1 point-to-point Example: Router(config-subif)#	Enables ATM0.1 point-to-point interface.
Step 4	ip address ip-address mask Example: Router(config-subif)# ip address 30.0.0.1 255.255.255.0	Enters IP address and subnet mask.
Step 5	pvc [name] vpi/vci Example: Router(config-subif)# pvc 13/32	Creates or assigns a name to an ATM PVC and enters the ATM virtual circuit configuration mode.

	Command or Action	Purpose
Step 6	<p>protocol protocol {protocol-address [virtual-template] inarp} [[no] broadcast disable-check-subnet [no] enable-check-subnet]</p> <p>Example:</p> <pre>Router(config-if-atm-vc)# protocol ip 30.0.0.2 broadcast</pre>	Configures a static map for an ATM PVC.
Step 7	<p>end</p> <p>Example:</p> <pre>Router(config-if-atm-vc)# end Router#</pre>	Exits the configuration mode and enters EXEC mode.

Configuring the ATM Peer side

Perform the following steps to configure the ATM peer side, starting in global configuration mode.

SUMMARY STEPS

1. interface type number
2. no shutdown
3. interface atm0.1 point-to-point
4. ip address ip-address mask
5. pvc [name] vpi/vci
6. **protocol protocol {protocol-address [virtual-template] | inarp} [[no] broadcast | disable-check-subnet | [no] enable-check-subnet]**
7. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p>interface type number</p> <p>Example:</p> <pre>Router(config)# interface atm0</pre>	Enters configuration mode for the ATM WAN interface (ATM0).
Step 2	<p>no shutdown</p> <p>Example:</p> <pre>Router(config-if)# no shutdown</pre>	Enables the configuration changes to the ATM interface.

	Command or Action	Purpose
Step 3	interface atm0.1 point-to-point Example: Router(config-if)# interface ATM0.1 point-to-point	Enables the ATM0.1 point-to-point interface.
Step 4	ip address ip-address mask Example: Router(config-subif)# ip address 30.0.0.2 255.255.255.0	Enters IP address and subnet mask.
Step 5	pvc [name] vpi/vci Example: Router(config-subif)# pvc 13/32	Creates or assigns a name to an ATM PVC and enters the ATM virtual circuit configuration mode.
Step 6	protocol protocol {protocol-address [virtual-template] inarp} [[no] broadcast disable-check-subnet [no] enable-check-subnet] Example: Router(config-if-atm-vc)# protocol ip 30.0.0.1 broadcast	Configures a static map for an ATM PVC.
Step 7	end Example: Router(config-if-atm-vc)# end	Exits the configuration mode and enters EXEC mode.

ADSL Configuration Example

The following example shows a typical ADSL2+ configuration set to auto mode. Outputs in bold are critical.

```

Router# show running
Building configuration...
Current configuration : 1250 bytes
!
! Last configuration change at 02:07:09 UTC Tue Mar 16 2010
!
version 15.1
no service pad
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
!
hostname Router
!
boot-start-marker
boot-end-marker
!
!
```

```
no aaa new-model
memory-size iomem 10
ip source-route
!
!
!
ip cef
no ipv6 cef
!
!
!
license udi pid CISCO887-V2-K9 sn FHK1313227E
license boot module c880-data level advipservices
!
!
vtp domain cisco
vtp mode transparent
!
!
controller VDSL 0
!
vlan 2-4
!
!
!
!
interface Ethernet0
 no ip address
 shutdown
 no fair-queue
!
interface BRI0
 no ip address
 encapsulation hdlc
 shutdown
 isdn termination multidrop
!
interface ATM0
 no ip address
 no atm ilmi-keepalive
!
interface ATM0.1 point-to-point
 ip address 30.0.0.1 255.255.255.0
 pvc 15/32
  protocol ip 30.0.0.2 broadcast
!
!
interface FastEthernet0
!
interface FastEthernet1
!
interface FastEthernet2
!
interface FastEthernet3
!
interface Vlan1
 no ip address
!
ip forward-protocol nd
no ip http server
no ip http secure-server
!
!
!
!
!
!
control-plane
!
```

```

!
line con 0
  no modem enable
line aux 0
line vty 0 4
  login
  transport input all
!
exception data-corruption buffer truncate
end

```

Verifying ADSL Configuration

Verify that the configuration is set properly by using the `show controller vdsl 0` command from the privileged EXEC mode. Outputs in bold are critical.

```

Router# show controller vdsl 0
Controller VDSL 0 is UP
Daemon Status:
                Up
                XTU-R (DS)                XTU-C (US)
Chip Vendor ID:   'BDCM'                'BDCM'
Chip Vendor Specific: 0x0000            0x6110
Chip Vendor Country: 0xB500            0xB500
Modem Vendor ID:  'CSCO'                'BDCM'
Modem Vendor Specific: 0x4602            0x6110
Modem Vendor Country: 0xB500            0xB500
Serial Number Near: FHK1313227E 887-V2-K 15.1(20100
Serial Number Far:
Modem Version Near: 15.1(20100426:193435) [changahn
Modem Version Far:  0x6110
Modem Status:      TC Sync (Showtime!)
DSL Config Mode:   AUTO
Trained Mode:      G.992.5 (ADSL2+) Annex A
TC Mode:           ATM
Selftest Result:   0x00
DELT configuration: disabled
DELT state:        not running
Trellis:           ON
Line Attenuation:  1.0 dB                1.4 dB
Signal Attenuation: 1.0 dB                0.0 dB
Noise Margin:      6.8 dB                13.6 dB
Attainable Rate:   25036 kbits/s          1253 kbits/s
Actual Power:      13.7 dBm              12.3 dBm
Total FECS:        0                    0
Total ES:          0                    0
Total SES:         0                    0
Total LOSS:        0                    0
Total UAS:         0                    0
Total LPRS:        0                    0
Total LOFS:        0                    0
Total LOLS:        0                    0
Bit swap:          163                   7
Full inits:        32
Failed full inits: 0
Short inits:       0
Failed short inits: 0
Firmware           Source                File Name (version)
-----
VDSL                embedded          VDSL_LINUX_DEV_01212008 (1)
Modem FW Version:   100426 1053-4.02L.03.A2pv6C030f.d22j
Modem PHY Version:  A2pv6C030f.d22j

```

	DS Channel1	DS Channel0	US Channel1	US Channel0
Speed (kbps):	0	24184	0	1047
Previous Speed:	0	24176	0	1047
Total Cells:	0	317070460	0	13723742
User Cells:	0	0	0	0
Reed-Solomon EC:	0	0	0	0
CRC Errors:	0	0	0	0
Header Errors:	0	0	0	0
Interleave (ms):	0.00	0.08	0.00	13.56


```
Actual INP:          0.00          0.00          0.00          1.80
Training Log : Stopped
Training Log Filename : flash:vdslllog.bin
```

Verifying CPE to Peer Connection for ADSL

Ping the peer to confirm that CPE to peer configuration is set up correctly.

```
Router# ping 30.0.0.2 rep 20
Type escape sequence to abort.
Sending 20, 100-byte ICMP Echos to 30.0.0.2, timeout is 2 seconds:
!!!!!!!!!!!!!!!!!!!!!!
Success rate is 100 percent (20/20), round-trip min/avg/max = 20/22/28 ms
Router#
```

Configuring VDSL Mode

Configuration tasks

Perform the following tasks to configure VDSL mode:

Configuring VDSL Auto Mode

Perform the following steps to configure the DSL controller to auto mode, starting in global configuration mode.



Note Configure the DSLAM in VDSL2 mode prior to configuring the router.

SUMMARY STEPS

1. controller vdsl slot
2. operating mode {auto | adsl1 | adsl2 | adsl2+ | vdsl2 | ansi}
3. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	controller vdsl slot Example: Router(config)# controller vdsl 0	Enters config mode for the VDSL controller.
Step 2	operating mode {auto adsl1 adsl2 adsl2+ vdsl2 ansi} Example: Router(config-controller)# operating mode auto	Configures the operating mode. The default is auto and is recommended. Note When configured in auto, the operating mode does not appear in the show running command.

	Command or Action	Purpose
Step 3	end Example: <pre>Router(config-controller)# end Router#</pre>	Exits the configuration mode and enters EXEC mode. Note A reload is required after changing the mode on the Cisco 866VAE, Cisco 867VAE, Cisco 866VAE-K9, and Cisco 867VAE-K9.

Configuring CPE and Peer for VDSL Mode

When configuring VDSL, configure the ethernet 0 interface and perform a no shutdown command on the interface if needed. Start in the global configuration mode.

Configuring the VDSL CPE Side

Perform the following steps to configure the VDSL CPE side, starting in the global configuration mode.

SUMMARY STEPS

1. interface type number
2. ip address ip-address mask
3. no shutdown
4. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	interface type number Example: <pre>Router(config)# interface ethernet0</pre>	Enters configuration mode for the Ethernet interface 0.
Step 2	ip address ip-address mask Example: <pre>Router(config-if)# ip address 90.0.0.1 255.255.255.0</pre>	Enters the IP address and subnet mask.
Step 3	no shutdown Example: <pre>Router(config-if)# no shutdown</pre>	Enables the configuration changes to the ip address and subnet mask.

	Command or Action	Purpose
Step 4	end Example: Router(config-if)# end	Exits the configuration mode and enters EXEC mode.

Configuring the VDSL Peer Side

Perform the following steps to configure the VDSL Peer side, starting in the global configuration mode.

SUMMARY STEPS

1. interface type number
2. ip address ip-address mask
3. no shutdown
4. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	interface type number Example: Router(config)# interface ethernet0	Enters configuration mode for the Ethernet interface 0.
Step 2	ip address ip-address mask Example: Router(config-if)# ip address 90.0.0.2 255.255.255.0	Configures the IP address and subnet mask.
Step 3	no shutdown Example: Router(config-if)# no shutdown	Enables the configuration changes to the IP address and subnet mask.
Step 4	end Example: Router(config-if)# end	Exits the configuration mode and enters EXEC mode.

VDSL Configuration Example

The following example shows a typical output of a VDSL configuration. Outputs in bold are critical.

```

Router# show running
Building configuration...
Current configuration : 1250 bytes
!
! Last configuration change at 02:07:09 UTC Tue Mar 16 2010
!
version 15.1
no service pad
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
!
hostname Router
!
boot-start-marker
boot-end-marker
!
!
no aaa new-model
memory-size iomem 10
ip source-route
!
!
!
!
ip cef
no ipv6 cef
!
!
!
license udi pid CISCO887-V2-K9 sn FHK1313227E
license boot module c880-data level advipservices
!
!
vtp domain cisco
vtp mode transparent
!
!
controller VDSL 0
!
vlan 2-4
!
!
!
!
interface Ethernet0
ip address 30.0.0.1 255.255.255.0
no fair-queue
!
interface BRI
no ip address
encapsulation hdlc
shutdown
isdn termination multidrop
!
interface ATM0
no ip address
shutdown
!
!
interface FastEthernet0
!
interface FastEthernet1
!

```

```

interface FastEthernet2
!
interface FastEthernet3
!
interface Vlan1
 no ip address
!
ip forward-protocol nd
no ip http server
no ip http secure-server
!
!
!
!
!
!
!
!
control-plane
!
!
line con 0
 no modem enable
line aux 0
line vty 0 4
 login
 transport input all
!
exception data-corruption buffer truncate
end

```

Verifying VDSL Configuration

Verify the configuration is set properly by using the `show controller vdsl 0` command from privileged EXEC mode. Outputs in bold are critical.

```

Router# show controller vdsl 0
Controller VDSL 0 is UP
Daemon Status:      Up
                   XTU-R (DS)           XTU-C (US)
Chip Vendor ID:    'BDCM'                'BDCM'
Chip Vendor Specific: 0x0000             0x0000
Chip Vendor Country: 0xB500             0xB500
Modem Vendor ID:   'CSCO'                'BDCM'
Modem Vendor Specific: 0x4602           0x0000
Modem Vendor Country: 0xB500           0xB500
Serial Number Near: FHK1313227E 887-V2-K 15.1(20100
Serial Number Far:
Modem Version Near: 15.1(20100426:193435) [changahn
Modem Version Far:  0x0000
Modem Status:      TC Sync (Showtime!)
DSL Config Mode:   AUTO
Trained Mode:      G.993.2 (VDSL2) Profile 12a
TC Mode:           PTM
Selftest Result:   0x00
DELT configuration: disabled
DELT state:        not running
Trellis:           ON                    OFF
Line Attenuation:  1.0 dB                 0.0 dB
Signal Attenuation: 1.0 dB                 0.0 dB
Noise Margin:      12.0 dB                9.5 dB
Attainable Rate:   87908 kbits/s          50891 kbits/s
Actual Power:      13.5 dBm               8.9 dBm
Per Band Status:   D1    D2    D3    U0    U1    U2    U3
Line Attenuation(dB): 0.9  2.3  N/A  7.2  2.9  7.0  N/A
Signal Attenuation(dB): 0.9  2.3  N/A  N/A  2.3  6.6  N/A
Noise Margin(dB):    14.5  9.3  N/A  N/A  N/A  N/A  N/A
Total FECS:         0      0
Total ES:           0      0
Total SES:          0      0
Total LOSS:         0      0

```

```

Total UAS:          0          0
Total LPRS:         0          0
Total LOFS:         0          0
Total LOLS:         0          0
Bit swap:           1          0
Full inits:         33
Failed full inits:  0
Short inits:        0
Failed short inits: 0
Firmware           Source      File Name (version)
-----
VDSL               embedded   VDSL_LINUX_DEV_01212008 (1)
Modem FW Version:  100426_1053-4.02L.03.A2pv6C030f.d22j
Modem PHY Version: A2pv6C030f.d22j
Speed (kbps):      0          84999          0          48968
Previous Speed:    0          24184          0          1047
Reed-Solomon EC:   0          0              0          0
CRC Errors:        0          0              0          0
Header Errors:     0          0              0          0
Interleave (ms):   0.00        6.00          0.00        0.00
Actual INP:        0.00        0.00          0.00        0.00
Training Log :     Stopped
Training Log Filename : flash:vdsllog.bin
Router#

```

Verifying CPE to Peer Connection for VDSL

Ping the peer to confirm that CPE to peer configuration is setup correctly.

```

Router# ping 30.0.0.2 rep 20
Type escape sequence to abort.
Sending 20, 100-byte ICMP Echos to 30.0.0.2, timeout is 2 seconds:
!!!!!!!!!!!!!!!!!!!!!!
Success rate is 100 percent (20/20), round-trip min/avg/max = 20/22/28 ms
Router#

```

Enabling ADSL2/2+ Annex M Mode on Over POTS VDSL2/ADSL Multimode Annex A SKUs



Note This feature requires Cisco IOS Release 15.2(1)T or a later.



Note Cisco 867VAE and 867VAE-K9 require Cisco IOS Release 15.1(4)M2 or 15.2(2)T or later to use this feature.

Configuring ADSL2/2+ Annex M mode on Over POTS VDSL2/ADSL Multimode Annex A SKUs.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **controller vdsl 0**
4. **operating mode {adsl1 | adsl2 annex a | annex m | adsl2+ annex a | annex m} | ansi | auto | vdsl2}**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	controller vdsl 0	Enters configuration mode for the VDSL controller.
Step 4	operating mode { adsl1 adsl2 annex a annex m adsl2+ annex a annex m ansi auto vdsl2 } Example: Router(config-controller)# operating mode adsl2+ annex m	adsl1—Configures operation in ITU G.992.1 Annex A full-rate mode. adsl2—Configures operation in ADSL2 operating mode-ITU G.992.3 Annex A, Annex L, and Annex M. If an Annex operating mode is not chosen, Annex A, Annex L, and Annex M are enabled. The final mode is decided by negotiation with the DSL access multiplexer (DSLAM). adsl2+—Configures operation in ADSL2+ mode-ITU G.992.5 Annex A and AnnexM. If an Annex A operating mode is not chosen, both Annex and Annex M is enabled. The final mode is decided by negotiation with DSLAM. ansi—Configures a router to operate in ANSI full-rate mode-ANSI T1.413. auto—Default setting. Configures the router so that the DSLAM automatically picks the DSL operating mode, in the sequence described in the "Usage Guidelines" section. All supported modes are enabled. vdsl2—Configures operation in ITU G.993.2 mode. annex a, m—(Optional) If the annex option is not specified, both Annex A and Annex M are enabled. The final mode is decided by negotiation with the Digital Synchronous Line Access Multiplexer (DSLAM).

Enabling Seamless Rate Adaption

To enable SRA, perform the following steps.



Note

SRA mode is disabled by default.



Note

SRA requires Cisco IOS Release 15.2(1)T or a later release.

**Note**

These features are not currently available on the Cisco 866VAE, 867VAE, 866VAE-K9, or 867VAE-K9.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **controller vdsl x/y/z**
4. **sra**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router# enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	controller vdsl x/y/z Example: Router(config)# controller vdsl 0/0/0	Enters controller configuration mode. Use the controller vdsl command in global configuration mode. This command does not have a no form. x—Defines the network module. y—Defines the slot number. z—Defines the port number.
Step 4	sra Example: router(config-controller)# sra	Enables SRA mode. Use the no form of the command to disable SRA.

Example Configuration: Seamless Rate Adaption

The following example enables SRA on a VDSL line:

```

!
!
!
router>enable
router# configure terminal

```



```

Enter configuration commands, one per line. End with CNTL/Z
router(config)# controller vdsl 0
router(config-controller)# sra
router(config-controller)# end
router#
!
!
!

```

Configuring UBR+

Perform the following steps to configure UBR+.


Note

Cisco IOS Release 15.2(1)T or a later release is required to run UBR+ on Cisco 886VA, 887VA, and 887VA-M routers.


Note

These features are not currently available on the Cisco 866VAE, 867VAE, 866VAE-K9, or 867VAE-K9.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ubr+ output-pcr output-mcr [input-pcr] [input-mcr]**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	ubr+ output-pcr output-mcr [input-pcr] [input-mcr] Example: Router(config-if-vc)# ubr+ 10000 3000 9000 1000	Configures unspecified bit rate (UBR) quality of service (QoS) and specifies the output peak cell rate and output minimum guaranteed cell rate for an ATM permanent virtual circuit (PVC), PVC range, switched virtual circuit (SVC), virtual circuit (VC) class, or VC bundle member. To remove the UBR+ parameters, use the no form of this command. output-pcr—The output peak cell rate (PCR) in kbps. output-mcr—The output minimum guaranteed cell rate in kbps. input-pcr—(Optional for SVCs only) The input PCR in kbps. If this value is omitted, the input-pcr equals the output-pcr.

	Command or Action	Purpose
		input-mcr—(Optional for SVCs only) The input minimum guaranteed cell rate in kbps. If this value is omitted, the input-mcr equals the output-mcr.

UBR+ Example

The following example configures UBR+ PVC on a DSL line:

```
interface atm 0/0
 pvc 4/100
 ubr+ 2304 2304
```

The following example specifies the output-pcr argument for an ATM PVC to be 100000 kbps and the output-mcr to be 3000 kbps:

```
pvc 1/32
ubr+ 100000 3000
```

The following example specifies the output-pcr, output-mcr, input-pcr, and input-mcr arguments for an ATM SVC to be 10000 kbps, 3000 kbps, 9000 kbps, and 1000 kbps, respectively:

```
svc lion nsap 47.0091.81.000000.0040.0B0A.2501.ABC1.3333.3333.05
ubr+ 10000 3000 9000 1000
```

Troubleshooting

There are no new commands for checking traffic on the Cisco 886VA and 887VA. Some helpful commands include the following **show** commands:

- show interface Ethernet0
- show interface ATM0
- show interface summary
- show controller vdsl 0
- show controller atm0
- show controller vdsl 0 datapath
- show atm pvc

The “[Cisco 860, Cisco 880, and Cisco 890 Series Integrated Services Routers Software Configuration Guide, Troubleshooting](#)” section may also be helpful.

Configuring the Training Log Using the CLI

When you initiate the training log capture using the **debug vdsl 0 training log** on the Cisco 866VAE, Cisco 867VAE, Cisco 866VAE-K9, and Cisco 867VAE-K9 ISRs, the training log file opens. Any messages that are generated are buffered locally and are written to the training log file at 5k bytes per interval. The messages are not written all at one time, as in previous software versions that supported the training log capture feature.



Note

A maximum log capacity of 8MB (approximately 1 hour of capture) exists on the Cisco 866VAE, Cisco 867VAE, Cisco 866VAE-K9, and Cisco 867VAE-K9 ISRs. Because of this capacity limitation, when the entire log collection exceeds 8MB, the log capture is automatically terminated.



Note

Cisco 866VAE, Cisco 867VAE, Cisco 866VAE-K9, and Cisco 867VAE-K9 ISRs do not support the continuous training log autostop feature.

Capturing the Training Log

By default the training log is saved to flash:vdsllog.bin.

To start the training log capture, use the `debug vdsl 0 training log` command.

```
Router# debug vdsl 0 training log
Router#
```

The following confirmation is displayed:

```
Training log generation started for VDSL 0
```

Halting the Training Log Capture

To stop the training log capture, use the `no debug vdsl 0 training log` command.

```
Router# no debug vdsl 0 training log
Router#
```

The following confirmation is displayed:

```
Training Log file for VDSL written to flash:vdsllog.bin
```

Displaying the Training Log Status and File Location

To display the training log status and file location, use the `show controller vdsl 0` command.

```
Router# show controller vdsl 0
Router#
```

The following confirmation is displayed:

```
Controller VDSL 0 is UP
```

```
Daemon Status:          NA
```

```
Chip Vendor ID:         XTU-R (DS)          XTU-C (US)
                        'BDCM'              'BDCM'
```

```

Chip Vendor Specific: 0x0000          0x938C
Chip Vendor Country: 0xB500          0xB500
Modem Vendor ID:      'CSCO'         'BDCM'
Modem Vendor Specific: 0x4602        0x938C
Modem Vendor Country: 0xB500        0xB500
Serial Number Near:   GMH1049001M 867VAE-K 15.1(20110
Serial Number Far:
Modem Version Near:   15.1(20110422:230431) [suguraja
Modem Version Far:    0x938C

Modem Status:         TC Sync (Showtime!)
DSL Config Mode:      AUTO
Trained Mode:         G.992.5 (ADSL2+) Annex A
TC Mode:              ATM
Selftest Result:      0x00
DELT configuration:   disabled
DELT state:           not running
Trellis:              ON              ON
Line Attenuation:     0.0 dB           0.0 dB
Signal Attenuation:   0.0 dB           0.0 dB
Noise Margin:         16.0 dB          14.6 dB
Attainable Rate:      28516 kbits/s    1222 kbits/s
Actual Power:         7.0 dBm          12.4 dBm
Total FECS:           3                0
Total ES:             0                0
Total SES:            0                0
Total LOSS:           0                0
Total UAS:            147              147
Total LPRS:           0                0
Total LOFS:           0                0
Total LOLS:           0                0
Bit swap:             0                0

Full inits:           1
Failed full inits:    0
Short inits:          0
Failed short inits:   0

```

```

Firmware      Source      File Name (version)
-----
VDSL          embedded    (0)

```

```

Modem FW Version: 23a
Modem PHY Version: A2pv6C032b.d23a

```

	DS Channel1	DS Channel0	US Channel1	US Channel0
Speed (kbps):	0	24543	0	1020
Previous Speed:	0	0	0	0
Total Cells:	0	87837567	0	3652502
User Cells:	0	0	0	0
Reed-Solomon EC:	0	3	0	0
CRC Errors:	0	0	0	0
Header Errors:	0	0	0	0
Interleave (ms):	0.00	15.00	0.00	3.76
Actual INP:	0.00	57.00	0.00	0.50

```

Training Log : Stopped
Training Log Filename : flash:vdsllog.bin

```

Configuring a G.SHDSL WAN Interface in ATM mode

Perform the following steps to configure G.SHDSL on the Cisco 888 ISR perform these steps, beginning in global configuration mode.

SUMMARY STEPS

1. **controller dsl** *slot/port*
2. **mode atm**
3. **line-term cpe**
4. **line-mode 4 wire standard**
5. **line-rate** {*auto* | *rate*}
6. **interface atm** *interface-number*
7. **ip-address** *ip-address*
8. **load-interval** *seconds*
9. **no atm ilmi-keepalive** [*seconds*]
10. **pvc** [*name*] *vpi/vci*
11. **protocol** *protocol protocol-address* **broadcast**
12. **encapsulation** [*encapsulation-type*]

DETAILED STEPS

	Command or Action	Purpose
Step 1	controller dsl <i>slot/port</i> Example: Router(config)# controller dsl 0	Enters controller configuration mode and the controller number.
Step 2	mode atm Example: Router(config-ctrl)# mode atm	Enables ATM encapsulation and creates logical ATM interface 0.
Step 3	line-term cpe Example: Router(config-ctrl)# line-term cpe	Enables CPE.
Step 4	line-mode 4 wire standard Example: Router(config-ctrl)# line-mode 4 wire standard	Enables 4 wire operation.
Step 5	line-rate { <i>auto</i> <i>rate</i> }	Specifies the DSL line rate for the SHDSL port. The range is 192 to 2312 kbps. The default is auto (negotiated between the SHDSL port and the DSLAM).
	Example: Router(config-ctrl)# line-rate 4608	Note If different DSL line rates are configured at opposite ends of the DSL uplink, the actual DSL line rate is always the lower rate. Note The maximum peak cell rate is 8 kbps less than the line rate.

	Command or Action	Purpose
Step 6	interface atm <i>interface-number</i> Example: Router(config-ctrl)# interface atm0	Enters ATM configuration mode for interface ATM 0.
Step 7	ip-address <i>ip-address</i> Example: Router(config-ctrl)# ip-address IP-address	Assigns an IP address to the DSL ATM interface.
Step 8	load-interval <i>seconds</i> Example: Router(config-ctrl)# load-interval 3	Assigns a load interval value.
Step 9	no atm ilmi-keepalive [<i>seconds</i>] Example: Router(config-ctrl)# no atm ilmi-keepalive0	Disables Integrated Local Management Interface (ILMI) keepalives. If you enable ILMI keepalives without specifying the number of seconds, the default time interval is 3 seconds.
Step 10	pvc [<i>name</i>] <i>vpi/vci</i> Example: Router(config-ctrl)# pvc 0/35	Enters atm-virtual-circuit (interface-atm-vc) configuration mode, and configures a new ATM PVC by assigning a name (optional) and VPI/VCI numbers. The default traffic shaping is UBR; the default encapsulation is AAL5+LLC/SNAP.
Step 11	protocol <i>protocol protocol-address</i> broadcast Example: Router(config-ctrl)# protocol ip 10.10.10.2 broadcast	Enables IP connectivity and creates a point-to-point IP address for the VC.
Step 12	encapsulation [<i>encapsulation-type</i>] Example: Router(config-ctrl)# encapsulation aal5snap	Configures the ATM adaptation layer (AAL) and encapsulation type. <ul style="list-style-type: none"> • Use the aal2 keyword for AAL2 • Use the aal5ciscoppp keyword for Cisco PPP over AAL5 • Use the aal5mux keyword for AAL5+MUX • Use the aal5nlpid keyword for AAL5+NLPID • Use the aal5snap keyword for AAL5+LLC/SNAP (the default)

Configuration Example: Configuring a G.SHDSL WAN Interface

The following configuration example shows a 4-wire standard G.SHDSL configuration.

```

!
controller DSL 0
 mode atm
  line-term cpe
  line-mode 4-wire standard
  dsl-mode shdsl symmetric annex B
  line-rate 4608
!
interface BRI0
 no ip address
 encapsulation hdlc
 shutdown
 isdn termination multidrop
!
!
interface ATM0
 ip address 10.10.10.1 255.255.255.0
 no atm ilmi-keepalive
 pvc 0/35
  protocol ip 10.10.10.2 broadcast
  encapsulation aal5snap
!
!
interface FastEthernet0
!
interface FastEthernet1
!
interface FastEthernet2
!
interface FastEthernet3
 shutdown
!
interface Vlan1
 ip address 2.15.15.26 255.255.255.0
!
 ip forward-protocol nd
 ip route 223.255.254.254 255.255.255.255 Vlan1
 no ip http server
 no ip http secure-server
!

```

Verifying G.SHDSL WAN Interface Configuration

To verify that you have properly configured the router, enter the show running command and look for controller DSL and interface ATM0 parameters.

```

Router# show running
Building configuration...

Current configuration : 1298 bytes
!
.....

!
controller DSL 0
 mode atm
  line-term cpe
  line-mode 4-wire standard
  dsl-mode shdsl symmetric annex B
  line-rate 4608
!
!
interface ATM0

```

```

ip address 10.10.10.1 255.255.255.0
no atm ilmi-keepalive
pvc 0/31
  protocol ip 10.10.10.5 broadcast
  encapsulation aal5snap
!
```

Configuring a G.SHDSL WAN Interface in EFM mode

To configure G.SHDSL on the Cisco 888E ISR, perform [Configuring Cisco G.SHDSL EFM HWICs in Cisco Routers](#) at:

http://www.cisco.com/en/US/docs/routers/access/interfaces/software/feature/guide/GSHDSL_EFM_HWICS.html

Configuring the Cellular Wireless WAN Interface

The Cisco 880 series and Cisco 810 series ISRs provide a third generation (3G) wireless interface for use over Global System for Mobile Communications (GSM) and code division multiple access (CDMA) networks. The interface is a 34-mm PCMCIA slot for Cisco 880 series.

Its primary application is WAN connectivity as a backup data link for critical data applications. However, the 3G wireless interface can also function as the primary WAN connection for the router.

To configure the 3G cellular wireless interface, follow these guidelines and procedures:

Prerequisites for Configuring the 3G Wireless Interface

The following are prerequisites to configuring the 3G wireless interface:

- You must have wireless service from a carrier, and you must have network coverage where your router will be physically placed. For a complete list of supported carriers, see the data sheet at:

http://www.cisco.com/en/US/prod/routers/networking_solutions_products_genericcontent0900aecd80601f7e.html

- You must subscribe to a service plan with a wireless service provider and obtain a SIM card (GSM modem only) from the service provider.
- You must check your LEDs for signal strength, as described in [Table 4: Front Panel LED Signal Strength Indications](#), on page 41.
- You should be familiar with the Cisco IOS software, beginning with Cisco NX-OS Release 4.1 or later. For Cisco 3G Wireless support, see the Cisco IOS documentation.
- To configure your GSM data profile, you need the following information from your service provider:
 - Username
 - Password
 - Access point name (APN)
- To configure your CDMA data profile for manual activation, you need the following information from your service provider:

- Master Subsidy Lock (MSL) number
- Mobile Directory number (MDN)
- Mobile Station Identifier (MSID)
- Electronic Serial Number (ESN)

Table 4: Front Panel LED Signal Strength Indications

LED	LED Color	Signal Strength
P3G RSSI ¹	Amber	No service available and no RSSI detected
	Solid green	High RSSI (–69 dBm or higher)
	Fast (16 Hz) blinking green	Medium RSSI (–89 to –70 dBm)
	Slow (1 Hz) blinking green	Low to medium RSSI (–99 to –90 dBm), minimum level for a reliable connection
	Off	Low RSSI (less than –100 dBm)

¹ 3G RSSI = 3G receive signal strength indication.

Restrictions for Configuring the Cellular Wireless Interface

The following restrictions apply to configuring the Cisco 3G wireless interface:

- A data connection can be originated only by the 3G wireless interface. Remote dial-in is not supported.
- Because of the shared nature of wireless communications, the experienced throughput varies depending on the number of active users or the amount of congestion in a given network.
- Cellular networks have higher latency than wired networks. Latency rates depend on the technology and carrier. Latency may be higher when there is network congestion.
- VoIP is not currently supported.
- Any restrictions that are part of the terms of service from your carrier also apply to the Cisco 3G wireless interface.
- Cisco 880G ISR does not support online insertion and removal (OIR) of 3G modems. To replace a modem with another modem of the same type, use the Cisco CLI to enter the shutdown command on the cellular interface before you replace the modems. =
- When a 3G modem is removed, the show interface cellular 0, show run, and show version command outputs still display cellular interface related information. The show interface command displays the following message, all other show commands have empty outputs.

```
3G Modem not inserted
```

- You can configure the cellular interface when the 3G modem is removed. However, the configuration is not effective until the 3G modem is inserted. The following message is shown when trying to configure the cellular interface while the modem is absent.

```
Router(config)# interface cellular 0
Warning: 3G Modem is not inserted
Configuration will not be effective until modem is inserted =
```

- Inserting a different type of modem than was previously removed requires configuration changes and you must reload the system.

Data Account Provisioning



Note To provision your modem, you must have an active wireless account with a service provider. A SIM card must be installed in a GSM 3G wireless card.

To provision your data account, follow these procedures:

Verifying Signal Strength and Service Availability

To verify the signal strength and service availability on your modem, use the following commands in privileged EXEC mode.



Note This feature requires Cisco IOS Release 15.2(1)T or a later.



Note Cisco 867VAE and 867VAE-K9 require Cisco IOS Release 15.1(4)M2 or 15.2(2)T or later to use this feature.

SUMMARY STEPS

1. **show cellular 0 network**
2. **show cellular 0 hardware**
3. **show cellular 0 connection**
4. **show cellular 0 radio**
5. **show cellular 0 profile**
6. **show cellular 0 security**
7. **show cellular 0 all**

DETAILED STEPS

	Command or Action	Purpose
Step 1	show cellular 0 network Example: Router# show cellular 0 network	Displays information about the carrier network, cell site, and available service.
Step 2	show cellular 0 hardware Example: Router# show cellular 0 hardware	Displays the cellular modem hardware information.
Step 3	show cellular 0 connection Example: Router# show cellular 0 connection	Displays the current active connection state and data statistics.
Step 4	show cellular 0 radio Example: Router# show cellular 0 radio	Shows the radio signal strength. Note The RSSI should be better than -90 dBm for steady and reliable connection.
Step 5	show cellular 0 profile Example: Router# show cellular 0 profile	Shows information about the modem data profiles created.
Step 6	show cellular 0 security Example: Router# show cellular 0 security	Shows the security information for the modem, such as SIM and modem lock status.
Step 7	show cellular 0 all Example: Router# show cellular 0 all	Shows consolidated information about the modem. The profiles that were created, the radio signal strength, the network security, and so on.

Configuring a GSM Modem Data Profile

To configure or create a new modem data profile, enter the **cellular 0 gsm profile create <profile number> <apn> <authentication> <username> <password>** command in privileged EXEC mode. See [Table 5: Modem Data Profile Parameters](#), on page 44 for details about the command parameters.

Example

```
Router# cellular 0 gsm profile create 3 apn.com chap GSM GSMPassword
```

Table 5: Modem Data Profile Parameters , on page 44 lists the modem data profile parameters.

Table 5: Modem Data Profile Parameters

<i>profile number</i>	Number for the profile that you are creating. You can create up to 16 profiles.
<i>apn</i>	Access point name. You must get this information from your service provider.
<i>authentication</i>	Type of authentication, for example, CHAP, PAP.
<i>username</i>	Username provided by your service provider.
<i>password</i>	Password provided by your service provider.

CDMA Modem Activation and Provisioning

Activation procedures may differ, depending upon your carrier. Consult your carrier, and perform one of the following procedures as appropriate:

- Manual activation
- Activation using over the air service provisioning

Table 6: CDMA Modem Activation and Provisioning, on page 44 lists the activation and provisioning processes supported by different wireless carriers.

Table 6: CDMA Modem Activation and Provisioning

Activation and Provisioning Process	Carrier
Manual Activation using MDN, MSID, MSL	Sprint
OTASP ² Activation	Verizon Wireless
IOTA ³ for Data Profile refresh	Sprint

² OTASP = Over the Air Service Provisioning.

³ IOTA = Internet Over the Air.

Manual Activation



Note

You must have valid mobile directory number (MDN), mobile subsidy lock (MSL), and mobile station identifier (MSID) information from your carrier before you start this procedure.

To configure a modem profile manually, use the following command, beginning in EXEC mode:

```
cellular 0 cdma activate manual mdn msid sid nid msl
```

Besides being activated, the modem data profile is provisioned through the Internet Over the Air (IOTA) process. The IOTA process is initiated automatically when you use the cellular cdma activate manual command.

The following is a sample output from this command:

```
router# cellular 0 cdma activate manual 1234567890 1234567890 1234 12 12345
NAM 0 will be configured and will become Active
Modem will be activated with following Parameters
MDN :1234567890; MSID :1234567890; SID :1234; NID 12:
Checking Current Activation Status
Modem activation status: Not Activated
Begin Activation
Account activation - Step 1 of 5
Account activation - Step 2 of 5
Account activation - Step 3 of 5
Account activation - Step 4 of 5
Account activation - Step 5 of 5
Secure Commit Result: Succeed
Done Configuring - Resetting the modem
The activation of the account is Complete
Waiting for modem to be ready to start IOTA
Beginning IOTA
router#
*Feb 6 23:29:08.459: IOTA Status Message Received. Event: IOTA Start, Result: SUCCESS
*Feb 6 23:29:08.459: Please wait till IOTA END message is received
*Feb 6 23:29:08.459: It can take up to 5 minutes
*Feb 6 23:29:27.951: OTA State = SPL unlock, Result = Success
*Feb 6 23:29:32.319: OTA State = Parameters committed to NVRAM, Result = Success
*Feb 6 23:29:40.999: Over the air provisioning complete; Result:Success
*Feb 6 23:29:41.679: IOTA Status Message Received. Event: IOTA End, Result: SUCCESS
```

The IOTA start and end must have “success” as the resulting output. If you receive an error message, you can run IOTA independently by using the cellular cdma activate iota command.

Your carrier may require periodic refreshes of the data profile. Use the following command to refresh the data profile:

cellular cdma activate iota

Activating with Over-the-Air Service Provisioning

To provision and activate your modem using Over-the-Air Service Provisioning (OTASP), use the following command, beginning in EXEC mode.

```
router # cellular 0 cdma activate otasp phone_number
```



Note

You need to obtain the phone number for use with this command from your carrier. The standard OTASP calling number is *22899.

The following is a sample output from this command:

```
router# cellular 0 cdma activate otasp *22899
Beginning OTASP activation
OTASP number is *22899
steelers_c881G#
OTA State = SPL unlock, Result = Success
router#
OTA State = PRL downloaded, Result = Success
OTA State = Profile downloaded, Result = Success
OTA State = MDN downloaded, Result = Success
OTA State = Parameters committed to NVRAM, Result = Success
Over the air provisioning complete; Result:Success
```

Configuring a Cellular Interface

To configure the cellular interface, enter the following commands, beginning in privileged EXEC mode.



Note

The PPP Challenge Handshake Authentication Protocol (CHAP) authentication parameters that you use in this procedure must be the same as the username and password provided by your carrier and configured only under the GSM profile. CDMA does not require a username or password.

SUMMARY STEPS

1. `configure terminal`
2. `interface cellular 0`
3. `encapsulation ppp`
4. `ppp chap hostname host`
5. `ppp chap password 0 password`
6. `asynchronous mode interactive`
7. `ip address negotiated`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>configure terminal</code> Example: <code>Router# configure terminal</code>	Enters global configuration mode from the terminal.
Step 2	<code>interface cellular 0</code> Example: <code>Router (config)# interface cellular 0</code>	Specifies the cellular interface.
Step 3	<code>encapsulation ppp</code> Example: <code>Router (config-if)# encapsulation ppp</code>	Specifies PPP encapsulation for an interface configured for dedicated asynchronous mode or dial-on-demand routing (DDR).
Step 4	<code>ppp chap hostname host</code> Example: <code>Router (config-if)# ppp chap hostname host@wwan.ccs</code>	Defines an interface-specific Challenge Handshake Authentication Protocol (CHAP) hostname. This must match the username given by the carrier. Applies to GSM only.

	Command or Action	Purpose
Step 5	<p>ppp chap password 0 password</p> <p>Example:</p> <pre>Router (config-if)# ppp chap password 0 cisco</pre>	Defines an interface-specific CHAP password. This must match the password given by the carrier.
Step 6	<p>asynchronous mode interactive</p> <p>Example:</p> <pre>Router (config-if)# asynchronous mode interactive</pre>	Returns a line from dedicated asynchronous network mode to interactive mode, enabling the slip and ppp commands in privileged EXEC mode.
Step 7	<p>ip address negotiated</p> <p>Example:</p> <pre>Router (config-if)# ip address negotiated</pre>	Specifies that the IP address for a particular interface is obtained via PPP and IPCP address negotiation.

What to Do Next



Note

When the cellular interface requires a static IP address, the address may be configured as `ip address negotiated`. Through IP Control Protocol (IPCP), the network ensures that the correct static IP address is allocated to the device. If a tunnel interface is configured with the `ip address unnumbered cellular interface` command, the actual static IP address must be configured under the cellular interface, in place of `ip address negotiated`. For a sample cellular interface configuration, see the [Basic Cellular Interface Configuration, on page 50](#).

Configuring DDR

Perform these steps to configure dial-on-demand routing (DDR) for the cellular interface.

SUMMARY STEPS

1. **configure terminal**
2. **interface cellular 0**
3. **dialer in-band**
4. **dialer idle-timeout** *seconds*
5. dialer string string
6. dialer-group number
7. **exit**
8. dialer-list dialer-group protocol protocol-name {permit | deny | list *access-list-number* | access-group}
9. ip access-list access list number permit ip source address
10. line 3
11. script dialer regexp
12. **exit**
13. For GSM:
14. interface cellular 0
15. dialer string string

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: Router# <code>configure terminal</code>	Enters global configuration mode.
Step 2	interface cellular 0 Example: Router (config)# <code>interface cellular 0</code>	Specifies the cellular interface.
Step 3	dialer in-band Example: Router (config-if)# <code>dialer in-band</code>	Enables DDR and configures the specified serial interface for in-band dialing.
Step 4	dialer idle-timeout <i>seconds</i> Example: Router (config-if)# <code>dialer idle-timeout 30</code>	Specifies the duration of idle time, in seconds, after which a line is disconnected.

	Command or Action	Purpose
Step 5	dialer string string Example: Router (config-if)# dialer string gsm	Specifies the number or string to dial. Use the name of the chat script here.
Step 6	dialer-group number Example: Router (config-if)# dialer-group 1	Specifies the number of the dialer access group to which a specific interface belongs.
Step 7	exit Example: Router (config-if)# exit	Enters the global configuration mode.
Step 8	dialer-list dialer-group protocol protocol-name {permit deny list <i>access-list-number</i> access-group} Example: Router (config)# dialer-list 1 protocol ip list 1	Creates a dialer list for traffic of interest and permits access to an entire protocol.
Step 9	ip access-list access list number permit ip source address Example: Router (config)# ip access list 1 permit any	Defines traffic of interest.
Step 10	line 3 Example: Router (config-line)# line 3	Specifies the line configuration mode. It is always 3.
Step 11	script dialer regexp Example: Router (config-line)# script-dialer gsm	Specifies a default modem chat script.
Step 12	exit Example: Router (config-line)# exit	Exits line configuration mode.
Step 13	For GSM: Example: chat-script script name "" "ATDT*99* profile number#" TIMEOUT timeout value CONNECT	Configures the line for GSM. Configures the line for CDMA. Defines the Attention Dial Tone (ATDT) commands when the dialer is initiated.

	Command or Action	Purpose
	<p>Example:</p> <p>For CDMA:</p> <p>Example:</p> <pre>chat-script script name "" "ATDT*777* profile number#" TIMEOUT timeout value CONNECT</pre> <p>Example:</p> <pre>Router (config)# chat-script gsm "" "ATDT*98*2#" TIMEOUT 60 "CONNECT"</pre>	
Step 14	<pre>interface cellular 0</pre> <p>Example:</p> <pre>Router (config)# interface cellular 0</pre>	Specifies the cellular interface.
Step 15	<pre>dialer string string</pre> <p>Example:</p> <pre>Router (config)# dialer string gsm</pre>	Specifies the dialer script (defined using the chat script command).

Configuring Data Dedicated Transmission Mode (DDTM)

On CDMA modems, data transmission is disrupted by incoming voice calls if data dedicated transmission mode (DDTM) is disabled. You can enable DDTM mode so the modem ignores incoming voice calls.

To enable DDTM on a CDMA modem, use the **cdma ddtm** command in configuration mode.

This command is enabled by default. You can disable this feature by using the **no cdma ddtm** command.



Note

When DDTM is enabled, only voice calls are blocked for the MC5728v modems. On the AC597E and MC5725 and MC 5727, incoming SMS messages are also blocked.

Examples for Configuring Cellular Wireless Interfaces

This section provides the following configuration examples:

Basic Cellular Interface Configuration

The following example shows how to configure a gsm cellular interface to be used as a primary WAN connection. It is configured as the default route.

```
chat-script gsm "" "ATDT*98*2#" TIMEOUT 60 "CONNECT"
```

```

!
interface Cellular0
 ip address negotiated
 encapsulation ppp
 dialer in-band
 dialer string gsm
 dialer-group 1
 async mode interactive
 ppp chap hostname cisco@wwan.ccs
 ppp chap password 0 cisco
 ppp ipcp dns request
!
ip route 0.0.0.0 0.0.0.0 Cellular0
!
!
access-list 1 permit any
dialer-list 1 protocol ip list 1
!
line 3
 exec-timeout 0 0
 script dialer gsm
 login
 modem InOut

```

The following example shows how to configure a cdma cellular interface to be used as a primary. It is configured as the default route.

```

chat-script cdma "" "ATDT#777" TIMEOUT 60 "CONNECT"
!
interface Cellular0
 ip address negotiated
 encapsulation ppp
 dialer in-band
 dialer string cdma
 dialer-group 1
 async mode interactive
 ppp chap password 0 cisco
!
ip route 0.0.0.0 0.0.0.0 Cellular0
!
!
access-list 1 permit any
dialer-list 1 protocol ip list 1
!
line 3
 exec-timeout 0 0
 script dialer cdma
 login
 modem InOut

```

Tunnel over Cellular Interface Configuration

The following example shows how to configure the static IP address when a tunnel interface is configured with the ip address unnumbered <cellular interface > command:

```

interface Tunnel2
 ip unnumbered Cellular0
 tunnel source Cellular0
 tunnel destination 128.107.248.254
interface Cellular0
 bandwidth receive 1400000
 ip address 23.23.0.1 255.255.0.0
 ip nat outside
 ip virtual-reassembly
 encapsulation ppp
 no ip mroute-cache
 dialer in-band
 dialer idle-timeout 0
 dialer string dial<carrier>
 dialer-group 1
 async mode interactive

```

```

no ppp lcp fast-start
ppp chap hostname <hostname>          *** gsm only ***
ppp chap password 0 <password>
ppp ipcp dns request
! traffic of interest through the tunnel/cellular interface
ip route 10.10.0.0 255.255.0.0 Tunnel2

```

Configuring Dual SIM for Cellular Networks on Cisco 819 Series ISR

The Dual SIM feature implements auto-switch and failover between two cellular networks on a Cisco 819 ISR. This feature is enabled by default with SIM slot 0 being the primary slot and slot 1 being the secondary (failover) slot.



Note

For instructions on how to configure the Dual SIM feature for 4G LTE cellular networks, see the [Cisco 4G LTE Software Installation Guide](#).

You can configure the Dual SIM feature using the following commands:

Command	Syntax	Description
gsm failovertimer	gsm failovertimer <1-7>	Sets the failover timer in minutes.
gsm sim authenticate	gsm sim authenticate <0,7> <pin> slot <0-1>	Verifies the SIM CHV1 code.
gsm sim max-retry	gsm sim max-retry <0-65535>	Specifies the maximum number of failover retries. The default value is 10.
gsm sim primary slot	gsm sim primary slot <0-1>	Modifies the primary slot assignment.
gsm sim profile	gsm sim profile <1-16> slot <0-1>	Configures the SIM profile.

Note the following:

- For auto-switch and failover to work, configure the SIM profile for slots 0 and 1 using the **gsm sim profile** command.
- For auto-switch and failover to work, configure the chat script without a specific profile number.
- If no SIM profile is configured, profile #1 is used by default.
- If no GSM failover timer is configured, the default failover timeout is 2 minutes.
- If no GSM SIM primary slot is configured, the default primary SIM is slot 0.

The following example shows you how to set the SIM switchover timeout period to 3 minutes:

```
router(config-controller)# gsm failovertimer 3
```

The following example shows you how to authenticate using an unencrypted pin:

```
router(config-controller)# gsm sim authenticate 0 1234 slot 0
```

The following example shows you how to set the maximum number of SIM switchover retries to 20:

```
router(config-controller)# gsm sim max-retry 20
```

The following example shows you how to set SIM slot 1 as the primary slot:

```
router(config-controller)# gsm sim primary slot 1
```

The following example shows you how to configure the SIM card in slot 0 to use profile 10:

```
router(config-controller)# gsm sim profile 10 slot 0
```

Perform the following commands to manually switch the SIM:

Command	Syntax	Description
cellular GSM SIM	cellular GSM SIM {lock unlock}	Locks or unlocks the SIM.
gsm sim	cellular <unit> gsm sim [lock unlock] <pin>	Locks or unlocks the gsm SIM.
gsm sim unblock	cellular <unit> gsm sim unblock <puk> <newpin>	Unblocks the gsm SIM.
gsm sim change-pin	cellular <unit> gsm sim change-pin <oldpin> <newpin>	Changes the PIN of the SIM.
gsm sim activate slot	cellular <unit> gsm sim activate slot <slot_no>	Activates the GSM SIM.

The following command forces the modem to connect to SIM1:

```
Router# cellular  
0  
  gsm sim activate  
  slot 1
```

Configuring Router for Image and Config Recovery Using Push Button for Cisco 819 Series ISR Router

A push button feature is available on the Cisco 819 ISR. The reset button on the front panel of the router enables this feature.

Perform the following steps to use this feature:

SUMMARY STEPS

1. Unplug power.
2. Press the reset button on the front panel of the router.
3. Power up the system while holding down the reset button.

DETAILED STEPS

-
- Step 1** Unplug power.
- Step 2** Press the reset button on the front panel of the router.
- Step 3** Power up the system while holding down the reset button.
The system LED blinks four times indicating that the router has accepted the button push.
-

What to Do Next

Using this button takes effect only during ROMMON initialization. During a warm reboot, pressing this button has no impact on performance. [Table 7: Push Button Functionality during ROMMON Initialization, on page 54](#) shows the high level functionality when the button is pushed during ROMMON initialization.

Table 7: Push Button Functionality during ROMMON Initialization

ROMMON Behavior	IOS Behavior
<ul style="list-style-type: none"> Boots using default baud rate. Performs auto-boot. Loads the *.default image if available on compact flash <p>Note If no *.default image is available, the ROMMON will boot up with the first Cisco IOS image on flash. Examples of names for default images: c800-universalk9-mz.SPA.default, c-800-universalk9_npe-mz.151T.default, image.default</p> <p>Note You can only have one configuration file with *.cfg option. Having more than one file will result in uncertain operational behavior.</p>	<p>If the configuration named *.cfg is available in nvram storage or flash storage, IOS will perform a backup of the original configuration and will boot up using this configuration.</p> <p>Note You can only have one configuration file with *.cfg option. Having more than one file will result in uncertain operational behavior.</p>

Use the show platform command to display the current bootup mode for the router. The following sections show sample outputs when the button is not pushed and when the button is pushed.

Output When Button Is Not Pushed: Example

```
router# show platform boot-record
Platform Config Boot Record :
=====
Configuration Register at boot time : 0x0
Reset Button Status at Boot Time   : Not Pressed
Startup-config Backup Status at Boot: No Status
Startup-config(backup file)location : No Backup
```

```
Golden config file at location      : No Recovery Detected
Config Recovery Status             : No Status
```

Output When Button Is Pushed: Example

```
router# show platform boot-record

Platform Config Boot Record :
=====
Configuration Register at boot time : 0x0
Reset Button Status at Boot Time    : Pressed
Startup-config Backup Status at Boot: Ok
Startup-config (backup file) location : flash:/startup.backup.19000716-225840-UTC
Golden config file at location      : flash:/golden.cfg
Config Recovery Status              : Ok
```

Push Button in WLAN AP

When the push button on the front panel is pressed, WLAN AP will perform both image and configuration recovery.

To perform image recovery, WLAN will go into the boot loader so that the user can download the image from the bootloader prompt.

To perform configuration recovery, WLAN AP will overwrite the contents of flash:/config.txt with the contents of flash:/cpconfig-ap802.cfg file if available in flash drive. Otherwise, flash:/config.txt will be deleted.

Configuring WAN Mode on Cisco 860VAE ISRs

The Cisco 866VAE, Cisco 867VAE, Cisco 866VAE-K9, and Cisco 867VAE-K9 routers can be configured to use either a GE interface or a DSL interface as a WAN link. DSL is the default WAN interface when the Cisco 866VAE, Cisco 867VAE, Cisco 866VAE-K9, and Cisco 867VAE-K9 routers boot.

After the router boots up, the desired WAN interface can be selected using the wan mode command. When WAN mode is configured as Ethernet, both ATM0 and Ethernet0 interfaces will be forced into shutdown state. Entering the **no shutdown** command on either of the DSL interfaces will be rejected with a message *WAN interface is Ethernet*. Similarly, when the WAN mode is DSL, the GE WAN interface will be put in shutdown state and the **no shutdown** command will be rejected with the message *WAN interface is DSL*.



Note

The routers do not support enabling both GE and DSL interfaces simultaneously.

Use the **wan mode dsl | ethernet** command to switch from DSL to Ethernet interfaces or vice versa.

This section contains the following information:

Enabling WAN Mode

Perform the following steps to select and enable WAN mode.

SUMMARY STEPS

1. **enable**
2. **show running-configuration**
3. **wan mode {dsl | ethernet}**
4. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	show running-configuration Example: Router# show running-configuration	Displays the default entries on boot up.
Step 3	wan mode {dsl ethernet} Example: Router(config)# wan mode dsl	Selects the desired WAN mode.
Step 4	exit Example: Router(config)# exit Example: Router#	Exits configuration mode and returns to it would take the router back to privileged EXEC mode.

Displaying WAN Mode Configuration

Use the **show running-config** command to view the initial configuration, as shown in the following example for a Cisco 866VAE router.



Note Your Cisco router displays the WAN mode during the boot sequence after the initial configuration is complete.

```
Router#show running-config
Building configuration...
Current configuration : 1195 bytes
```



```
!  
! Last configuration change at 13:27:25 UTC Wed Feb 24 2010  
version 15.2  
no service pad  
service timestamps debug datetime msec localtime show-timezone  
service timestamps log datetime msec localtime show-timezone  
no service password-encryption  
!  
hostname Router  
!  
boot-start-marker  
boot-end-marker  
!  
!  
enable password lab  
!  
no aaa new-model  
wan mode ethernet  
no ipv6 cef  
!  
!  
!  
!  
ip cef  
!  
crypto pki token default removal timeout 0  
!  
!  
!  
!  
controller VDSL 0  
shutdown  
!  
!  
!  
!  
interface ATM0  
no ip address  
shutdown  
no atm ilmi-keepalive  
!  
interface ATM0.1 point-to-point  
ip address 202.0.0.1 255.255.255.0  
pvc 0/202  
!  
!  
interface Ethernet0  
no ip address  
shutdown  
!  
interface FastEthernet0  
no ip address  
!  
interface FastEthernet1  
no ip address  
!  
interface FastEthernet2  
no ip address  
!  
interface FastEthernet3  
no ip address  
!  
interface GigabitEthernet0  
ip address 1.0.0.1 255.255.255.0  
duplex auto  
speed auto  
!  
interface Vlan1  
no ip address
```

```

!
ip forward-protocol nd
no ip http server
no ip http secure-server
!
!
!
!
control-plane
!
!
line con 0
  exec-timeout 0 0
  no modem enable
line aux 0
line vty 0 4
  login
  transport input all
!
scheduler allocate 60000 1000
!
end
Router#

```

Configuring the Fast Ethernet LAN Interfaces

The Fast Ethernet LAN interfaces on your router are automatically configured as part of the default VLAN and are not configured with individual addresses. Access is provided through the VLAN. You can also assign the interfaces to other VLANs. For more information about creating VLANs, see [Configuring Ethernet Switches](#)

Configuring the Wireless LAN Interface

The Cisco 860, Cisco 880, and Cisco 890 series wireless routers have an integrated 802.11n module for wireless LAN connectivity. The router can then act as an access point in the local infrastructure. For more information about configuring a wireless connection, see [Chapter 11, “Basic Wireless Device Configuration.”](#)

Configuring a Loopback Interface

The loopback interface acts as a placeholder for the static IP address and provides default routing information. Perform these steps to configure a loopback interface, beginning in global configuration mode:

SUMMARY STEPS

1. **interface** *loopback number*
2. **ip address** *ip-address mask*
3. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	interface <i>loopback number</i>	Enters configuration mode for the loopback interface.

	Command or Action	Purpose
	Example: Router(config)# interface Loopback 0	number—number of the loopback interface.
Step 2	ip address <i>ip-address mask</i> Example: Router(config-if)# ip address 10.108.1.1 255.255.255.0	Sets the IP address and subnet mask for the loopback interface.
Step 3	exit Example: Router(config-if)# exit Example: Router(config)#	Exits configuration mode for the loopback interface and returns to global configuration mode.

Configuration Example: Configuring a Loopback Interface

The loopback interface in this sample configuration is used to support Network Address Translation (NAT) on the virtual-template interface. This configuration example shows the loopback interface configured on the Fast Ethernet interface with an IP address of 200.200.100.1/24, which acts as a static IP address. The loopback interface points back to virtual-template1, which has a negotiated IP address.

```

!
interface loopback 0
ip address 200.200.100.1 255.255.255.0 (static IP address)
ip nat outside
!
interface Virtual-Template1
ip unnumbered loopback0
no ip directed-broadcast
ip nat outside
!

```

Verifying Configuration

To verify that you have properly configured the loopback interface, enter the show interface loopback command. You should see verification output similar to the following example.

```

Router# show interface loopback 0
Loopback 0 is up, line protocol is up
  Hardware is Loopback
  Internet address is 200.200.100.1/24
  MTU 1514 bytes, BW 8000000 Kbit, DLY 5000 usec,
     reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation LOOPBACK, loopback not set
  Last input never, output never, output hang never

```

```

Last clearing of "show interface" counters never
Queueing strategy: fifo
Output queue 0/0, 0 drops; input queue 0/75, 0 drops
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
  0 packets input, 0 bytes, 0 no buffer
    Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  0 packets output, 0 bytes, 0 underruns
  0 output errors, 0 collisions, 0 interface resets
  0 output buffer failures, 0 output buffers swapped out

```

Another way to verify the loopback interface is to ping it:

```

Router# ping 200.200.100.1
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 200.200.100.1, timeout is 2 seconds:
!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/4 ms

```

Configuring Static Routes

Static routes provide fixed routing paths through the network. They are manually configured on the router. If the network topology changes, the static route must be updated with a new route. Static routes are private routes unless they are redistributed by a routing protocol.

Follow these steps to configure static routes, beginning in global configuration mode.

SUMMARY STEPS

1. **ip route** *prefix mask {ip-address | interface-type interface-number [ip-address]}*
2. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	ip route <i>prefix mask {ip-address interface-type interface-number [ip-address]}</i> Example: Router(config)# ip route 192.168.1.0 255.255.0.0 10.10.10.2	Specifies the static route for the IP packets. For details about this command and about additional parameters that can be set, see the Cisco IOS IP Routing Protocols Command Reference .
Step 2	end Example: Router(config)# end	Exits router configuration mode, and enters privileged EXEC mode.

What to Do Next

For general information on static routing, see the [“Concepts” section on page B-1](#)

Example

In the following configuration example, the static route sends out all IP packets with a destination IP address of 192.168.1.0 and a subnet mask of 255.255.255.0 on the Fast Ethernet interface to another device with an IP address of 10.10.10.2. Specifically, the packets are sent to the configured PVC.

You do not need to enter the command marked “(default).” This command appears automatically in the configuration file generated when you use the **show running-config** command.

```
!
ip classless (default)
ip route 192.168.1.0 255.255.255.0 10.10.10.2!
```

Verifying Static Routing Configuration

To verify that you have properly configured static routing, enter the `show ip route` command and look for static routes signified by the “S.”

You should see verification output similar to the following:

```
Router# show ip route
Codes: C - connected, S - static, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       ia - IS-IS inter area, * - candidate default, U - per-user static route
       o - ODR, P - periodic downloaded static route
Gateway of last resort is not set
 10.0.0.0/24 is subnetted, 1 subnets
 C       10.108.1.0 is directly connected, Loopback0
 S* 0.0.0.0/0 is directly connected, FastEthernet0
```

Configuring Dynamic Routes

In dynamic routing, the network protocol adjusts the path automatically, based on network traffic or topology. Changes in dynamic routes are shared with other routers in the network.

The Cisco routers can use IP routing protocols, such as Routing Information Protocol (RIP) or Enhanced Interior Gateway Routing Protocol (EIGRP), to learn routes dynamically. You can configure either of these routing protocols on your router.

Configuring Routing Information Protocol

To configure the RIP routing protocol on the router, perform these steps, beginning in global configuration mode:

SUMMARY STEPS

1. **configure terminal**
2. **router rip**
3. **version {1 | 2}**
4. **network *ip-address***
5. **no auto-summary**
6. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 2	router rip Example: Router(config)# router rip	Enters router configuration mode, and enables RIP on the router.
Step 3	version {1 2} Example: Router(config-router)# version 2	Specifies use of RIP version 1 or 2.
Step 4	network <i>ip-address</i> Example: Router(config-router)# network 192.168.1.1	Specifies a list of networks on which RIP is to be applied, using the address of the network of each directly connected network.
Step 5	no auto-summary Example: Router(config-router)# no auto-summary	Disables automatic summarization of subnet routes into network-level routes. This allows subprefix routing information to pass across classfull network boundaries.
Step 6	end Example: Router(config-router)# end	Exits router configuration mode, and enters privileged EXEC mode.

What to Do Next

For general information on RIP, see the [“RIP” section on page B-3](#)

Example Configuration: Configuring Dynamic Routing Protocol

The following configuration example shows RIP version 2 enabled in IP network 10.0.0.0 and 192.168.1.0. To see this configuration, use the **show running-config** command from privileged EXEC mode.

```
!
Router# show running-config
router rip
  version 2
  network 10.0.0.0
  network 192.168.1.0
  no auto-summary
!
```

Verifying RIP Configuration

To verify that you have properly configured RIP, enter the **show ip route** command and look for RIP routes signified by "R." You should see a verification output like the following example.

```
Router# show ip route
Codes: C - connected, S - static, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       ia - IS-IS inter area, * - candidate default, U - per-user static route
       o - ODR, P - periodic downloaded static route
Gateway of last resort is not set
 10.0.0.0/24 is subnetted, 1 subnets
 C    10.108.1.0 is directly connected, Loopback0
 R    3.0.0.0/8 [120/1] via 2.2.2.1, 00:00:02, Ethernet0/0
```

Configuring Enhanced Interior Gateway Routing Protocol

To configure Enhanced Interior Gateway Routing Protocol (EIGRP), perform these steps, beginning in global configuration mode:

SUMMARY STEPS

1. **router eigrp** *as-number*
2. **network** *ip-address*
3. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	router eigrp <i>as-number</i> Example: 	Enters router configuration mode and enables EIGRP on the router. The autonomous-system number identifies the route to other EIGRP routers and is used to tag the EIGRP information.

	Command or Action	Purpose
	<p>Example:</p> <pre>Router(config)# router eigrp 109</pre>	
Step 2	<p>network <i>ip-address</i></p> <p>Example:</p> <pre> </pre> <p>Example:</p> <pre>Router(config)# network 192.145.1.0</pre> <p>Example:</p> <pre>Router(config)# network 10.10.12.115</pre>	Specifies a list of networks on which EIGRP is to be applied, using the IP address of the network of directly connected networks.
Step 3	<p>end</p> <p>Example:</p> <pre> </pre> <p>Example:</p> <pre>Router(config-router)# end</pre> <p>Example:</p> <pre>Router#</pre>	Exits router configuration mode and enters privileged EXEC mode.

What to Do Next

For general information on EIGRP concepts, see the [“Enhanced IGRP” section on page B-3](#)

Example Configuration: EIGRP

The following configuration example shows the EIGRP routing protocol enabled in IP networks 192.145.1.0 and 10.10.12.115. The EIGRP autonomous system number is 109.

To see this configuration, use the **show running-config** command, beginning in privileged EXEC mode.

```
!
router eigrp 109
 network 192.145.1.0
  network 10.10.12.115
!
```


Verifying EIGRP Configuration

To verify that you have properly configured IP EIGRP, enter the `show ip route` command and look for EIGRP routes indicated by “D.” You should see verification output similar to the following:

```
Router# show ip route
Codes: C - connected, S - static, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       ia - IS-IS inter area, * - candidate default, U - per-user static route
       o - ODR, P - periodic downloaded static route
Gateway of last resort is not set
 10.0.0.0/24 is subnetted, 1 subnets
 C    10.108.1.0 is directly connected, Loopback0
 D    3.0.0.0/8 [90/409600] via 2.2.2.1, 00:00:02, Ethernet0/0
```

