


SUPERMICR[®] SuperServer 1012A-M73RF/MTF Quick Reference Guide

Board Layout

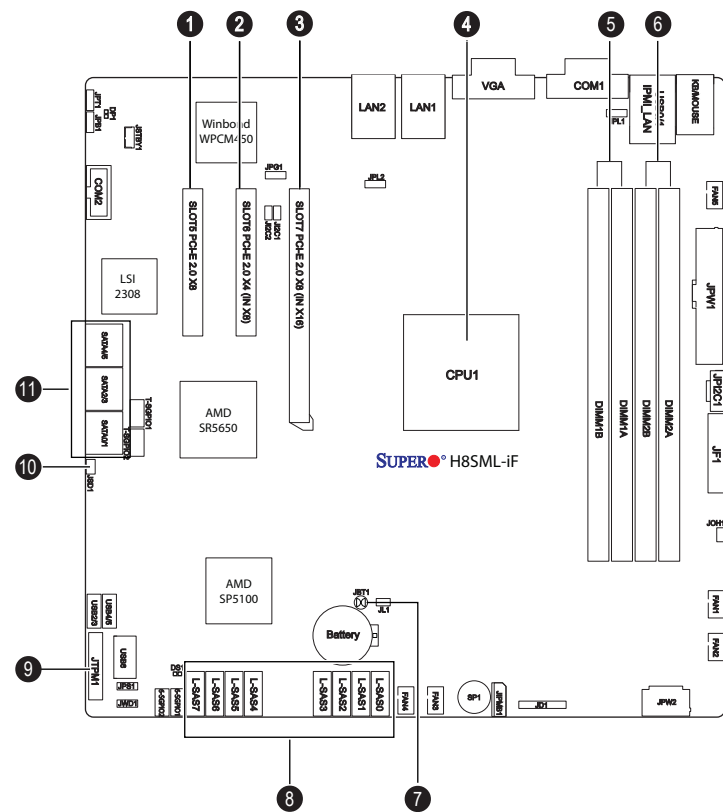

No.	Description
1	Slot5 PCI-E 2.0 x8
2	Slot6 PCI-E 2.0 x4 (in x8)
3	Slot7 PCI-E 2.0 x8 (in x16)
4	CPU1
5	DIMM1A / DIMM1B (Blue Slot)
6	DIMM2A / DIMM2B (Blue Slot)
7	JBT1 = CMOS Clear
8	L-SAS0 ~ L-SAS7 : SAS Ports (1012A-M73RF)
9	JTPM1: Trusted Platform Module Header
10	JSD1 = SATA DOM Power Connector
11	SATA0 ~ SATA5: SATA Ports

MEMORY

Memory Population for Optimal Performance			
# DIMMS	Channel 1		Channel 2
2 DIMMs	DIMM1A		DIMM2A
4 DIMMs	DIMM1A	DIMM1B	DIMM2A DIMM2B


DIMM Module Population Configuration

For memory to work properly, follow the tables below for memory installation:

Per Channel DIMM Populations Options					
DIMM Type	DIMM A	DIMM B	Max. MHz, 1.5V DIMMs	Max. MHz, 1.35V DIMMs	Max. GB/ Channel
UDIMM	SR or DR	Empty	1600 MHz	1333 MHz	8 GB
	SR	SR	1600 MHz	1333 MHz	4 GB
	DR	DR	1333 MHz	1066 MHz	16 GB

Note 1: Due to OS limitations, some operating systems may not show more than 4 GB of memory.


Note 2: Due to memory allocation to system devices, the amount of memory that remains available for operational use will be reduced when 4 GB of RAM is used. The reduction in memory availability is disproportional.

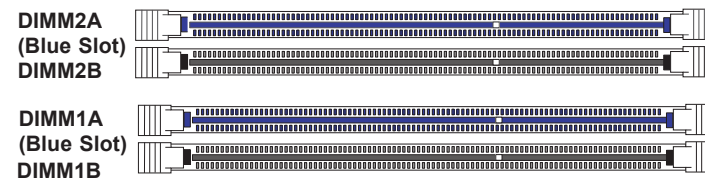

Beep Codes


BIOS Error Beep Codes		
Beep Code/LED	Error Message	Description
1 beep	Refresh	Circuits have been reset. (Ready to power up)
5 short beeps + 1 long beep	Memory error	No memory detected in the system
8 beeps	Display memory read/write error	Video adapter missing or with faulty memory
OH LED On	System OH	System Overheat

Front View & Interface

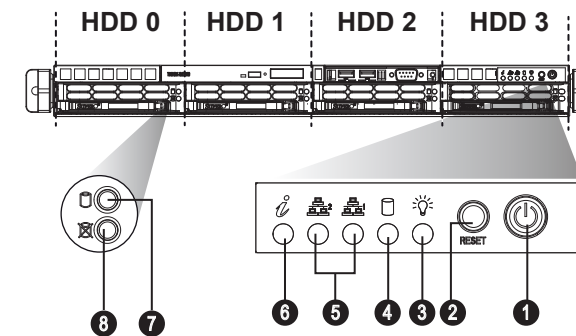


No.	Description
1	Power Button
2	Reset Button
3	Power LED
4	Device Activity LED
5	LAN1 LED & LAN2 LED
6	Information LED
7	Hard Drive Signal
8	Hard Drive Fail

Rear View

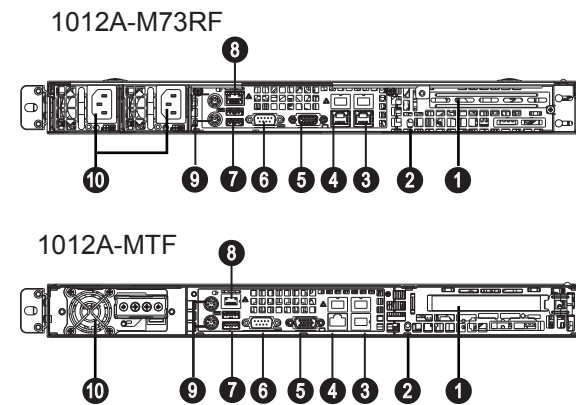


No.	Description
1	PCI-E Expansion Slot (w/riser card)
2	UID
3	GbE LAN2 Port
4	GbE LAN1 Port
5	VGA Port
6	COM1 Port
7	USB 0/1 Ports
8	Dedicated LAN for IPMI
9	PS2 keyboard (purple) & Mouse (green) Ports
10	Single/Redundant Power Supply Module

CPU Installation

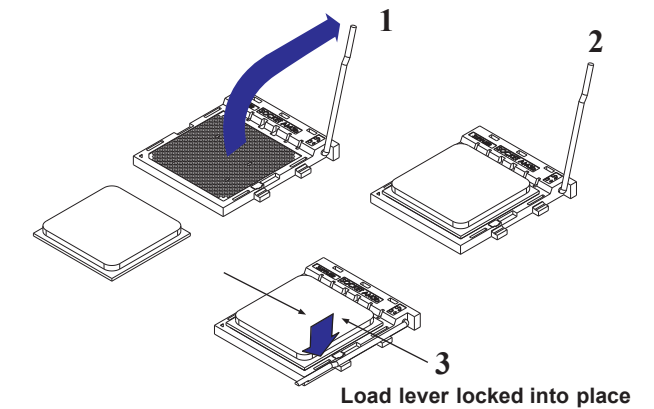

Heatsink Installation

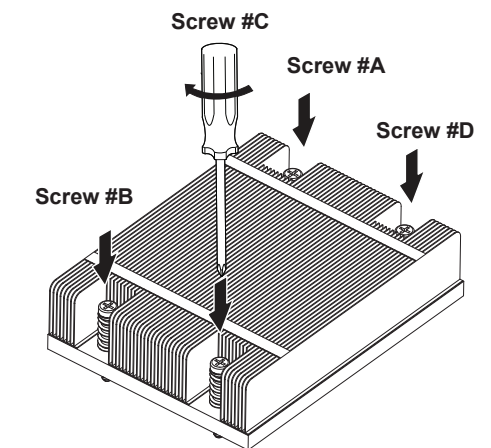

- Place heatsink on top of installed CPU
- Line up the four screws to socket
- Push down heatsink and screw down as shown (cross pattern, in order: A, C, B, D)
- NOTE: Only use 6-8 lb/f of torque; otherwise, hand-tighten each screw, to avoid damaging the system

Caution

SAFETY INFORMATION
IMPORTANT: See installation instructions and safety warning before connecting system to power supply.
http://www.supermicro.com/about/policies/safety_information.cfm

WARNING:
 To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.
 If any CPU socket empty, install protective plastic CPU cap

CAUTION:
 Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.


For more information go to :
<http://www.supermicro.com/support>

SATA Drive Installation

Mounting a Drive in a Drive Carrier

The SATA drives are mounted in drive carriers to simplify their installation and removal from the chassis. These carriers also help promote proper airflow for the system. For this reason, even empty carriers without drives installed must remain in the chassis.

- Install a new drive into the carrier with the printed circuit board side facing down so that the mounting holes align with those in the carrier.
- Secure the drive to the carrier with six screws, as shown.

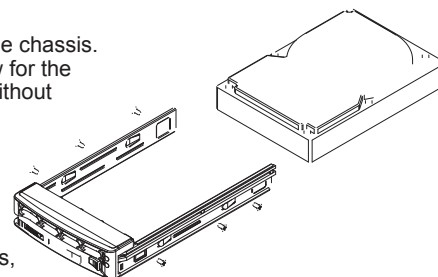

Installing/Removing SATA Drives

- To remove a carrier, push the release button located beside the drive LEDs.
- Swing the colored handle fully and use it to pull the unit straight out.

