



HP ProCurve 1410 Switch Series

Installation and Getting Started Guide

HP ProCurve 1410-8G Switch (J9559A)

HP ProCurve 1410-16G Switch (J9560A)

HP ProCurve 1410-24G Switch (J9561A)

HP ProCurve 1410 Switch Series

Installation and Getting Started Guide

Publication Number

5998-0347
April 2010

Applicable Products

HP ProCurve 1410-8G Switch	(J9559A)
HP ProCurve 1410-16G Switch	(J9560A)
HP ProCurve 1410-24G Switch	(J9561A)

Disclaimer

HEWLETT-PACKARD COMPANY MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

Warranty

See the Software License, Warranty and Support booklet included with the product.

A copy of the specific warranty terms applicable to your Hewlett-Packard products and replacement parts can be obtained from your HP Sales and Service Office or authorized dealer.

Safety

Before installing and operating these products, please read the [“Installation Precautions”](#) in chapter 2, [“Installing the Switch”](#), and the safety statements in appendix B, [“Safety and EMC Regulatory Statements”](#).

Contents

Contents

1 Introducing the Switch

Front of the Switch	1-3
Network Ports	1-4
LEDs	1-4
Back of the Switch	1-5
Power Connector	1-5
Switch Features	1-6

2 Installing the Switch

Included Parts	2-1
Installation Precautions	2-3
Installation Procedures	2-4
1. Prepare the Installation Site	2-5
2. Verify the Switch Passes Self Test	2-6
LED Behavior	2-8
3. Mount the Switch	2-9
Rack or Cabinet Mounting	2-9
Rack Mounting the Switch	2-10
Wall or Under-Table Mounting	2-13
Horizontal Surface Mounting	2-14
Using a Kensington Security Cable	2-15
4. Connect the Switch to a Power Source	2-15
5. Connect the Network Cables	2-18
Using the RJ-45 Connectors	2-18
6. Installing or Removing mini-GBICs	2-19
Installing the mini-GBICs:	2-19
Removing the mini-GBICs	2-20
Connecting Cables to mini-GBICs	2-20
Sample Network Topologies	2-22

As a Desktop Switch 2-22
As a Segment Switch 2-23

3 Troubleshooting

Basic Troubleshooting Tips 3-1
Diagnosing with the LEDs 3-3
 LED patterns for General Switch Troubleshooting 3-3
Hardware Diagnostic Tests 3-5
 Testing the Switch by Resetting It 3-5
 Testing Twisted-Pair Cabling 3-5
 Testing End-to-End Network Communications 3-5
HP Customer Support Services 3-6
 Before Calling Support 3-6

A Specifications

Switch Specifications A-1
 Physical A-1
 Electrical A-1
 Environmental A-2
 BTU Ratings A-2
 Acoustics A-2
 Safety A-2
Standards A-3
Cabling and Technology Information Specifications A-4
 Technology Distance Specifications A-5
Mode Conditioning Patch Cord A-6
 Installing the Patch Cord A-6
Twisted-Pair Cable/Connector Pin-Outs A-8
 Straight-through Twisted-Pair Cable for
 10 Mbps or 100 Mbps Network Connections A-10
 Cable Diagram A-10
 Pin Assignments A-10

Crossover Twisted-Pair Cable for 10 Mbps or 100 Mbps Network Connection	A-11
Cable Diagram	A-11
Pin Assignments	A-11
Straight-Through Twisted-Pair Cable for 1000 Mbps Network Connections	A-12
Cable Diagram	A-12
Pin Assignments	A-12

B Safety and EMC Regulatory Statements

Safety Information	B-1
EMC Regulatory Statements	B-8
U.S.A.	B-8
Canada	B-8
Australia/New Zealand	B-8
Japan	B-8
Korea	B-9
Taiwan	B-9
European Community	B-10

C Recycle Statements

Waste Electrical and Electronic Equipment (WEEE) Statements	C-1
---	-----

Index

Contents


Introducing the Switch

The HP ProCurve 1410-8G, 1410-16G, and 1410-24G Switches are multiport switches that can be used to build high-performance switched workgroup networks. These switches are store-and-forward devices that offer low latency for high-speed networking.


HP ProCurve 1410-8G Switch (J9559A)



HP ProCurve 1410-16G Switch (J9560A)

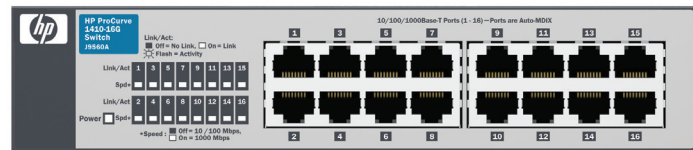

HP ProCurve 1410-24G Switch (J9561A)

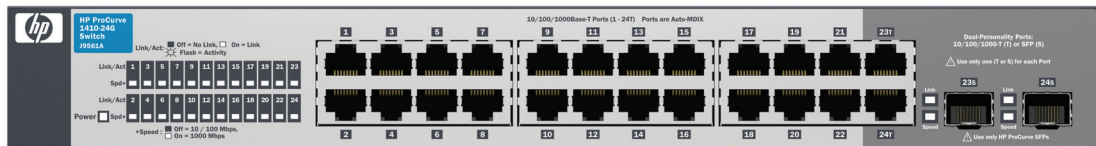

Throughout this manual, these switches will be referred to as the 1410-8G Switch, 1410-16G Switch, and the 1410-24G Switch.

- The 1410-8G Switch has 8 auto-sensing 10/100/1000Base-T RJ-45 ports.
- The 1410-16G Switch has 16 auto-sensing 10/100/1000Base-T RJ-45 ports.
- The 1410-24G Switch has 24 auto-sensing 10/100/1000Base-T RJ-45 ports with two Gigabit Uplink dual-personality ports (ports 23 and 24).

Dual-personality ports use either the 10/100/1000Base-T RJ-45 connector, or a supported ProCurve mini-GBIC (Small Form-factor Pluggable (SFP)) for fiber-optic connection. By default, the RJ-45 connectors are enabled.

These switches can be directly connected to computers, printers, and servers to provide dedicated bandwidth to those devices, and you can build a switched network infrastructure by connecting the switch to hubs, other switches, or routers.

Using ProCurve mini-GBICs, the 1410-24G Switch supports optional network connectivity with the following speeds and technologies:




Table 1-1. Optional Network Connectivity, Speeds and Technologies

			Transceiver Form-Factor and Connector ¹
Speed	Technology	Cabling	SFP ("mini-GBIC") Connector
100 Mbps	100-FX	Fiber (multimode)	LC
	100-BX	Fiber (single mode)	LC
1 Gbps	1000-SX	Fiber (multimode)	LC
	1000-LX	Fiber (multimode or single mode)	LC
	1000-LH	Fiber (single mode)	LC
	1000-BX	Fiber (single mode)	LC

¹ For supported transceivers, see www.hp.com/go/procurve/faqs. Select "ProCurve Mini-GBICs and SFPs". Click on the first question in the "General product information" category.

For technical details of cabling and technologies see "[Cabling and Technology Information Specifications](#)" in the appendix A.

Front of the Switch

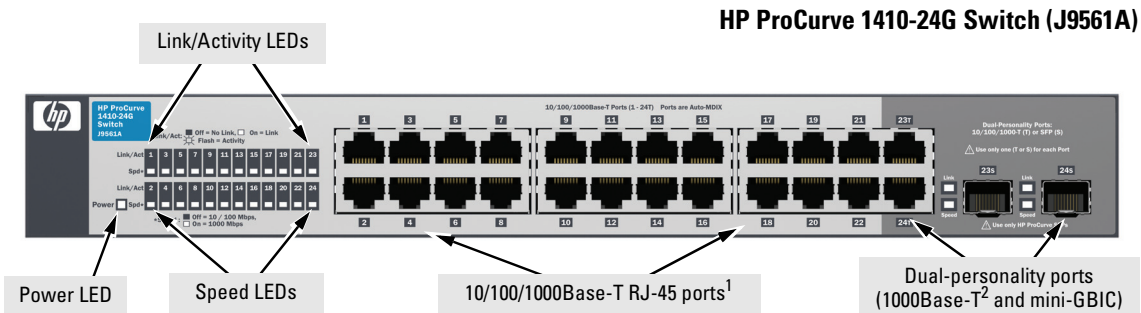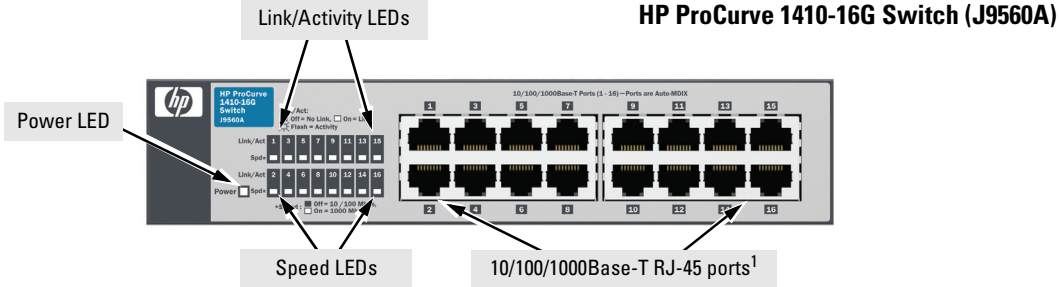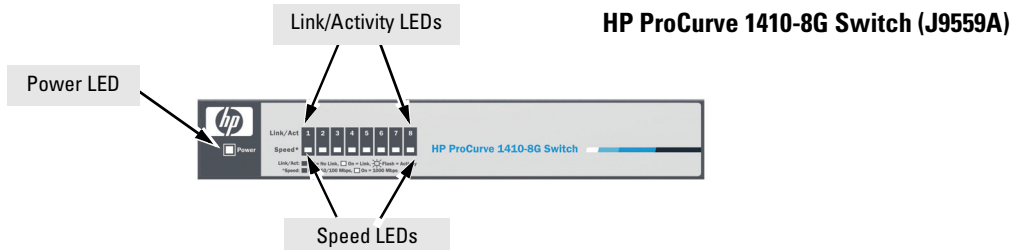

¹ All 10/100/1000Base-T RJ-45 ports have the Auto-MDIX feature.
² Dual-personality ports, either RJ-45 10/100/1000Base-T ports or Mini-GBIC (SFP) slots.

Network Ports

- 8, 16, or 24 auto-sensing 10/100/1000Base-T ports.
All these ports have the “Auto-MDIX” feature, which means that you can use either straight-through or crossover twisted-pair cables to connect any network devices to the switch.
- (1410-24G Switch only) Two dual-personality ports for either 10/100/1000Base-T RJ-45 uplinks, or mini-GBIC (SFP) slots for fiber uplinks.

LEDs


The front panels of the switches provide status LEDs for system monitoring. [Table 1-2](#) details the functions of the LED indicators.

Table 1-2. Switch Status LEDs


Switch LEDs	State	Meaning
Power (green)	On	The internal power supply is working properly.
	Off	No power connection. The switch is NOT receiving power.
Port LEDs		
Link/Act (green)	On	The port is enabled and receiving a link indication from the connected device.
	Off	One of these condition exists: <ul style="list-style-type: none">• no active network cable is connected to the port• the port is not receiving link beat or sufficient light
	Flashing ¹	Indicates that there is network activity on the port.
Speed (green)	On	Indicates the port is operating at 1000 Mbps.
	Off	Indicates the port is operating at 10 or 100 Mbps.
¹ The flashing behavior is an on/off cycle once every 0.083 seconds approximately.		

Back of the Switch


HP ProCurve 1410-8G Switch (J9559A)

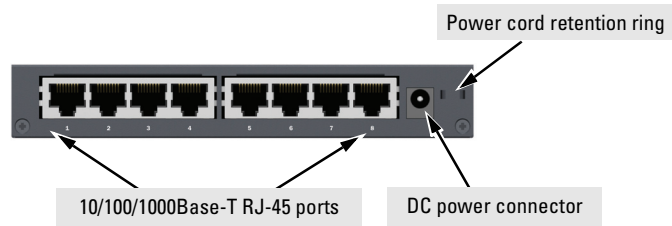

HP ProCurve 1410-16G Switch (J9560A)

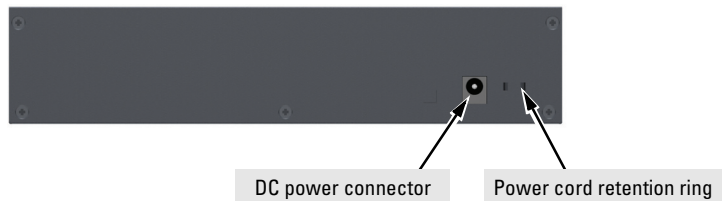

HP ProCurve 1410-24G Switch (J9561A)

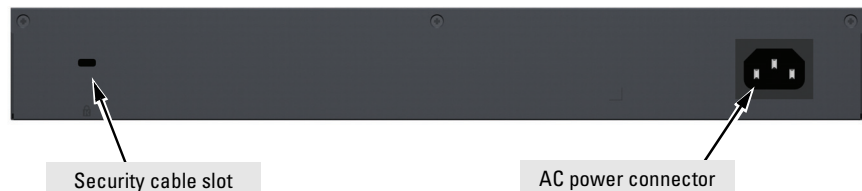

Power Connector

The 1410-8G Switch and 1410-16G Switch do not have a power switch. They are powered on when the external AC/DC power adapter is connected to the switch and to a power source. The external AC/DC power adapter supplies 12 volts DC to the switch and automatically adjusts to any AC voltage between 100-240 volts and either 50 or 60 Hz. No voltage range settings are required.

The 1410-24G Switch does not have a power switch; it is powered on when connected to an active AC power source. The switch automatically adjusts to any AC voltage between 100-127 and 200-240 volts and either 50 or 60 Hz. There are no voltage range settings required.

Switch Features

The features of the switches include:

- 8, 16, or 24 auto-sensing 10/100/1000Base-T RJ-45 ports with Auto-MDIX.
- 1410-24G Switch includes two dual-personality uplink ports (1000Base-T RJ-45 or mini-GBIC).
- Plug-and-play networking—all ports are enabled—just connect the network cables to active network devices and your switched network is operational.
- Auto-MDIX on all twisted-pair ports, meaning that all twisted-pair connections can be made using straight-through cables. Cross-over cables are not required, although they will also work.
- Automatically negotiated full-duplex operation for the 10/100/1000 RJ-45 ports when connected to other auto-negotiating devices.
- Automatic learning of the hardware addresses in each switch's 8000-address forwarding table (4000-addresses for the 1410-8G Switch).
- Support for up to 9216-byte Jumbo frame size to improve performance of large data transfers.
- Support for IEEE 802.1p prioritization Quality of Service (QoS) to deliver data to devices based on the priority and type of traffic.
- Fanless designed enables quiet operation for deployment in open spaces.

Installing the Switch

This chapter provides installation information for the 1410-8G Switch, 1410-16G Switch, and 1410-24G Switch.

Included Parts

The switches have the following components:

- Documentation kit
 - Read Me First
 - Switch Quick Setup Guide
 - Safety and Regulatory information
 - Software End User License and Hardware Warranty information

- Four rubber feet

- Wall/table-mount accessory kit:

1410-8G Switch and 1410-16G Switch

Kit number 5066-0621

Contains:

- three 3/4" (20-mm M4) screws for wall and under-table mounting
- three wall anchors
- cable tie for power cord

1410-24G Switch

Kit number 5066-0620

Contains:

- three 3/4" (20-mm M4) screws for wall and under-table mounting
- three wall anchors

- Rack-mount accessory kit:

1410-16G Switch

Kit number 5066-0622

Contains:

- two mounting brackets
- eight 8-mm M4 screws to attach the mounting brackets to the switch
- four 5/8-inch number 12-24 screws to attach the switch to a rack

1410-24G Switch

Kit number 5066-0623

Contains:

- two mounting brackets
- eight 8-mm M4 screws to attach the mounting brackets to the switch
- four 5/8-inch number 12-24 screws to attach the switch to a rack

- 1410-8G Switch and 1410-16G Switch external AC/DC power adapters and power cords, one of the following:

Universal External AC/DC Power Adapter
All countries/regions 5188-6700

Power Cords for AC/DC Power Adapter
Australia/New Zealand 8121-0870
China 8120-8373
Continental Europe/Denmark/
....Switzerland/Israel/Vietnam/Indonesia 8120-6314
India 8121-0702
Japan 8120-6316
South Africa 8120-6317
Taiwan 8121-0963
Thailand 8121-0664
United Kingdom/Hong Kong/
....Singapore/Malaysia 8120-8699
United States/Canada/Mexico 8120-6313

Wall Plug-in External AC/DC Power Adapter (AC Power cords are not used)
United States/Canada 5184-5863
Continental Europe/Denmark/
....Norway/Sweden/Switzerland 5184-5864

- 1410-24G Switch AC power cords, one of the following:

Australia/New Zealand 8121-0833
China 8120-8377
Continental Europe 8120-6802
Denmark 8120-6806
India 8121-0772
Israel 8120-6799
Japan 8120-6804
South Africa 8120-6808
Switzerland 8120-6807
Thailand 8121-0667
Taiwan 8121-0964
United Kingdom/Hong Kong/Singapore 8120-8709
United States/Canada/Mexico 8120-6805

**Japan Power
Cord Warning**

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Installation Precautions

WARNING

- **The rack or cabinet should be adequately secured to prevent it from becoming unstable and/or falling over.**

Devices installed in a rack or cabinet should be mounted as low as possible, with the heaviest devices at the bottom and progressively lighter devices installed above.

- **Wall-mount the 1410-24G Switch with network ports facing up (away from the floor). Do not wall-mount the 1410-24G Switch with the network ports facing down (toward the floor). Do not wall-mount any of the switches with the ventilation ducts facing up or down.**

Cautions

- (1410-8G and 1410-16G) Use only the AC/DC power adapter supplied with the switch for connection to an AC power source.
- (1410-24G) Ensure the power source circuits are properly grounded, then use the power cord supplied with the switch to connect it to the power source.
- If your installation requires a different power cord than the one supplied with the switch, ensure the cord is adequately sized for the switch's current requirements. In addition, be sure to use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the switch. If the supplied power cord does not fit, contact ProCurve Networking support.
- When installing the switch, the AC outlet should be near the switch and should be easily accessible in case the switch must be powered off.
- Ensure the switch does not overload the power circuits, wiring, and over-current protection. To determine the possibility of overloading the supply circuits, add together the ampere ratings of all devices installed on the same circuit as the switch and compare the total with the rating limit for the circuit. Maximum ampere ratings are usually printed on the devices near the AC power connectors.
- Do not install the switch in an environment where the operating ambient temperature might exceed 40°C (104°F). This includes a fully-enclosed rack. Ensure the air flow around the sides and back of the switch is not restricted. Leave at least 7.6 cm (3 inches) for cooling.
- Ensure all port covers are installed when the port is not in use.

Installation Procedures

These steps summarize your switch installation. The rest of this chapter provides details on these steps.

1. **Prepare the installation site (page 2-5).** Make sure the physical environment into which you will be installing the switch is properly prepared, including having the correct network cabling ready to connect to the switch and having an appropriate location for the switch. See [page 2-3](#) for some installation precautions.
2. **Verify the switch passes self test (page 2-6).** Plug the switch into a power source and observe that the LEDs on the switch's front panel indicate correct switch operation.
3. **Mount the switch (page 2-9).** The 1410-16G and 1410-24G Switches can be mounted in a 19-inch telco rack, in an equipment cabinet, on a wall, under a table, or on a horizontal surface. The 1410-8G Switch can be mounted on a wall, under a table, or on a horizontal surface.
4. **Connect power to the switch (page 2-15).** Once the switch is mounted, plug it into the main power source.
5. **Connect the network devices (page 2-18).** Using the appropriate network cables, connect the network devices to the switch ports.
6. **(Optional) Install mini-GBICs (page 2-19).** The 1410-24G Switch has two slots for installing mini-GBICs. Depending on where you install the switch, it may be easier to install the mini-GBICs first. Mini-GBICs can be hot swapped—they can be installed or removed while the switch is powered on.

At this point, your switch is fully installed. See the rest of this chapter if you need more detailed information on any of these installation steps.

1. Prepare the Installation Site

- **Cabling Infrastructure** - Ensure the cabling infrastructure meets the necessary network specifications. See appendix A, [“Cabling and Technology Information Specifications”](#) for more information:

- **Installation Location** - Before installing the switch, plan its location and orientation relative to other devices and equipment:
 - In the front or back of the switch, depending on where the ports are located, leave at least 7.6 cm (3 inches) of space for the twisted-pair and fiber-optic cabling.
 - In the back of the switch, leave at least 3.8 cm (1 1/2 inches) of space for the power cord.
 - On the sides of the switch, leave at least 7.6 cm (3 inches) for cooling.

2. Verify the Switch Passes Self Test

Before mounting the switch in its network location, you should first verify it is working properly by plugging it into a power source and verifying it passes its self test.

1. For the 1410-8G Switch and 1410-16G Switch, connect the AC/DC adapter's power cord to the power connector on the back of the switch, and then plug the AC/DC power adapter into a nearby properly grounded electrical outlet.

Note

The 1410-8G Switch and 1410-16G Switch are shipped with one of two types of AC/DC power adapter; either the universal AC/DC adapter with an AC power cord, or the wall plug-in AC/DC adapter (without an AC power cord).

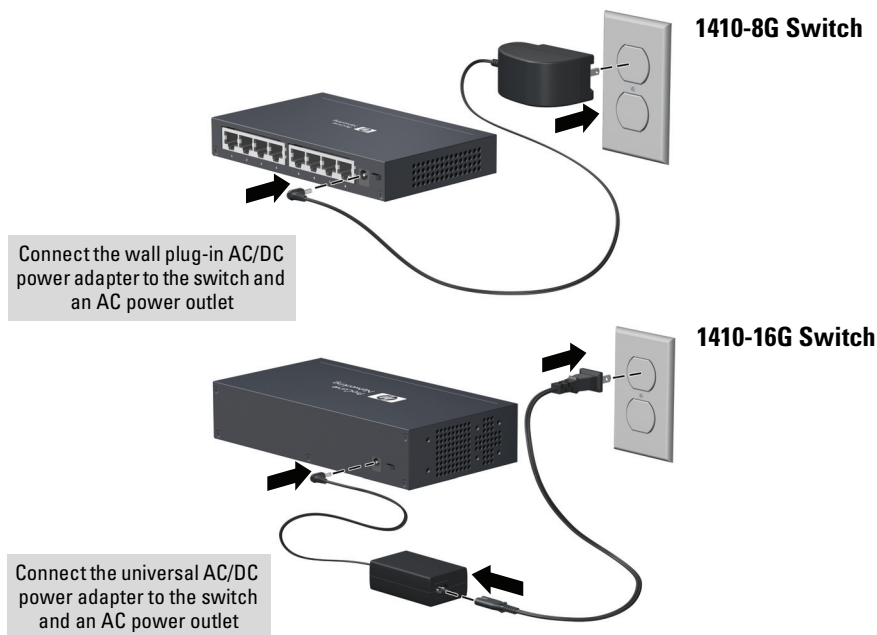


Figure 2-1. Connecting the 1410-8G Switch and 1410-16G Switch power adapters

For the 1410-24G Switch, connect the power cord supplied with the switch to the power connector on the back of the switch, and then into a properly grounded electrical outlet.



Figure 2-2. Connecting the 1410-24G Switch power cord

Note

The 1410-8G Switch and 1410-16G Switch do not have a power switch. They are powered on when the external AC/DC power adapter is connected to the switch and the adapter power cord to a power source. The external AC/DC power adapter automatically adjusts to any voltage between 100-240 volts and either 50 or 60 Hz.

The 1410-24G Switch also does not have a power switch. It is powered on when the power cord is connected to the switch and to a power source. For safety, the power outlet should be located near the switch installation. The switch automatically adjusts to any voltage between 100-127 or 200-240 volts and either 50 or 60 Hz. There are no voltage range settings required.

If your installation requires a different power cord than the one supplied with the switch, be sure the cord is adequately sized for the switch's current requirements. In addition, be sure to use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the switch. If the supplied power cord does not fit, contact ProCurve Networking support.

Caution

Use only the AC/DC power adapter and power cord (if applicable), supplied with the 1410-8G Switch and 1410-16G Switch. Use of other adapters or power cords, including those that came with other ProCurve Networking products, may result in damage to the equipment.

2. Check the LEDs on the switch as described below.

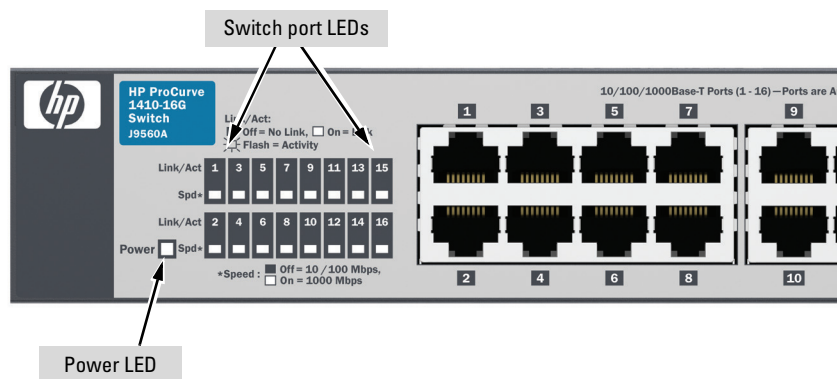


Figure 2-3. Checking the LEDs

When the switch is powered on, it performs its diagnostic self test. Self test takes approximately 3 seconds to complete.

LED Behavior

During the self test:

- Initially, the **Power** LED and port LEDs are all off.
- The **Power** LED turns on, then all of the port LEDs turn on briefly during the test.

When the self test completes successfully:

- The **Power** LED remains on.
- The port **Link/Act** and **Speed** LEDs on the front of the switch go into their normal operational mode:
 - If the ports are connected to active network devices, the **Link/Act** LEDs stay on or may be blinking to indicate port activity. The **Speed** LEDs turn on for 1000 Mbps links or stay off for 10/100 Mbps links.
 - If the ports are not connected to active network devices, the **Link/Act** and **Speed** LEDs will stay off.

If the LED display is different than what is described above, the self test has not completed correctly. Refer to chapter 4, “[Troubleshooting](#)” for diagnostic help.

3. Mount the Switch

After the switch passes self test, it is ready to be mounted in a stable location. The switch can be mounted in these ways:

- on a horizontal surface
- on a wall
- under a table
- rack or cabinet (1410-16G Switch and 1410-24G Switch only)

Rack or Cabinet Mounting

The 1410-16G Switch and 1410-24G Switch can be rack mounted using the included brackets.

Note that the mounting brackets have multiple mounting holes and can be rotated allowing for a wide variety of mounting options. Secure the rack in accordance with the manufacture's safety guidelines.

WARNING

For safe operation, please read the mounting precautions on [page 2-3](#), before mounting a switch.

Equipment Cabinet Note

The 12-24 screws supplied with the switch are the correct threading for standard EIA/TIA open 19-inch racks. If installing the switch in an equipment cabinet such as a server cabinet, use the clips and screws that came with the cabinet in place of the 12-24 screws that are supplied with the switch.

Rack Mounting the Switch

Note

Requires optional mounting bracket kit (not included).

1. Use a #1 Phillips (cross-head) screwdriver and attach the mounting brackets to the switch with the included 8-mm M4 screws.



Figure 2-4. Attaching mounting brackets to the 1410-16G Switch



Figure 2-5. Attaching mounting brackets to the 1410-24G Switch

Note

The mounting brackets have multiple mounting holes and can be rotated allowing for a wide variety of mounting options. These include mounting the switch so that its front face is flush with the face of the rack, or mounting it in a more balanced position.

WARNING

For safe reliable installation, only use the screws provided in the accessory kit to attach the mounting brackets to the switch.

2. Hold the switch with attached brackets up to the rack and move it vertically until rack holes line up with the bracket holes, then insert and tighten the four number 12-24 screws holding the brackets to the rack.

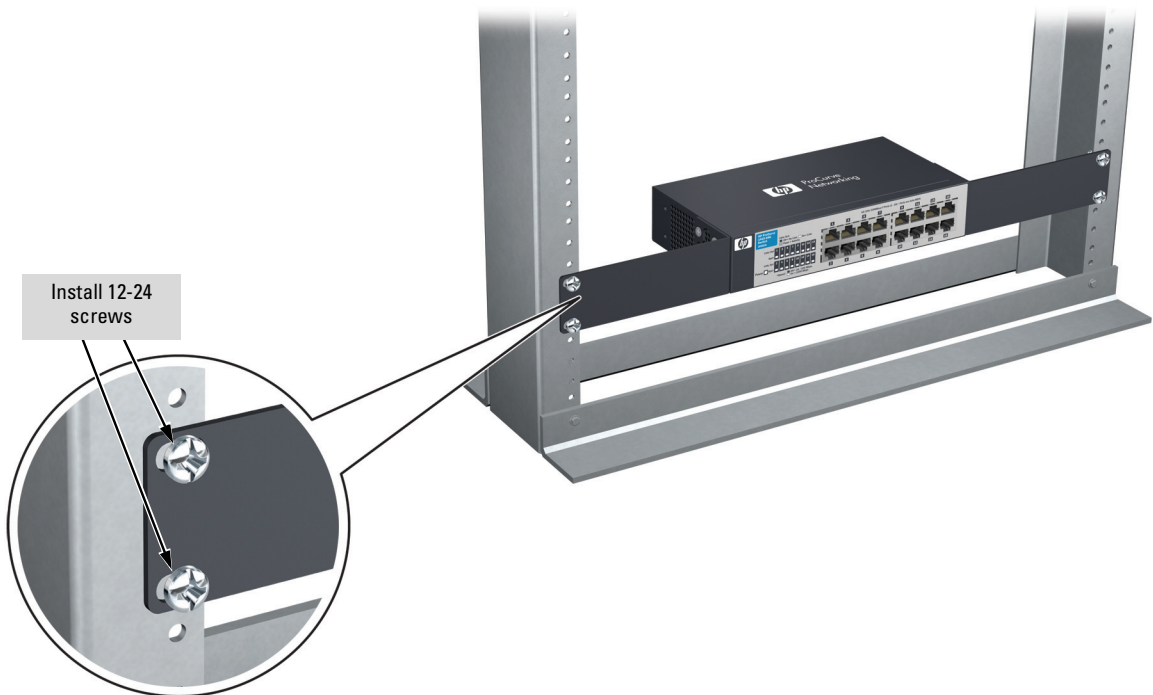


Figure 2-6. Mounting the 1410-16G Switch in a rack

Installing the Switch
Installation Procedures

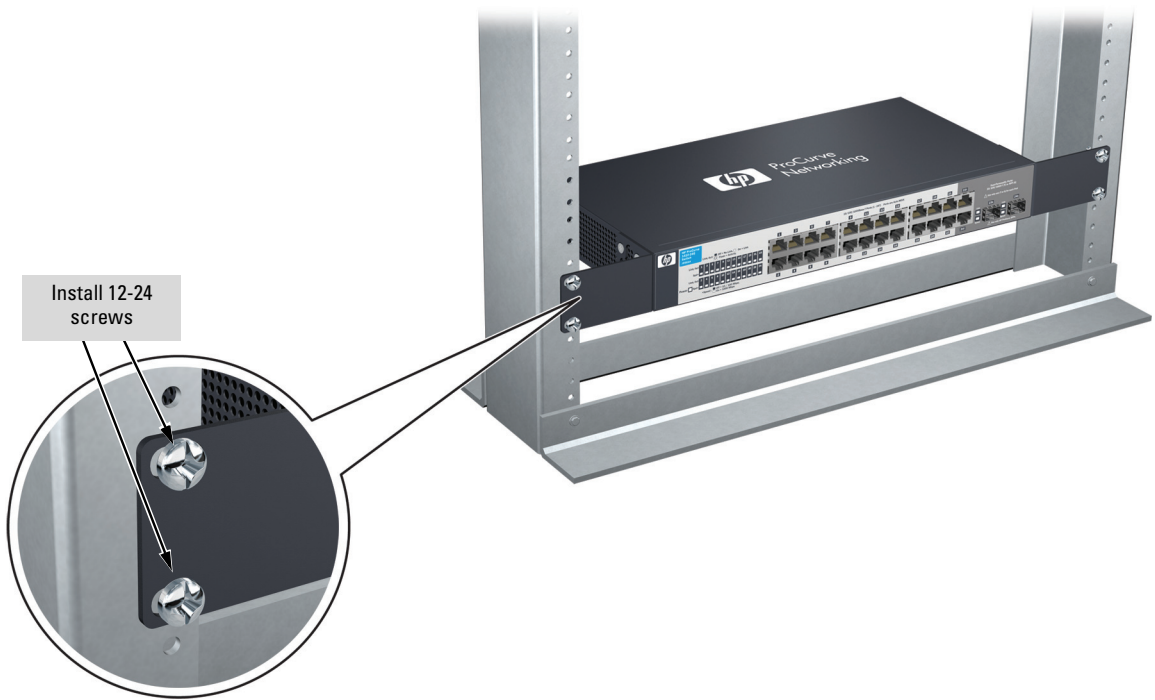


Figure 2-7. Mounting the 1410-24G Switch in a rack

Wall or Under-Table Mounting

You can mount the switch on a wall or under a table. A special kit for wall and under-table mounting is included with the switch.

WARNING

For safe operation, do not mount any of the switches with side ventilation ducts facing up or down.

For the 1410-24G Switch, the network ports must be facing up. Do not mount the switch with ports facing down.

For the 1410-16G Switch and 1410-8G Switch, the network ports may face up or down.

Caution

The switch should be mounted only to a wall or wood surface that is at least 1/2-inch (12.7 mm) plywood or its equivalent.

1. Position the mounting template (included in the Quick Setup Guide) in the required location, and mark the position for the mounting screws.
2. Use a #1 Phillips (cross-head) screwdriver and two of the included 20-mm M4 tap screws to mount the switch on the wall or wood surface.

Wall plugs are included in the accessory kit for use with plastered brick or concrete walls.

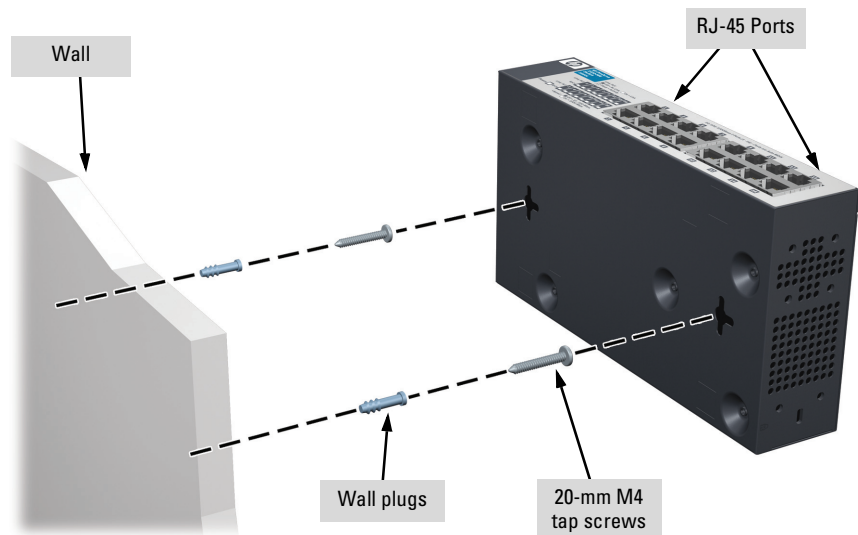


Figure 2-8. Wall Mounting the Switch

3. For under-table mounting, a third 20-mm M4 tap screw can be placed against one side of the switch to secure it in place.

Horizontal Surface Mounting

Place the switch on a table or other horizontal surface. The switch comes with rubber feet in the accessory kit that can be used to help keep the switch from sliding on the surface.

Attach the rubber feet to the four corners on the bottom of the switch within the embossed angled lines. Use a sturdy surface in an uncluttered area. You may want to secure the networking cables and switch power cord to the table leg or other part of the surface structure to help prevent tripping over the cords.

Caution

Ensure the air flow is not restricted around the sides and back of the switch.

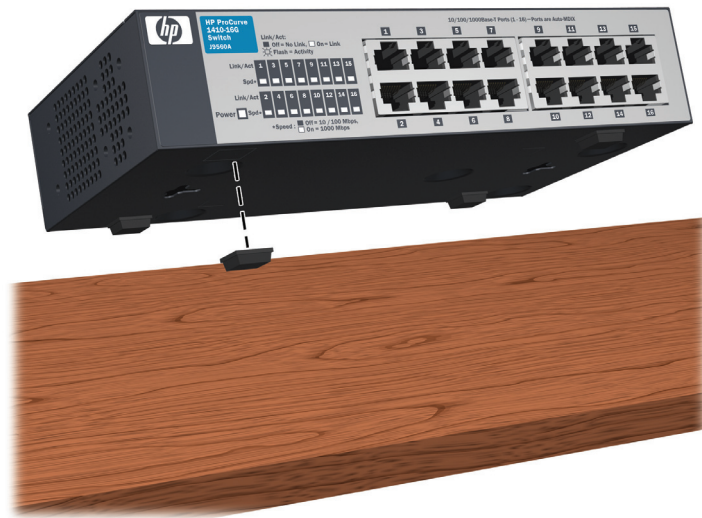


Figure 2-9. Horizontal Surface Mounting

Using a Kensington Security Cable

To prevent unauthorized removal of the switch, you can use a Kensington Slim MicroSaver security cable (not included) to attach the switch to an immovable object.

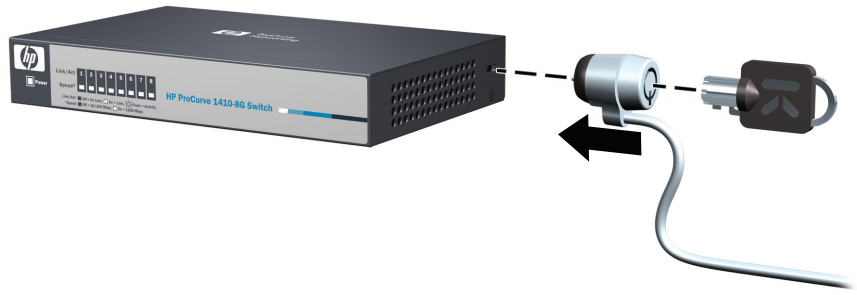


Figure 2-10. Using a Security Cable with the 1410-8G Switch or 1410-16G Switch



Figure 2-11. Using a Security Cable with the 1410-24G Switch

4. Connect the Switch to a Power Source

1. For the 1410-8G Switch and 1410-16G Switch, plug the AC/DC adapter's power cord into the switch, and then plug the AC/DC power adapter into a nearby AC power source.

For the 1410-24G Switch, plug the included power cord into the switch's power connector and into a nearby AC power source.

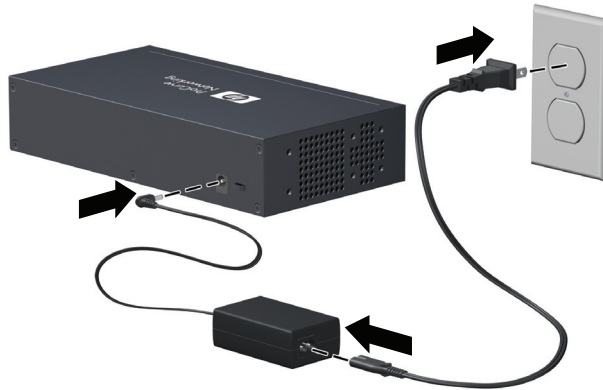


Figure 2-12. Connecting power on the 1410-8G Switch or 1410-16G Switch



Figure 2-13. Connecting the power cord on the 1410-24G Switch

2. Re-check the LEDs during self test. See [“LED Behavior” on page 2-8.](#)

3. For the 1410-8G Switch and 1410-16G Switch, use the included cable tie to secure the power cord to the switch.

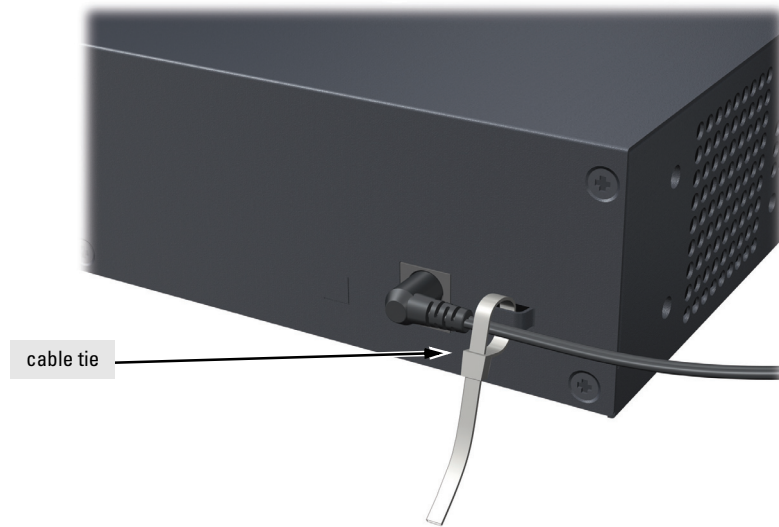


Figure 2-14. Securing the power cord on the 1410-8G Switch or 1410-16G Switch

5. Connect the Network Cables

Connect the network cables, described under “Cabling Infrastructure” (page 2-5), from the network devices or your patch panels to the fixed RJ-45 ports on the switch or to any mini-GBICs you have installed in the switch.

Using the RJ-45 Connectors

To connect:

Push the RJ-45 plug into the RJ-45 port until the tab on the plug clicks into place. When power is on for the switch and for the connected device, the **Link/Act** LED for the port should light to confirm a powered-on device (for example, an end node) is at the other end of the cable.

If the **Link/Act** LED does *not* go on when the network cable is connected to the port, see “[Diagnosing with the LEDs](#)” in chapter 4, “Troubleshooting”.

To disconnect:

Press the small tab on the plug and pull the plug out of the port.

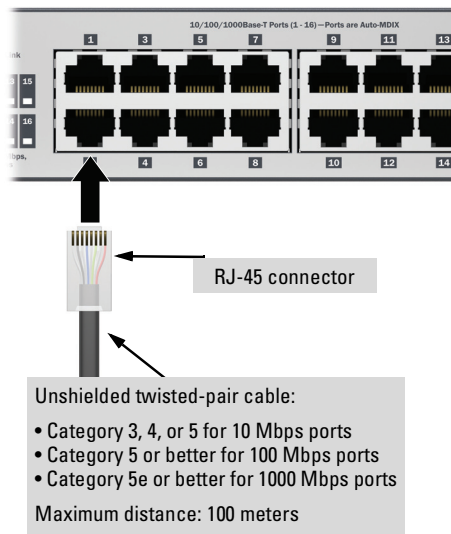


Figure 2-15. Connecting network cables

6. Installing or Removing mini-GBICs

You can install or remove a mini-GBIC from a mini-GBIC slot without having to power off the switch. Use only HP ProCurve mini-GBICs.

Caution

Hot swapping transceivers is supported. You can install or remove a transceiver with the switch powered on, a reset will not occur. However, rapid hotswaps are not recommended.

Notes

- The mini-GBIC slots are shared with 10/100/1000Base-T RJ-45 ports. When a mini-GBIC is installed in a slot, the associated RJ-45 port is disabled and cannot be used.
- Ensure the network cable is NOT connected when you install or remove a mini-GBIC.

Caution

Use only supported genuine HP ProCurve mini-GBICs with your switch. Non-ProCurve mini-GBICs are not supported, and their use may result in product malfunction. Should you require additional HP ProCurve mini-GBICs, contact your ProCurve Networking Sales and Service Office or authorized dealer.

Installing the mini-GBICs:

Remove the protective plastic cover and retain it for later use. Hold the mini-GBIC by its sides and gently insert it into either of the slots on the switch until the mini-GBIC clicks into place.

WARNING

The HP ProCurve mini-GBICs are Class 1 laser devices. Avoid direct eye exposure to the beam coming from the transmit port.

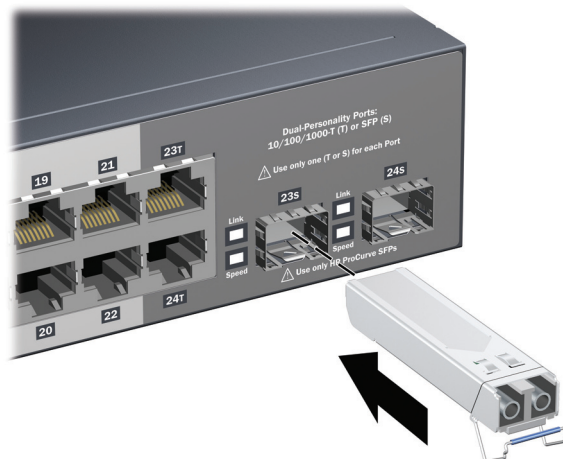


Figure 2-16. Installing a mini-GBIC (SFP)

Removing the mini-GBICs

Note

You should disconnect the network cable from the mini-GBIC before removing it from the switch.

Depending on when you purchased your ProCurve mini-GBIC, it may have either of three different release mechanisms: a plastic tab on the bottom of the mini-GBIC, a plastic collar around the mini-GBIC, or a wire bail.

To remove the mini-GBICs that have the plastic tab or plastic collar, push the tab or collar toward the switch until you see the mini-GBIC release from the switch (you can see it move outward slightly), and then pull it from the slot.

To remove the mini-GBICs that have the wire bail, lower the bail until it is approximately horizontal, and then using the bail, pull the mini-GBIC from the slot.

Replace the protective plastic cover on the mini-GBIC.

Connecting Cables to mini-GBICs

If you have any mini-GBICs installed in the switch, the type of network connections you will need to use depends on the type of mini-GBICs you have installed. See the table on [page 1-2](#), and appendix A, “[Specifications](#)”, for the mini-GBIC cabling information.

For mini-GBIC ports, and in general for all the switch ports, when a network cable from an active network device is connected to the port, the port LED for that port should go on. If the port LED does *not* go on when the network cable is connected to the port, see [“Diagnosing with the LEDs”](#) in chapter 4, “Troubleshooting”.

Sample Network Topologies

This section shows a few sample network topologies for implementing the switches. For more topology information, see the ProCurve networking products Web site, www.hp.com/go/procurve.

As a Desktop Switch

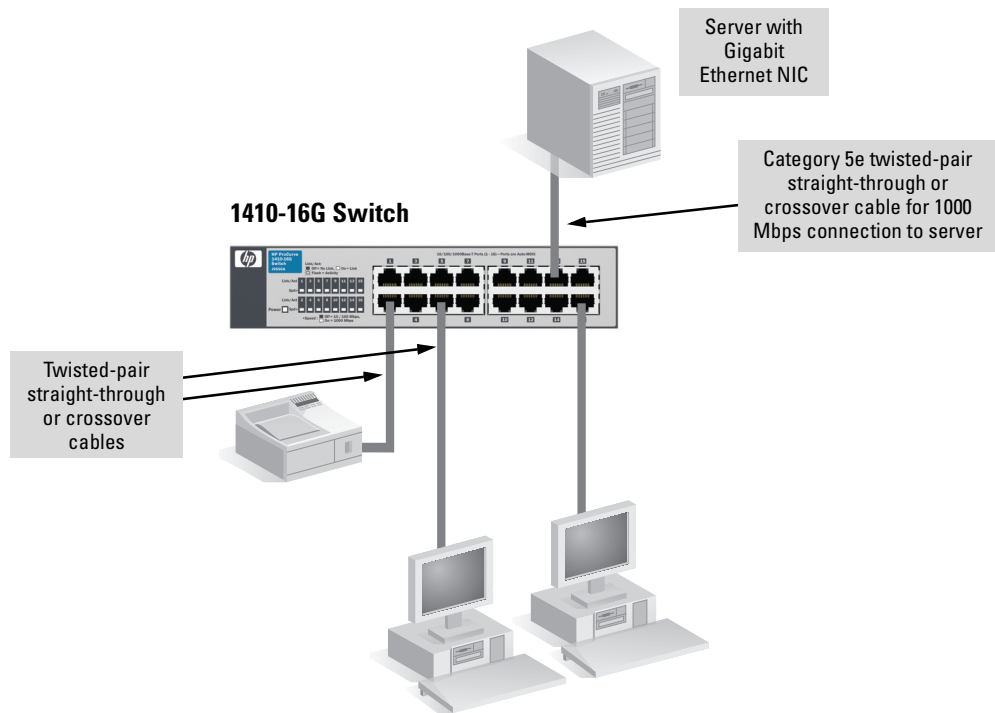


Figure 2-17. Basic desktop configuration

The switches are designed to be used as desktop switches to which end nodes, printers and other peripherals, and servers are directly connected, as shown in the above illustration.

The end node devices are connected to the switch by straight-through or crossover twisted-pair cables. Either cable type can be used because of the Auto-MDIX feature on the switches.

As a Segment Switch

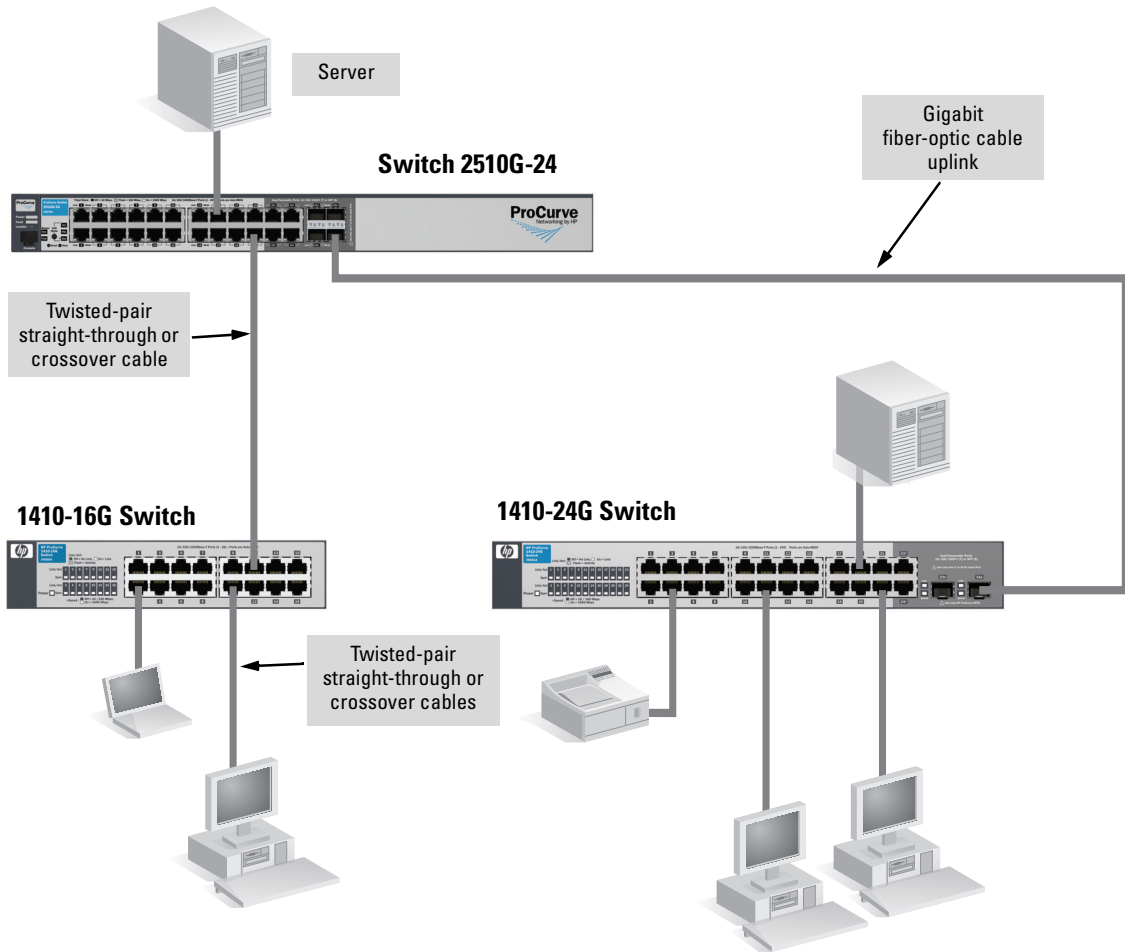


Figure 2-18. Segment network configuration

The switches also work well as segment switches. That is, with their high performance, they can be used for interconnecting network segments—simply connect the network devices that form those segments to the switches.

In the illustration above, a 1410-16G Switch and 1410-24G Switch with PCs, printers, and local servers attached, are both connected to a Switch 2510G-24. The devices attached to the two switches can now communicate with each other through the Switch 2510G-24. They can also all communicate with the server that is connected to a 1000Base-T port on the 1410-24G Switch.

Because the switches have the Auto-MDIX feature, the connections between the switches and end nodes or servers can be through category 5 straight-through or crossover twisted-pair cable. Category 3 or 4 cable can also be used if the connection is 10 Mbps only.

The connection between the 1410-24G Switch and Switch 2510G-24 is through fiber-optic cabling connected to Gigabit transceivers. All the devices on this network segment can access other network resources that are connected elsewhere on the network. Always remember when connecting fiber-optics that all components match in specification.

Troubleshooting

This chapter describes how to troubleshoot your 1410-8G Switch, 1410-16G Switch, and 1410-24G Switch. This document describes troubleshooting from a hardware perspective.

This chapter describes the following:

- basic troubleshooting tips ([page 3-1](#))
 - diagnosing with the LEDs ([page 3-3](#))
 - hardware diagnostic tests ([page 3-5](#))
 - HP Customer Support Services ([page 3-6](#))
-

Basic Troubleshooting Tips

Most problems are caused by the following situations. Check for these items first when starting your troubleshooting:

- **Connecting to devices that have a fixed full-duplex configuration.**
The RJ-45 ports are configured as “Auto”. That is, when connecting to attached devices, the switch operates in one of two ways to determine the link speed and the communication mode (half duplex or full duplex):
 - If the connected device is also configured to Auto, the switch will automatically negotiate both link speed and communication mode.
 - If the connected device has a fixed configuration, for example 100 Mbps, at half or full duplex, the switch will automatically sense the link speed, but will default to a communication mode of half duplex.

Caution

Because the switches behave in this way (*in compliance with the IEEE 802.3 standard*), if a device connected to the switch has a fixed configuration at full duplex, the device will not connect correctly to the switch. The result will be high error rates and very inefficient communications between the switch and the device.

Ensure all devices connected to the switches are configured to auto negotiate, or are configured to connect at half duplex (all hubs are configured this way, for example).

- **Faulty or loose cables.** Look for loose or obviously faulty connections. If the cables appear to be OK, make sure the connections are snug. If that does not correct the problem, try a different cable.
- **Non-standard cables.** Non-standard and miswired cables may cause network collisions and other network problems, and can seriously impair network performance. Use a new correctly-wired cable or compare your cable to the cable in appendix A, “[Cabling and Technology Information Specifications](#)” for pinouts and correct cable wiring. A category 5 cable tester is a recommended tool for every 100Base-TX and 1000Base-T network installation.
- **Improper Network Topologies.** It is important to make sure you have a valid network topology. Common topology faults include excessive cable length and excessive repeater delays between end nodes. If you have network problems after recent changes to the network, change back to the previous topology. If you no longer experience the problems, the new topology is probably at fault. Sample topologies are shown at the end of chapter 2 in this book, and some topology configuration guidelines can be found online at the ProCurve Web site, www.hp.com/go/procurve.

In addition, you should make sure that your network topology contains ***no data path loops***. Between any two end nodes, there should be only one active cabling path at any time. Data path loops will cause broadcast storms that will severely impact your network performance.

For more information on possible network problems and their solutions, refer to the technical note “Troubleshooting LAN Performance and Intermittent Connectivity Problems”, which can be found on the ProCurve Web site, www.hp.com/go/procurve, in the Reference Library section, A-Z Index.

Diagnosing with the LEDs

Table 3-1 shows LED patterns on the switch that indicate problem conditions for general switch operation troubleshooting.

LED patterns for General Switch Troubleshooting

1. Check in the table for the LED pattern you see on your switch.
2. Refer to the corresponding diagnostic tip on the next few pages.

Table 3-1. LED Error Indicators

LED Pattern Indicating Problems		Diagnostic Tips
Power	Port Link/Act LED	
Off with power cord plugged in	¹	❶
On	Off with cable connected	❷

¹ This LED is not important for the diagnosis.

Diagnostic Tips:

Tip	Problem	Solution
❶	The switch is not plugged into an active AC power source, or the switch's power supply may have failed.	<ol style="list-style-type: none">1. Verify the power cord is plugged into an active power source and to the switch. Make sure these connections are snug.2. Try power cycling the switch by unplugging and plugging the power cord back in.3. If the Power LED is still not on, verify the AC power source works by plugging another device into the outlet. Or try plugging the switch into a different outlet or try a different power cord. <p>If the power source and power cord are OK and this condition persists, the switch power supply may have failed. Call your ProCurve Networking authorized network reseller, or use the electronic support services from HP to get assistance. See the Software License, Warranty and Support booklet for more information.</p>
❷	The network connection is not working properly.	<p>Try the following procedures:</p> <ul style="list-style-type: none">• For the indicated port, verify that both ends of the cabling, at the switch and the connected device, are connected properly.• Verify the connected device and switch are both powered <i>on</i> and operating correctly.• Verify you have used the correct cable type for the connection:<ul style="list-style-type: none">– For twisted-pair connections to the fixed 10/100/1000 ports, either straight-through or crossover cables can be used because of the switch's "Auto-MDIX" feature and the Auto MDI/MDI-X feature of the 10/100/1000-T port.– For fiber-optic connections, verify the transmit port on the switch is connected to the receive port on the connected device, and the switch receive port is connected to the transmit port on the connected device.• For the dual-personality 10/100/1000-T ports, be sure a mini-GBIC is not installed in the associated slot.• For 1000Base-T connections, verify the network cabling complies with the IEEE 802.3ab standard. The cable should be installed according to the ANSI/TIA/EIA-568-A-5 specifications. Cable testing should comply with the stated limitations for Attenuation, Near-End Crosstalk, Far-End Crosstalk, Equal-Level Far-End Crosstalk (ELFEXT), Multiple Disturber ELFEXT, and Return Loss.<p>The cable verification process must include all patch cables from any end devices, including the switch, to any patch panels in the cabling path.</p>• Verify the switch port configuration of the attached device. All switch ports are configured as "Auto", so ports on the attached device also MUST be configured as "Auto". Depending on the port type, twisted-pair or fiber-optic, if the configurations do not match, the results could be a very unreliable connection, or no link at all.• If the other procedures don't resolve the problem, try using a different port or a different cable.

Hardware Diagnostic Tests

Testing the Switch by Resetting It

If you believe the switch is not operating correctly, you can reset the switch to test its circuitry and operating code. To perform a reset, power cycle the switch; unplug the power cord, wait 2 seconds, then reconnect power.

Power cycling the switch causes the switch to perform its power-on self test.

Testing Twisted-Pair Cabling

Network cables that fail to provide a link or provide an unreliable link between the switch and the connected network device may not be compatible with the IEEE 802.3 Type 10Base-T, 100Base-TX, or 1000Base-T standards. The twisted-pair cables attached to the switch must be compatible with the appropriate standards. To verify your cable is compatible with these standards, use a qualified cable test device.

Testing End-to-End Network Communications

Both the switch and the cabling can be tested by running an end-to-end communications test—a test that sends known data from one network device to another through the switch. For example, if you have two PCs on the network that have LAN adapters between which you can run a link-level test or Ping test through the switch, you can use this test to verify that the entire communication path between the two PCs is functioning correctly. See your LAN adapter documentation for more information on running a link test or Ping test.

HP Customer Support Services

If you are still having trouble with your switch, Hewlett-Packard offers support 24 hours a day, seven days a week through the use of a number of automated electronic services. See the Software License, Warranty and Support booklet that came with your switch for information on how to use these services to get technical support. The ProCurve Web site, www.hp.com/go/procurve also provides up-to-date support information.

Additionally, your HP-authorized network reseller can provide you with assistance, both with services that they offer and with services offered by HP.

Before Calling Support

Before calling your networking dealer or HP Support, to make the support process most efficient, you first should retrieve the following information:

Information Item	Information Location
<ul style="list-style-type: none">product identification, including mini-GBICs	the front of the switch and on labels on the mini-GBICs
<ul style="list-style-type: none">copy of your network topology map, including network addresses assigned to the relevant devices	your network records

Specifications

Switch Specifications

Physical

	Width	Depth	Height	Weight
1410-8G Switch (J9559A)	15.6 cm (6.14 in)	9.65 cm (3.8 in)	2.45 cm (0.96 in)	0.34 kg (0.74 lbs)
1410-16G Switch (J9560A)	20.85 cm (8.21 in)	11.2 cm (4.41 in)	4.4 cm (1.73 in)	0.65 kg (1.43 lbs)
1410-24G Switch (J9561A)	33.6 cm (13.23 in)	16.9 cm (6.65 in)	4.4 cm (1.73 in)	1.35 kg (2.98 lbs)

Electrical

	AC voltage	Maximum current	Frequency range
1410-8G Switch (J9559A) ¹ 1410-16G Switch (J9560A) ¹	100-240 volts	0.5A	50/60 Hz
1410-8G Switch (J9559A) ² 1410-16G Switch (J9560A) ²	100-240 volts	0.4A	50/60 Hz
1410-24G Switch (J9561A) ³	100-127 volts 200-240 volts	0.33A 0.2A	50/60 Hz

¹ Using universal AC/DC power adapter module 5188-6700.

² Using wall plug-in AC/DC power adapter module 5184-5863 or 5184-5864.

³ The switch automatically adjusts to any voltage between 100-127 or 200-240 volts and either 50 or 60 Hz.

	DC voltage	DC Maximum current
1410-8G Switch (J9559A)	12 volts	1A
1410-16G Switch (J9560A)	12 volts	1.08A

Environmental

	Operating	Non-Operating
Temperature	0°C to 40°C (32°F to 104°F)	-40°C to 70°C (-40°F to 158°F)
Relative humidity (non-condensing)	15% to 95% at 40°C (104°F)	15% to 90% at 65°C (149°F)
Maximum altitude	3048 m (10,000 ft)*	3048 m (10,000 ft)

* The operating maximum altitude should not exceed that of any accessory being connected to any switch.

BTU Ratings

Switch Model	Combined BTU
1410-8G Switch	41 BTU/hr (43.26 KJ/hr)
1410-16G Switch	44 BTU/hr (46.42 KJ/hr)
1410-24G Switch	75 BTU/hr (79.13 KJ/hr)

Acoustics

No fans.

Safety

1410-8G Switch and 1410-16G Switch comply with:

- EN 60950-1:2006 ; IEC 60950-1:2005

1410-24G Switch Complies with:

- EN 60950-1:2006 ; IEC 60950-1:2005 ; EN 60825-1:1994 +A1+A2 / IEC 60825-1:1993 +A2 Class 1
- Supported mini-GBICs: Class 1 Laser Products / Laser Klasse 1

Standards

Table A-1. Technology Standards and Safety Compliance

		Laser safety information	
Technology	Compatible with these IEEE standards	EN/IEC standard compliance	SFP ("mini-GBIC") Lasers
10-T	IEEE 802.3 10BASE-T,		
100-TX	IEEE 802.3u 100BASE-TX,		
1000-T	IEEE 802.3ab 1000BASE-T		
100-FX	IEEE 802.3u 100BASE-FX	EN/IEC 60825	Class 1 Laser Product Laser Klasse 1
100-BX	IEEE 802.3ah 100BASE-BX10	EN/IEC 60825	Class 1 Laser Product Laser Klasse 1
1000-SX	IEEE 802.3z 1000BASE-SX	EN/IEC 60825	Class 1 Laser Product Laser Klasse 1
1000-LX	IEEE 802.3z 1000BASE-LX	EN/IEC 60825	Class 1 Laser Product Laser Klasse 1
1000-LH	(not an IEEE standard)	EN/IEC 60825	Class 1 Laser Product Laser Klasse 1
1000-BX	IEEE 802.3ah 1000BASE-BX10	EN/IEC 60825	Class 1 Laser Product Laser Klasse 1

Cabling and Technology Information Specifications

Table A-2. Cabling Specifications

Twisted-pair copper	10 Mbps Operation	Category 3, 4 or 5, 100-ohm unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable, complying with IEEE 802.3 10BASE-T specifications.
	100 Mbps Operation	Category 5, 100-ohm UTP or STP cable, complying with IEEE 802.3u 100BASE-TX specifications.
	1000 Mbps Operation	Category 5, 100-ohm 4-pair UTP or STP cable, complying with IEEE 802.3ab 1000BASE-T specifications—Category 5e or better is recommended. See Note on 1000BASE-T Cable Requirements below.
Multimode fiber		62.5/125 μm or 50/125 μm (core/cladding) diameter, low metal content, graded index fiber-optic cables, complying with the ITU-T G.651 and ISO/IEC 793-2 Type A1b or A1a standards respectively. ¹
Single mode fiber		9/125 μm (core/cladding) diameter, low metal content fiber-optic cables, complying with the ITU-T G.652 and ISO/IEC 793-2 Type B1 standards.
¹ A mode conditioning patch cord may be needed for some Gigabit-LX installations. See “Mode Conditioning Patch Cord” on page A-6 for more information.		

Note on 1000BASE-T Cable Requirements. The Category 5 networking cables that work for 100BASE-TX connections should also work for 1000BASE-T, as long as all four-pairs are connected. But, for the most robust connections, you should use cabling that complies with the Category 5e specifications, as described in Addendum 5 to the TIA-568-A standard (ANSI/TIA/EIA-568-A-5).

Because of the increased speed provided by 1000BASE-T (Gigabit-T), network cable quality is more important than for either 10BASE-T or 100BASE-TX. Cabling plants being used to carry 1000BASE-T networking must comply with the IEEE 802.3ab standards. In particular, the cabling must pass tests for Attenuation, Near-End Crosstalk (NEXT), and Far-End Crosstalk (FEXT). Additionally, unlike the cables for 100BASE-TX, the 1000BASE-T cables must pass tests for Equal-Level Far-End Crosstalk (ELFEXT) and Return Loss.

When testing your cabling, be sure to include the patch cables that connect the switch and other end devices to the patch panels on your site. The patch cables are frequently overlooked when testing cable and they must also comply with the cabling standards.

Technology Distance Specifications

Table A-3. Technology Distance Specifications

Technology	Supported cable type	Multimode fiber modal bandwidth	Supported distances
100-FX	multimode fiber	any	up to 2,000 meters
100-BX	single mode fiber	N/A	0.5 - 10,000 meters
1000-T	twisted-pair copper	N/A	up to 100 meters
1000-SX	multimode fiber	160 MHz*km	2 - 220 meters
		200 MHz*km	2 - 275 meters
		400 MHz*km	2 - 500 meters
		500 MHz*km	2 - 550 meters
1000-LX	multimode fiber	400 MHz*km	2 - 550 meters
	single mode fiber	500 MHz*km	2 - 550 meters
1000-LH	single mode fiber	N/A	10 - 70,000 meters ¹
1000-BX	single mode fiber	N/A	0.5 - 10,000 meters
¹ For distances less than 20km, a 10dB attenuator must be used. For distances between 20km and 40km, a 5dB attenuator must be used. Attenuators can be purchased from most cable vendors.			

Mode Conditioning Patch Cord

The following information applies to installations in which multimode fiber-optic cables are connected to a Gigabit-LX port. Multimode cable has a design characteristic called “Differential Mode Delay”, which requires the transmission signals be “conditioned” to compensate for the cable design and thus prevent resulting transmission errors.

Under certain circumstances, depending on the cable used and the lengths of the cable runs, an external Mode Conditioning Patch Cord may need to be installed between the Gigabit-LX and the multimode network cable to provide the transmission conditioning. If you experience a high number of transmission errors on those ports, usually CRC or FCS errors, you may need to install one of these patch cords between the fiber-optic port in your switch and your multimode fiber-optic network cabling, at both ends of the network link.

The patch cord consists of a short length of single mode fiber cable coupled to graded-index multimode fiber cable on the transmit side, and only multimode cable on the receive side. The section of single mode fiber is connected in such a way that it minimizes the effects of the differential mode delay in the multimode cable.

Note

Most of the time, if you are using good quality graded-index multimode fiber cable that adheres to the standards listed in Appendix B, there should not be a need to use mode conditioning patch cords in your network. This is especially true if the fiber runs in your network are relatively short.

Installing the Patch Cord

As shown in the illustration below, connect the patch cord to the ProCurve transceiver with the section of single mode fiber plugged in to the Tx (transmit) port. Then, connect the other end of the patch cord to your network cabling patch panel, or directly to the network multimode fiber.

If you connect the patch cord directly to the network cabling, you may need to install a female-to-female adapter to allow the cables to be connected together.

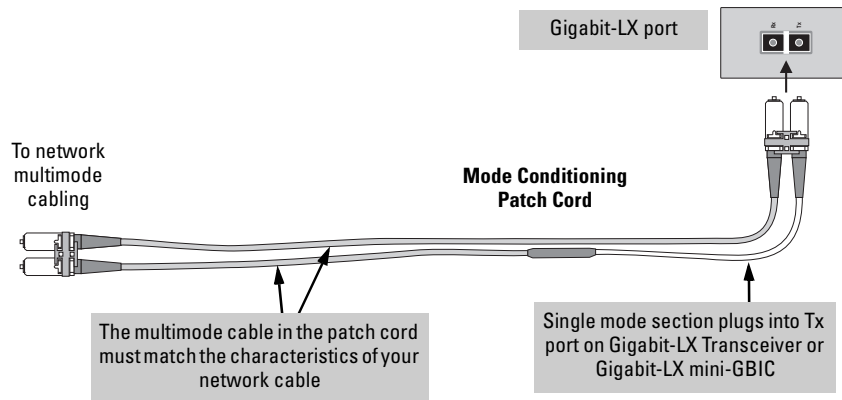


Figure A-1. Example: Connecting a Mode Conditioning Patch Cord for Gigabit-LX

Make sure you purchase a patch cord that has appropriate connectors on each end, and has multimode fibers that match the characteristics of the multimode fiber in your network. Most important, the core diameter of the multimode patch cord must match the core diameter of the multimode cable infrastructure (either 50 or 62.5 microns).

Twisted-Pair Cable/Connector Pin-Outs

The Auto-MDIX Feature: In the default configuration, “Auto”, the fixed 10/100/1000Base-T ports on the switches all automatically detect the type of port on the connected device and operate as either an MDI or MDI-X port, whichever is appropriate. So for any connection, a straight-through twisted-pair cable can be used—you no longer have to use crossover cables, although crossover cables can also be used for any of the connections. (The 10/100/1000-T ports support the IEEE 802.3ab standard, which includes the “Auto-MDIX” feature.)

If you connect a switch twisted-pair port to another switch or hub, which typically have MDI-X ports, the switch port automatically operates as an MDI port. If you connect it to an end node, such as a server or PC, which typically have MDI ports, the switch port operates as an MDI-X port. In all cases, you can use standard straight-through cables or crossover cables.

If you happen to use a correctly wired crossover cable, though, the switch will still be able to automatically detect the MDI/MDI-X operation and link correctly to the connected device.

Note

Using Fixed Configurations. If the port configuration is changed to any of the fixed configurations though, for example 100 Mbps/full duplex, the port operates as MDI-X only and the correct cable type must be used: for connections to MDI ports, such as end nodes, use a straight-through cable; for connections to MDI-X ports, such as on hubs and other switches, use a crossover cable.

Other Wiring Rules:

- All twisted-pair wires used for 10 Mbps, and 100 Mbps operation must be twisted through the entire length of the cable. The wiring sequence must conform to EIA/TIA 568-B (not USOC). See “Twisted-Pair Cable Pin Assignments” later in this appendix for a listing of the signals used on each pin.
- For 1000Base-T connections, all four pairs of wires in the cable must be available for data transmission.
- For 10 Mbps connections to the ports, you can use Category 3, 4, or 5 unshielded twisted-pair cable, as supported by the IEEE 802.3 Type 10Base-T standard.


- For 100 Mbps connections to the ports, use 100-ohm Category 5 UTP or STP cable only, as supported by the IEEE 802.3u Type 10Base-TX standard.
- For 1000 Mbps connections, 100-ohm Category 5e or better cabling is recommended.

Straight-through Twisted-Pair Cable for 10 Mbps or 100 Mbps Network Connections

Because of the Auto-MDIX operation of the 10/100 ports on the switch, for all network connections, to PCs, servers or other end nodes, or to hubs or other switches, you can use straight-through cables.

If any of these ports are given a fixed configuration, for example 100 Mbps/ Full Duplex, the ports operate as MDI-X ports, and straight-through cables must be then used for connections to PC NICs and other MDI ports.

Cable Diagram

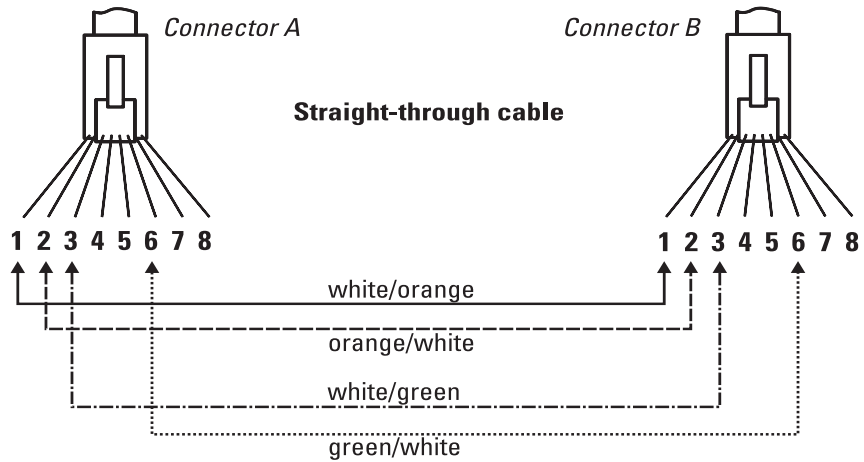

Note

Pins 1 and 2 on connector “A” *must* be wired as a twisted pair to pins 1 and 2 on connector “B”.

Pins 3 and 6 on connector “A” *must* be wired as a twisted pair to pins 3 and 6 on connector “B”.

Pins 4, 5, 7, and 8 are not used in this application, although they may be wired in the cable.

Pin Assignments


Switch End (MDI-X)		Computer, Transceiver, or Other End		
Signal	Pins	Pins	Signal	
receive +	1	←	1	transmit +
receive -	2	←	2	transmit -
transmit +	3	→	3	receive +
transmit -	6	→	6	receive -

Crossover Twisted-Pair Cable for 10 Mbps or 100 Mbps Network Connection

The Auto-MDIX operation of the 10/100 ports on the switch also allows you to use crossover cables for all network connections, to PCs, servers or other end nodes, or to hubs or other switches.

If any of these ports are given a fixed configuration, for example 100 Mbps/ Full Duplex, the ports operate as MDI-X ports, and crossover cables *must* be then used for connections to hubs or switches or other MDI-X network devices.

Cable Diagram

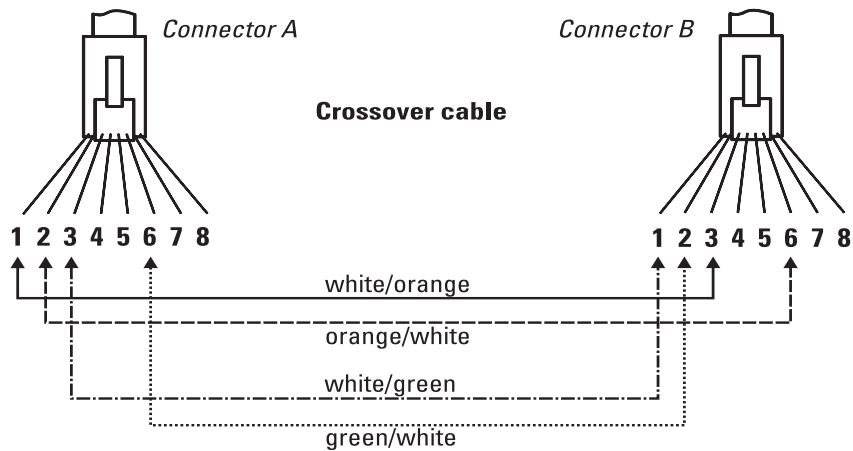

Note

Pins 1 and 2 on connector “A” *must* be wired as a twisted pair to pins 3 and 6 on connector “B”.

Pins 3 and 6 on connector “A” *must* be wired as a twisted pair to pins 1 and 2 on connector “B”.

Pins 4, 5, 7, and 8 are not used in this application, although they may be wired in the cable.


Pin Assignments

Switch End (MDI-X)		Hub or Switch Port, or Other MDI-X Port End	
Signal	Pins	Pins	Signal
receive +	1	6	transmit -
receive -	2	3	transmit +
transmit +	3	2	receive -
transmit -	6	1	receive +

Straight-Through Twisted-Pair Cable for 1000 Mbps Network Connections

1000Base-T connections require that all four pairs of wires be connected.

Cable Diagram

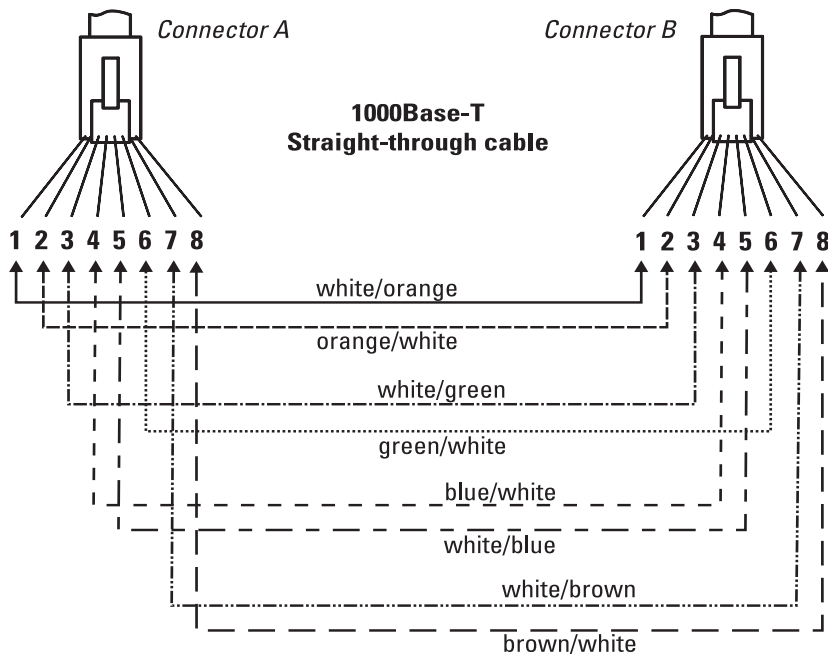

Note

Pins 1 and 2 on connector “A” *must* be wired as a twisted pair to pins 1 and 2 on connector “B”.
Pins 3 and 6 on connector “A” *must* be wired as a twisted pair to pins 3 and 6 on connector “B”.
Pins 4 and 5 on connector “A” *must* be wired as a twisted pair to pins 4 and 5 on connector “B”.
Pins 7 and 8 on connector “A” *must* be wired as a twisted pair to pins 7 and 8 on connector “B”.

Pin Assignments

For 1000Base-T operation, all four pairs of wires are used for both transmit and receive.

Safety and EMC Regulatory Statements

Safety Information



Documentation reference symbol. If the product is marked with this symbol, refer to the product documentation to get more information about the product.

WARNING

A WARNING in the manual denotes a hazard that can cause injury or death.

Caution

A Caution in the manual denotes a hazard that can damage equipment.

Do not proceed beyond a WARNING or Caution notice until you have understood the hazardous conditions and have taken appropriate steps.

Grounding

These are safety class I products and have protective earthing terminals. There must be an uninterruptible safety earth ground from the main power source to the product's input wiring terminals, power cord, or supplied power cord set. Whenever it is likely that the protection has been impaired, disconnect the power cord until the ground has been restored.

For LAN cable grounding:

- If your LAN covers an area served by more than one power distribution system, be sure their safety grounds are securely interconnected.
- LAN cables may occasionally be subject to hazardous transient voltages (such as lightning or disturbances in the electrical utilities power grid). Handle exposed metal components of the network with caution.

Servicing

There are no user-serviceable parts inside these products. Any servicing, adjustment, maintenance, or repair must be performed only by service-trained personnel.

These products do not have a power switch; they are powered on when the power cord is plugged in.

Informations concernant la sécurité



Symbole de référence à la documentation. Si le produit est marqué de ce symbole, reportez-vous à la documentation du produit afin d'obtenir des informations plus détaillées.

WARNING

Dans la documentation, un WARNING indique un danger susceptible d'entraîner des dommages corporels ou la mort.

Caution

Un texte de mise en garde intitulé Caution indique un danger susceptible de causer des dommages à l'équipement.

Ne continuez pas au-delà d'une rubrique WARNING ou Caution avant d'avoir bien compris les conditions présentant un danger et pris les mesures appropriées.

Cet appareil est un produit de classe I et possède une borne de mise à la terre. La source d'alimentation principale doit être munie d'une prise de terre de sécurité installée aux bornes du câblage d'entrée, sur le cordon d'alimentation ou le cordon de raccordement fourni avec le produit. Lorsque cette protection semble avoir été endommagée, débrancher le cordon d'alimentation jusqu'à ce que la mise à la terre ait été réparée.

Mise à la terre du câble de réseau local:

- si votre réseau local s'étend sur une zone desservie par plus d'un système de distribution de puissance, assurez-vous que les prises de terre de sécurité soient convenablement interconnectées.
- Les câbles de réseaux locaux peuvent occasionnellement être soumis à des surtensions transitoires dangereuses (telles que la foudre ou des perturbations dans le réseau d'alimentation public). Manipulez les composants métalliques du réseau avec précautions.

Aucune pièce contenue à l'intérieur de ce produit ne peut être réparée par l'utilisateur. Tout dépannage, réglage, entretien ou réparation devra être confié exclusivement à un personnel qualifié.

Cet appareil ne comporte pas de commutateur principal; la mise sous tension est effectuée par branchement du cordon d'alimentation.

Hinweise zur Sicherheit



Symbol für Dokumentationsverweis. Wenn das Produkt mit diesem Symbol markiert ist, schlagen Sie bitte in der Produktdokumentation nach, um mehr Informationen über das Produkt zu erhalten.

WARNING

Eine WARNING in der Dokumentation symbolisiert eine Gefahr, die Verletzungen oder sogar Todesfälle verursachen kann.

Caution

Caution in der Dokumentation symbolisiert eine Gefahr, die das Gerät beschädigen kann.

Fahren Sie nach dem Hinweis WARNING oder Caution erst fort, nachdem Sie den Gefahrenzustand verstanden und die entsprechenden Maßnahmen ergriffen haben.

Dies ist ein Gerät der Sicherheitsklasse I und verfügt über einen schützenden Erdungsterminal. Der Betrieb des Geräts erfordert eine ununterbrochene Sicherheitserdung von der Hauptstromquelle zu den Geräteingabeterminals, den Netzkabeln oder dem mit Strom belieferten Netzkabelsatz voraus. Sobald Grund zur Annahme besteht, daß der Schutz beeinträchtigt worden ist, das Netzkabel aus der Wandsteckdose herausziehen, bis die Erdung wiederhergestellt ist.

Für LAN-Kabelerdung:

- Wenn Ihr LAN ein Gebiet umfaßt, das von mehr als einem Stromverteilungssystem beliefert wird, müssen Sie sich vergewissern, daß die Sicherheitserdungen fest untereinander verbunden sind.
- LAN-Kabel können gelegentlich gefährlichen Übergangsspannungen ausgesetzt werden (beispielsweise durch Blitz oder Störungen in dem Starkstromnetz des Elektrizitätswerks). Bei der Handhabung exponierter Metallbestandteile des Netzwerkes Vorsicht walten lassen.

Dieses Gerät enthält innen keine durch den Benutzer zu wartenden Teile. Wartungs-, Anpassungs-, Instandhaltungs- oder Reparaturarbeiten dürfen nur von geschultem Bedienungspersonal durchgeführt werden.

Dieses Gerät hat keinen Netzschalter; es wird beim Anschließen des Netzkabels eingeschaltet.

Considerazioni sulla sicurezza



Simbolo di riferimento alla documentazione. Se il prodotto è contrassegnato da questo simbolo, fare riferimento alla documentazione sul prodotto per ulteriori informazioni su di esso.

WARNING

La dicitura WARNING denota un pericolo che può causare lesioni o morte.

Caution

La dicitura Caution denota un pericolo che può danneggiare le attrezzature.

Non procedere oltre un avviso di WARNING o di Caution prima di aver compreso le condizioni di rischio e aver provveduto alle misure del caso.

Questo prodotto è omologato nella classe di sicurezza I ed ha un terminale protettivo di collegamento a terra. Dev'essere installato un collegamento a terra di sicurezza, non interrompibile che vada dalla fonte d'alimentazione principale ai terminali d'entrata, al cavo d'alimentazione oppure al set cavo d'alimentazione fornito con il prodotto. Ogniqualvolta vi sia probabilità di danneggiamento della protezione, disinserite il cavo d'alimentazione fino a quando il collegaento a terra non sia stato ripristinato.

Per la messa a terra dei cavi LAN:

- se la vostra LAN copre un'area servita da più di un sistema di distribuzione elettrica, accertatevi che i collegamenti a terra di sicurezza siano ben collegati fra loro;
- i cavi LAN possono occasionalmente andare soggetti a pericolose tensioni transitorie (ad esempio, provocate da lampi o disturbi nella griglia d'alimentazione della società elettrica); siate cauti nel toccare parti esposte in metallo della rete.

Nessun componente di questo prodotto può essere riparato dall'utente. Qualsiasi lavoro di riparazione, messa a punto, manutenzione o assistenza va effettuato esclusivamente da personale specializzato.

Questo apparato non possiede un commutatore principale; si mette scotto tensione all'inserirsi il cavo d'alimentazione.

Consideraciones sobre seguridad



Símbolo de referencia a la documentación. Si el producto va marcado con este símbolo, consultar la documentación del producto a fin de obtener mayor información sobre el producto.

WARNING

Una WARNING en la documentación señala un riesgo que podría resultar en lesiones o la muerte.

Caution

Una Caution en la documentación señala un riesgo que podría resultar en averías al equipo.

No proseguir después de un símbolo de WARNING o Caution hasta no haber entendido las condiciones peligrosas y haber tomado las medidas apropiadas.

Este aparato se enmarca dentro de la clase I de seguridad y se encuentra protegido por una borna de puesta a tierra. Es preciso que exista una puesta a tierra continua desde la toma de alimentación eléctrica hasta las bornas de los cables de entrada del aparato, el cable de alimentación o el juego de cable de alimentación suministrado. Si existe la probabilidad de que la protección a tierra haya sufrido desperfectos, desenchufar el cable de alimentación hasta haberse subsanado el problema.

Puesta a tierra del cable de la red local (LAN):

- Si la LAN abarca un área cuyo suministro eléctrico proviene de más de una red de distribución de electricidad, cerciorarse de que las puestas a tierra estén conectadas entre sí de modo seguro.
- Es posible que los cables de la LAN se vean sometidos de vez en cuando a voltajes momentáneos que entrañen peligro (rayos o alteraciones en la red de energía eléctrica). Manejar con precaución los componentes de metal de la LAN que estén al descubierto.

Este aparato no contiene pieza alguna susceptible de reparación por parte del usuario. Todas las reparaciones, ajustes o servicio de mantenimiento debe realizarlos solamente el técnico.

Este producto no tiene interruptor de potencia; se activa cuando se enchufa el cable de alimentación.

Safety Information (Japan)

安全性の考慮

安全記号



マニュアル参照記号。製品にこの記号がついている場合はマニュアルを参照し、注意事項等をご確認ください。

WARNING マニュアル中の「WARNING」は人身事故の原因となる危険を示します。

CAUTION マニュアル中の「CAUTION」は装置破損の原因となる危険を示します。

「WARNING」や「CAUTION」の項は飛ばさないで必ずお読みください。危険性に関する記載事項をよく読み、正しい手順に従った上で次の事項に進んでください。

これは安全性クラス1の製品で保護用接地端子を備えています。主電源から製品の入力配線端子、電源コード、または添付の電源コード・セットまでの間、切れ目のない安全接地が存在することが必要です。もしこの保護回路が損なわれたことが推測されるときは、接地が修復されるまで電源コードを外しておいてください。

LAN ケーブルの接地に関して:

- もし貴社の LAN が複数の配電システムにより電力を受けている領域をカバーしている場合には、それらのシステムの安全接地が確実に相互に結合されていることを確認してください。
- LAN ケーブルは時として危険な過度電圧（例えば雷や、配電設備の電力網での障害）にさらされることがあります。露出した金属部分の取扱いには十分な注意をはらってください。

本製品の内部にはユーザーが修理できる部品はありません。サービス、調整、保守および修理はサービス訓練を受けた専門家におまかせください。

本製品には電源スイッチがありません。電源コードを接続したとき電源入となります。

Japan Power Cord Warning

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Safety Information (China)

HP 网络产品使用安全手册

使用须知

欢迎使用惠普网络产品，为了您及仪器的安全，请您务必注意如下事项：

1. 仪器要和地线相接，要使用有正确接地插头的电源线，使用中国国家规定的220V电源。
2. 避免高温和尘土多的地方，否则易引起仪器内部部件的损坏。
3. 避免接近高温，避免接近直接热源，如直射太阳光、暖气等其它发热体。
4. 不要有异物或液体落入机内，以免部件短路。
5. 不要将磁体放置于仪器附近。

警告

为防止火灾或触电事故，请不要将该机放置于淋雨或潮湿处。

安装

安装辅助管理模块，请参看安装指南。

保修及技术支持

如果您按照以上步骤操作时遇到了困难，或想了解其它产品性能，请按以下方式与我们联系。

如是硬件故障：

1. 与售出单位或当地维修机构联系。
2. 中国惠普有限公司维修中心地址：
北京市海淀区知春路49号希格玛大厦
联系电话：010-62623888 转 6101
邮政编码：100080

如是软件问题：

1. 惠普用户响应中心热线电话：010-65645959
2. 传真自动回复系统：010-65645735

EMC Regulatory Statements

U.S.A.

FCC Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. Operation of this equipment in a residential area may cause interference in which case the user will be required to correct the interference at his own expense.

Canada

This product complies with Class A Canadian EMC requirements.

Australia/New Zealand



This product complies with Australia/New Zealand EMC Class A requirements.

Japan

VCCI Class A

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Korea

사용자 안내문 : A 급기기



이기는 업무용으로 전자파 적합등록을 받은 기기 이오니, 판매자 또는 사용자는 이점을 주의하시기 바라며, 만약 잘못 구입하셨을 때에는 구입한 곳에서 비업무용으로 교환하시기 바랍니다.

Taiwan

警告使用者：這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

European Community

1410-8G Switch

 invent	DECLARATION OF CONFORMITY according to ISO/IEC 17050-1 and EN17050-1	
Supplier's Name:	Hewlett-Packard Company	DOC#: RSVLC-0906_01072010
Supplier's Address:	8000 Foothills Blvd. Roseville, CA 95747-5502 U.S.A.	
declares, that the product		
Product Name²:	HP ProCurve 1410-8G Switch	
Product Model(s):	J9559A	
Regulatory Model Number¹:	RSVLC-0906	
Product Options:	5188-6700 World Wide power adapter 5184-5863 North American power adapter 5184-5864 European power adapter	
conforms to the following Product Specifications and Regulations:		
EMC: Class A EN 55022:2006 +A1 :2007 EN 55024:1998 +A1:2001 +A2:2003 EN 61000-3-2:2006 EN 61000-3-3:1995 +A1:2001 +A2 :2005 FCC CFR 47 Part 15 2008		
Safety: EN 60950-1:2006 IEC 60950-1:2005		
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and, (2) this device must accept any interference received, including interference that may cause undesired operation.		
The product herewith complies with the requirements of the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, and carries the CE-marking accordingly.		
Additional Information:		
1) This product is assigned a Regulatory Model Number which stays with the regulatory aspects of the design. The Regulatory Model Number is the main product identifier in the regulatory documentation and test reports. This number should not be confused with the marketing name or the product numbers.		
2) This product was tested with HP branded products only.		
Roseville, 07-January-2010	 Michael E. Avery, Regulatory Eng. Manager	
European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department HQ-TRE, Herrenberger Straße 140, D-71034 Böblingen (FAX: + 49-7031-14-3143)		

1410-16G Switch



DECLARATION OF CONFORMITY

according to ISO/IEC 17050-1 and EN17050-1

Supplier's Name: Hewlett-Packard Company DOC#: RSVLC-0907_01072010

Supplier's Address: 8000 Foothills Blvd.
Roseville, CA 95747-5502
U.S.A.

declares, that the product
Product Name²: HP ProCurve 1410-16G Switch

Product Model(s): J9560A

Regulatory Model Number¹: RSVLC-0907

Product Options:
5188-6700 World wide power adapter,
5184-5863 North American power adapter
5184-5864 European power adapter.

conforms to the following Product Specifications and Regulations:

EMC: Class A
EN 55022:2006 +A1 :2007
EN 55024:1998 +A1:2001 +A2:2003
EN 61000-3-2:2006
EN 61000-3-3:1995 +A1:2001 +A2 :2005
FCC CFR 47 Part 15 2008

Safety:
EN 60950-1:2006
IEC 60950-1:2005

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and, (2) this device must accept any interference received, including interference that may cause undesired operation.

The product herewith complies with the requirements of the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, and carries the CE-marking accordingly.

Additional Information:



- 1) This product is assigned a Regulatory Model Number which stays with the regulatory aspects of the design. The Regulatory Model Number is the main product identifier in the regulatory documentation and test reports. This number should not be confused with the marketing name or the product numbers.
- 2) This product was tested with HP branded products only.

Roseville, 07-January-2010


Michael E. Avery, Regulatory Eng. Manager

European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department HQ-TRE, Herrenberger Straße 140, D-71034 Böblingen (FAX: + 49-7031-14-3143)

1410-24G Switch

	DECLARATION OF CONFORMITY according to ISO/IEC 17050-1 and EN17050-1	
Supplier's Name:	Hewlett-Packard Company	DOC#: RSVLC-0908_12042009
Supplier's Address:	8000 Foothills Blvd. Roseville, CA 95747-5502 U.S.A.	
declares, that the product		
Product Name²:	HP ProCurve 1410-24G Switch	
Product Model(s):	J9561A	
Regulatory Model Number¹:	RSVLC-0908	
Product Options:		
conforms to the following Product Specifications and Regulations:		
EMC:	Class A EN 55022:2006 +A1 :2007 EN 55024:1998 +A1:2001 +A2:2003 EN 61000-3-2:2006 EN 61000-3-3:1995 +A1:2001 +A2 :2005 FCC CFR 47 Part 15 2008	
Safety:	EN 60950-1:2006 IEC 60950-1:2005 EN 60825-1:1994 +A1+A2 / IEC 60825-1:1993 +A2 Class 1	
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and, (2) this device must accept any interference received, including interference that may cause undesired operation.		
The product herewith complies with the requirements of the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, and carries the CE-marking accordingly.		
Additional Information:		
1) This product is assigned a Regulatory Model Number which stays with the regulatory aspects of the design. The Regulatory Model Number is the main product identifier in the regulatory documentation and test reports. This number should not be confused with the marketing name or the product numbers.		
2) This product was tested with HP branded products only.		
Roseville, 04-December-2009	 Michael E. Avery, Regulatory Eng. Manager	
European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department HQ-TRE, Herrenberger Straße 140, D-71034 Böblingen (FAX: + 49-7031-14-3143)		

Recycle Statements

Waste Electrical and Electronic Equipment (WEEE) Statements



Disposal of Waste Equipment by Users in Private Household in the European Union

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Likvidace zařízení soukromými domácími uživateli v Evropské unii

Tento symbol na produktu nebo balení označuje výrobek, který nesmí být vyhozen spolu s ostatním domácím odpadem. Povinností uživatele je předat takto označený odpad na předem určené sběrné místo pro recyklaci elektrických a elektronických zařízení. Okamžité třídění a recyklace odpadu pomůže uchovat přírodní prostředí a zajistí takový způsob recyklace, který ochrání zdraví a životní prostředí člověka. Další informace o možnostech odevzdání odpadu k recyklaci získáte na příslušném obecním nebo městském úřadě, od firmy zabývající se sběrem a svozem odpadu nebo v obchodě, kde jste produkt zakoupili.



Bortskaffelse af affald fra husstande i den Europæiske Union

Hvis produktet eller dets emballage er forsynet med dette symbol, angiver det, at produktet ikke må bortskaffes med andet almindeligt husholdningsaffald. I stedet er det dit ansvar at bortskaffe kasseret udstyr ved at aflevere det på den kommunale genbrugsstation, der forestår genvinding af kasseret elektrisk og elektronisk udstyr. Den centrale modtagelse og genvinding af kasseret udstyr i forbindelse med bortskaffelsen bidrager til bevarelse af naturlige ressourcer og sikrer, at udstyret genvindes på en måde, der beskytter både mennesker og miljø. Yderligere oplysninger om, hvor du kan aflevere kasseret udstyr til genvinding, kan du få hos kommunen, den lokale genbrugsstation eller i den butik, hvor du købte produktet.



Seadmete jäätmete kõrvaldamine eramajapidamistes Euroopa Liidus

See tootel või selle pakendil olev sümbol näitab, et kõnealust toodet ei tohi koos teiste majapidamisjäätmetega kõrvaldada. Teie kohus on oma seadmete jäätmed kõrvaldada, viies need elektri- ja elektroonikaseadmete jäätmete ringlussevõtmiseks selleks ettenähtud kogumispunkti. Seadmete jäätmete eraldi kogumine ja ringlussevõtmise kõrvaldamise ajal aitab kaitsta loodusvarasid ning tagada, et ringlussevõtmise toimub viisil, mis kaitseb inimeste tervist ning keskkonda. Lisateabe saamiseks selle kohta, kuhu oma seadmete jäätmed ringlussevõtmiseks viia, võtke palun ühendust oma kohaliku linnakantselei, majapidamisjäätmete kõrvaldamise teenistuse või kauplusega, kust Te toote ostsite.

Recycle Statements

Waste Electrical and Electronic Equipment (WEEE) Statements



Laitteiden hävittäminen kotitalouksissa Euroopan unionin alueella

Jos tuotteessa tai sen pakkauksessa on tämä merkki, tuotetta ei saa hävittää kotitalousjätteiden mukana. Tällöin hävitettävä laite on toimitettava sähkölaitteiden ja elektronisten laitteiden kierrätyspisteeseen. Hävitettävien laitteiden erillinen käsittely ja kierrätys auttavat säästämään luonnonvaroja ja varmistamaan, että laite kierrätetään tavalla, joka estää terveyshaitat ja suojelee luontoa. Lisätietoja paikoista, joihin hävitettävät laitteet voi toimittaa kierrätettäväksi, saa ottamalla yhteyttä jätehuoltoon tai liikkeeseen, josta tuote on ostettu.



Élimination des appareils mis au rebut par les ménages dans l'Union européenne

Le symbole apposé sur ce produit ou sur son emballage indique que ce produit ne doit pas être jeté avec les déchets ménagers ordinaires. Il est de votre responsabilité de mettre au rebut vos appareils en les déposant dans les centres de collecte publique désignés pour le recyclage des équipements électriques et électroniques. La collecte et le recyclage de vos appareils mis au rebut indépendamment du reste des déchets contribue à la préservation des ressources naturelles et garantit que ces appareils seront recyclés dans le respect de la santé humaine et de l'environnement. Pour obtenir plus d'informations sur les centres de collecte et de recyclage des appareils mis au rebut, veuillez contacter les autorités locales de votre région, les services de collecte des ordures ménagères ou le magasin dans lequel vous avez acheté ce produit.



Entsorgung von Altgeräten aus privaten Haushalten in der EU

Das Symbol auf dem Produkt oder seiner Verpackung weist darauf hin, dass das Produkt nicht über den normalen Hausmüll entsorgt werden darf. Benutzer sind verpflichtet, die Altgeräte an einer Rücknahmestelle für Elektro- und Elektronik-Altgeräte abzugeben. Die getrennte Sammlung und ordnungsgemäße Entsorgung Ihrer Altgeräte trägt zur Erhaltung der natürlichen Ressourcen bei und garantiert eine Wiederverwertung, die die Gesundheit des Menschen und die Umwelt schützt. Informationen dazu, wo Sie Rücknahmestellen für Ihre Altgeräte finden, erhalten Sie bei Ihrer Stadtverwaltung, den örtlichen Müllentsorgungsbetrieben oder im Geschäft, in dem Sie das Gerät erworben haben



Απόρριψη άχρηστου εξοπλισμού από χρήστες σε ιδιωτικά νοικοκυριά στην Ευρωπαϊκή Ένωση

Το σύμβολο αυτό στο προϊόν ή τη συσκευασία του υποδεικνύει ότι το συγκεκριμένο προϊόν δεν πρέπει να διατίθεται μαζί με τα άλλα οικιακά σας απορρίμματα. Αντίθετα, είναι δική σας ευθύνη να απορρίψετε τον άχρηστο εξοπλισμό σας παραδίδοντάς τον σε καθορισμένο σημείο συλλογής για την ανακύκλωση άχρηστου ηλεκτρικού και ηλεκτρονικού εξοπλισμού. Η ξεχωριστή συλλογή και ανακύκλωση του άχρηστου εξοπλισμού σας κατά την απόρριψη θα συμβάλει στη διατήρηση των φυσικών πόρων και θα διασφαλίσει ότι η ανακύκλωση γίνεται με τρόπο που προστατεύει την ανθρώπινη υγεία και το περιβάλλον. Για περισσότερες πληροφορίες σχετικά με το πού μπορείτε να παραδώσετε τον άχρηστο εξοπλισμό σας για ανακύκλωση, επικοινωνήστε με το αρμόδιο τοπικό γραφείο, την τοπική υπηρεσία διάθεσης οικιακών απορριμμάτων ή το κατάστημα όπου αγοράσατε το προϊόν.



Készülékek magánháztartásban történő selejtezése az Európai Unió területén

A készüléken, illetve a készülék csomagolásán látható azonos szimbólum annak jelzésére szolgál, hogy a készülék a selejtezés során az egyéb háztartási hulladéktól eltérő módon kezelendő. A vásárló a hulladékká vált készüléket köteles a kijelölt gyűjtőhelyre szállítani az elektromos és elektronikai készülékek újrahasznosítása céljából. A hulladékká vált készülékek selejtezés kori begyűjtése és újrahasznosítása hozzájárul a természeti erőforrások megőrzéséhez, valamint biztosítja a selejtezett termékek környezetre és emberi egészségre nézve biztonságos feldolgozását. A begyűjtés pontos helyéről bővebb tájékoztatást a lakhelye szerint illetékes önkormányzattól, az illetékes személtakarító vállalatától, illetve a terméket elárúsító helyen kaphat.



Smaltimento delle apparecchiature da parte di privati nel territorio dell'Unione Europea

Questo simbolo presente sul prodotto o sulla sua confezione indica che il prodotto non può essere smaltito insieme ai rifiuti domestici. È responsabilità dell'utente smaltire le apparecchiature consegnandole presso un punto di raccolta designato al riciclo e allo smaltimento di apparecchiature elettriche ed elettroniche. La raccolta differenziata e il corretto riciclo delle apparecchiature da smaltire permette di proteggere la salute degli individui e l'ecosistema. Per ulteriori informazioni relative ai punti di raccolta delle apparecchiature, contattare l'ente locale per lo smaltimento dei rifiuti, oppure il negozio presso il quale è stato acquistato il prodotto.



Nolietotu iekārtu iznīcināšanas noteikumi lietotājiem Eiropas Savienības privātajās mājāsaimniecībās

Šāds simbols uz izstrādājuma vai uz tā iesaiņojuma norāda, ka šo izstrādājumu nedrīkst izmest kopā ar citiem sadzīves atkritumiem. Jūs atbildat par to, lai nolietotās iekārtas tiktu nodotas speciāli iekārtotos punktos, kas paredzēti izmantoto elektrisko un elektronisko iekārtu savākšanai otrreizējai pārstrādei. Atsevišķa nolietoto iekārtu savākšana un otrreizējā pārstrāde palīdzēs saglabāt dabas resursus un garantēs, ka šīs iekārtas tiks otrreizēji pārstrādātas tādā veidā, lai pasargātu vidi un cilvēku veselību. Lai uzzinātu, kur nolietotās iekārtas var izmest otrreizējai pārstrādei, jāvērsas savas dzīves vietas pašvaldībā, sadzīves atkritumu savākšanas dienestā vai veikalā, kurā izstrādājums tika nopirkts.



Vartotojū iš privačių namų ūkių įrangos atliekų šalinimas Europos Sąjungoje

Šis simbolis ant gaminio arba jo pakuotės rodo, kad šio gaminio šalinti kartu su kitomis namų ūkio atliekoms negalima. Šalintinas įrangos atliekas privalote pristatyti į specialią surinkimo vietą elektros ir elektroninės įrangos atliekoms perdirbti. Atskirai surenkamos ir perdirbamos šalintinos įrangos atliekos padės saugoti gamtinius išteklius ir užtikrinti, kad jos bus perdirbtos tokiu būdu, kuris nekenkia žmonių sveikatai ir aplinkai. Jeigu norite sužinoti daugiau apie tai, kur galima pristatyti perdirbtinas įrangos atliekas, kreipkitės į savo seniūniją, namų ūkio atliekų šalinimo tarnybą arba parduotuvę, kurioje įsigijote gaminį.



Verwijdering van afgedankte apparatuur door privé-gebruikers in de Europese Unie

Dit symbool op het product of de verpakking geeft aan dat dit product niet mag worden gedeponeerd bij het normale huishoudelijke afval. U bent zelf verantwoordelijk voor het inleveren van uw afgedankte apparatuur bij een inzamelingspunt voor het recyclen van oude elektrische en elektronische apparatuur. Door uw oude apparatuur apart aan te bieden en te recyclen, kunnen natuurlijke bronnen worden behouden en kan het materiaal worden hergebruikt op een manier waarmee de volksgezondheid en het milieu worden beschermd. Neem contact op met uw gemeente, het afvalinzamelingsbedrijf of de winkel waar u het product hebt gekocht voor meer informatie over inzamelingspunten waar u oude apparatuur kunt aanbieden voor recycling.



Pozbywanie się zużytego sprzętu przez użytkowników w prywatnych gospodarstwach domowych w Unii Europejskiej

Ten symbol na produkcie lub jego opakowaniu oznacza, że produktu nie wolno wyrzucać do zwykłych pojemników na śmieci. Obowiązkiem użytkownika jest przekazanie zużytego sprzętu do wyznaczonego punktu zbiórki w celu recyklingu odpadów powstałych ze sprzętu elektrycznego i elektronicznego. Osobna zbiórka oraz recykling zużytego sprzętu pomogą w ochronie zasobów naturalnych i zapewnią ponowne wprowadzenie go do obiegu w sposób chroniący zdrowie człowieka i środowisko. Aby uzyskać więcej informacji o tym, gdzie można przekazać zużyty sprzęt do recyklingu, należy się skontaktować z urzędem miasta, zakładem gospodarki odpadami lub sklepem, w którym zakupiono produkt.

Recycle Statements

Waste Electrical and Electronic Equipment (WEEE) Statements



Descarte de Lixo Elétrico na Comunidade Européia

Este símbolo encontrado no produto ou na embalagem indica que o produto não deve ser descartado no lixo doméstico comum. É responsabilidade do cliente descartar o material usado (lixo elétrico), encaminhando-o para um ponto de coleta para reciclagem. A coleta e a reciclagem seletivas desse tipo de lixo ajudarão a conservar as reservas naturais; sendo assim, a reciclagem será feita de uma forma segura, protegendo o ambiente e a saúde das pessoas. Para obter mais informações sobre locais que reciclam esse tipo de material, entre em contato com o escritório da HP em sua cidade, com o serviço de coleta de lixo ou com a loja em que o produto foi adquirido.



Likvidácia vyradených zariadení v domácnostiach v Európskej únii

Symbol na výrobku alebo jeho balení označuje, že daný výrobok sa nesmie likvidovať s domovým odpadom. Povinnosťou spotrebiteľa je odovzdať vyradené zariadenie v zbernom mieste, ktoré je určené na recykláciu vyradených elektrických a elektronických zariadení. Separovaný zber a recyklácia vyradených zariadení prispieva k ochrane prírodných zdrojov a zabezpečuje, že recyklácia sa vykonáva spôsobom chrániacim ľudské zdravie a životné prostredie. Informácie o zberných miestach na recykláciu vyradených zariadení vám poskytne miestne zastupiteľstvo, spoločnosť zabezpečujúca odvoz domového odpadu alebo obchod, v ktorom ste si výrobok zakúpili.



Odstranjevanje odslužene opreme uporabnikov v zasebnih gospodinjstvih v Evropski uniji

Ta znak na izdelku ali njegovi embalaži pomeni, da izdelka ne smete odvreči med gospodinjске odpadke. Nasprotno, odsluženo opremo morate predati na zbirališče, pooblaščeno za recikliranje odslužene električne in elektronske opreme. Ločeno zbiranje in recikliranje odslužene opreme prispeva k ohranjanju naravnih virov in zagotavlja recikliranje te opreme na zdravju in okolju neškodljiv način. Za podrobnejše informacije o tem, kam lahko odpeljete odsluženo opremo na recikliranje, se obrnite na pristojni organ, komunalno službo ali trgovino, kjer ste izdelek kupili.



Eliminación de residuos de equipos eléctricos y electrónicos por parte de usuarios particulares en la Unión Europea

Este símbolo en el producto o en su envase indica que no debe eliminarse junto con los desperdicios generales de la casa. Es responsabilidad del usuario eliminar los residuos de este tipo depositándolos en un "punto limpio" para el reciclado de residuos eléctricos y electrónicos. La recogida y el reciclado selectivos de los residuos de aparatos eléctricos en el momento de su eliminación contribuirá a conservar los recursos naturales y a garantizar el reciclado de estos residuos de forma que se proteja el medio ambiente y la salud. Para obtener más información sobre los puntos de recogida de residuos eléctricos y electrónicos para reciclado, póngase en contacto con su ayuntamiento, con el servicio de eliminación de residuos domésticos o con el establecimiento en el que adquirió el producto.



Bortskaffande av avfallsprodukter från användare i privathushåll inom Europeiska Unionen

Om den här symbolen visas på produkten eller förpackningen betyder det att produkten inte får slängas på samma ställe som hushållssopor. I stället är det ditt ansvar att bortskaffa avfallet genom att överlämna det till ett uppsamlingsställe avsett för återvinning av avfall från elektriska och elektroniska produkter. Separat insamling och återvinning av avfallet hjälper till att spara på våra naturresurser och gör att avfallet återvinns på ett sätt som skyddar människors hälsa och miljön. Kontakta ditt lokala kommunkontor, din närmsta återvinningsstation för hushållsavfall eller affären där du köpte produkten för att få mer information om var du kan lämna ditt avfall för återvinning.

Index

Numerics

- 10/100Base-TX ports
 - location on switch ... 1-3
- 1000Base-BX ... A-5
 - fiber-optic cable specifications ... A-5
- 1000Base-LH ... A-5
 - fiber-optic cable specifications ... A-5
- 1000Base-T
 - 1000Base-T
 - fiber-optic cable specifications ... A-5

A

- AC power connector
 - location on back of switch ... 1-5
- acoustic specifications ... A-2
- auto MDI/MDI-X operation ... A-10, A-12
 - HP Auto-MDIX feature ... A-8

B

- back of switch
 - description ... 1-5
 - power connector ... 1-5
- basic troubleshooting tips ... 3-1
- BTU ratings ... A-2

C

- cabinet
 - mounting the switch in ... 2-9
- cables
 - connecting cables to switch ports ... 2-18
 - effects of non-standard cables ... 3-2
 - infrastructure requirements ... 2-5
- cables, twisted pair
 - category 3, 4, 5 ... A-8
 - cross-over cable pin-out ... A-11
 - MDI-X to MDI connections ... A-10, A-12
 - MDI-X to MDI-X connections ... A-11
 - pin-outs ... A-10, A-12
 - straight-through cable pin-out ... A-10, A-12
 - switch-to-computer connection ... A-10, A-12
 - switch-to-switch or hub connection ... A-11

- cables, twisted-pair
 - HP Auto-MDIX feature ... A-8
 - wiring rules ... A-8
- cables, twisted-pair connector pin-outs ... A-8
- cabling infrastructure ... 2-5
- Clear button
 - location on switch ... 1-3
- connecting the switch to a power source ... 2-15
- console port
 - location on switch ... 1-3
- cross-over cable
 - pin-out ... A-11

D

- description
 - back of switch ... 1-5
 - front of switch ... 1-3
 - LEDs ... 1-4
 - switch ... 1-1
- desktop switch
 - sample topology ... 2-22
- diagnostic tests ... 3-5
 - end-to-end connectivity ... 3-5
 - testing the switch only ... 3-5
 - testing twisted-pair cabling ... 3-5

E

- electrical specifications, switch ... A-1
- EMC regulatory statements ... B-8
- environmental specifications
 - BTU ratings ... A-2
- environmental specifications, switch ... A-2

F

- Fault LED
 - behavior during self test ... 2-8
 - location on switch ... 1-3
- features
 - switch ... 1-6

- fiber-optic cables
 - 1000Base-BX ... A-5
 - 1000Base-LH ... A-5
 - 1000Base-T ... A-5
- flashing LEDs
 - error indications ... 3-3
- front of switch ... 1-3
 - 10/100Base-TX ports ... 1-3
 - description ... 1-3
 - LEDs ... 1-4
 - network ports ... 1-4
- full-duplex fixed configuration
 - effects on network connections ... 3-1

H

- horizontal surface
 - mounting switch on ... 2-14
- HP Auto-MDIX
 - feature description ... A-8

I

- included parts ... 2-1
- installation
 - connecting the switch to a power source ... 2-15
 - horizontal surface mounting ... 2-14
 - location considerations ... 2-5
 - network cable requirements ... 2-5
 - precautions ... 2-3
 - rack or cabinet mounting ... 2-9
 - site preparation ... 2-5
 - wall mounting ... 2-13

L

- LEDs
 - behavior during self test ... 2-8
 - descriptions of ... 1-4
 - error indications ... 3-3
 - Fault
 - behavior during self test ... 2-8
 - location on switch ... 1-3
 - on switch ... 1-4
 - Power ... 1-4
 - behavior during self test ... 2-8
- location for the switch, considerations ... 2-5

M

- MDI-X to MDI network cable ... A-10, A-12
- MDI-X to MDI-X network cable ... A-11
- mini-GBICs
 - slot, location on switch ... 1-3
- mounting the switch
 - in a rack or cabinet ... 2-9
 - precautions ... 2-3
 - on a horizontal surface ... 2-14
 - on a wall ... 2-13
 - precautions ... 2-13

N

- network cables
 - HP Auto-MDIX feature ... A-8
 - required types ... 2-5
 - twisted-pair connector pin-outs ... A-8
 - twisted-pair, wiring rules ... A-8
- network devices
 - connecting to the switch ... 2-18
- network ports
 - connecting to ... 2-18
 - location on switch ... 1-4
 - types of ... 1-4
- non-standard network cables, effects ... 3-2

P

- parts, included with the switch ... 2-1
- physical specifications, switch ... A-1
- pin-outs
 - twisted-pair cables ... A-8
- port LEDs
 - normal operation ... 2-8
- ports
 - 10/100Base-TX, location on switch ... 1-3, 1-5
 - connecting to ... 2-18
 - HP Auto-MDIX feature ... A-8
 - network connections ... 2-18
- power connector ... 1-5
- Power LED ... 1-4
 - behavior during self test ... 2-8
 - behaviors ... 1-4
 - location on switch ... 1-3
- power source
 - connecting the switch to ... 2-15

- precautions
 - mounting the switch ... 2-3
 - power requirements ... 2-3
- preparing the installation site ... 2-5

R

- rack
 - mounting precautions ... 2-3
 - mounting the switch in ... 2-9
- recycle statements ... C-1
- regulatory statements ... B-8
- Reset button
 - location on switch ... 1-3
- resetting the switch
 - troubleshooting procedure ... 3-5

S

- safety and regulatory statements ... B-1
- safety specifications ... A-2
- segment switch
 - sample topology ... 2-23
- self test
 - Fault LED behavior ... 2-8
 - LED behavior during ... 2-8
 - Power LED behavior ... 2-8
- SFP ports ... 1-1
- slots for mini-GBICs
 - location on switch ... 1-3
- specifications
 - acoustic ... A-2
 - electrical ... A-1
 - environmental ... A-2
 - physical ... A-1
 - safety ... A-2
- straight-through cable
 - pin-out ... A-10, A-12

- switch
 - connecting to a power source ... 2-15
 - description ... 1-1
 - electrical specifications ... A-1
 - environmental specifications ... A-2
 - features ... 1-6
 - front panel description ... 1-3
 - included parts ... 2-1
 - LED descriptions ... 1-4
 - mounting in a rack or cabinet ... 2-9
 - mounting on a wall ... 2-13
 - mounting on horizontal surface ... 2-14
 - physical specifications ... A-1
- switch operation
 - verifying after installation ... 2-6

T

- testing
 - diagnostic tests ... 3-5
 - end-to-end communications ... 3-5
 - switch operation ... 3-5
 - twisted-pair cabling ... 3-5
- tips for troubleshooting ... 3-1
- topologies
 - effects of improper topology ... 3-2
 - samples of ... 2-22
- troubleshooting ... 3-1
 - basic tips ... 3-1
 - common network problems ... 3-1
 - connecting to fixed full-duplex devices ... 3-1
 - diagnostic tests ... 3-5
 - effects of improper topology ... 3-2
 - effects of non-standard cables ... 3-2
 - testing end-to-end communications ... 3-5
 - testing the switch ... 3-5
 - testing the twisted-pair cables ... 3-5
- twisted-pair cable
 - cross-over cable pin-out ... A-11
 - pin-outs ... A-8, A-10, A-12
 - straight-through cable pin-out ... A-10, A-12
 - switch-to-computer connection ... A-10, A-12
 - switch-to-switch or hub connection ... A-11
 - testing ... 3-5
- twisted-pair ports
 - HP Auto-MDIX feature ... A-8

W

wall

 mounting switch on ... 2-13

wiring rules for twisted-pair cables ... A-8

Technology for better business outcomes

To learn more, visit www.hp.com/go/procurve/

© Copyright 2010 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP will not be liable for technical or editorial errors or omissions contained herein.



April 2010

Manual Part Number
5998-0347