


# SUPERMICR® SuperServer F618R2-RC0+/RC0PT+ Quick Reference Guide

## Board Layout

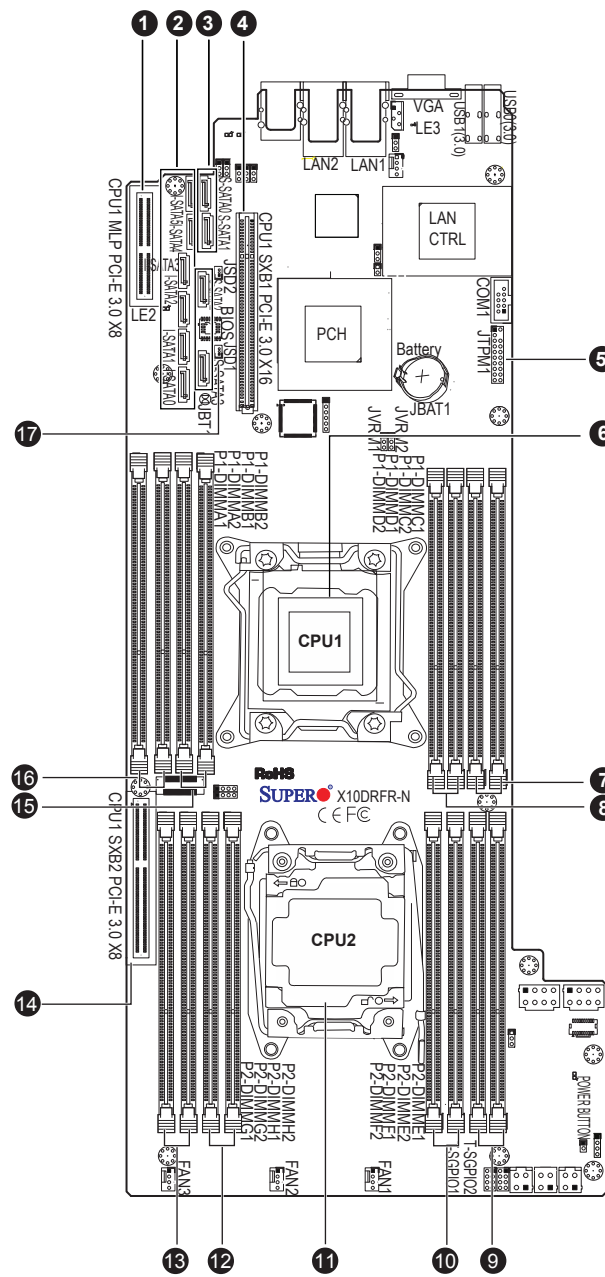

No.	Description	No.	Description
1	CPU1 MLP PCI-E 3.0 x8	10	P2-DIMMF1 (Blue Slot) / DIMMF2
2	I-SATA0~5: Supported by Intel PCH	11	CPU2 Socket
3	S-SATA0~3: Supported by Intel SCU2	12	P2-DIMMH1 (Blue Slot) / DIMMH2
4	CPU1_SXB_PCI-E 3.0 x16	13	P2-DIMMG1 (Blue Slot) / DIMMG2
5	JTPM1: Trusted Platform Module Header	14	CPU1 SXB2 PCI-E 3.0 x8 Slot
6	CPU1 Socket	15	P1-DIMMB1 (Blue Slot) / DIMMB2
7	P1-DIMMC1 (Blue Slot) / DIMMC2	16	P1-DIMMA1 (Blue Slot) / DIMMA2
8	P1-DIMMD1 (Blue Slot) / DIMMD2	17	JSD2: Disk-On-Module power connector
9	P2-DIMME1 (Blue Slot) / DIMME2		


## Memory

Processors and their Corresponding Memory Modules								
CPU#	Corresponding DIMM Modules							
CPU 1	P1-DIMMA1	P1-DIMMB1	P1-DIMMC1	P1-DIMMD1	P1-DIMMA2	P1-DIMMB2	P1-DIMMC2	P1-DIMMD2
CPU 2	P2-DIMME1	P2-DIMMF1	P2-DIMMG1	P2-DIMMH1	P2-DIMME2	P2-DIMMF2	P2-DIMMG2	P2-DIMMH2


Processors and Memory Module Population for Optimal Performance	
Number of CPUs + DIMMs	CPU and Memory Population Configuration Table (For memory to work properly, follow the instructions below)
1 CPU & 2 DIMMs	CPU1 + P1-DIMMA1/P1-DIMMB1
1 CPU & 4 DIMMs	CPU1 + P1-DIMMA1/P1-DIMMB1, P1-DIMMC1/P1-DIMMD1
1 CPU & 5-8 DIMMs	CPU1 + P1-DIMMA1/P1-DIMMB1, P1-DIMMC1/P1-DIMMD1 + Any memory pairs in P1-DIMMA2/P1-DIMMB2/P1-DIMMC2/P1-DIMMD2 slots
2 CPUs & 4 DIMMs	CPU1 + CPU2 + P1-DIMMA1/P1-DIMMB1, P2-DIMME1/P2-DIMMF1
2 CPUs & 6 DIMMs	CPU1 + CPU2 + P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1
2 CPUs & 8 DIMMs	CPU1 + CPU2 + P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1
2 CPUs & 9-16 DIMMs	CPU1 + CPU2 + P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1 + Any memory pair in P1, P2 DIMM slots
2 CPUs & 16 DIMMs	CPU1 + CPU2 + P1-DIMMA1/P1-DIMMB1/P1-DIMMC1/P1-DIMMD1, P2-DIMME1/P2-DIMMF1/P2-DIMMG1/P2-DIMMH1, P1-DIMMA2/P1-DIMMB2/P1-DIMMC2/P1-DIMMD2, P2-DIMME2/P2-DIMMF2/P2-DIMMG2/P2-DIMMH2

Populating RDIMM/LRDIMM DDR4 Memory Modules							
Type	Ranks Per DIMM and Data Width	DIMM Capacity (GB)		Speed (MT/s); Voltage (V); Slots per Channel (SPC) and DIMMs per Channel (DPC)			
				2 Slots per Channel			
				1 DPC		2 DPC	
				E5-2600 V3	E5-2600 V4	E5-2600 V3	E5-2600 V4
RDIMM	SRx4	8 GB	16 GB	2133	2400	1866	2133
RDIMM	SRx8	4 GB	8 GB	2133	2400	1866	2133
RDIMM	DRx8	8 GB	16 GB	2133	2400	1866	2133
RDIMM	DRx4	16 GB	32 GB	2133	2400	1866	2133
LRDIMM	QRx4	32 GB	64 GB	2133	2400	2133	2400
LRDIMM 3DS	8Rx4	64 GB	128 GB	2133	2400	2133	2400

## Nodes and Corresponding Hard Drives


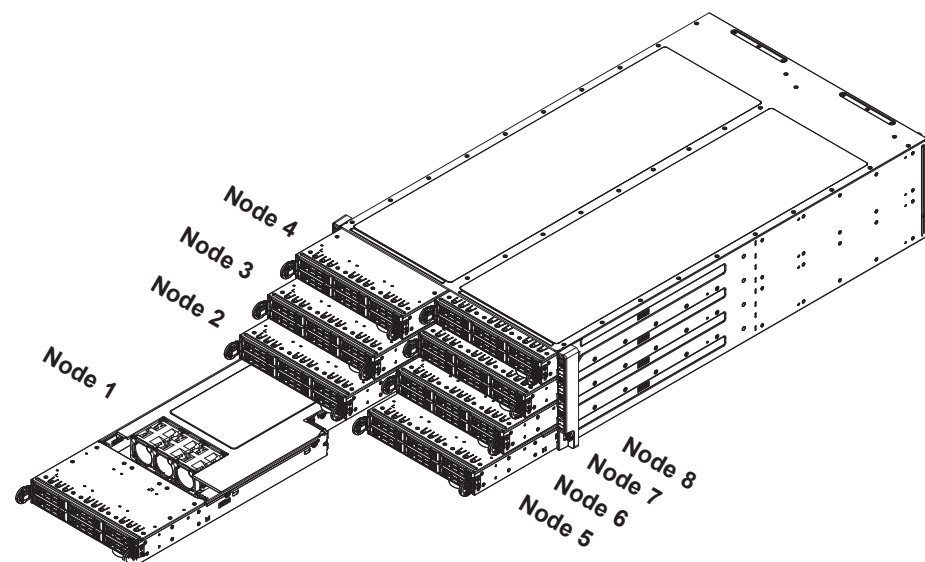


## Front View & Interface

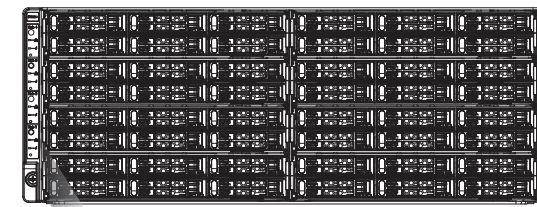

No.	Description
1	Power Button
2	LAN LED
3	Information LED
4	UID Button


## Rear View

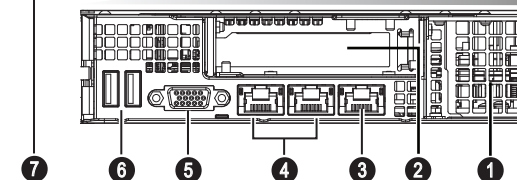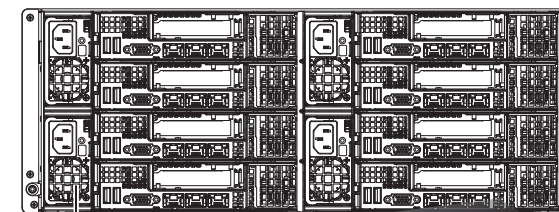


No.	Description
1	Micro Low-Profile Expansion Slot
2	Low-Profile PCI-E Expansion Slot
3	Dedicated LAN for IPMI
4	GbE LAN1/LAN2 Ports
5	VGA Port
6	USB 0/1 Ports
7	Power Supply Module

<b>Node 4</b> Controls six 2.5" HDDs, D1-D6	<b>Node 8</b> Controls six 2.5" HDDs, H1-H6
<b>Node 3</b> Controls six 2.5" HDDs, C1-C6	<b>Node 7</b> Controls six 2.5" HDDs, G1-G6
<b>Node 2</b> Controls six 2.5" HDDs, B1-B6	<b>Node 6</b> Controls six 2.5" HDDs, F1-F6
<b>Node 1</b> Controls six 2.5" HDDs, A1-A6	<b>Node 5</b> Controls six 2.5" HDDs, E1-E6

## CPU Installation

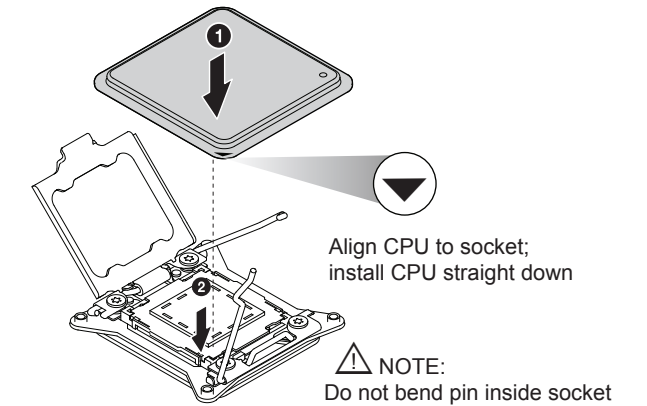

## Heatsink Installation

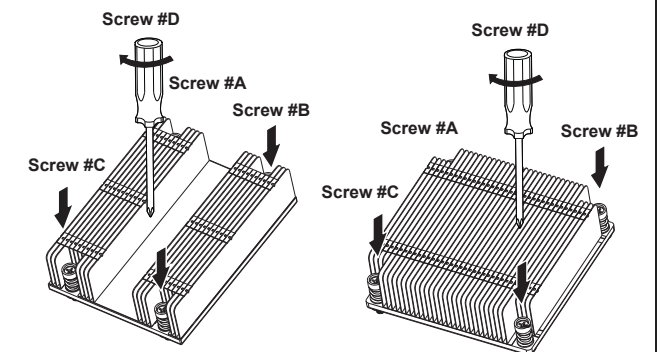

SNK-P0047PSM for CPU2      SNK-P0057P for CPU1

- Place the heatsink on top of the installed CPU.
- Align the four screws to the socket.
- Holding the heatsink in place, screw down as shown (cross pattern, in order: A, C, B, D).
- Note: Only use 6-8 lb/f of torque; otherwise, hand-tighten each screw to avoid damaging the CPU.

## Caution

**SAFETY INFORMATION**  
IMPORTANT: See installation instructions and safety warning before connecting system to power supply.  
[http://www.supermicro.com/about/policies/safety\\_information.cfm](http://www.supermicro.com/about/policies/safety_information.cfm)

**WARNING:**  
To reduce risk of electric shock/damage to equipment, disconnect power from server by disconnecting all power cords from electrical outlets.  
If any CPU socket empty, install protective plastic CPU cap

**CAUTION:**  
Always be sure all power supplies for this system have the same power output. If mixed power supplies are installed, the system will not operate.

For more information go to :  
<http://www.supermicro.com/support>

