

## CP900AVR / CP1200AVR / CP1500AVRT User's Manual

K01-000003-01

### PRODUCT REGISTRATION

Thank you for purchasing a CyberPower product. Please take a few minutes to register your product at [www.cyberpower.com/registration](http://www.cyberpower.com/registration). Registration certifies your product's warranty, confirms your ownership in the event of a product loss or theft and entitles you to free technical support.

### IMPORTANT SAFETY INSTRUCTIONS

#### (SAVE THESE INSTRUCTIONS)

This manual contains important instructions that should be followed during installation and maintenance of the UPS and batteries.

**CAUTION!** To prevent the risk of fire or electric shock, install in a temperature and humidity controlled indoor area free of conductive contaminants. (Please see specifications for acceptable temperature and humidity range).

**CAUTION!** To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside.

**CAUTION!** Hazardous live parts inside can be energized by the battery even when the AC input power is disconnected.

**CAUTION!** The UPS must be connected to an AC power outlet with fuse or circuit breaker protection. Do not plug into an outlet that is not grounded. If you need to de-energize this equipment, turn off and unplug the unit.

**CAUTION!** To avoid electric shock, turn off the unit and unplug it from the AC power source before installing a computer component.

**CAUTION!** Not for use in a computer room as defined in the Standard for the Protection of Electronic Computer/Data Processing Equipment, ANSI/NFPA 75.

**CAUTION!** To reduce the risk of fire, connect only to a circuit provided with 20 amperes maximum branch circuit over current protection in accordance with the National Electric Code, ANSI/NFPA 70.

**CAUTION!** To avoid electrical shock, turn off the unit and unplug it from the AC power source before servicing the battery.

**CAUTION!** Do not dispose of batteries in a fire. The batteries may explode.

**CAUTION!** Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

**DO NOT USE FOR MEDICAL OR LIFE SUPPORT EQUIPMENT!** CyberPower Systems does not sell products for life support or medical applications. **DO NOT** use in any circumstance that would affect operation and safety of life support equipment, any medical applications or patient care.

**DO NOT USE WITH OR NEAR AQUARIUMS!** To reduce the risk of fire or electric shock, do not use with or near an aquarium. Condensation from the aquarium can cause the unit to short out.

**DO NOT USE THE UPS ON ANY TRANSPORTATION!** To reduce the risk of fire or electric shock, do not use the unit on any transportation such as airplanes or ships. The effect of shock or vibration caused during transit and the damp environment can cause the unit to short out.

### INSTALLING YOUR UPS SYSTEM

#### UNPACKING

Inspect the UPS upon receipt. The box should contain the following:

(1) UPS unit; (2) User's manual; (3) USB device cable; (4) Telephone cable; (5) Warranty registration card; (6) Coaxial Cable

\*PowerPanel® Personal Edition software is available on our website. Please visit [www.cyberpower.com](http://www.cyberpower.com) and go to the Software Section for free download.

#### OVERVIEW

The CP900AVR / CP1200AVR / CP1500AVRT provides automatic voltage regulation for inconsistent utility power. The CP900AVR / CP1200AVR / CP1500AVRT features 890/1080/1500 Joules of surge protection, and provides battery backup during power outages. The CP900AVR / CP1200AVR / CP1500AVRT ensure consistent power to your computer system and include software that will automatically save your open files and shutdown your computer system during a utility power loss.

#### AUTOMATIC VOLTAGE REGULATOR



The CP900AVR / CP1200AVR / CP1500AVRT stabilize inconsistent utility power. The incoming utility power may be damaging to important data files, but with Automatic Voltage Regulation, the computer will not experience damaging voltage levels. An Automatic Voltage Regulator automatically increases low or decreases high voltage to a consistent, computer safe 110v/120v. The unit's powerful sealed lead-acid batteries will provide power only if the incoming voltage drops below 90v or increases above 140v.

#### HOW TO DETERMINE THE POWER REQUIREMENTS OF YOUR EQUIPMENT

- Ensure that the equipment plugged into the UPS does not exceed the UPS unit's rated capacity (900VA/560W for CP900AVR, 1200VA/720W for CP1200AVR and 1500VA/900W for CP1500AVRT). If the rated capacities of the unit are exceeded, an overload condition may occur and cause the UPS unit to shut down or the circuit breaker to trip.
- There are many factors that can affect the amount of power that your electronic equipment will require. For optimal system performance keep the load below 80% of the unit's rated capacity.


#### HARDWARE INSTALLATION GUIDE

- Your new UPS may be used immediately upon receipt. However, after receiving a new UPS, to ensure the battery's maximum charge capacity, it is recommended that you charge the battery for at least 8 hours. Your UPS is equipped with an auto-charge feature. When the UPS is plugged into an AC outlet, the battery will automatically charge when it's turned on or turned off.
- With the UPS unit turned off and unplugged, connect your computer, monitor, and any other peripherals requiring battery backup from the SURGE/BATTERY outlets. Plug the other peripheral equipment (e.g. printer, scanner, speakers, etc.) into the full-time surge protection outlets. **DO NOT plug a laser printer, paper shredder, copier, space heater, vacuum cleaner, sump pump, or other large electrical device into the "Battery and Surge Protected Outlets". The power demands of these devices will overload and possibly damage the unit.**
- To protect a fax, phone, or modem line, connect a telephone cable from the wall jack outlet to the IN jack of the UPS. Connect a telephone cable from the UPS OUT jack to protect a modem port on the computer, a telephone, or fax machine.
- Plug the UPS into a 2 pole, 3 wire grounded receptacle (wall outlet). Make sure the wall branch outlet is protected by a fuse or circuit breaker and does not service equipment with large electrical demands (e.g. air conditioner, refrigerator, copier, etc.). The warranty prohibits the use of extension cords, outlet strips, and surge strips in conjunction with the UPS unit.
- Press the power switch to turn the unit on. The Power On indicator light will illuminate green and the unit will "beep" once.
- If an overload is detected, an audible alarm will sound and the unit will emit one long beep. To correct this, turn the UPS off and unplug at least one piece of equipment from the battery power supplied outlets. Make sure the circuit breaker is depressed and then turn the UPS on.
- To maintain optimal battery charge, leave the UPS plugged into an AC outlet at all times.
- To store the UPS for an extended period of time, cover it and store with the battery fully charged. While in storage, recharge the battery every three months to ensure optimal battery life.
- Ensure the wall outlet and UPS are located near the equipment being attached for proper accessibility.

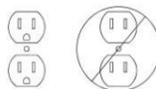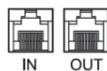

### BASIC OPERATION

#### DESCRIPTION

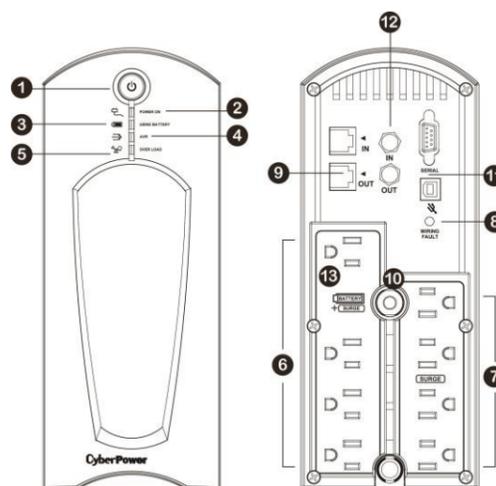

- Power Switch**  
Can be used as a master on/off switch for equipment connected to the battery power supplied outlets.
- Power On Indicator**  
This LED is illuminated when the utility power is normal and the UPS outlets are providing power, free of surges and spikes.
- Using Battery Indicator**  
This LED is illuminated when the unit is providing power from the battery.
- AVR Indicator**  
This LED is illuminated when the unit is running in the AVR mode.
- Over Load Indicator**  
This LED is illuminated when the unit is overload. You will need to reduce the load.
- Battery and Surge Protected Outlets**  
The unit has 4 battery powered/surge protected outlets to ensure temporary uninterrupted operation of your equipment during a power failure. **(DO NOT plug a laser printer, paper shredder, copier, space heater, vacuum cleaner, sump pump, or other large electrical device into the "Battery and Surge Protected Outlets." The power demands of these devices will overload and possibly damage the unit.)**
- Full-Time Surge Protection Outlets**  
The unit has 4 surge suppression outlets to provide surge and line noise protection.
- Wiring Fault Indicator(Red)**  
This LED indicator will illuminate to warn the user that a wiring problem exists, such as bad ground, missing ground or reversed wiring. If this is illuminated, user is advised to disconnect all electrical equipment from the outlet and have an electrician check to ensure the outlet is properly wired. The unit will not provide surge protection without being plugged into a grounded and properly wired wall outlet.
- Communication Protection Ports**  
Communication protection ports will protect any standard modem, fax, telephone line, broadband network or Ethernet connection.
- Circuit Breaker**  
Located on the back of the UPS, the circuit breaker serves to provide overload and fault protection.
- Serial/USB Ports to PC**  
The ports allow connection and communication from the USB or DB-9 serial port on the computer to the UPS unit. The USB port will communicate with PowerPanel™ Personal Edition and the DB-9 port is for use with a serial cable and the Microsoft UPS Service. For information regarding ordering a serial cable for the unit, please contact technical support at CyberPower System.  
**Note:** Only one of these two ports can be used to communicate with your computer at one time.
- Coax/Cable/DSS Surge Protection**  
The Coax/Cable/DSS surge protection ports will protect any cable modem, CATV converter, or DSS receiver.
- Outlets Designed for AC Adapters**  
The unit has four outlets spaced to allow AC power adapter blocks to be plugged into the UPS without blocking adjacent outlets.

#### REPLACING THE BATTERY


Installation or replacement of batteries located in an **OPERATOR ACCESS AREA**.

- When replacing batteries, replace with the same number of the following battery: CyberPower / RB1270X2 for CP900AVR, RB1280X2D for CP1200AVR and RB1280X2A for CP1500AVRT.
- CAUTION!** Risk of energy hazard, 12V, maximum 9 Ampere-hour battery. Before replacing batteries, remove conductive jewelry such as chains, wrist watches, and rings. High energy through conductive materials could cause severe burns.
- CAUTION!** Do not dispose of batteries in a fire. The batteries may explode.
- CAUTION!** Do not open or mutilate batteries. Released material is harmful to the skin and eyes. It may be toxic.
- CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATIONS.**

#### TO REPLACE THE BATTERY

- Turn off and unplug all connected equipment.
- Turn the UPS off and unplug it from the AC power source.
- Turn the UPS upside down.
- Remove the retaining screw.
- Slide the battery compartment cover (front panel) completely off of the unit.
- Remove the batteries from the compartment.
- Disconnect the battery wires from the batteries.
- Install the replacement batteries by connecting the red wire and black wire to the same color wires from the battery pack.
- Put the batteries back into the compartment.
- Slide back the battery compartment cover and tighten the retaining screw.
- Recharge the UPS for 8-16 hours to fully charge the battery.

**REMINDER:** Batteries are considered **HAZARDOUS WASTE** and must be disposed of properly. Most retailers that sell lead-acid batteries collect used batteries for recycling, as required by local regulations.

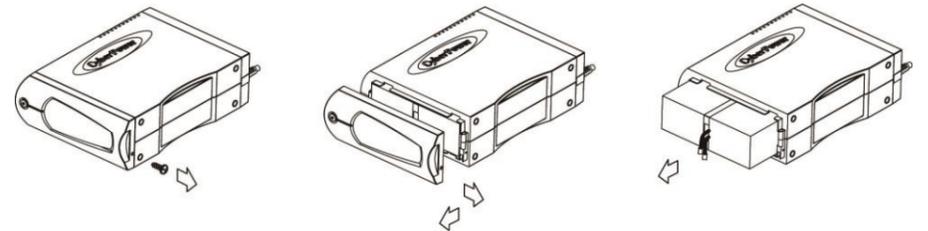

### DEFINITIONS FOR ILLUMINATED LED INDICATORS

| Power On | Using Battery | AVR    | Overload | Wiring Fault | Alarm       | CONDITION                                                                                                                                                                                                                                                                    |
|----------|---------------|--------|----------|--------------|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| On       | Off           | Off    | Off      | Off          | Off         | Normal                                                                                                                                                                                                                                                                       |
| On       | On            | Off    | Off      | On/Off       | Two Beeps   | Utility Failure- The UPS is providing power to battery protected outlets from its battery.                                                                                                                                                                                   |
| On       | On            | Off    | Off      | On/Off       | Rapid Beeps | Utility Failure - The UPS is providing battery power. Rapid beeping indicates the unit will run out of power shortly.                                                                                                                                                        |
| On       | Off           | Off    | On       | On/Off       | Long Beep   | System Overload- Occurs when connected equipment exceeds the rating of unit. Turn the UPS off, unplug at least one piece of equipment, wait 10 seconds, reset the circuit breaker and turn the unit on.                                                                      |
| On       | Off           | Off    | On       | On/Off       | Long Beep   | Battery Overload- Occurs when connected equipment exceeds the rating of battery outlets of the unit. Turn the UPS off, unplug at least one piece of equipment from battery outlets, wait 10 seconds, reset the circuit breaker and turn the unit on.                         |
| On       | Off           | On     | Off      | On/Off       | Off         | AVR Mode-Max. boost 12% of input voltage for output regulation while input voltage is from 17% to 26% under nominal.                                                                                                                                                         |
| On/Off   | On/Off        | On/Off | Off      | On           | None        | Electrical Wiring Fault- This indicates a wiring problem with the AC outlet such as bad ground, missing ground, or reversed wiring. User is advised to disconnect all electrical equipment from the outlet and have an electrician check the outlet to insure proper wiring. |

## TROUBLESHOOTING


| Problem                                                         | Possible Cause                                                                      | Solution                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Circuit breaker button is projecting from the back of the unit. | Circuit breaker has been tripped due to an overload.                                | Turn the UPS off and unplug at least one piece of equipment. Wait 10 seconds, reset the circuit breaker by pressing the button, and then turn the UPS on.                                                                                                                                   |
| The UPS does not perform expected runtime.                      | Battery not fully charged.                                                          | Recharge the battery by leaving the UPS plugged in.                                                                                                                                                                                                                                         |
|                                                                 | Battery is worn out.                                                                | Please contact CyberPower Systems about replacement batteries.                                                                                                                                                                                                                              |
| The UPS will not turn on.                                       | The on/off switch is designed to prevent damage from rapidly turning it off and on. | Turn the UPS off. Wait 10 seconds and then turn the UPS on.                                                                                                                                                                                                                                 |
|                                                                 | The unit is not connected to an AC outlet.                                          | The unit must be connected to a 110/120V 60Hz outlet.                                                                                                                                                                                                                                       |
|                                                                 | The battery is worn out.                                                            | Please contact CyberPower Systems about replacement batteries.                                                                                                                                                                                                                              |
|                                                                 | Mechanical problem.                                                                 | Please contact CyberPower Systems.                                                                                                                                                                                                                                                          |
|                                                                 | The frequency is outside of the operating range of 60±3Hz.                          | Turn the UPS off. Make sure the frequency range is within 60±3Hz. Or you can turn the UPS on in battery mode.                                                                                                                                                                               |
| PowerPanel® Personal Edition is inactive (all icons are gray).  | The USB/Serial cable is not connected.                                              | Connect the USB / serial cable to the UPS unit and an open USB / serial port on the back of the computer. You must use the cable that came with the unit.<br><b>NOTE:</b> Only one of communication port and USB port can be used as communication and control of the UPS unit at one time. |
|                                                                 | The USB cable is connected to a bad USB port.                                       | Check for a different USB port and plug the cable in.                                                                                                                                                                                                                                       |
|                                                                 | The unit is not providing battery power.                                            | Shutdown your computer and turn the UPS off. Wait 10 seconds and turn the UPS back on. This should reset the unit.                                                                                                                                                                          |

Additional troubleshooting information can be found at "Support" at [www.cyberpower.com](http://www.cyberpower.com)

## TECHNICAL SPECIFICATIONS

| Model                                            | CP900AVR                                                       | CP1200AVR     | CP1500AVRT    |
|--------------------------------------------------|----------------------------------------------------------------|---------------|---------------|
| Capacity                                         | 900VA / 560W                                                   | 1200VA / 720W | 1500 VA/ 900W |
| Nominal Input Voltage                            | 120Vac                                                         |               |               |
| Input Frequency                                  | 60Hz ± 3Hz                                                     |               |               |
| On-Battery Output Voltage                        | 120Vac ± 5%                                                    |               |               |
| On-Battery Output Frequency                      | 50/60Hz ± 1% (Auto-sensing)                                    |               |               |
| Max. Load for UPS Outlets                        | 900VA / 560W                                                   | 1200VA / 720W | 1500 VA/ 900W |
| Max. Load for Full-Time Surge Protection outlets | 12A                                                            |               |               |
| On-Battery Output Wave Form                      | Simulated Sine wave                                            |               |               |
| Operating Temperature                            | 32°F to 104° F / 0° C to 40° C                                 |               |               |
| Operating Relative Humidity                      | 0 to 95% non-condensing                                        |               |               |
| Size (W x H x D)                                 | 4.0" x 9.8" x 13.1"                                            |               |               |
| Net Weight                                       | 22.2 lbs                                                       | 24.4 lbs      | 25.6 lbs      |
| Typical Battery Recharge Time                    | 8 hours typical from total discharge                           |               |               |
| Typical Battery Life                             | 3 to 6 years, depending on number of discharge/recharge cycles |               |               |
| Battery                                          | Sealed Maintenance Free Lead Acid Battery                      |               |               |
| Certificates                                     | UL1778(UPS), cUL107, FCC/DoC Class B                           |               |               |

### SYSTEM FUNCTION BLOCK DIAGRAM

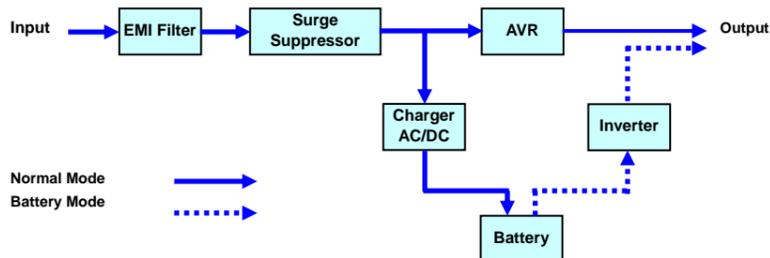

## CYBERPOWER GREENPOWER UPS™ TECHNOLOGY

### Advanced Energy-Saving Patented Bypass Technology

CyberPower's patented GreenPower UPS™ with Bypass Technology reduces UPS energy costs by up to 75% compared to conventional UPS models. Even when utility power is normal, conventional UPS models constantly pass power through a transformer. By contrast, under normal conditions the advanced circuitry of a GreenPower UPS™ bypasses the transformer. As a result, the power efficiency is significantly increased while decreasing waste heat, using less energy, and reducing energy costs. When an abnormal power condition occurs, the GreenPower UPS™ automatically runs power through its transformer to regulate voltage and provide "safe" power. Since utility power is normal over 88% of the time, the GreenPower UPS™ operates primarily in its efficient bypass mode. The GreenPower UPS™ is also manufactured in accordance with the Restriction on Hazardous Substances (RoHS) directive making it one of the most environmentally-friendly on the market today.



## Limited Warranty and Connected Equipment Guarantee

Read the following terms and conditions carefully before using the CyberPower CP900AVR, CP1200AVR and CP1500AVRT (the "Product"). By using the Product you consent to be bound by and become a party to the terms and conditions of this Limited Warranty and Connected Equipment Guarantee (together referred to as this "Warranty"). If you do not agree to the terms and conditions of this Warranty, you should return the Product for a full refund prior to using it.

### Who is Providing this Warranty?

CyberPower Systems (USA), Inc. ("CyberPower") provides this Limited Warranty.

### What Does This Warranty Cover?

This warranty covers defects in materials and workmanship in the Product under normal use and conditions. It also covers equipment that was connected to the Product and damaged because of the failure of the Product.

### What is the Period of Coverage?

This warranty covers the Product for three years. Connected equipment is covered for as long as you own the Product.

### Who Is Covered?

This warranty only covers the original purchaser. Coverage ends if you sell or otherwise transfer the Product.

### How Do You Get Service?

- Call us at (877) 297-6937 or write to us at Cyber Power Systems (USA), Inc., 4241 12<sup>th</sup> Ave. E., STE 400, Shakopee, MN 55379 or send us an e-mail message at [claims@cpsww.com](mailto:claims@cpsww.com) for instructions.
- When you contact CyberPower, identify the Product, the Purchase Date, and the item(s) of Connected Equipment. Have information on all applicable insurance or other resources of recovery/payment that are available to the Initial Customer and Request a Claim Number.
- You must provide a dated Proof-of-Purchase receipt (or other proof of the original purchase) and provide a description of the defect.

### How Do You Open A Connected Equipment Claim?

- Call us at (877) 297-6937 or write to us at Cyber Power Systems (USA), Inc., 4241 12th Ave. E., STE 400, Shakopee, MN 55379, or send us an e-mail message at [claims@cpsww.com](mailto:claims@cpsww.com) for instructions, within 10 days of the occurrence.
- When you contact CyberPower, identify the Product, the Purchase Date, and the item(s) of Connected Equipment. Have information on all applicable insurance or other resources of recovery/payment that are available to the Initial Customer and Request a Claim Number.
- You must provide a dated purchase receipt (or other proof of the original purchase) and provide a description of the damage to your connected equipment.
- Pack and ship the product to CyberPower and, if requested, the item(s) of Connected Equipment, a repair cost estimate for the damage to the Connected Equipment, and all claim forms that CyberPower provides to you. Show the Claim Number on the shipping label or include it with the product. **You must prepay all shipping costs, you are responsible for packaging and shipment, and you must pay the cost of the repair estimate.**

### How Long Do I Have To Make A Claim?

All claims must be made within ten days of the occurrence.

### What Will We Do To Correct Problems?

CyberPower will inspect and examine the Product.

If the Product is defective in material or workmanship, CyberPower will repair or replace it at CyberPower's expense, or, if CyberPower is unable to or decides not to repair or replace the Product (if defective) within a reasonable time, CyberPower will refund you the full purchase price you paid for the Product (purchase receipt showing price paid is required).

If it appears that our Product failed to protect any equipment plugged into it, we will also send you forms for making your claim for the connected equipment. We will repair or replace the equipment that was damaged because of the failure of our Product or pay you the fair market value (NOT REPLACEMENT COST) of the equipment at the time of the damage. We will use Orion Blue Book, or another third-party valuation guide, or eBay, craigslist, or other source to establish that amount. Our maximum liability is limited to \$300,000 for the CP900AVR, \$375,000 for the CP1200AVR and \$500,000 for the CP1500AVRT.

### Who Pays For Shipping?

We pay when we send items to you; you pay when you send items to us.

### What isn't covered by the warranty?

- This Warranty does not cover any software that was damaged or needs to be replaced due to the failure of the Product or any data that is lost as a result of the failure or the restoration of data or records, or the reinstallation of software.
- This Warranty does not cover or apply to: misuse, modification, operation or storage outside environmental limits of the Product or the equipment connected to it, nor for damage while in transit or in storage, nor if there has been improper operation or maintenance, or use with items not designed or intended for use with the Product, such as laser printers, appliances, aquariums, medical or life support devices, etc.

### What are the Limitations?

The sole and exclusive remedies to the Initial Customer are those provided by this Warranty.

- This Warranty does not apply unless the Product and the equipment that was connected to it were connected to properly wired and grounded outlets (including compliance with electrical and safety codes of the most current electrical code), without the use of any adapters or other connectors.
- The Product must have been plugged directly into the power source and the equipment connected to the Product must be directly connected to the Product and not "daisy-chained" together in serial fashion with any extension cords, another Product or device similar to the Product, surge suppressor, or power tap. Any such installation voids the Limited Warranty.
- The Product and equipment connected to it must have been used properly in a suitable and proper environment and in conformance with any license, instruction manual, or warnings provided with the Product and the equipment connected to it.
- The Product must have been used at all times within the limitations on the Product's VAWatt capacity.

The Product was designed to eliminate disrupting and damaging effects of momentary (less than 1ms) voltage spikes or impulses from lightning or other power transients. If it can be shown that a voltage spike lasting longer than 1ms has occurred, the occurrence will be deemed outside the rated capabilities of the Product and the Limited Warranty is void. CyberPower Does Not Cover or Undertake Any Liability in Any Event for Any of the Following:

- Loss of or damage to data, records, or software or the restoration of data or records, or the reinstallation of software.
- Damage from causes other than AC Power Line Transients, spikes, or surges on properly installed, grounded and code-compliant 120 volt power lines in the United States and Canada; transients, surges or spikes on standard telephone land lines, PBX telephone equipment lines or Base 10T Ethernet lines, when properly installed and connected. (This exclusion applies, for example, to fluctuations in data transmission or reception, by CATV or RF transmission or fluctuations, or by transients in such transmission.)
- Damage from any circumstance described as excluded above with respect to the Product.
- Damages from fire, flood, wind, rain, rising water, leakage or breakage of plumbing, abuse, misuse or alteration of either the product or the Connected Equipment.
- CyberPower excludes any liability for personal injury under the Limited Warranty and Connected Equipment Guarantee. CyberPower excludes any liability for direct, indirect, special, incidental or consequential damages, whether for damage to or loss of property [EXCEPT FOR (AND ONLY FOR) the specific limited agreement of CyberPower to provide certain warranty benefits regarding "Connected Equipment" under this Warranty], loss of profits, business interruption, or loss of information or data. NOTE: Some States or Provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.
- The Product is not for use in high-risk activities or with aquariums. The Product is not designed or intended for use in hazardous environments requiring fail-safe performance, or for use in any circumstance in which the failure of the Product could lead directly to death, personal injury, or severe physical or property damage, or that would affect operation or safety of any medical or life support device (collectively, "High Risk Activities"). CyberPower expressly disclaims any express or implied warranty of fitness for High Risk Activities or with aquariums. CyberPower does not authorize use of any Product in any High Risk Activities or with Aquariums. **ANY SUCH USE IS IMPROPER AND IS A MISUSE OF THE PRODUCT.**

The application of the United Nations Convention of Contracts for the International Sale of Goods is expressly excluded. CyberPower is the warrantor under this Limited Warranty.

### Where Can I Get More Information?

For further information please feel free to contact CyberPower at Cyber Power Systems (USA), Inc. 4241 12<sup>th</sup> Ave E., STE 400, Shakopee, MN 55379; call us at (877) 297-6937; or send us an e-mail message at [claims@cpsww.com](mailto:claims@cpsww.com).

CyberPower Systems encourages environmentally sound methods for disposal and recycling of its UPS products. Please dispose and/or recycle your UPS and batteries in accordance to the local regulations of your state.

All rights reserved. Reproduction without permission is prohibited.